 
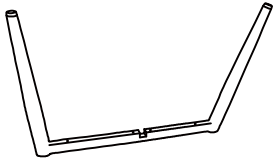
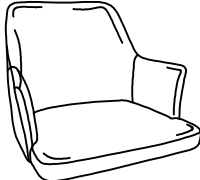


ITEM NAME/NOM D'ITEM: WISOM DINING CHAIR

ITEM #/NO. ITEM: 110766


PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(4)	(5)
				A  M6×16mm ×4 B  M6×50mm ×4 C  M6×16mm ×8 D  M5 ×1
×1	×1	×1	×1	


ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

I

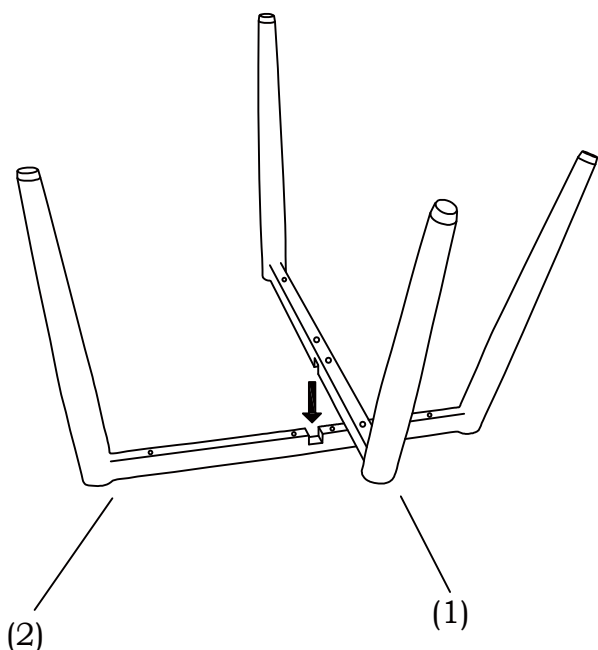


II

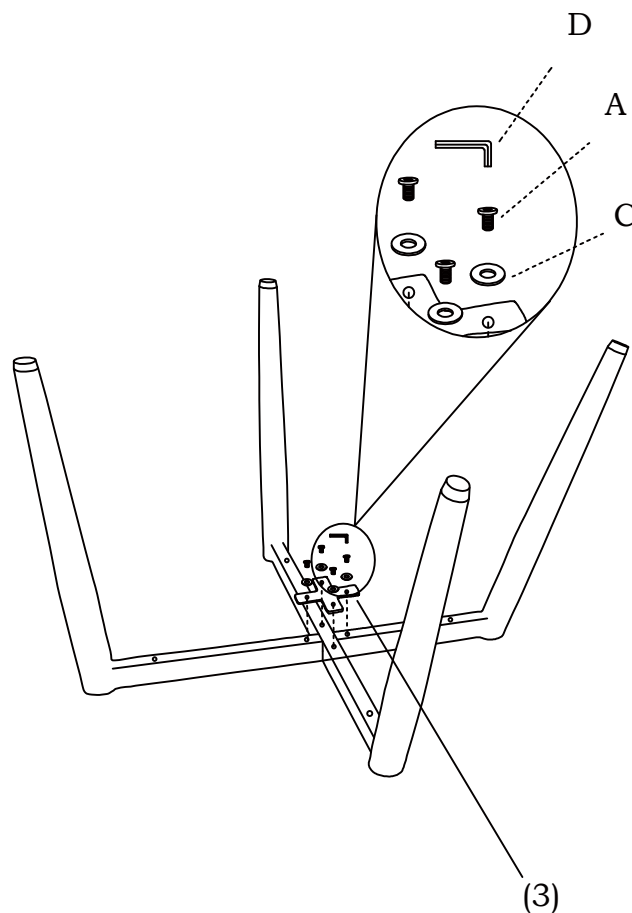


For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663

III

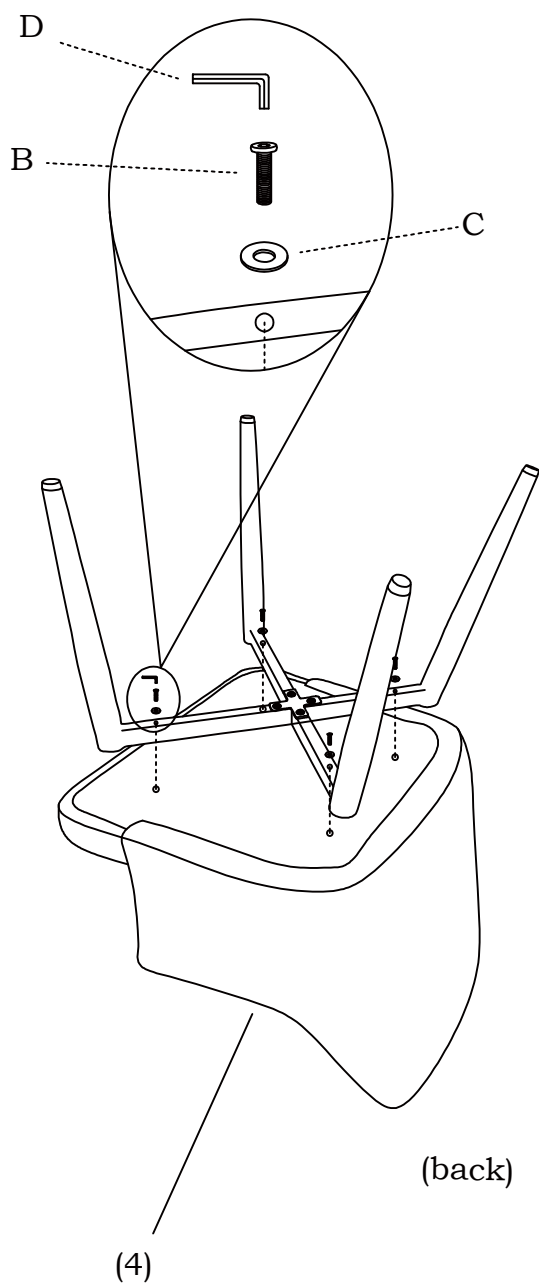

IV

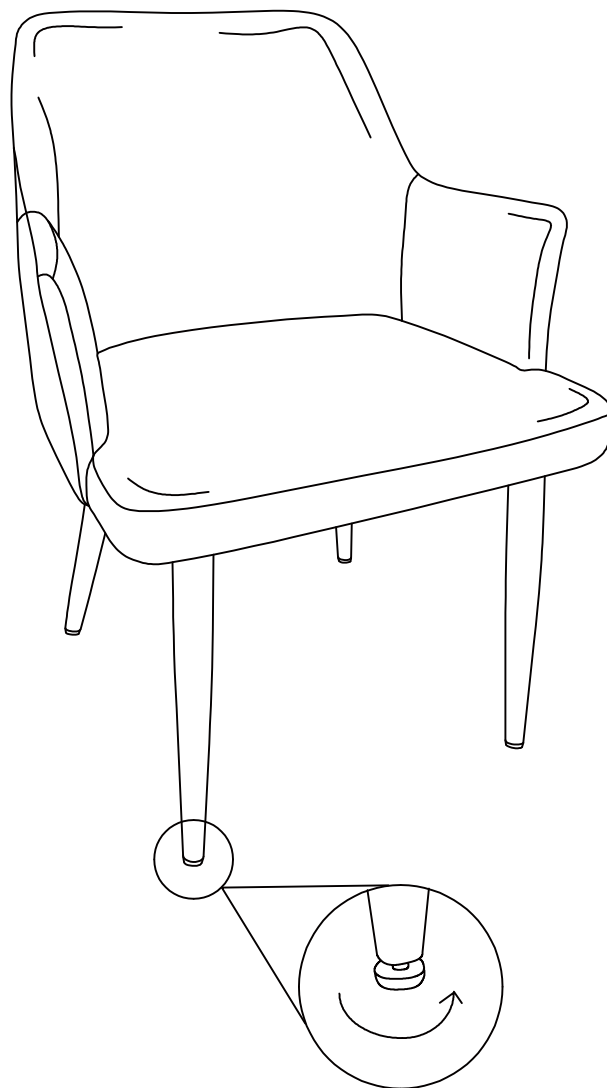

Please use the attached adjustable footglides to level the chair on an uneven surface.

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663

AI-V1-M014-241121