 
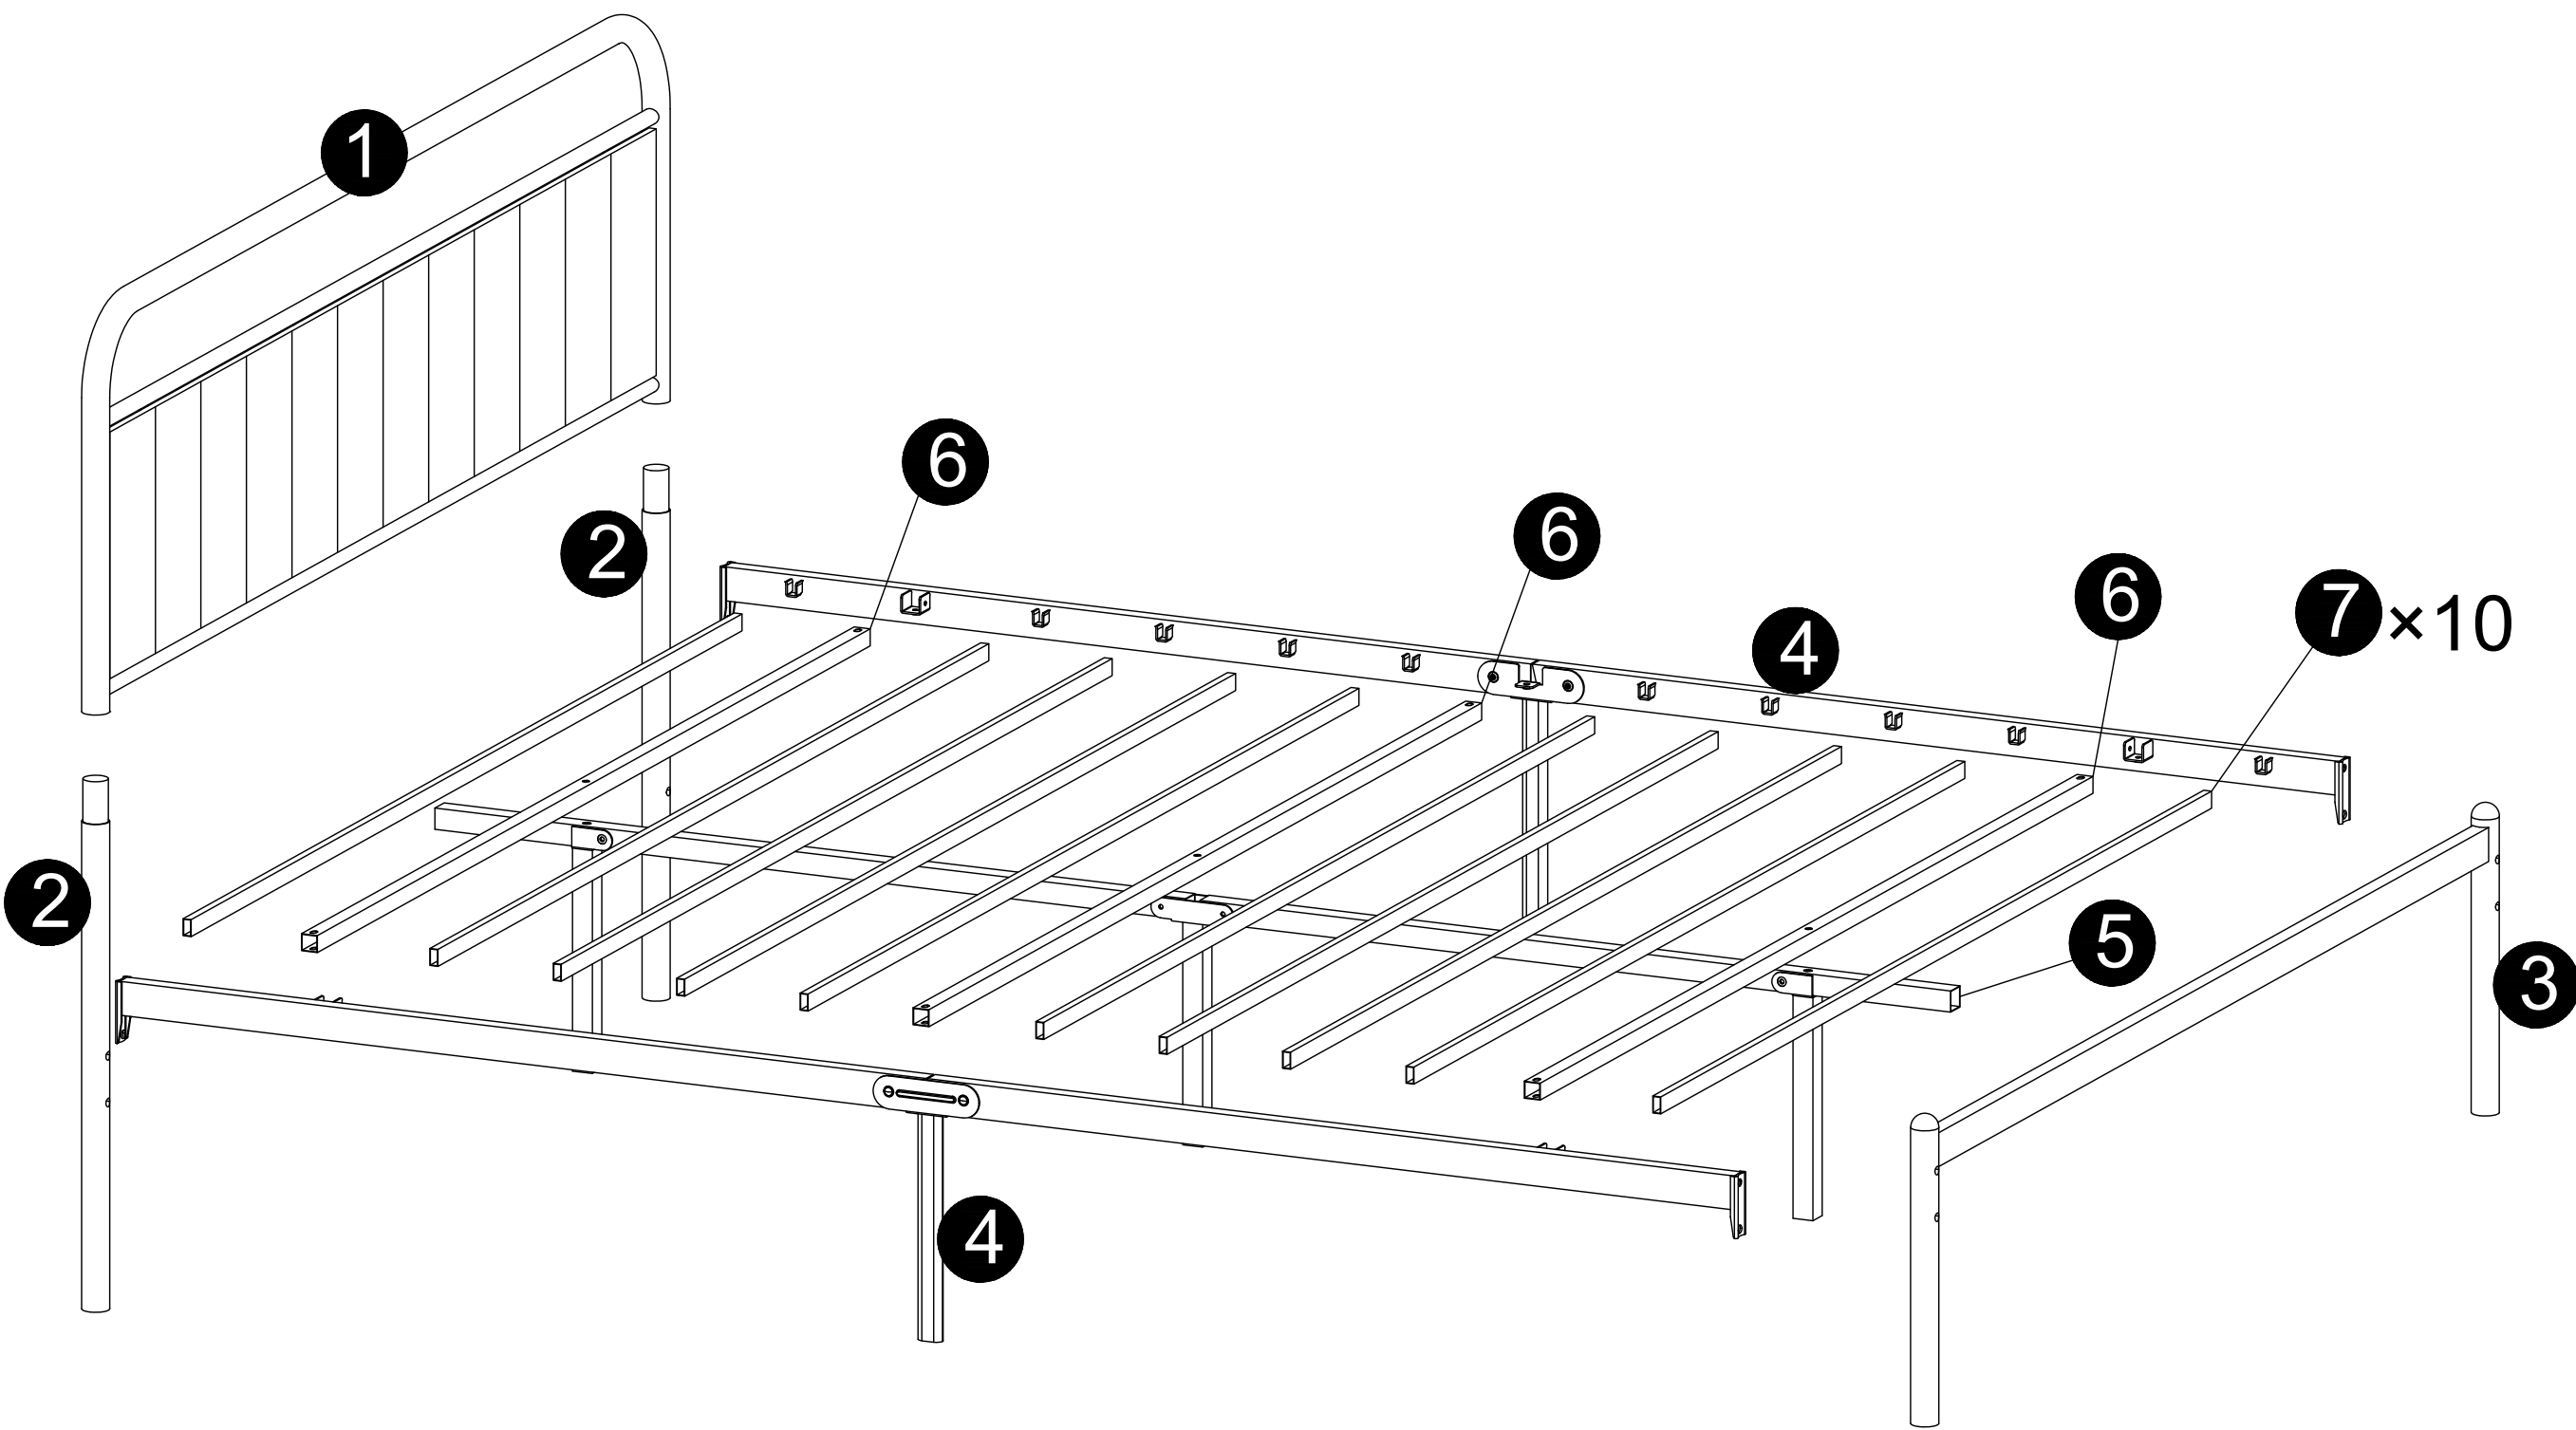 
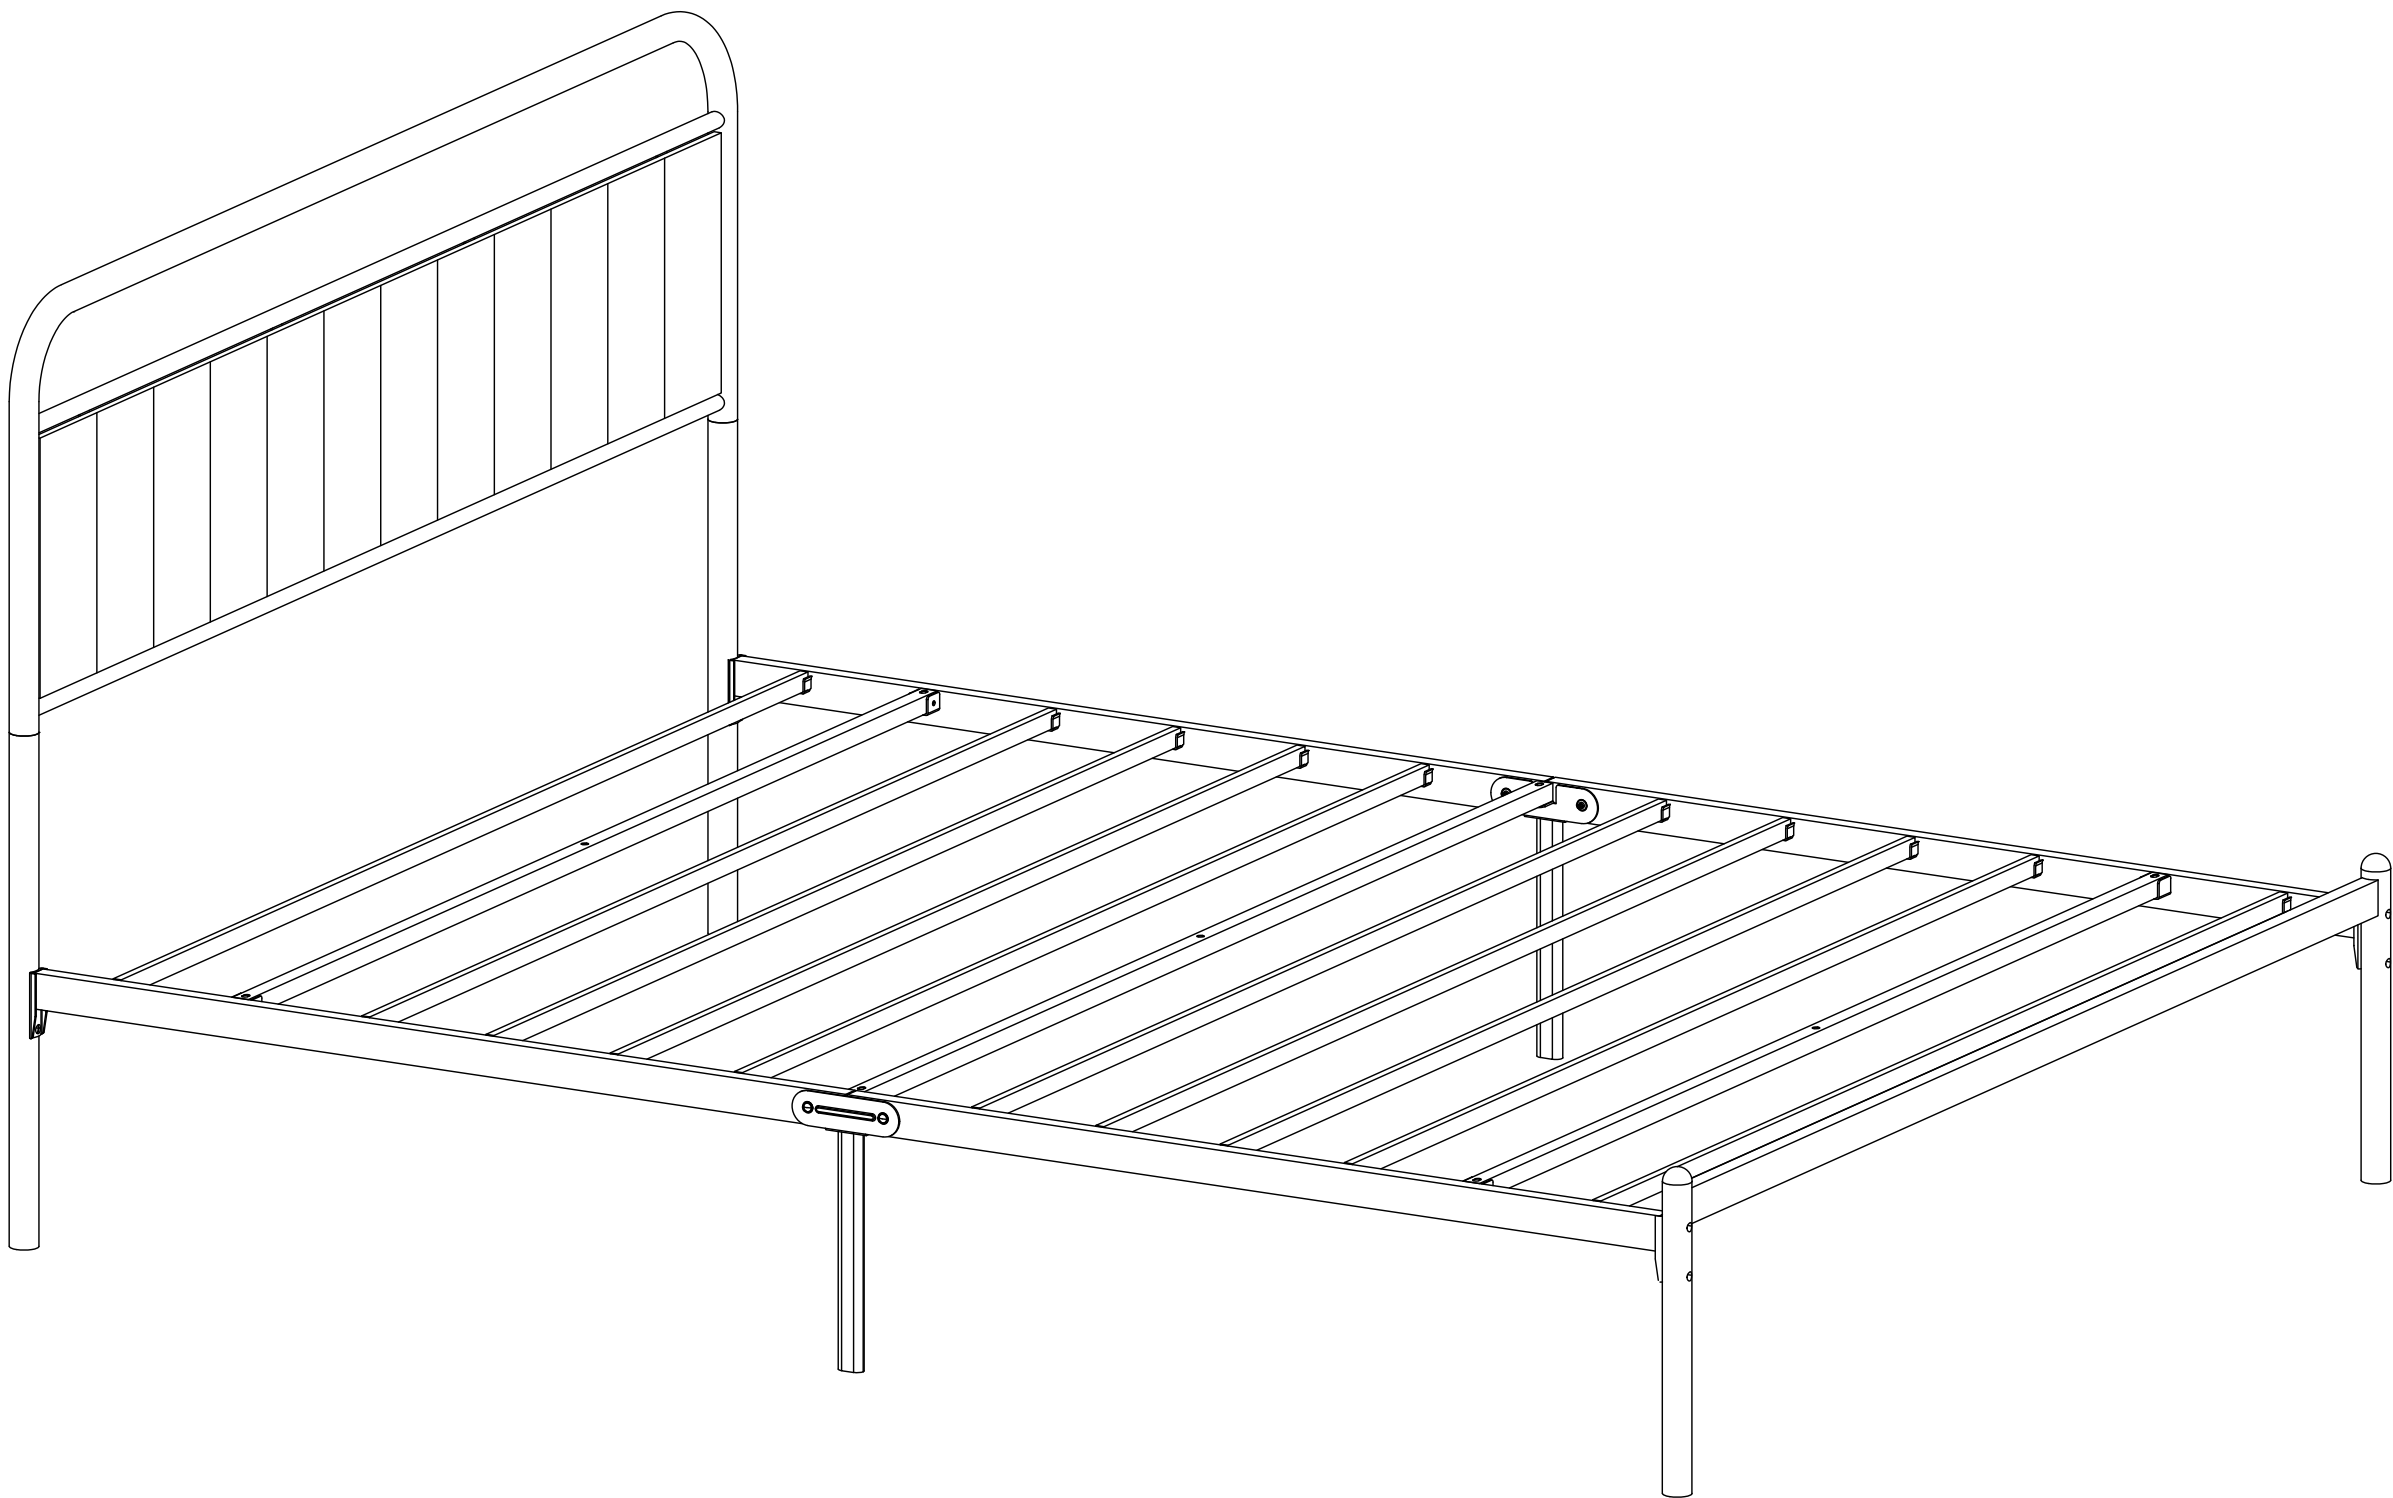 
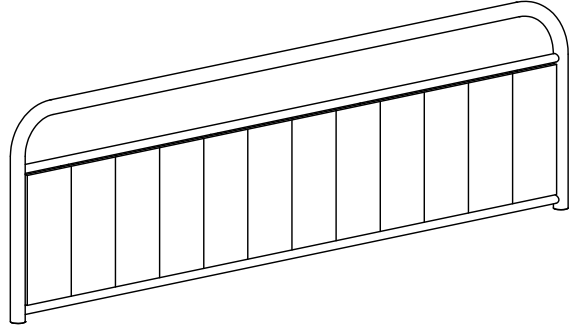 
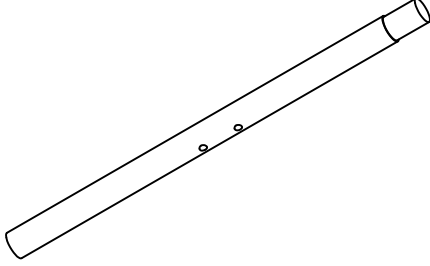 
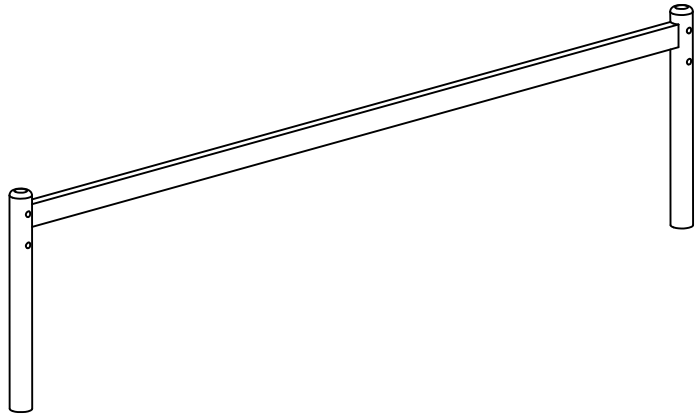 
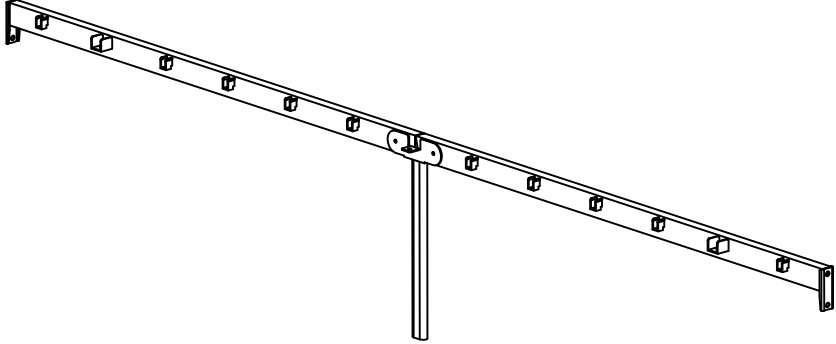 
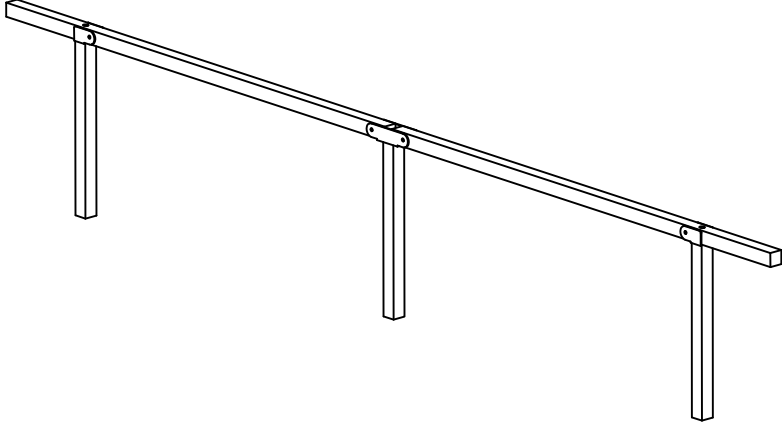 
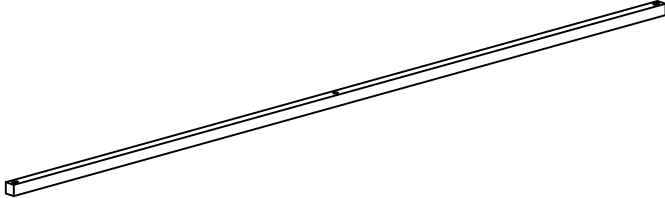 
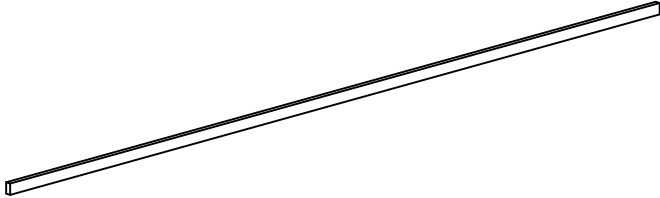 
 
 
 
 
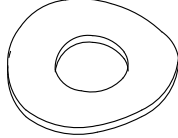 


Installation Manual

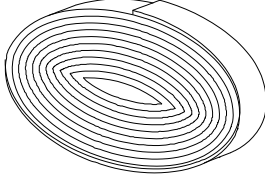


 ① × 1pc	 ② × 2pcs	 ③ × 1pc
 ④ × 2pcs	 ⑤ × 1pc	 ⑥ × 3pcs
 ⑦ × 10pcs		

 M8×50mm A × 8pcs	 M6×55mm B × 3pcs	 M6×30mm C × 6pcs	 M6×12mm D × 4pcs
 E × 8pcs	 F × 1pc	 G × 1pc	


1

Note: For easy setup intention,
do not tighten screws during
the installation process

 

M6×12mm
D × 4pcs

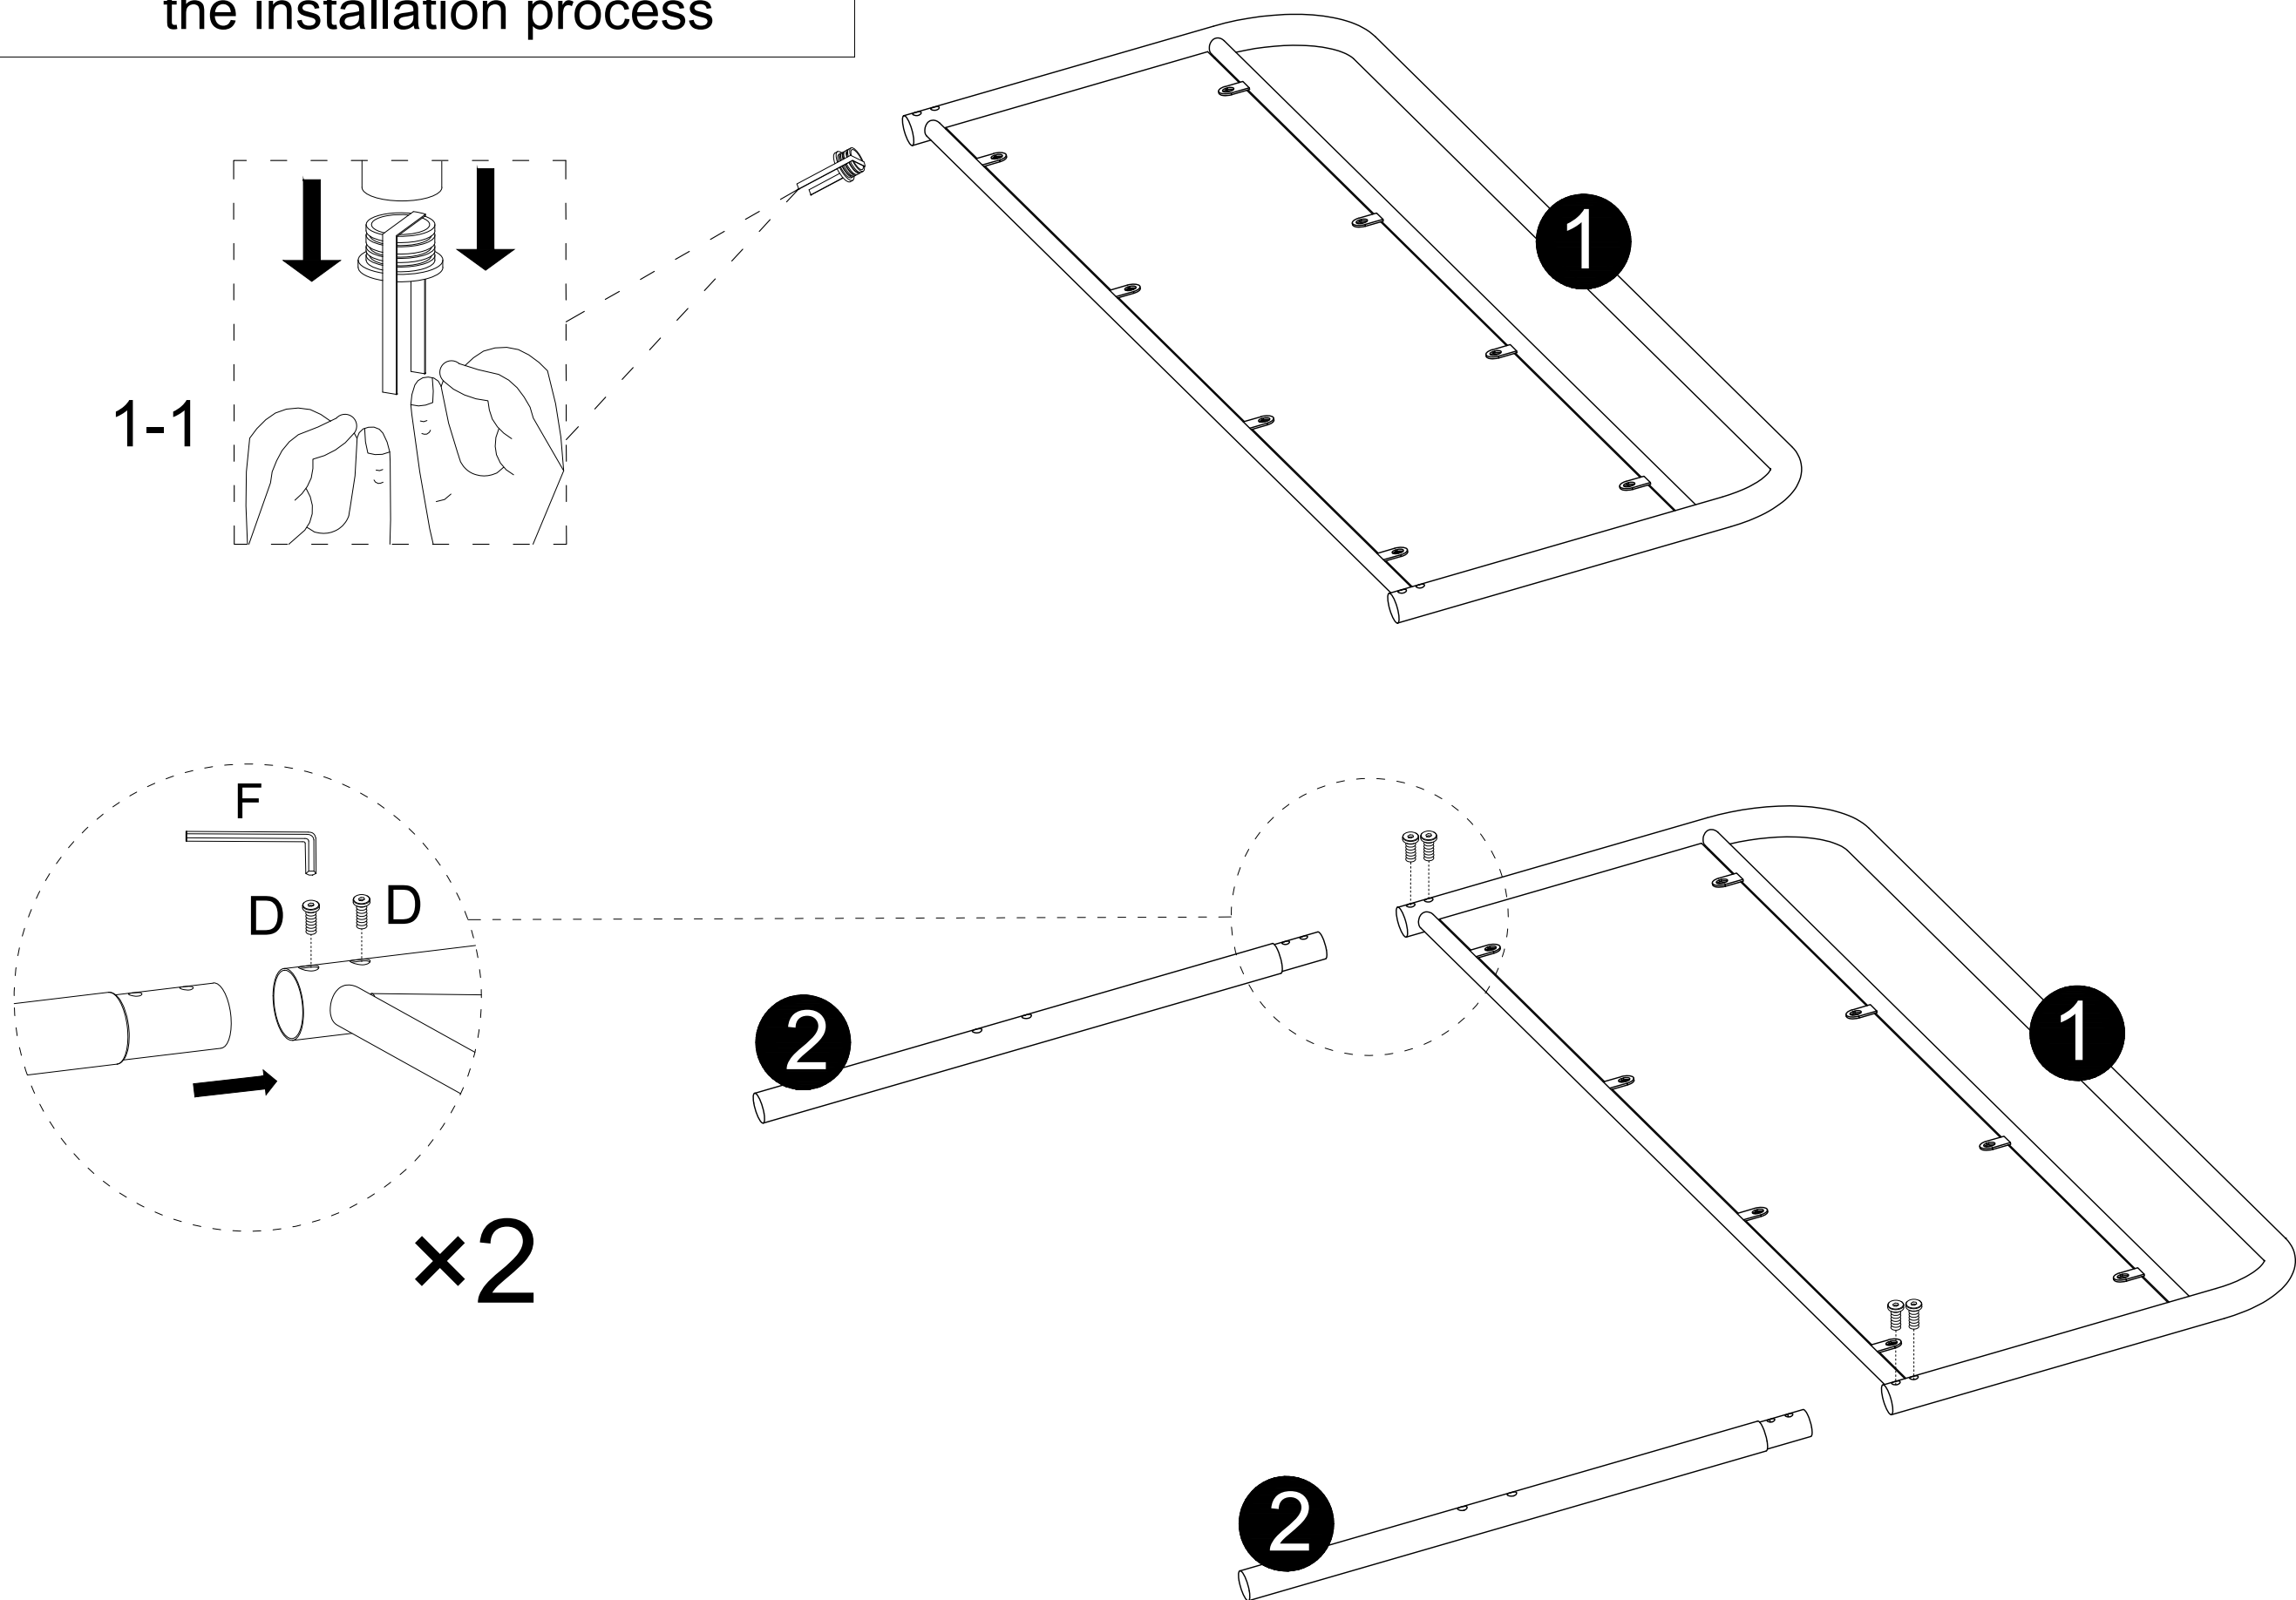


2

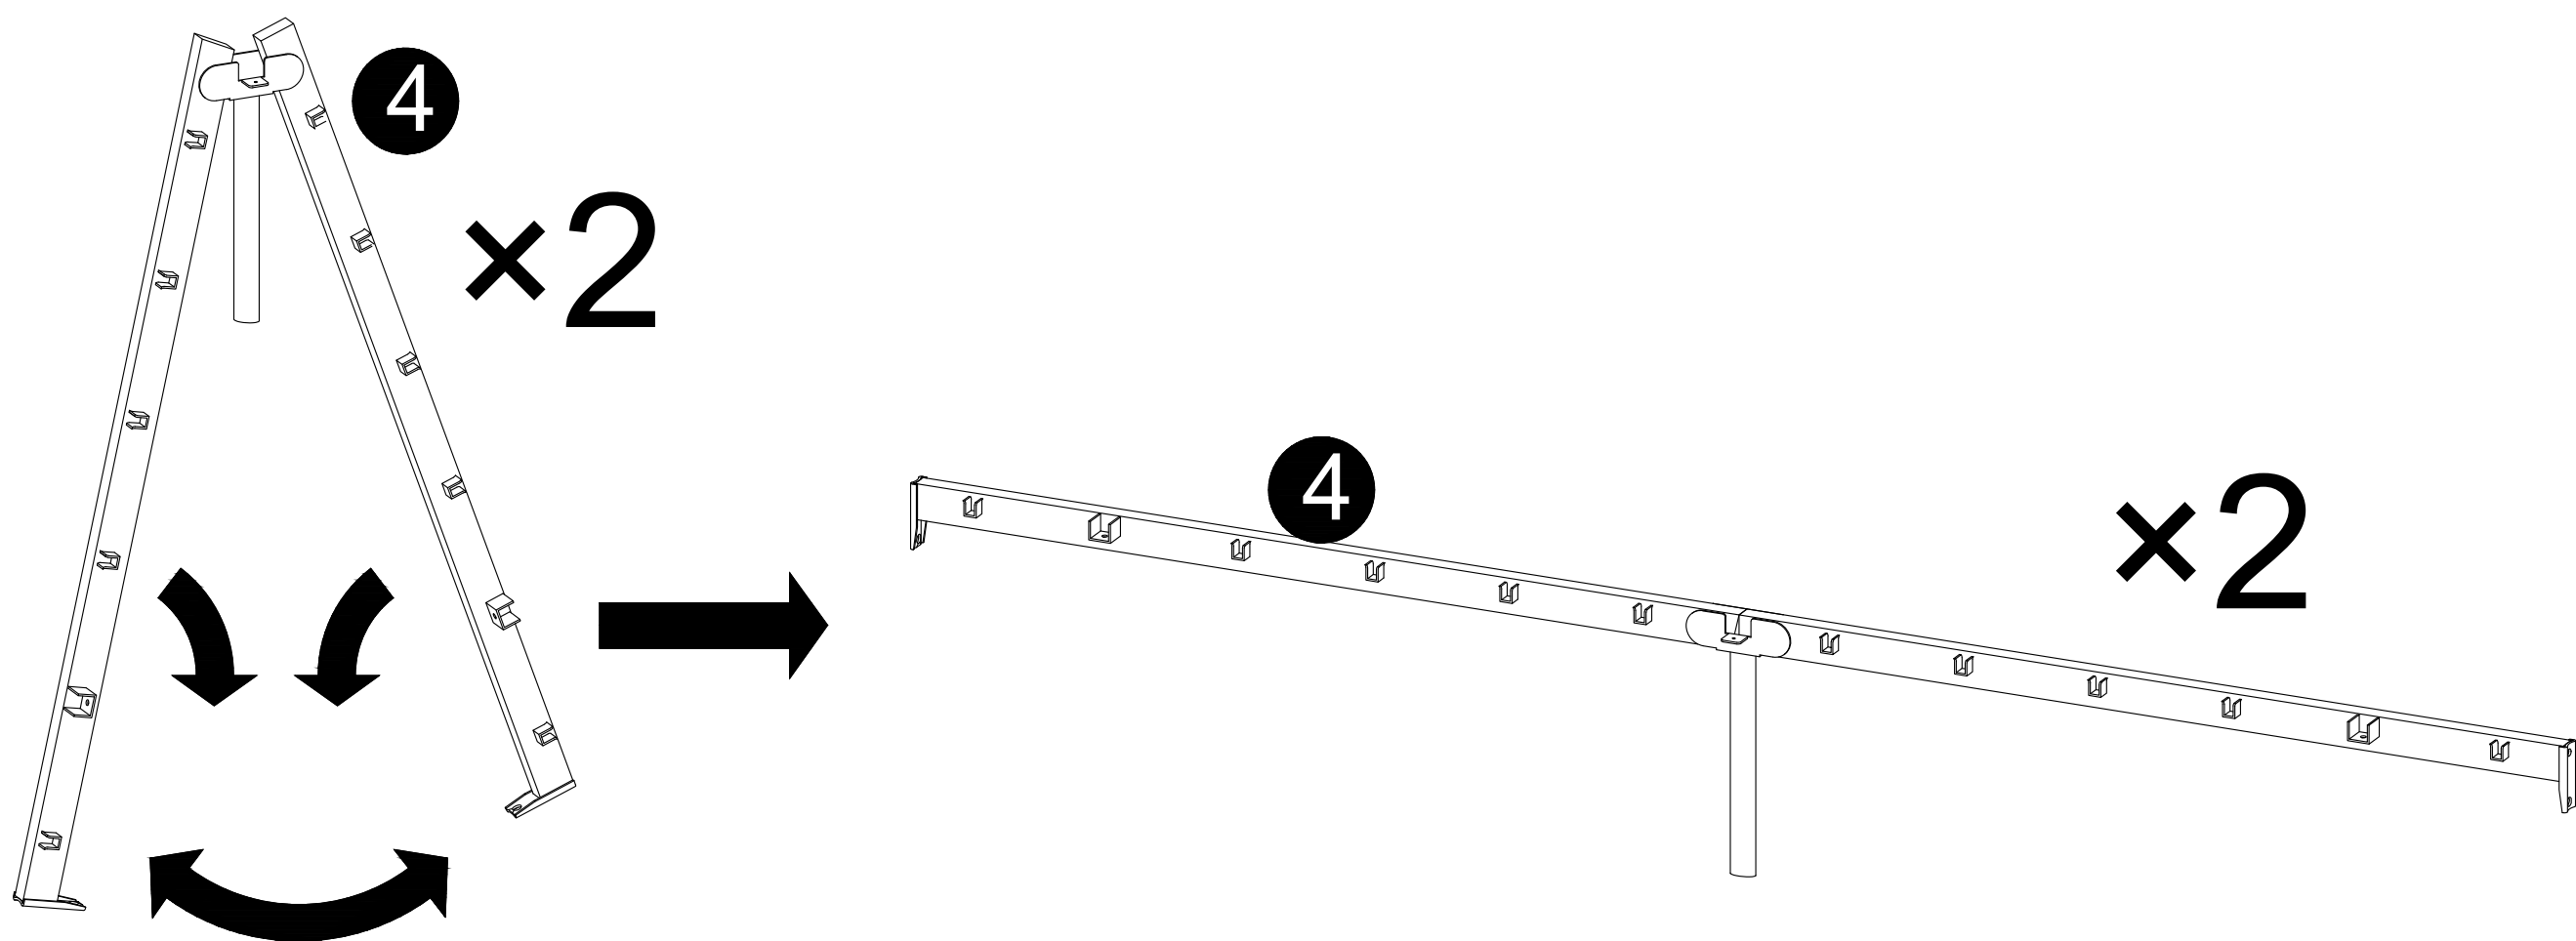 



3

  M8×50mm A × 8pcs	 E × 8pcs
--	---

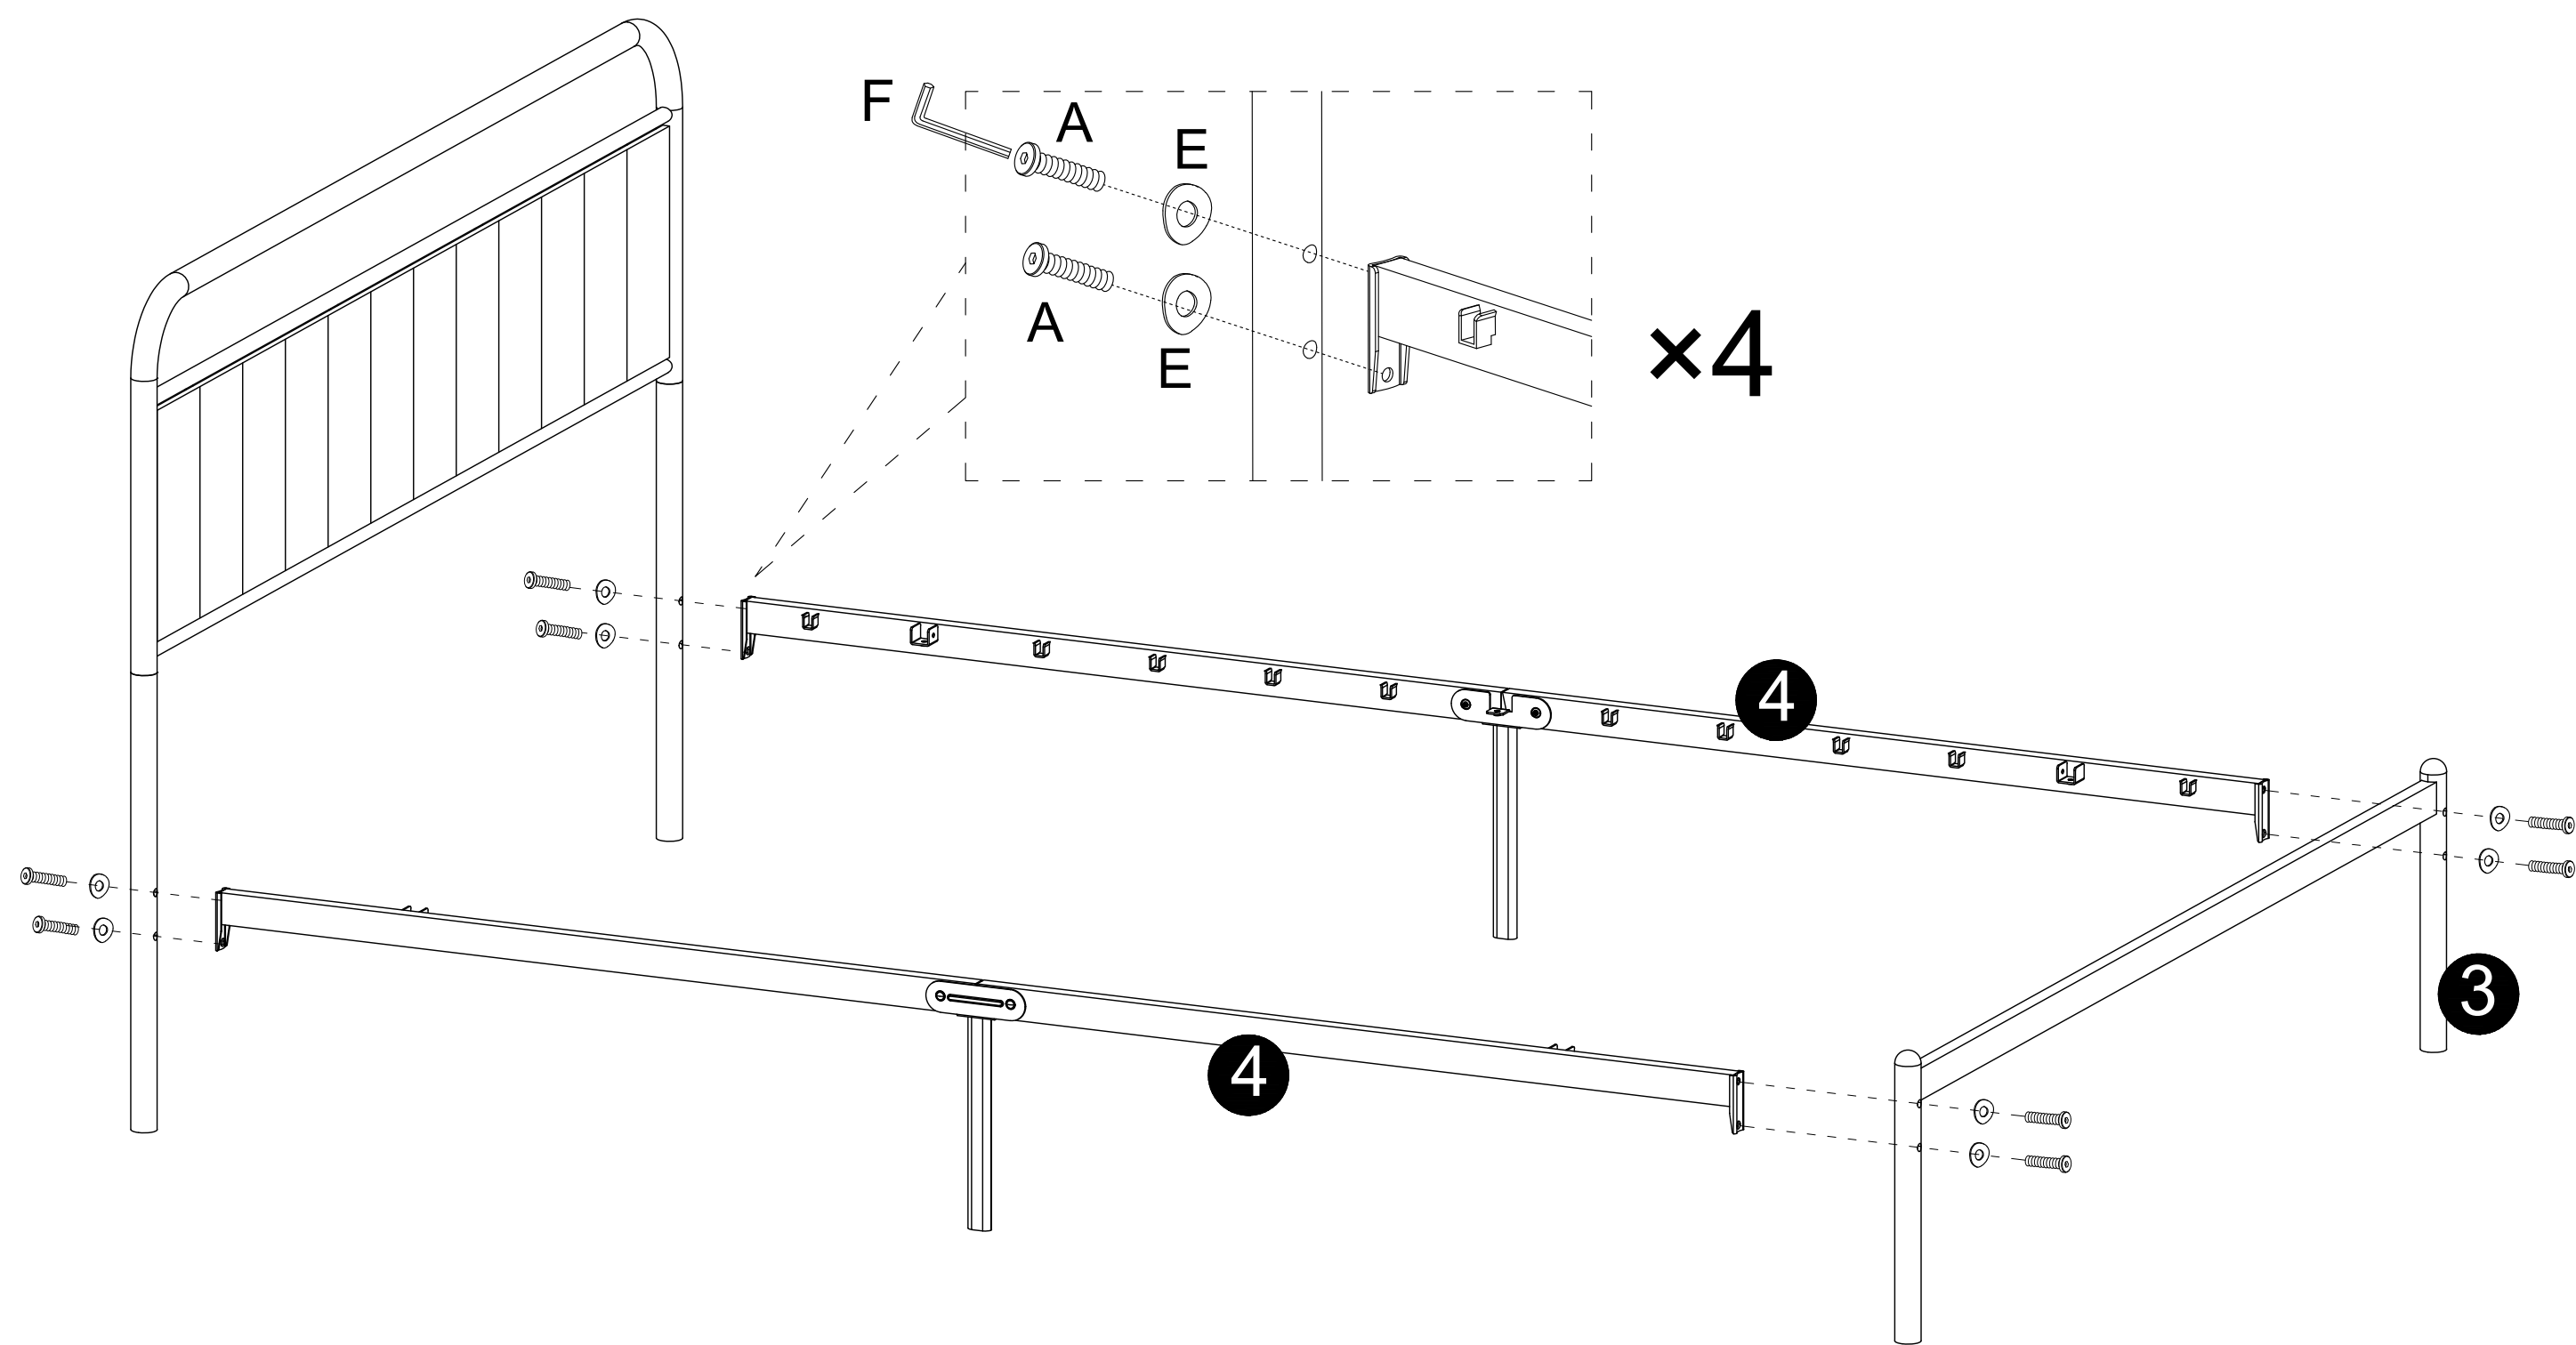 


4

  M6×30mm C × 6pcs
--

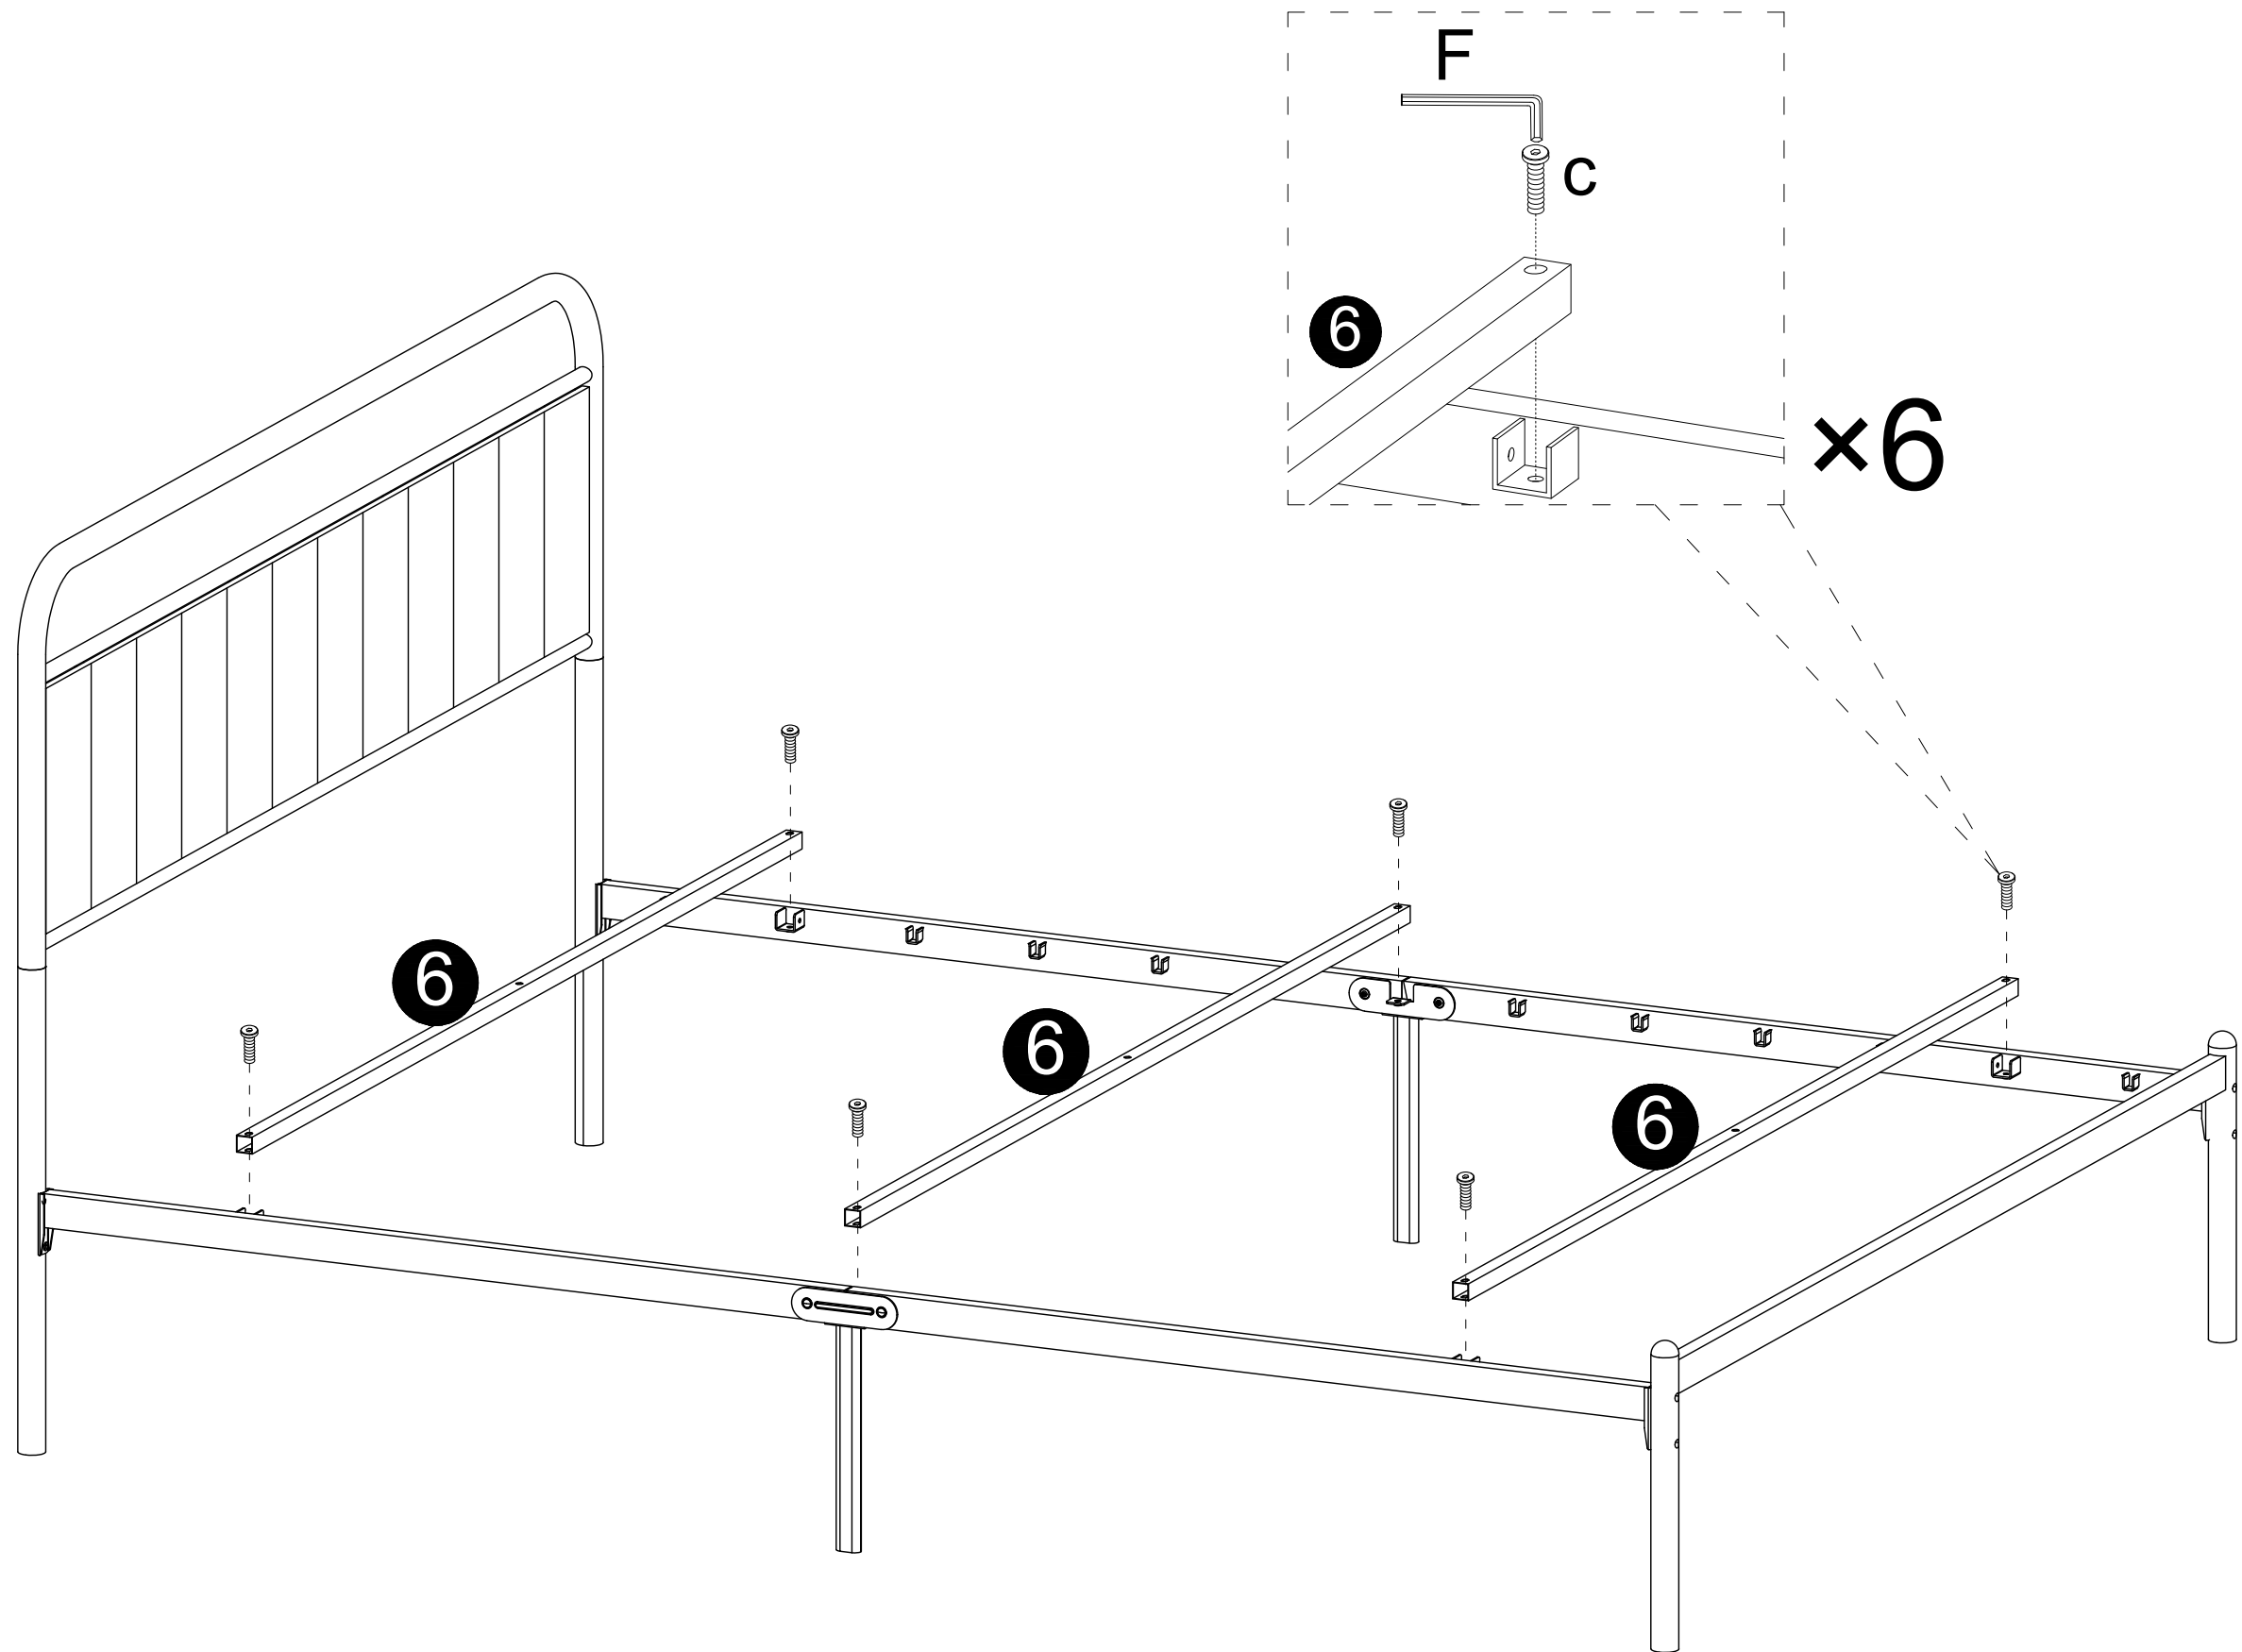 


5

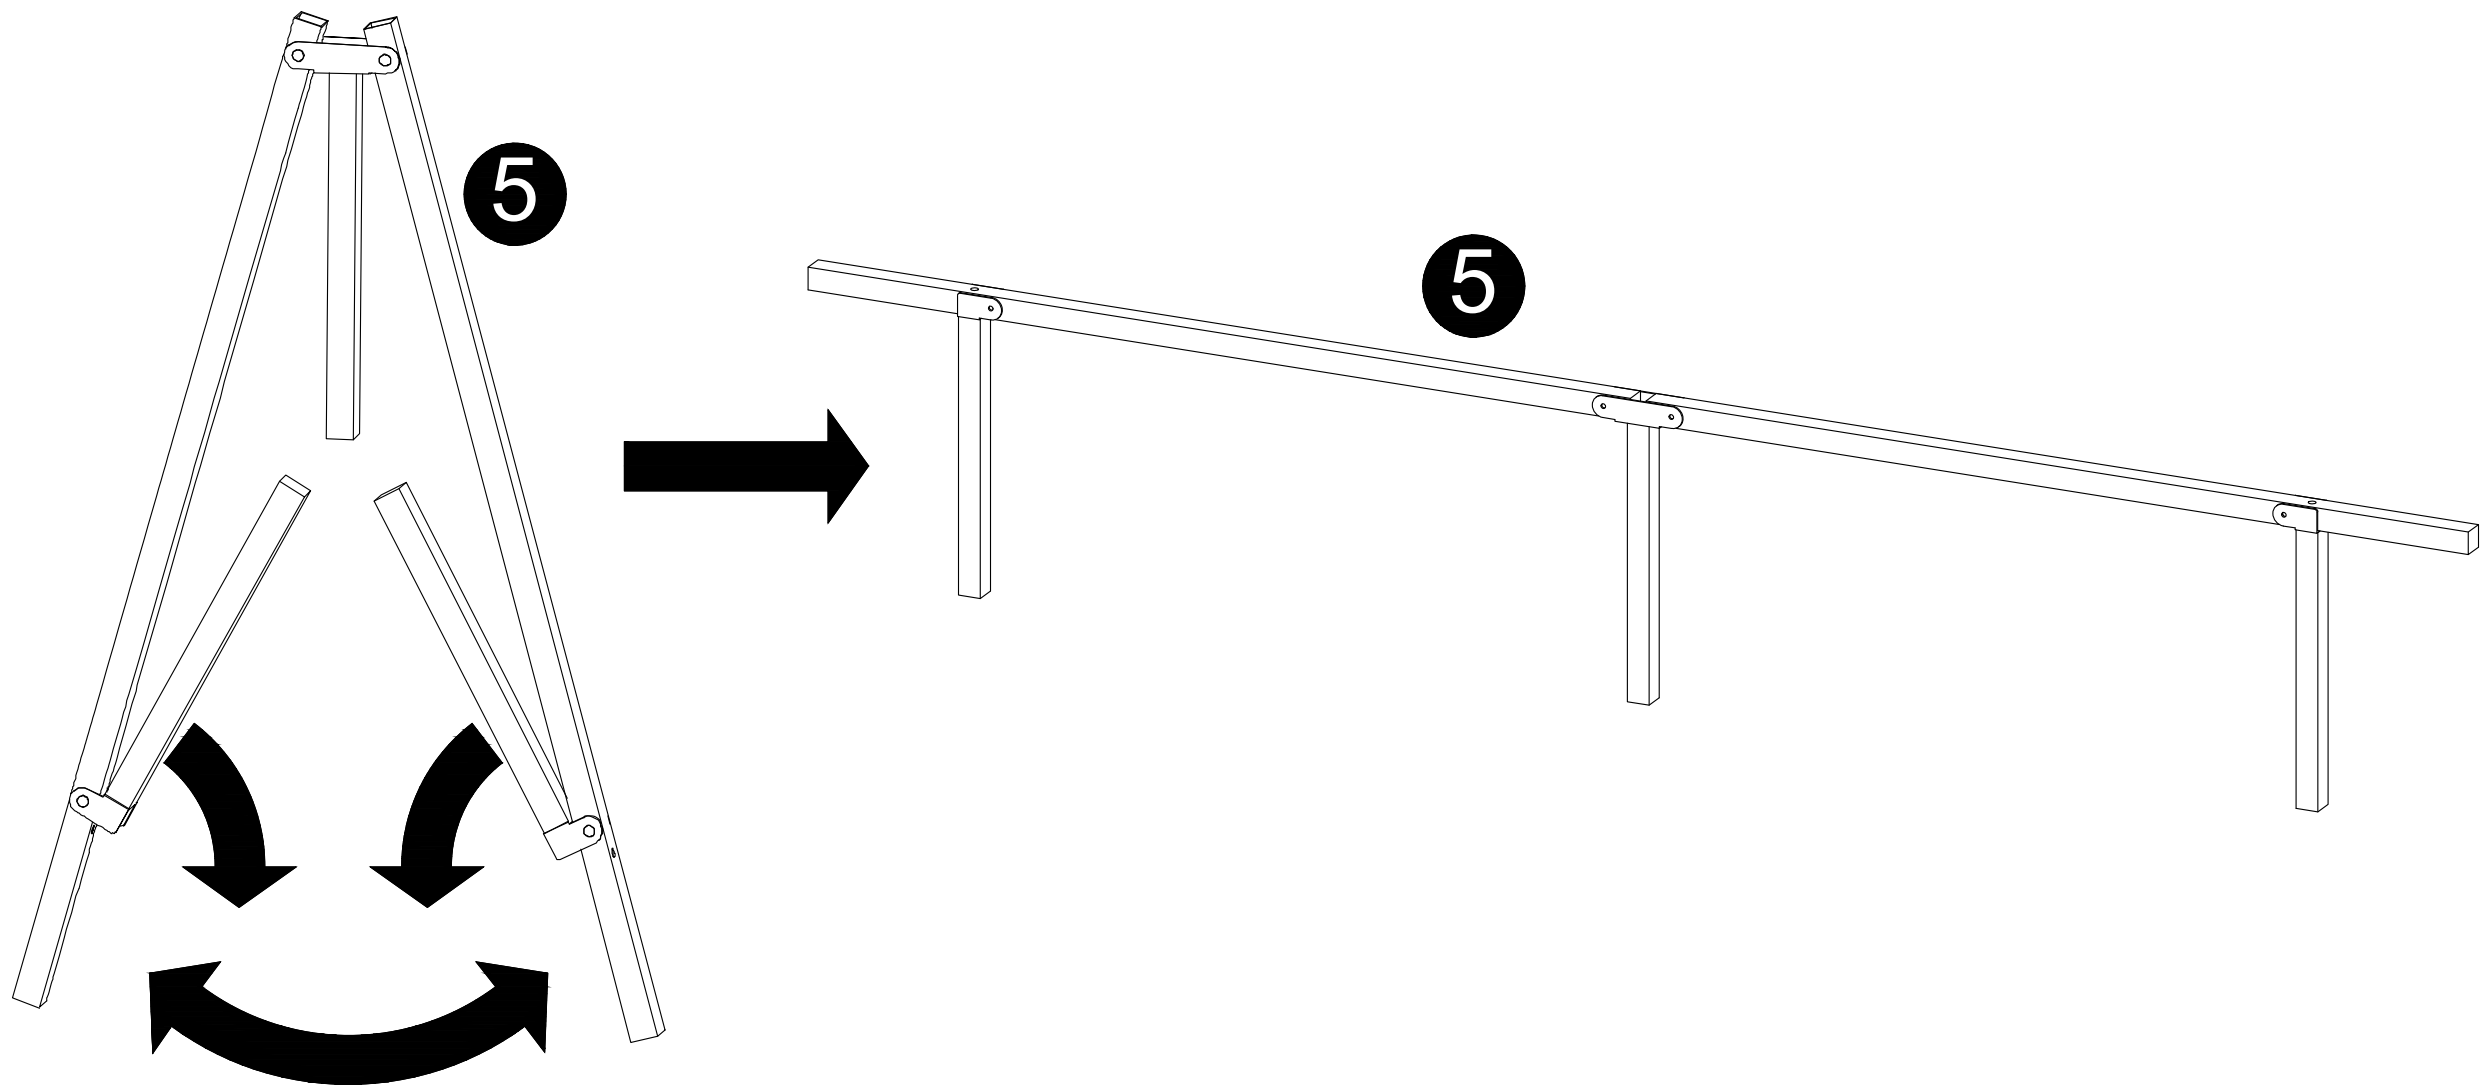 


6

 M6×55mm B × 3pcs	 G × 1pc
--	--

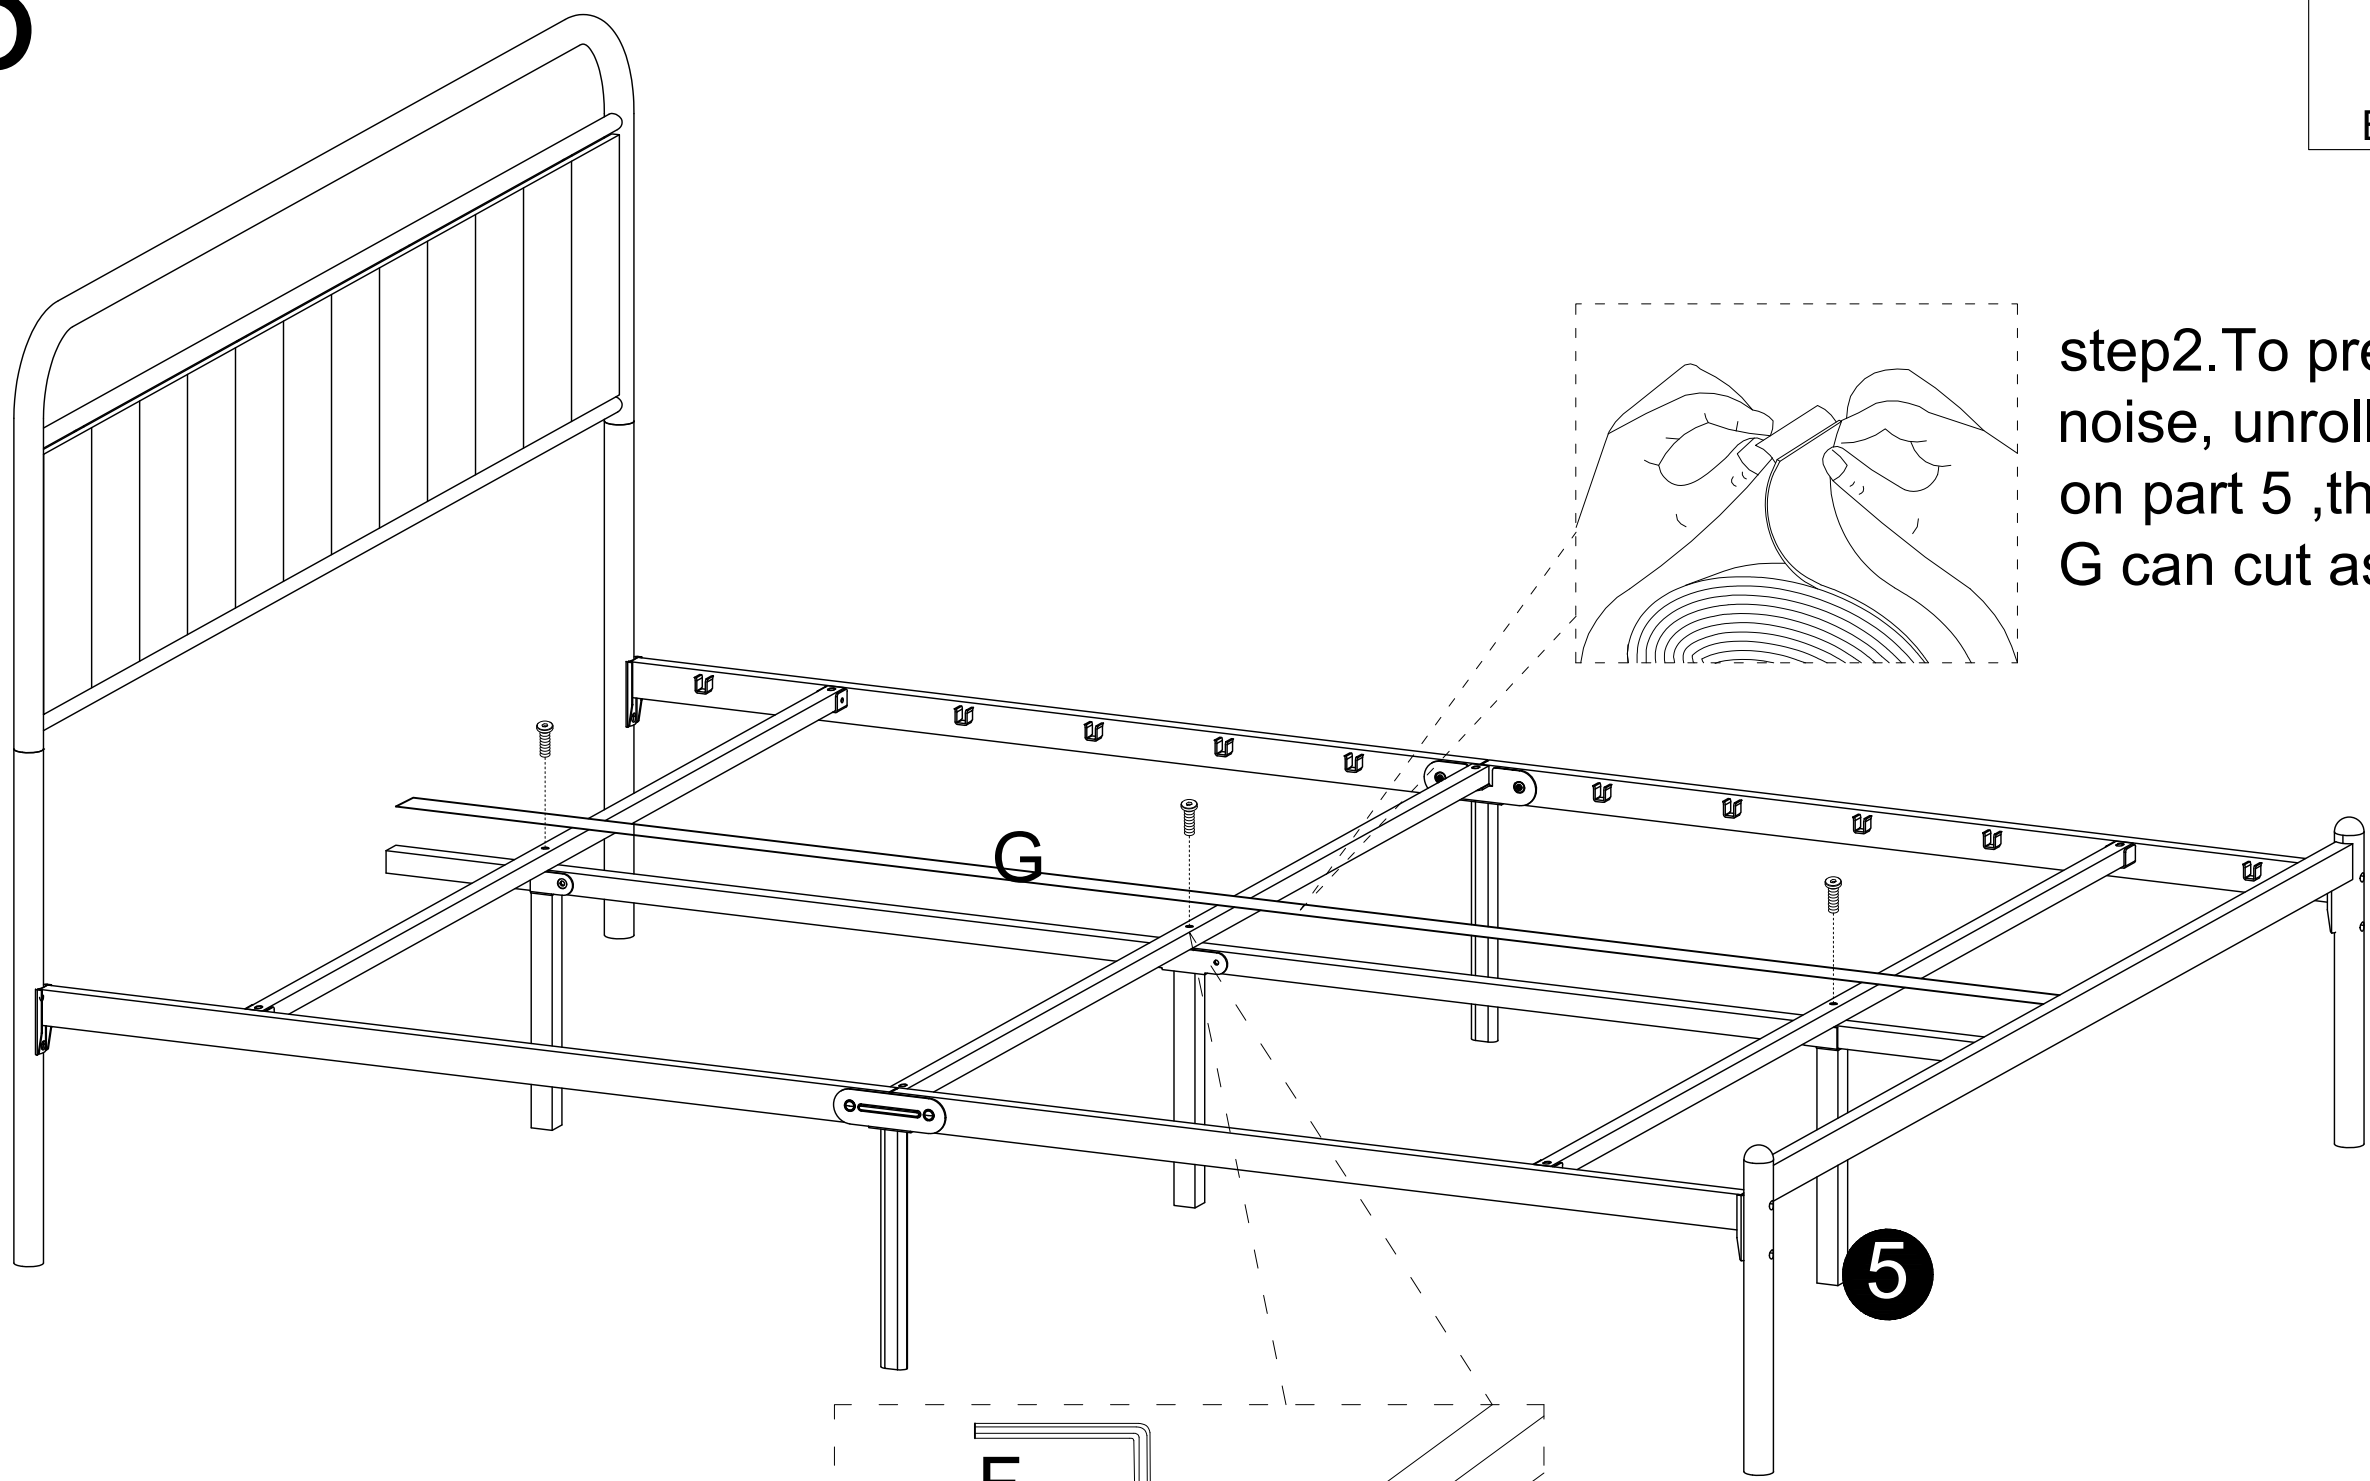 

 
step2.To prevent friction noise, unroll part G and fit it on part 5 ,the lenght of part G can cut as you will.

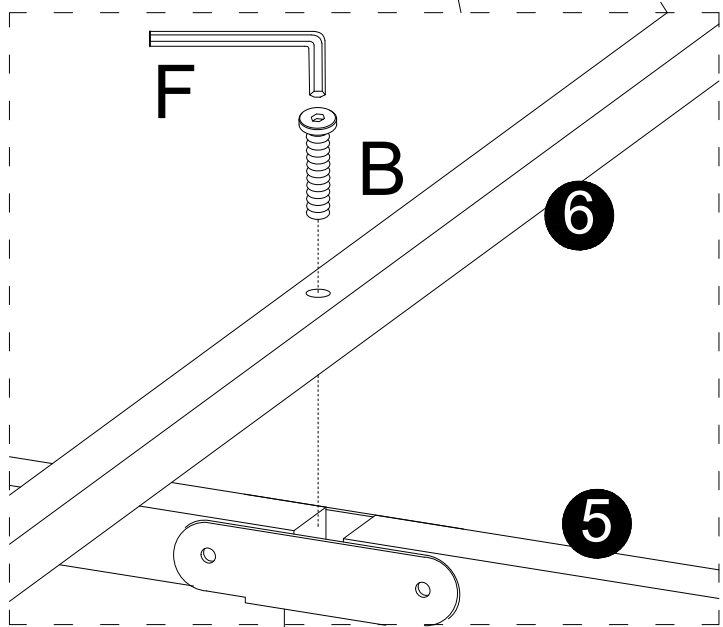

step1.Tighten screw B.

×3

 7

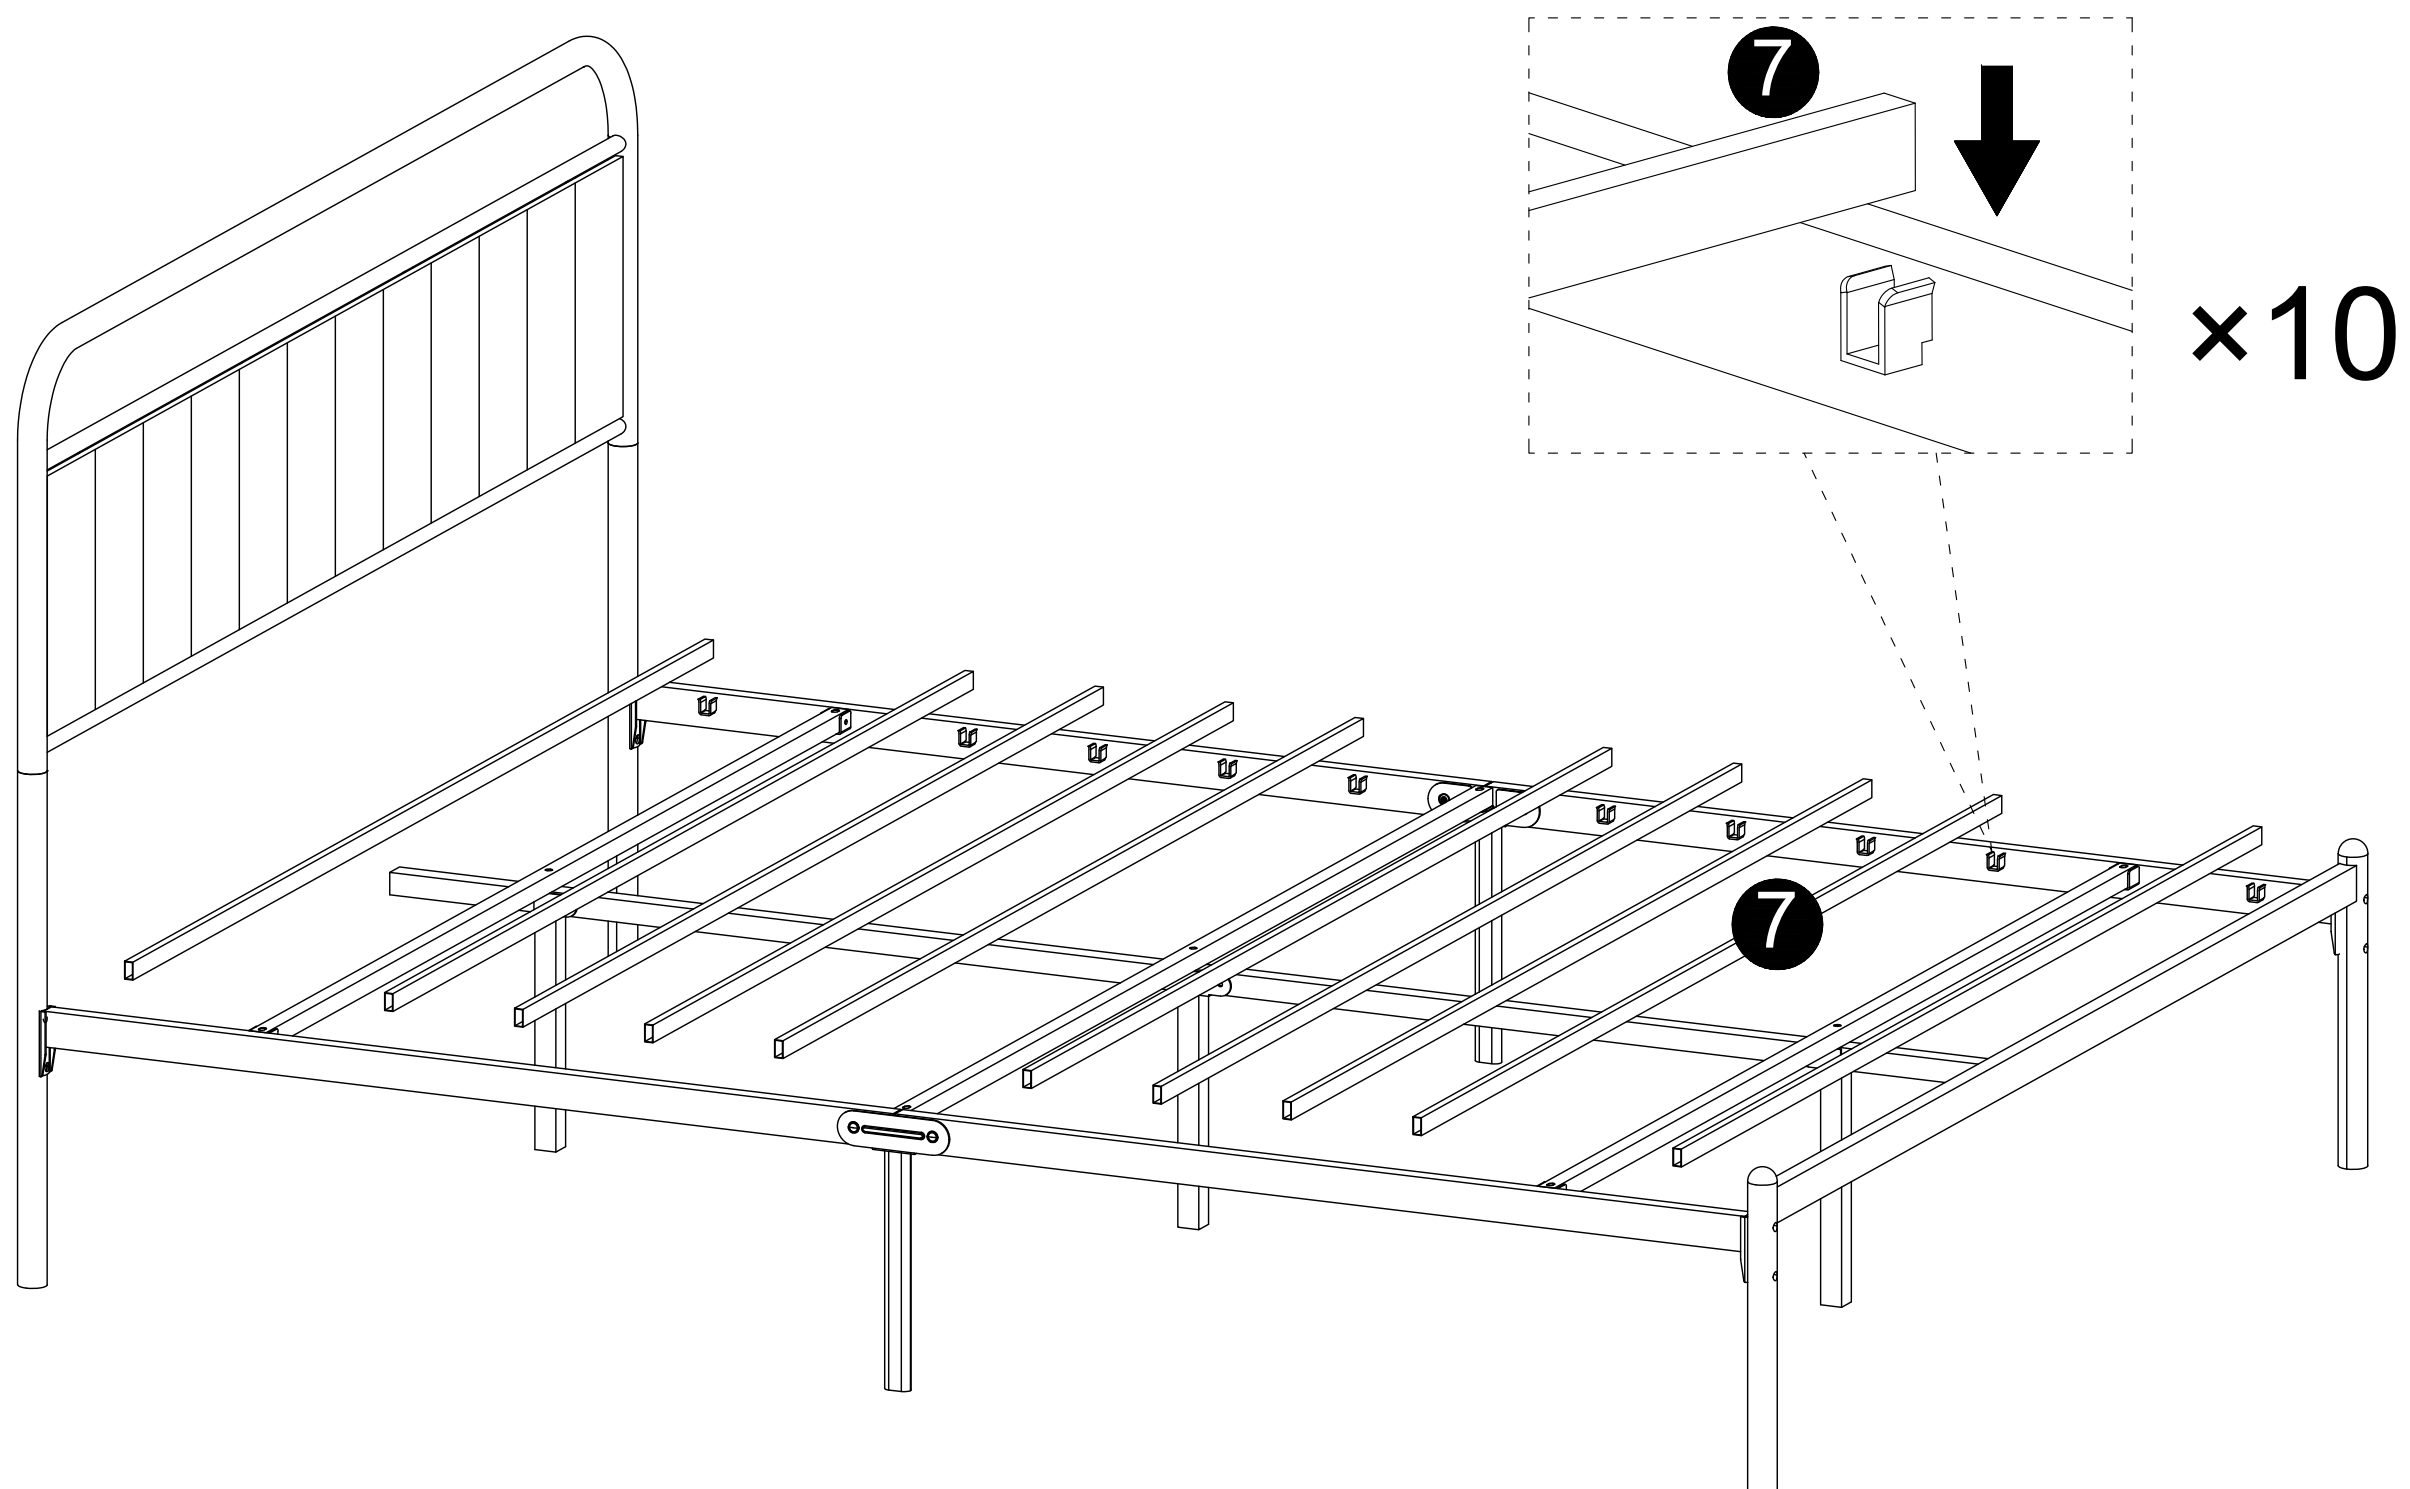

8

Check and tighten all screws

