
TV STAND

Assembly Instructions - Please keep for future reference

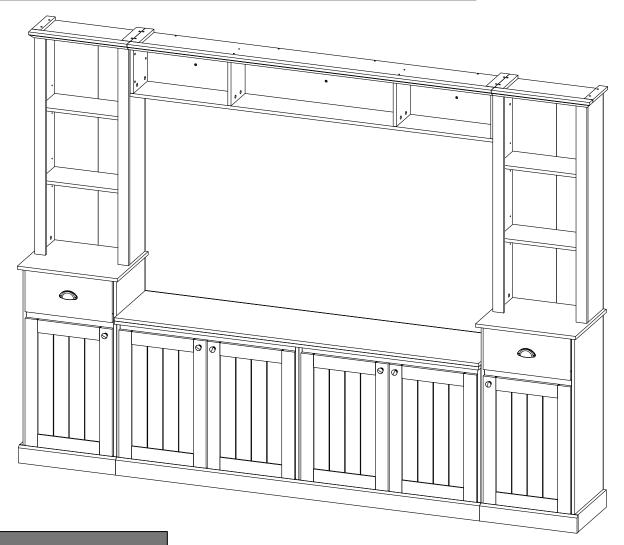

Dimensions

Width-102.91inch

Depth-14.96inch

Height-76.77inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- •Check you have all the components and tools listed on the following pages.
- •Remove all fittings from the plastic bags and separate them into their groups.
- •Keep children and animals away from the work area, small parts could choke if swallowed.
- •Make sure you have enough space to layout the parts before starting.

- •During assembly do not stand or put weight on the product, this could cause damage.
- •Assemble the item as close to its final position (in the same room) as possible.
- •Assemble on a soft level surface to avoid damaging the unit or your floor.
- •Parts of the assembly will be easier with 2 people.



•To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Care and maintenance

- •Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- •From time to time check that there are no loose screws on this unit.
- •This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- •Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below

Note: The quantitie below are the correcet amount to complete the assembly. In some cases more fittings may be supplied than are required.

(A1)	(A2)	(A3)	B
Cam lock x 70+2	Cam bolt x 70+2	Cam cap x 70+2	8*30mm Dowel x 96+2
©	D	E	F
6*50mm Screw x 24+2	Allen key x 1+1	3.5*16mm Screw x 4+2	3.5*16mm Screw x 116+2
(G)	(H)		(J)
4*38mm Screw x 8+2	16mm Nail x 92+2	Nail leg x 14+2	Metal shelf support x 32+2
(K)	L1 a	L2	(M)
	0		
L bracket x 10	6*12mm Joint nut x 12	6*20mm Screw x 12	Hinges x 12
(N1L)	N1R)	N2L)	N2R
300mm runner x 2	300mm runner x 2	300mm runner x 2	300mm runner x 2
(O1)	(O2)	(P)	(Q)
The state of the s			
4*35mm Screw x 3	6*50mm Wall plug x 3	4*19mm Screw x 6+2	Handle x 6
R	S1	S2	(S3)
		Emmin.	
Handle x 2	Wall support x 4	3.5*16mm Screw x 2	6*40mm Wall plug x 2
S4	S5	T	
4*35mm Screw x 2	Cable tie x 2	Sticker x 39	

 Tools required




Philips screwdriver (medium & large)

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

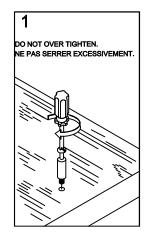

Step 2


Push the male camlock into the entry hole.

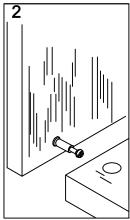

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

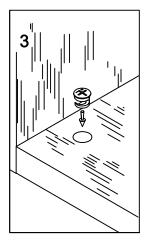


Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

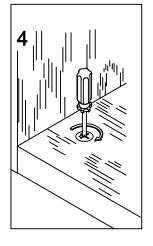


Please check you have all the panels listed below


Box A - WF320396

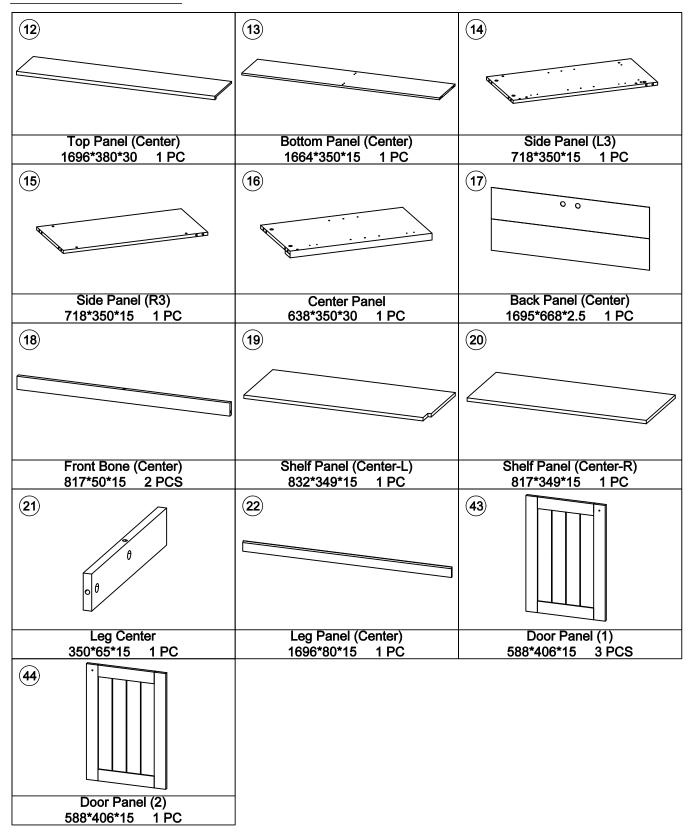


Box B - WF320397

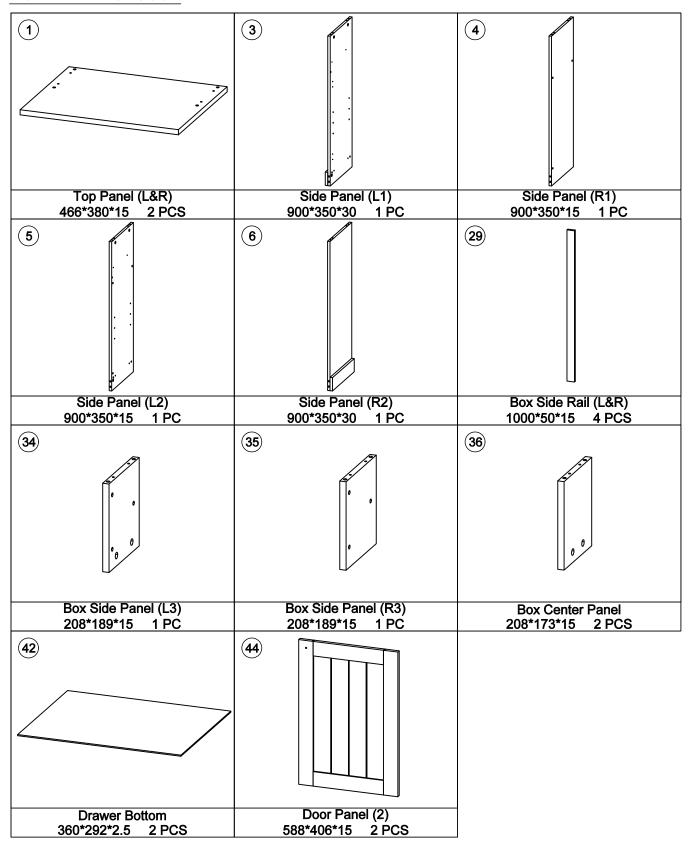



Box C - WF320398

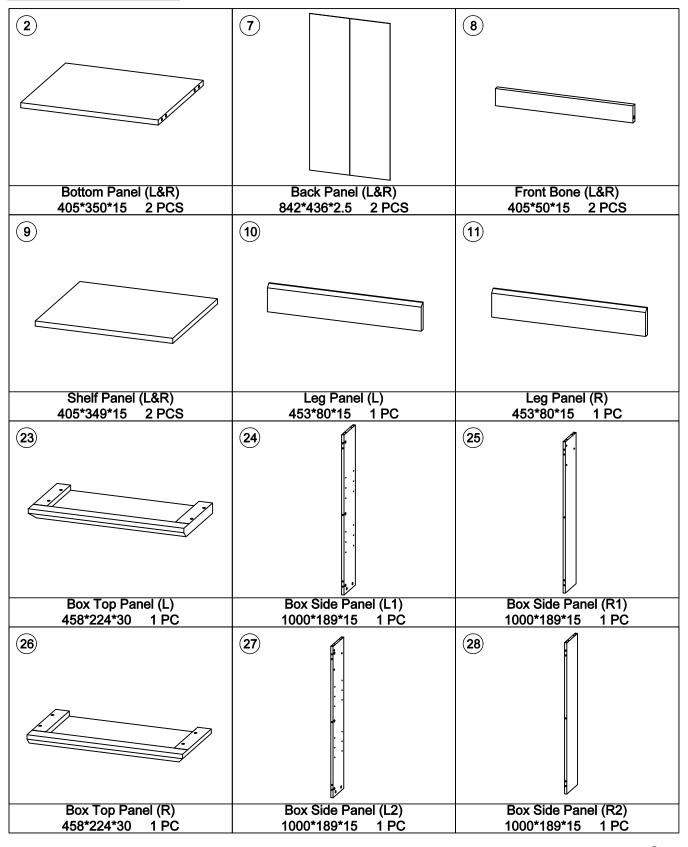


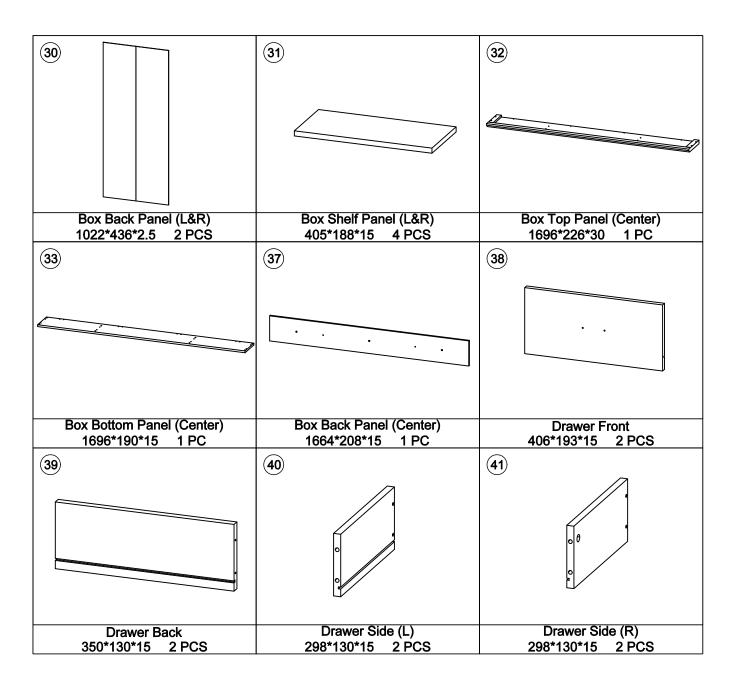



Assembly Instructions

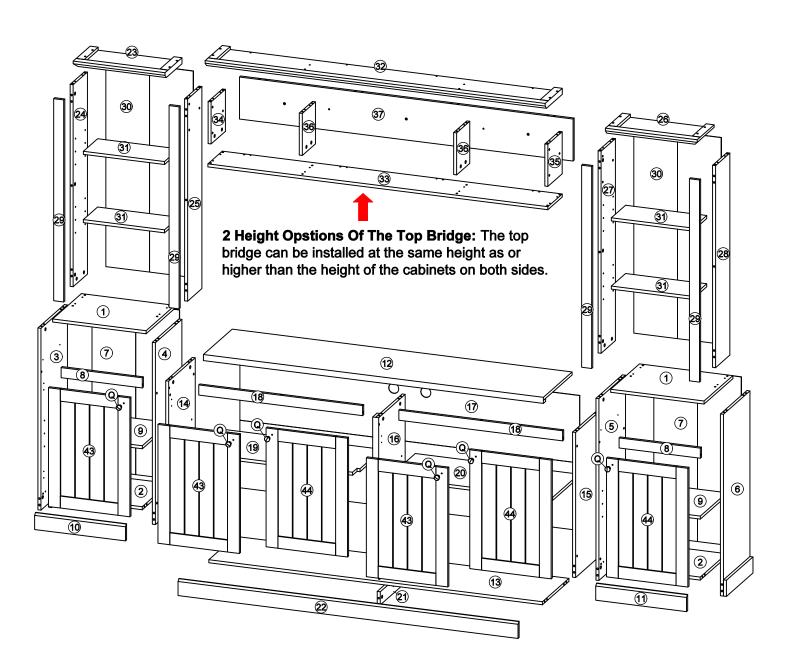


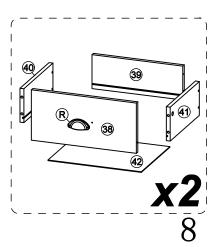


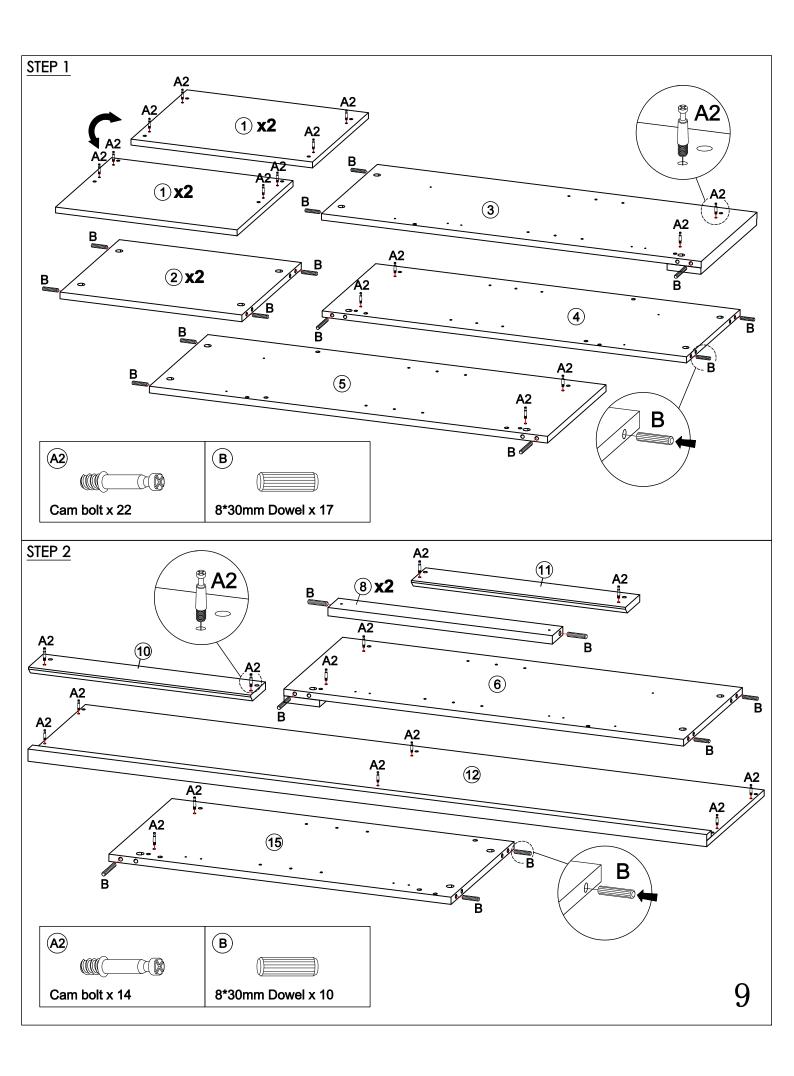


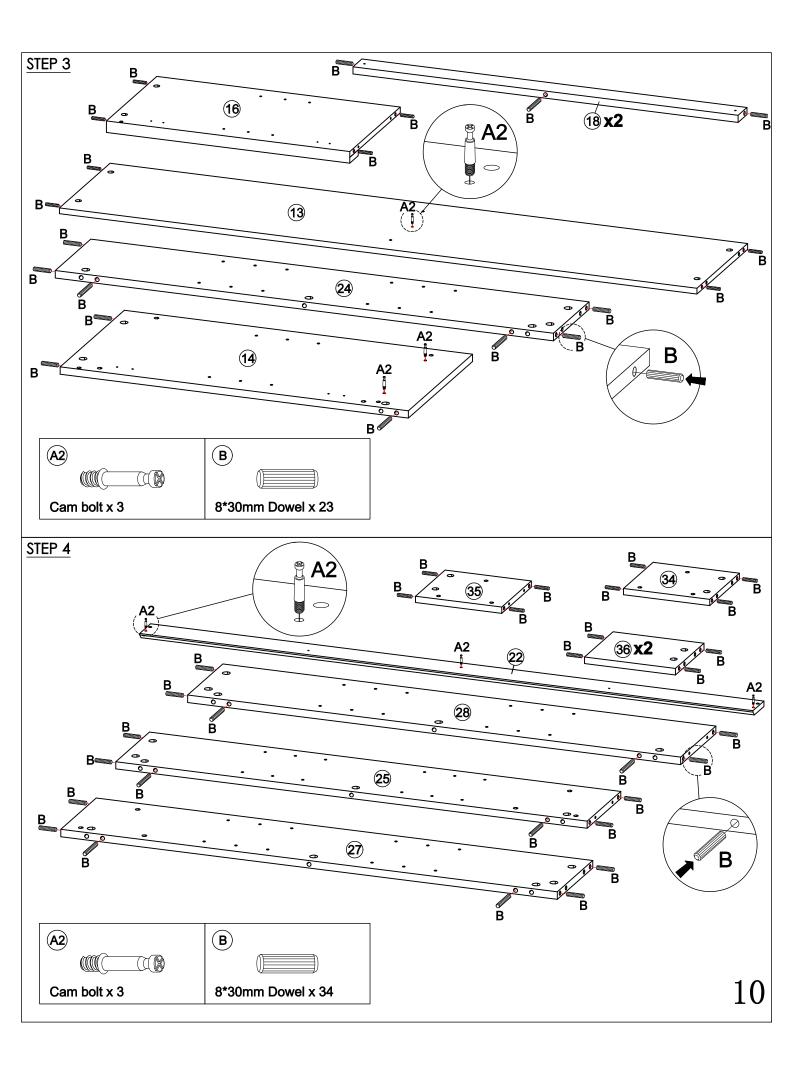


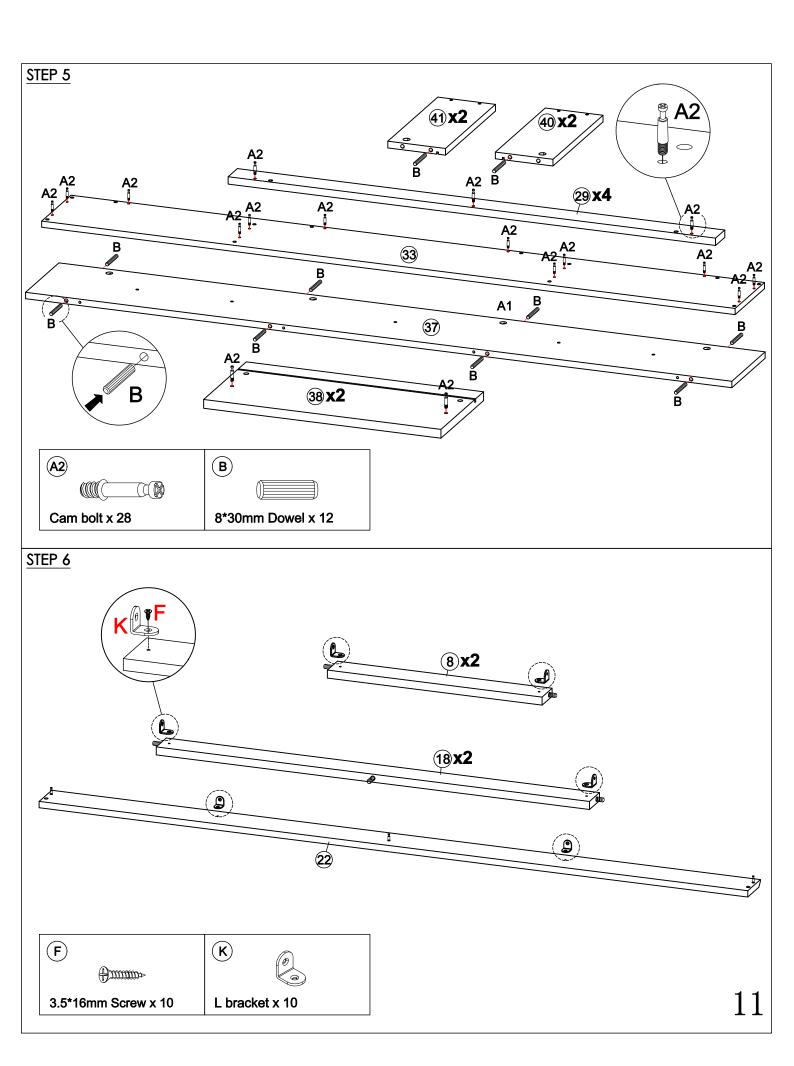

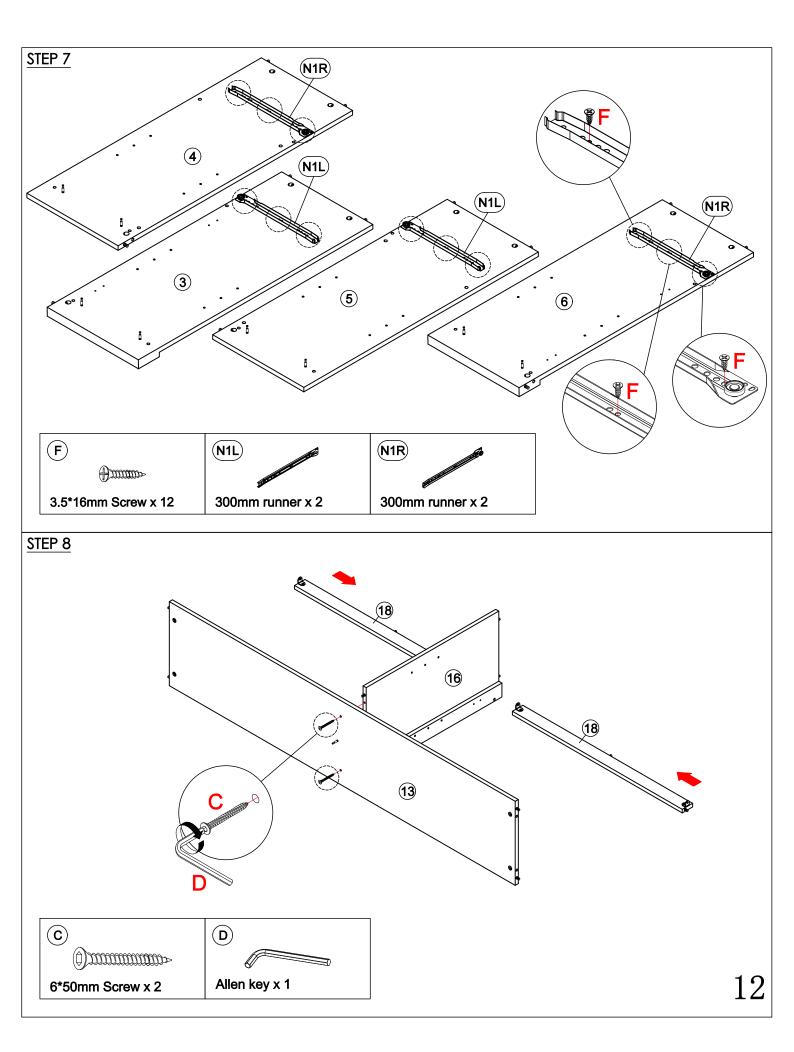


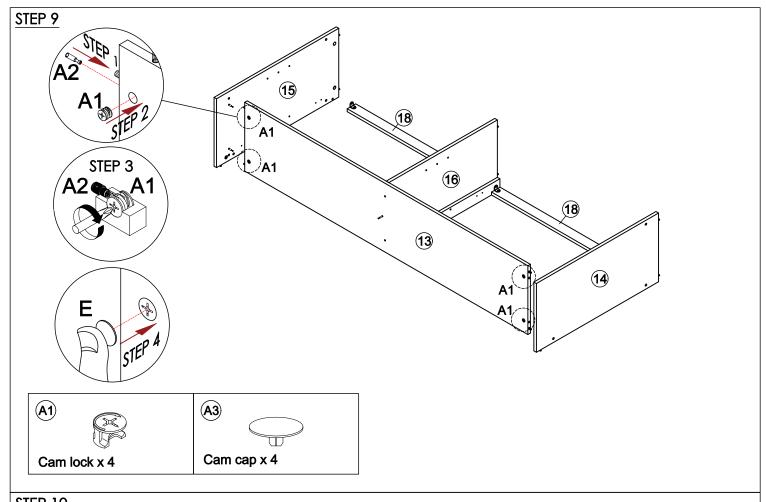


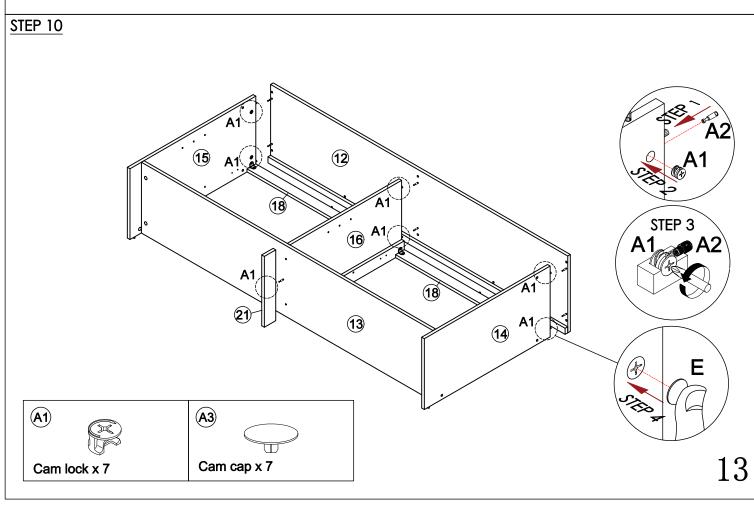


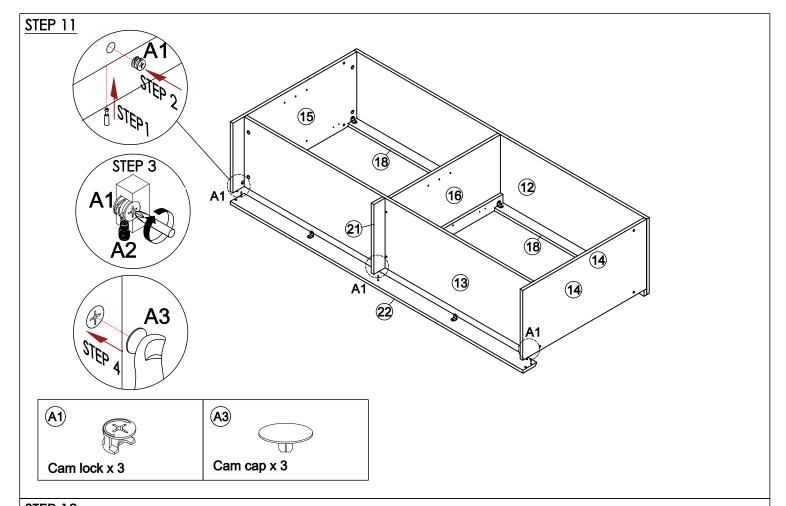





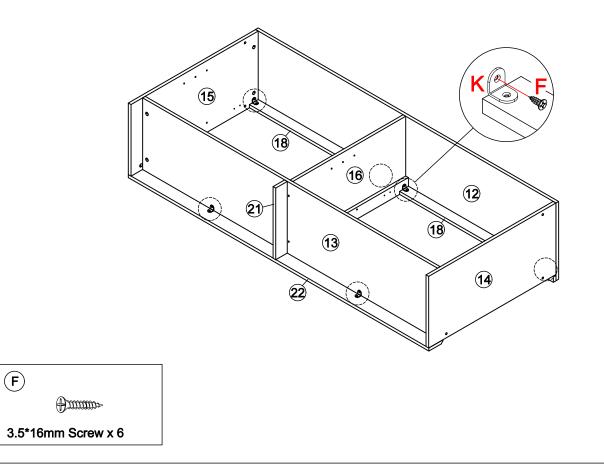


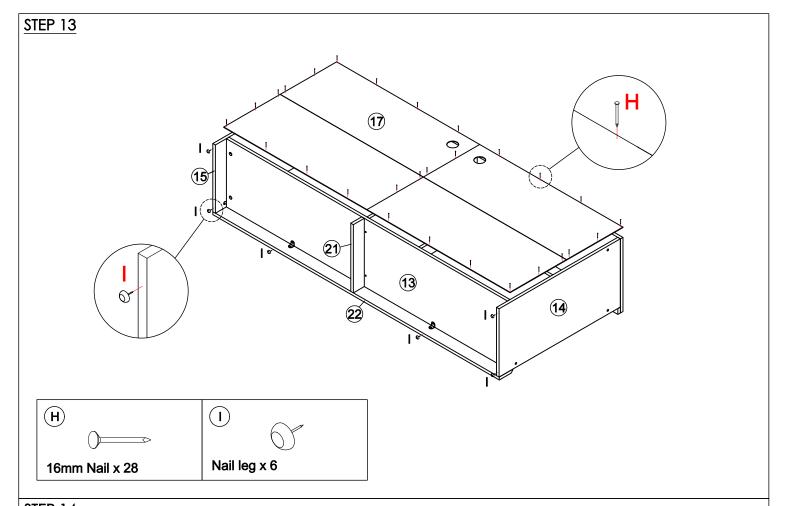


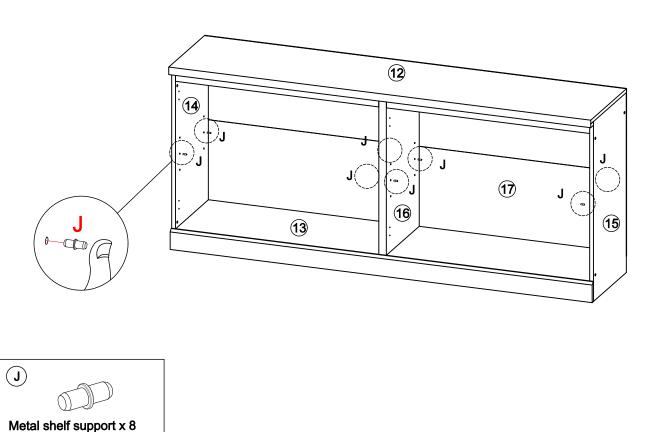


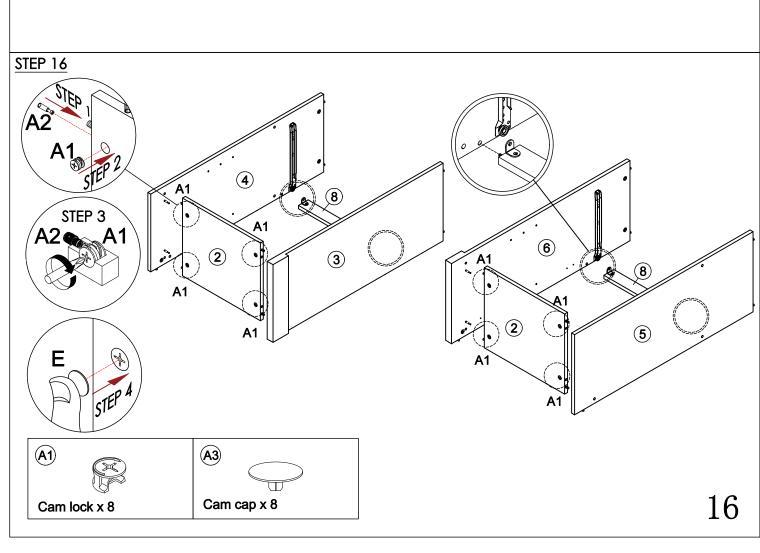


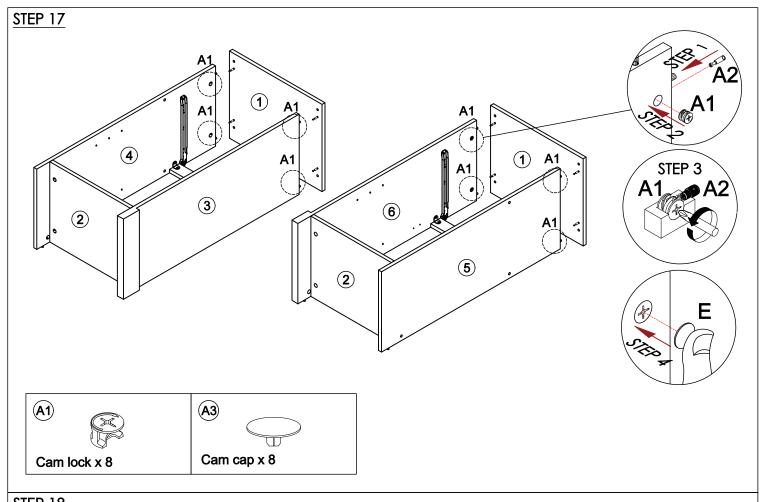


 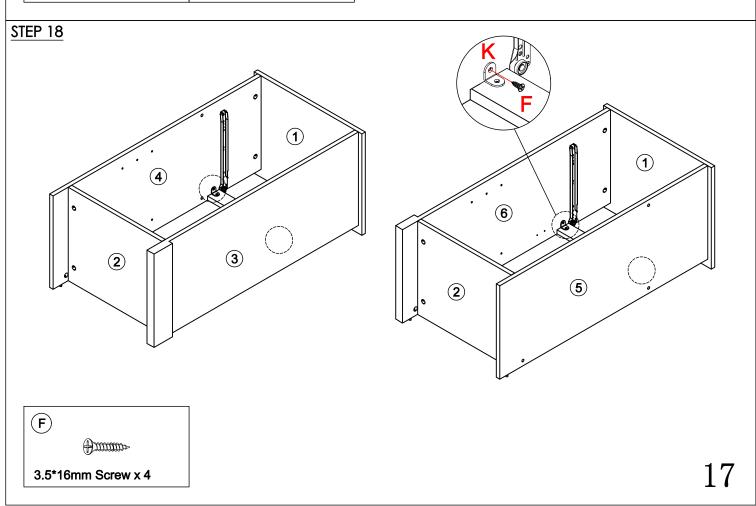


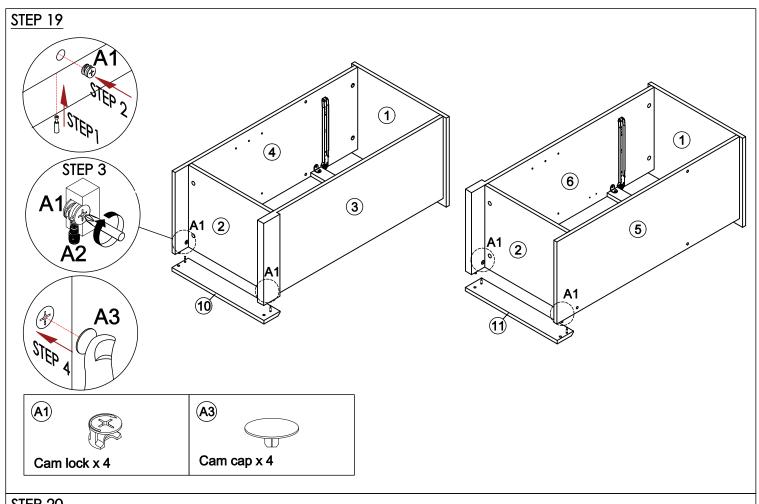


 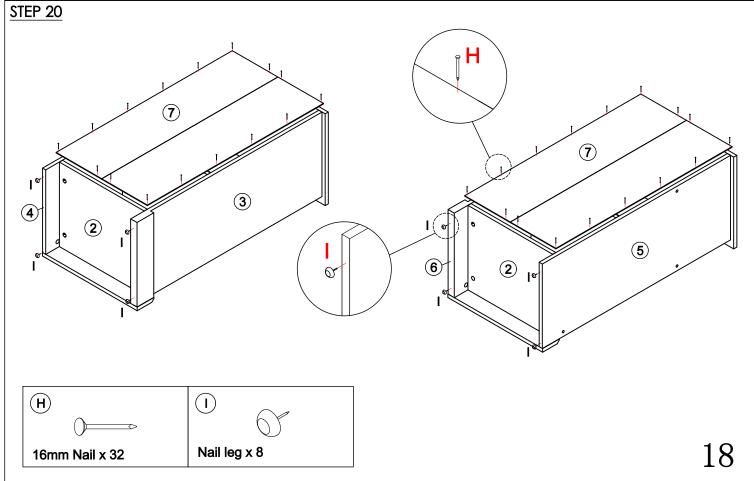


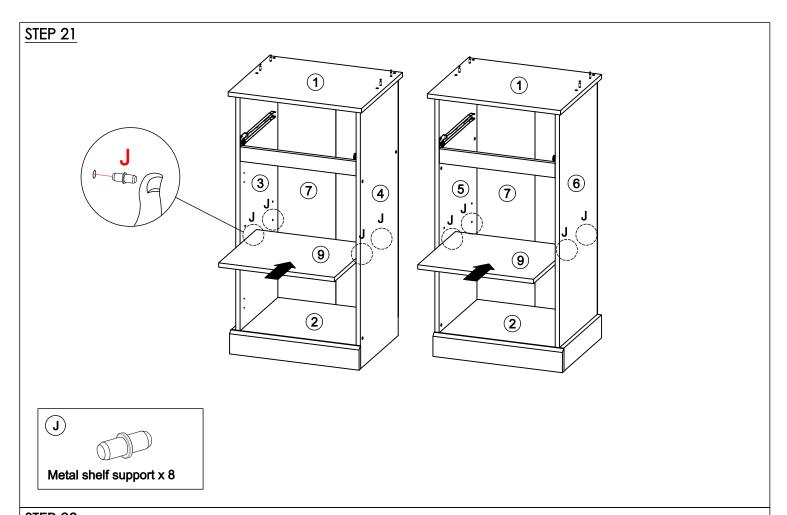


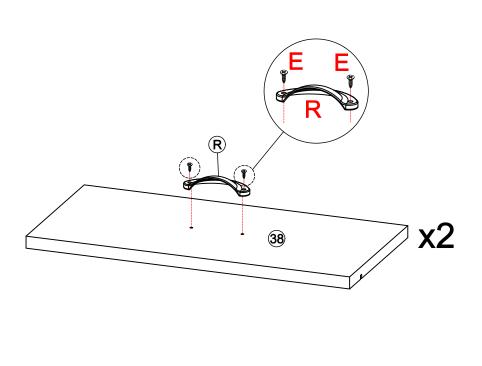




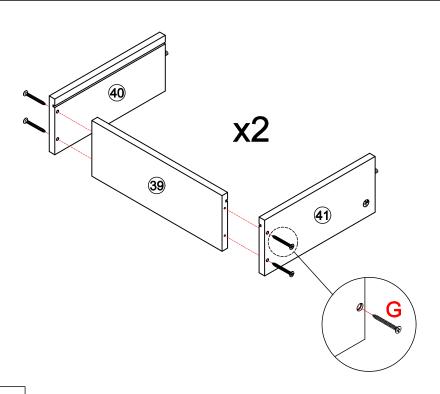



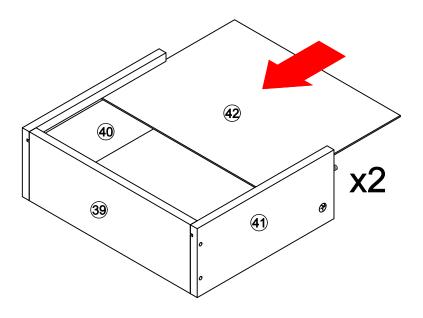



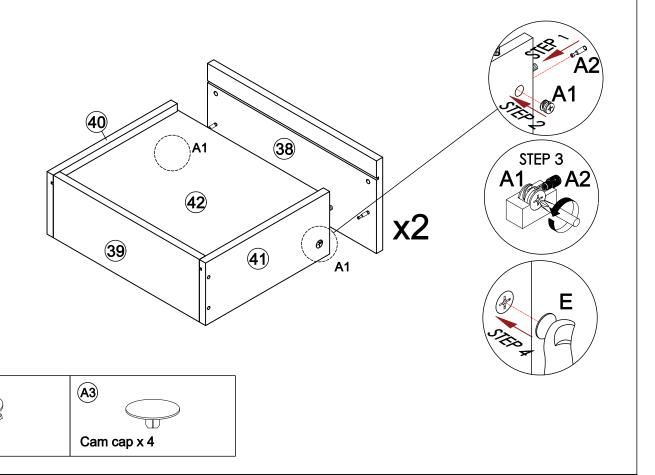


F

-ammar


3.5*16mm Screw x 12


<u>(A1)</u>

Cam lock x 4

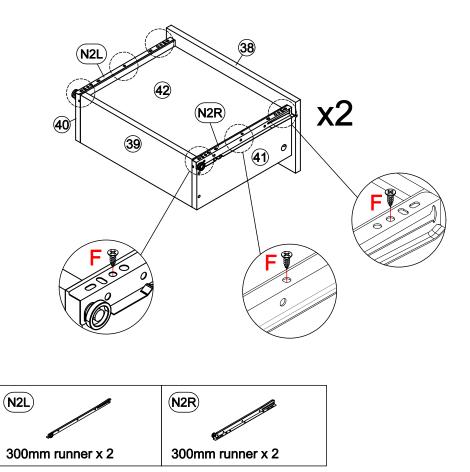


<u>STEP 27</u>

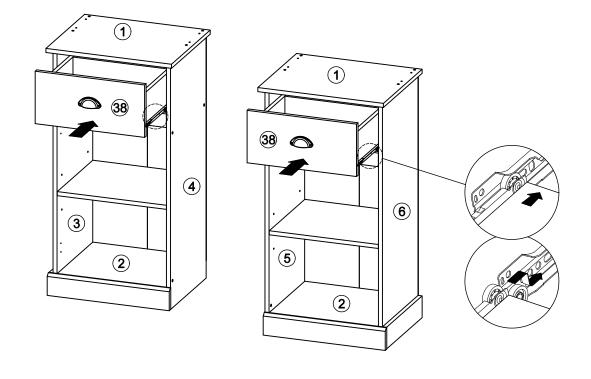


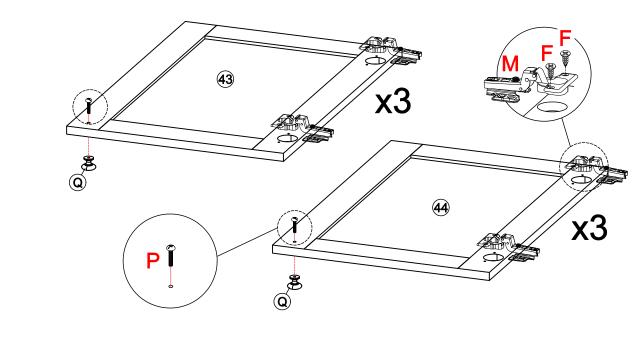




  






22

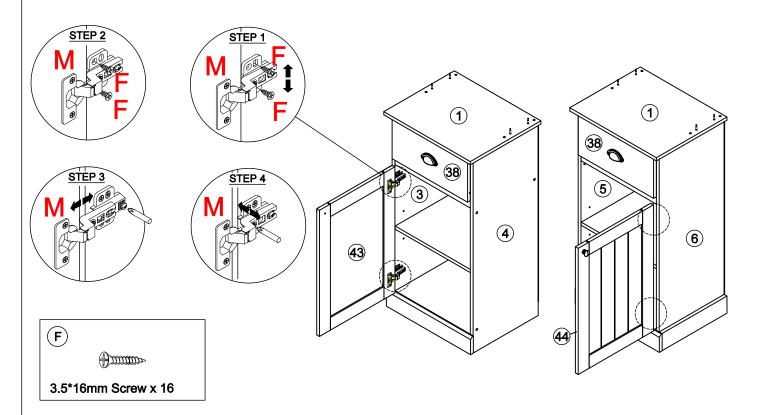

HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.




To adjust the door horizontal loosen the screw as shown by turning clockwise or anti-clockwise.




 
To adjust the door vertically loosen the screw as shown and move up and down as needed.





To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

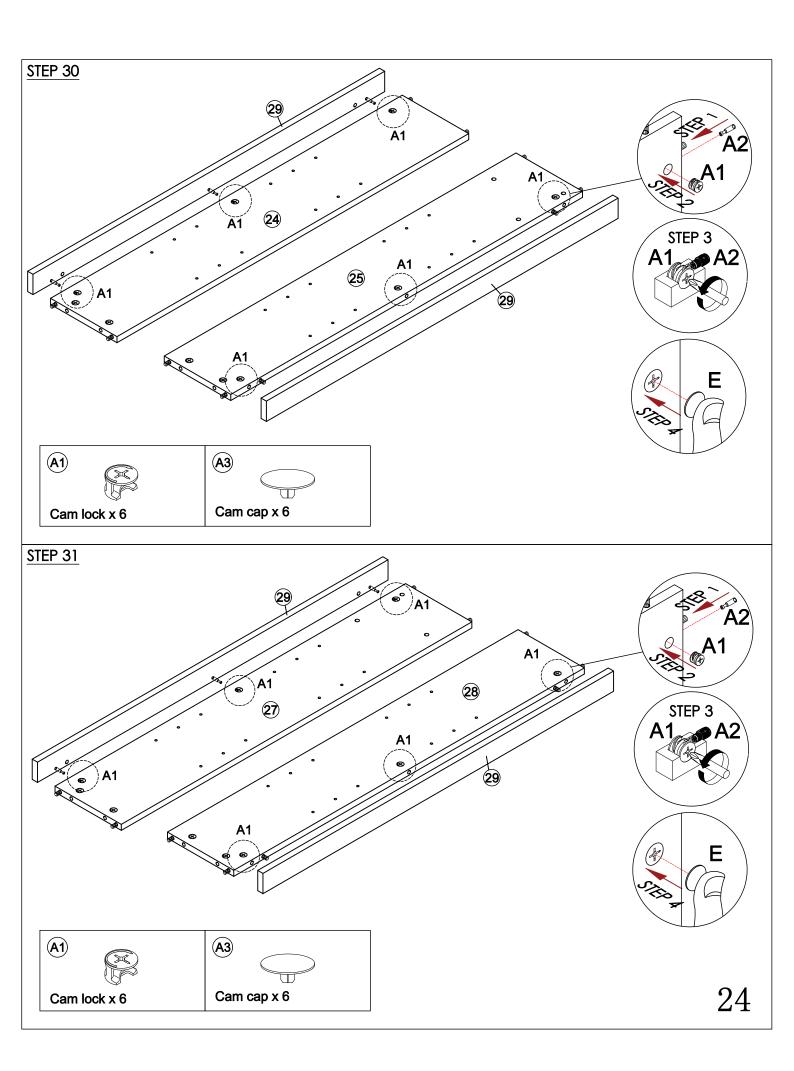


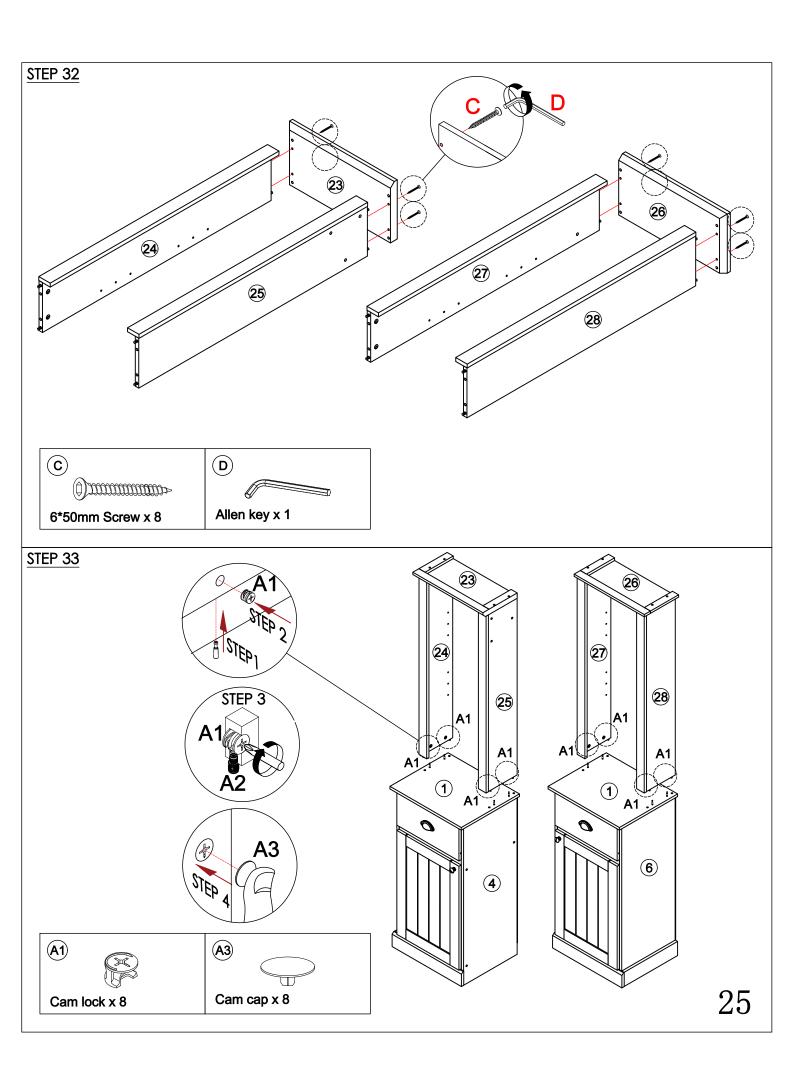

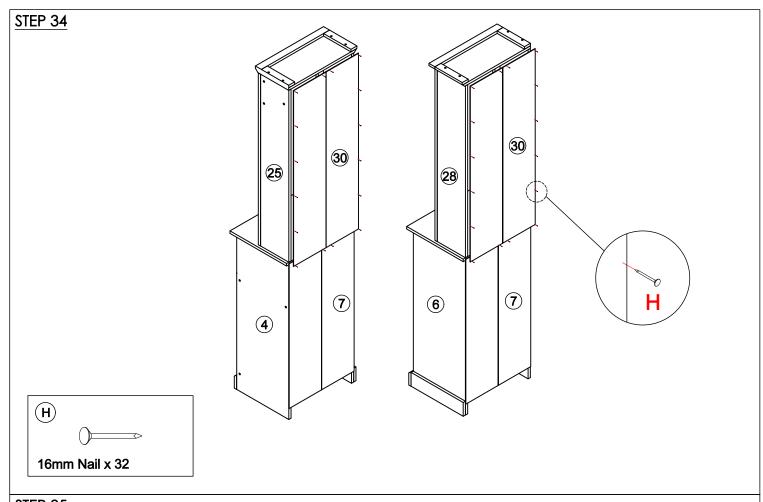

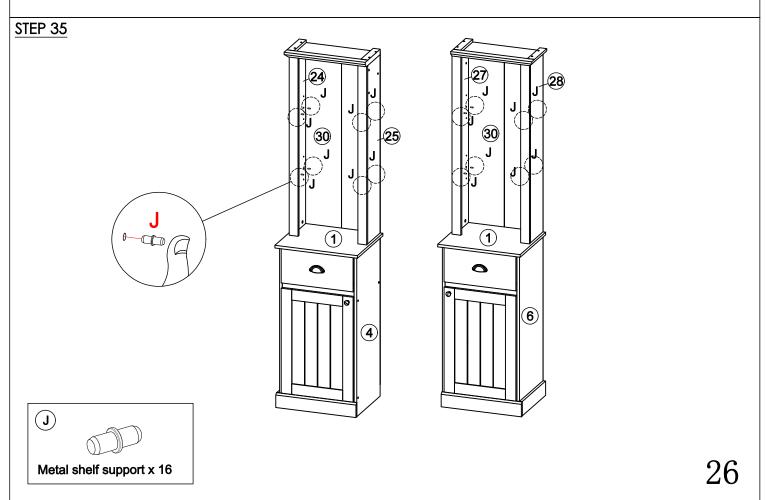


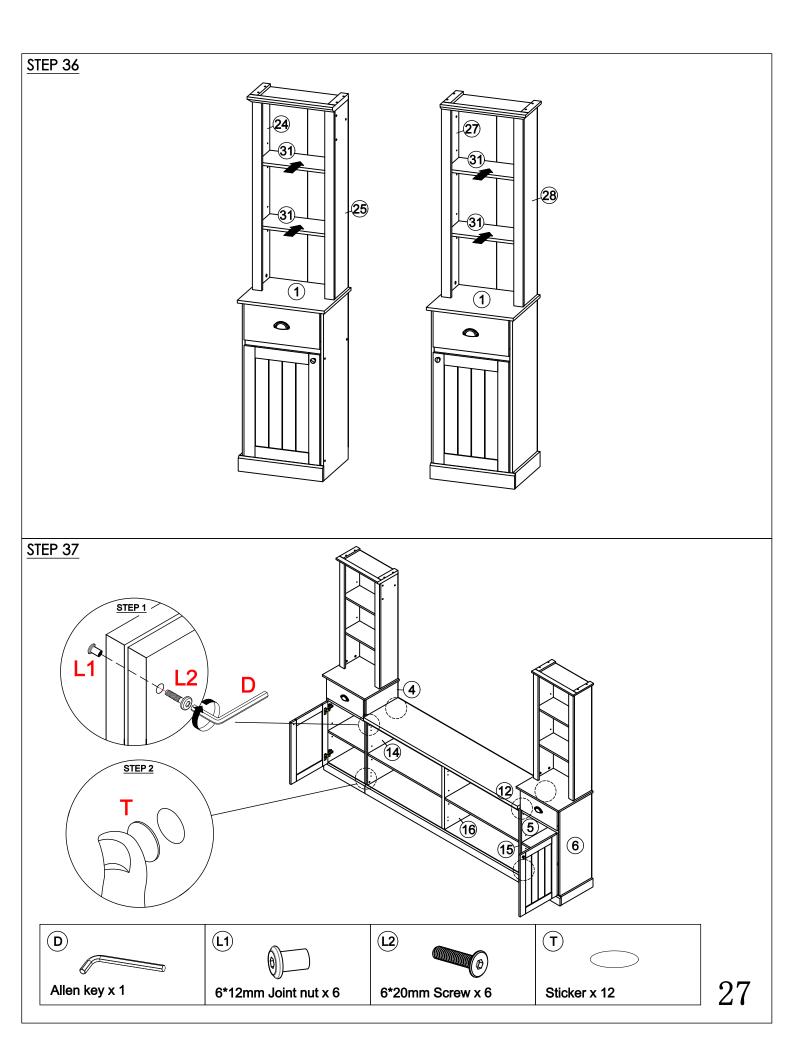

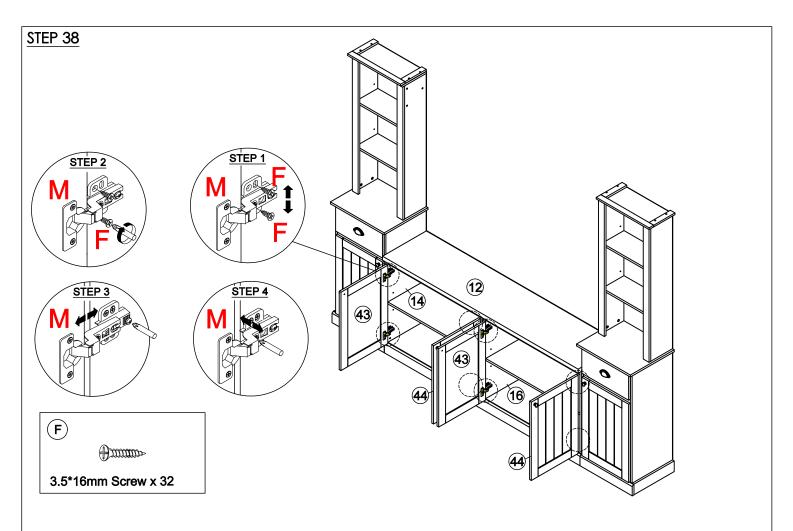

HINGE ADJUSTMENT GUIDE

 
It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.




To adjust the door horizontal loosen the screw as shown by turning clockwise or anti-clockwise.




 
To adjust the door vertically loosen the screw as shown and move up and down as needed.



To adjust the gap from the door to the main frame turn the screw clockwise or anti-clockwise as needed.

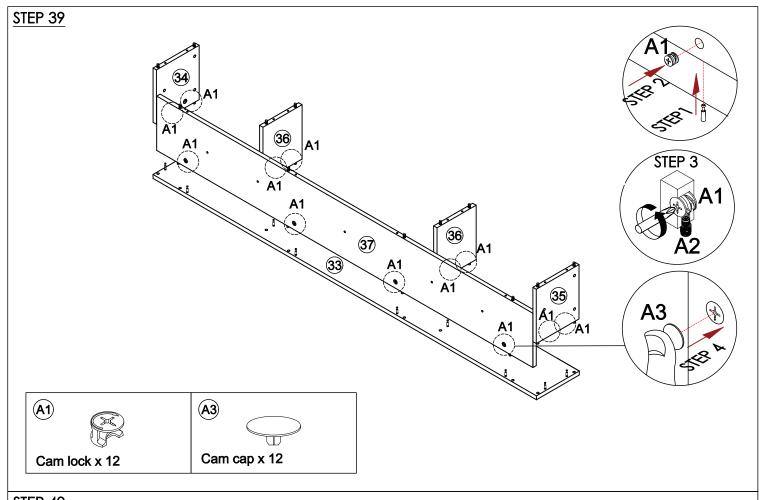

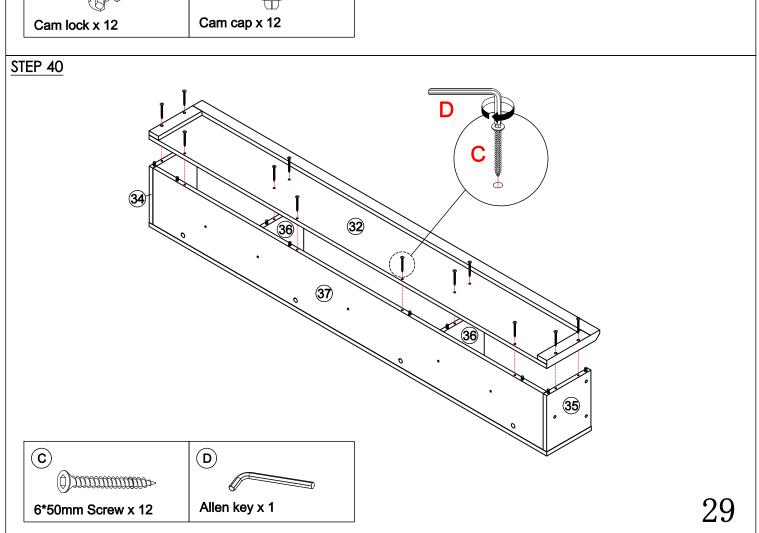


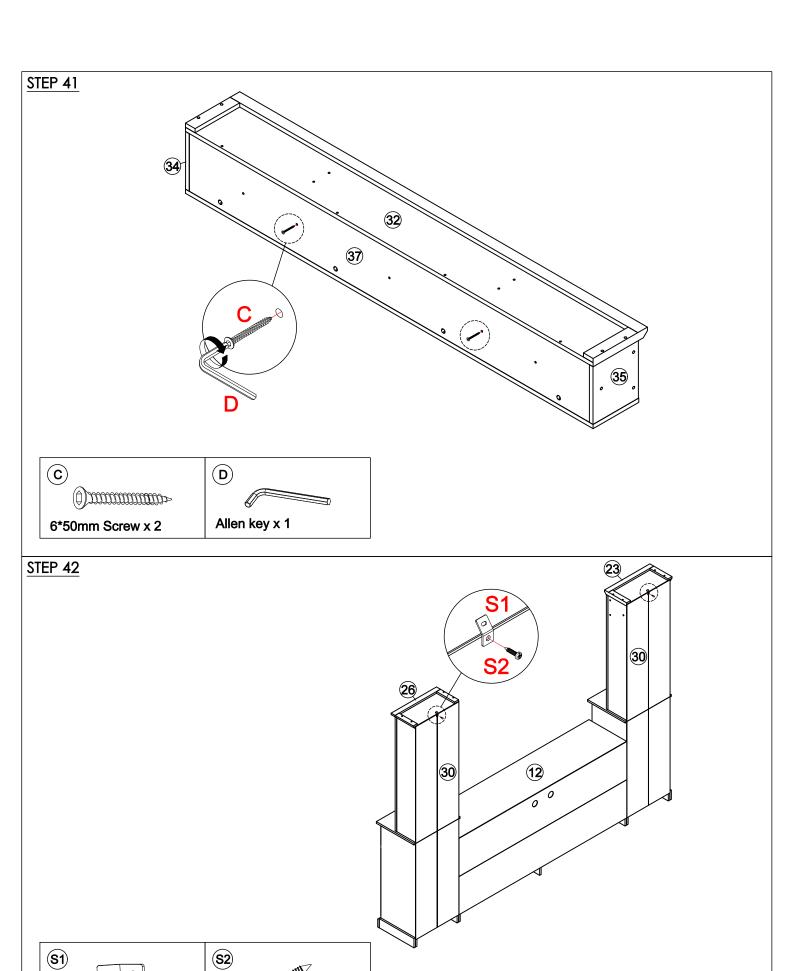



Screw x 2


Wall support x 2

30

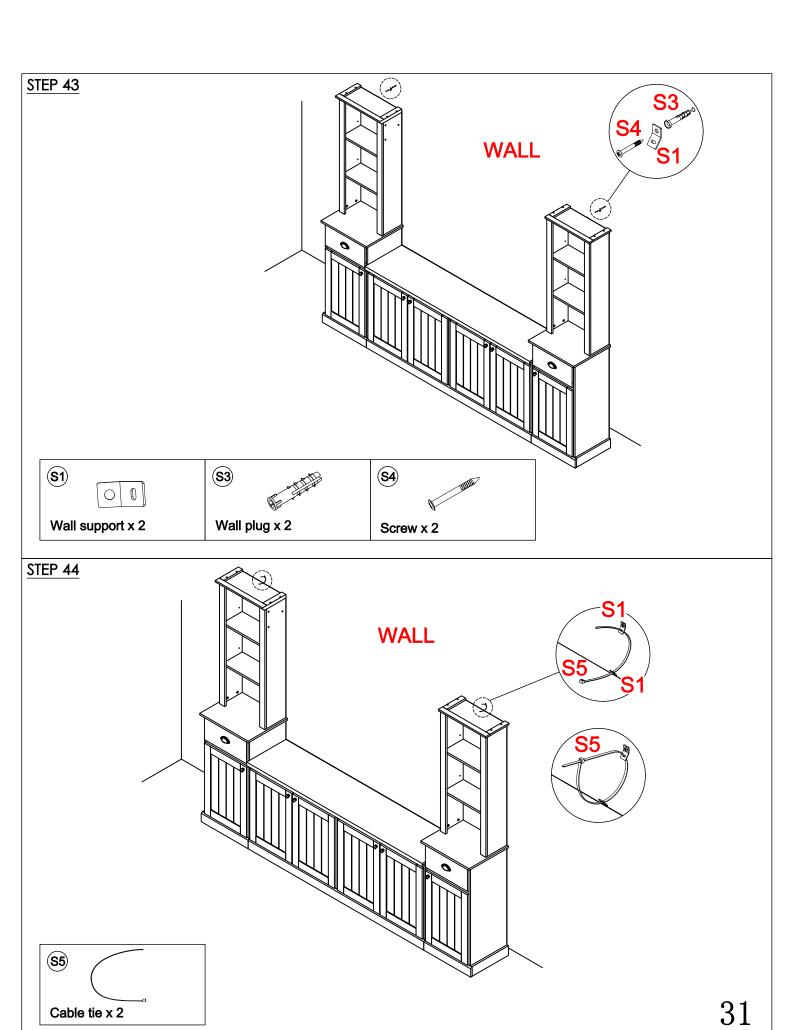

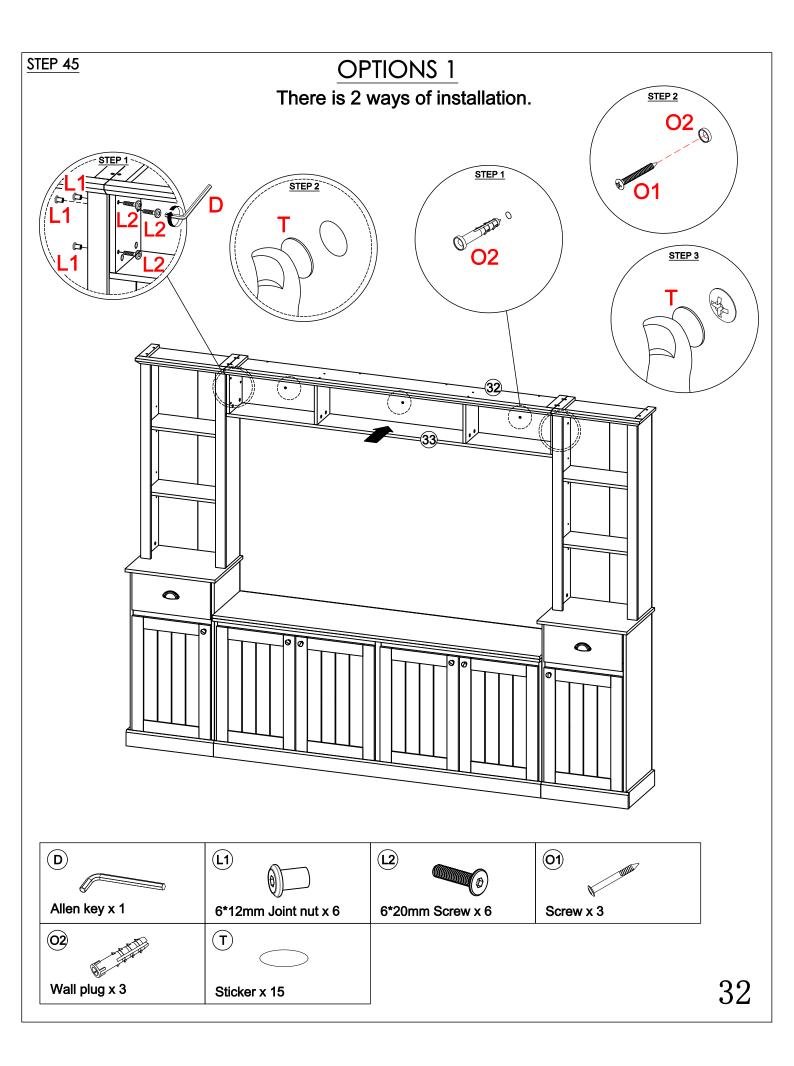

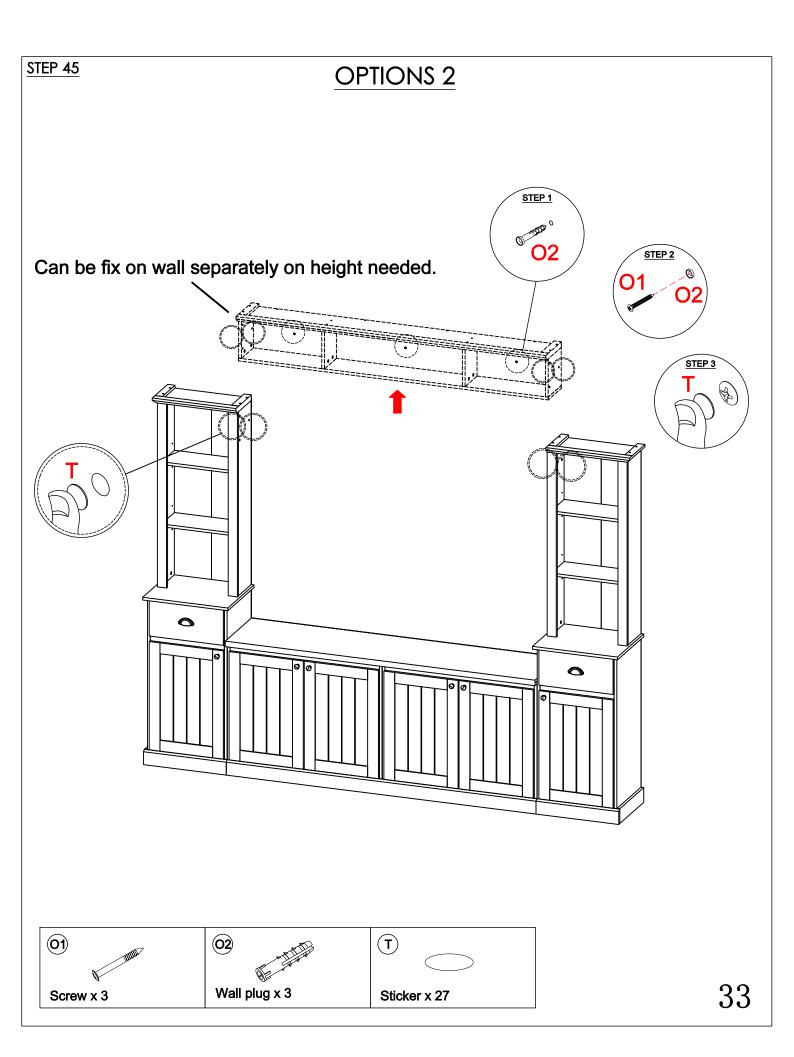

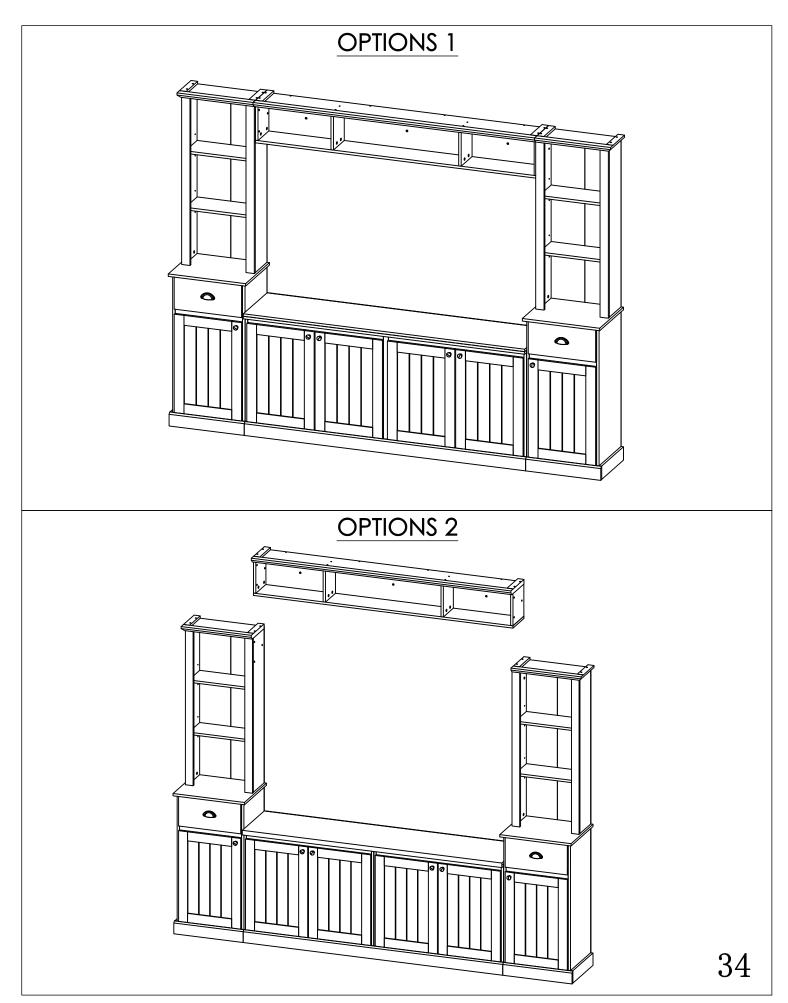

Finish