
 
 
 
 
 
 



 
 

 
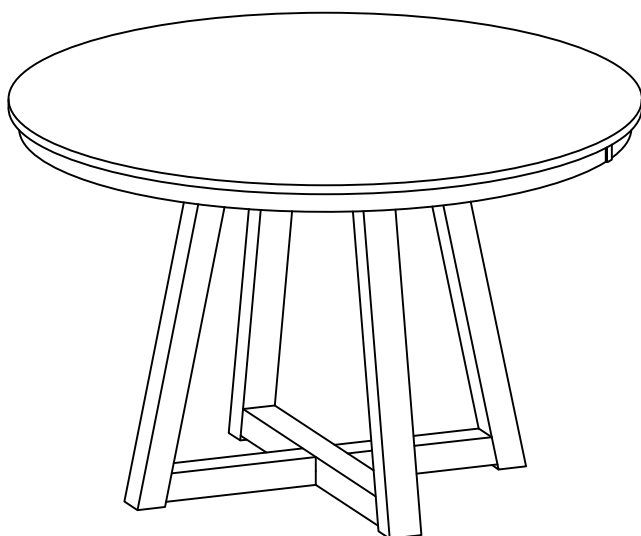 


ASSEMBLY INSTRUCTIONS

 
FIXED TOP ROUND DINING TABLE

A Table Top  1 PC	B Leg  4 PCS	C Upper Crossbar  1 PC	D Lower Crossbar  1 PC
E JCBC Bolt M6 x 35mm  1 PC	F JCBC Bolt M6 x 50mm  4 PCS	G JCBB Bolt M8 x 60mm  8 PCS	H Lock Washer M6  1 PC
I Lock Washer M8  8 PCS	J Flat Washer M8  8 PCS	K PVC Dowel M8 x 30mm  8 PCS	L Nylon Washer M6  4 PCS
M Allen Wrench M4 x 100mm  1 PC	N Allen Wrench M5 x 60mm  1 PC		

 


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
-
- 1** Insert PVC Dowel (K) into the pre-drilled holes of the Upper Crossbar (C) and the Lower Crossbar (D).

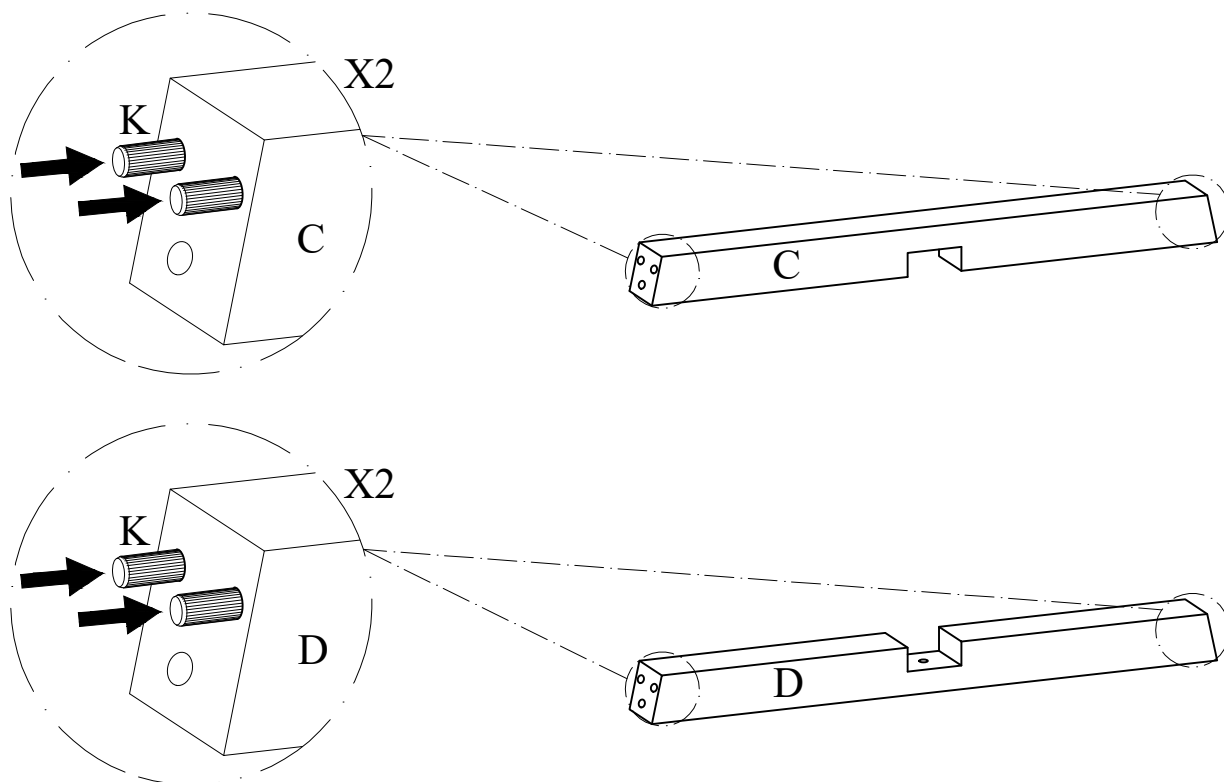

-
- 2** (i) Place the Table Top (A) upside down on an even surface. Attach the Leg (B) to the frame of the Table Top (A) using JCBB Bolt (G), Lock Washer (I) and Flat Washer (J) with the Allen Wrench (N).
- (ii) Use PVC Dowel (K) as a guide to align and attach the Upper Crossbar (C) to the Leg (B) using JCBC Bolt (F) and Nylon Washer (L) with the Allen Wrench (M).

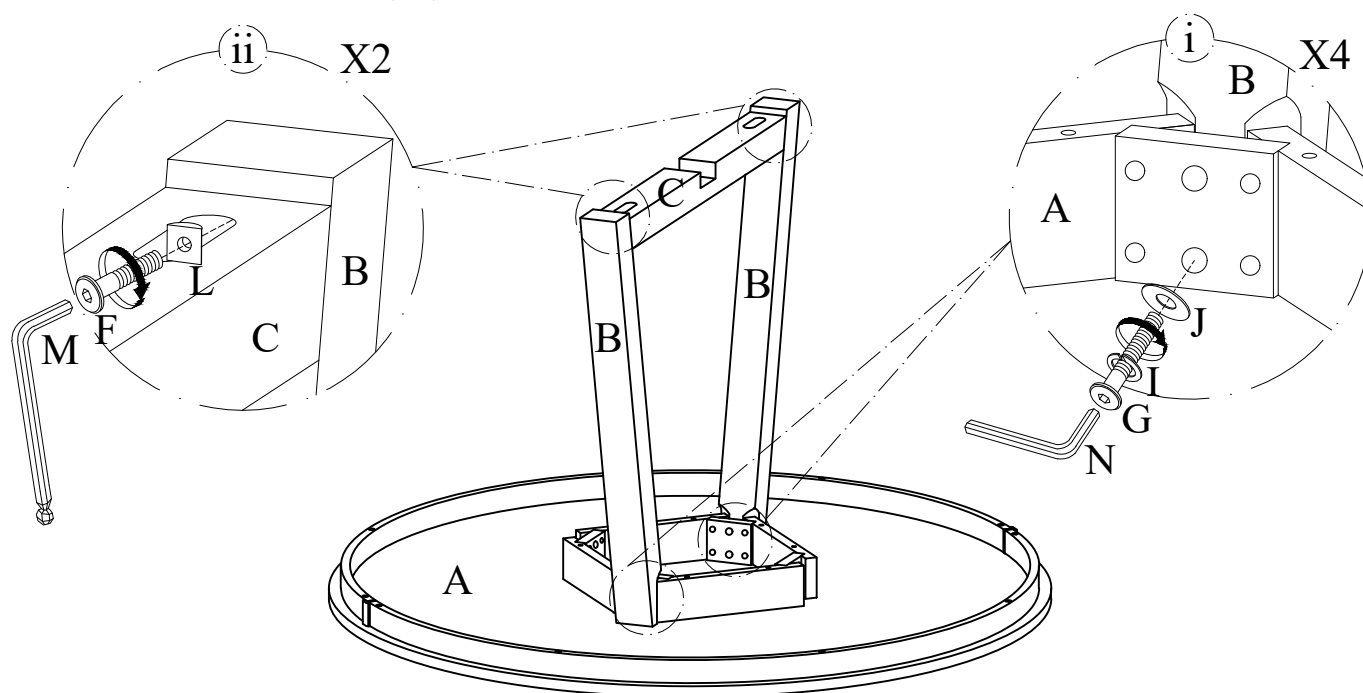 


3 Slot the Lower Crossbar (D) into the Upper Crossbar (C).

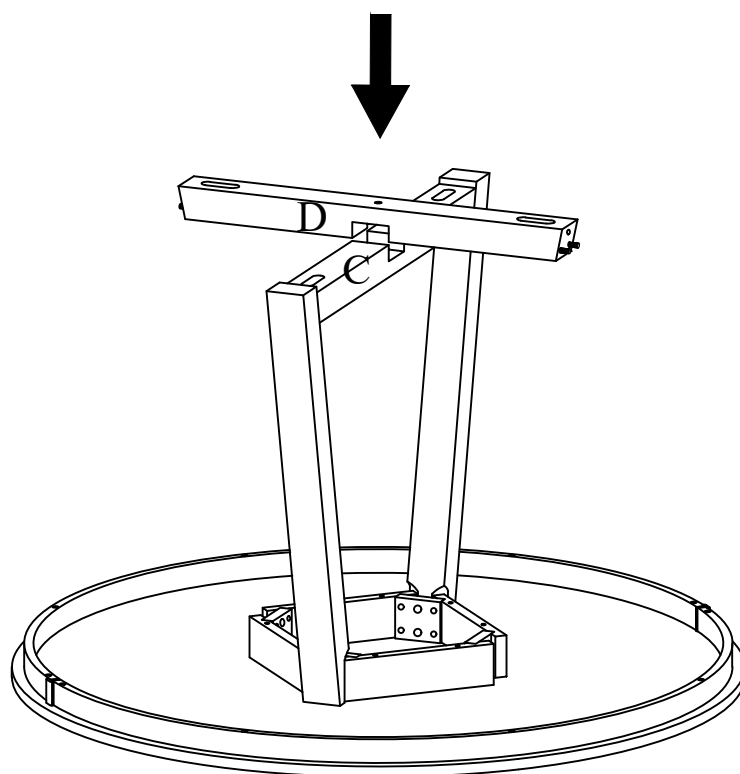 


- 4** (i) Use PVC Dowel (K) as a guide to align and attach the Leg (B) to the Lower Crossbar (D) and the frame of the Table Top (A).
(ii) Secure the Leg (B) to the frame of the Table Top (A) using JCBB Bolt (G), Lock Washer (I) and Flat Washer (J) with the Allen Wrench (N).
(iii) Secure the Leg (B) to the Lower Crossbar (D) using JCBC Bolt (F) and Nylon Washer (L) with the Allen Wrench (M).

**** Do not fully tighten the bolts until all bolts are attached.**

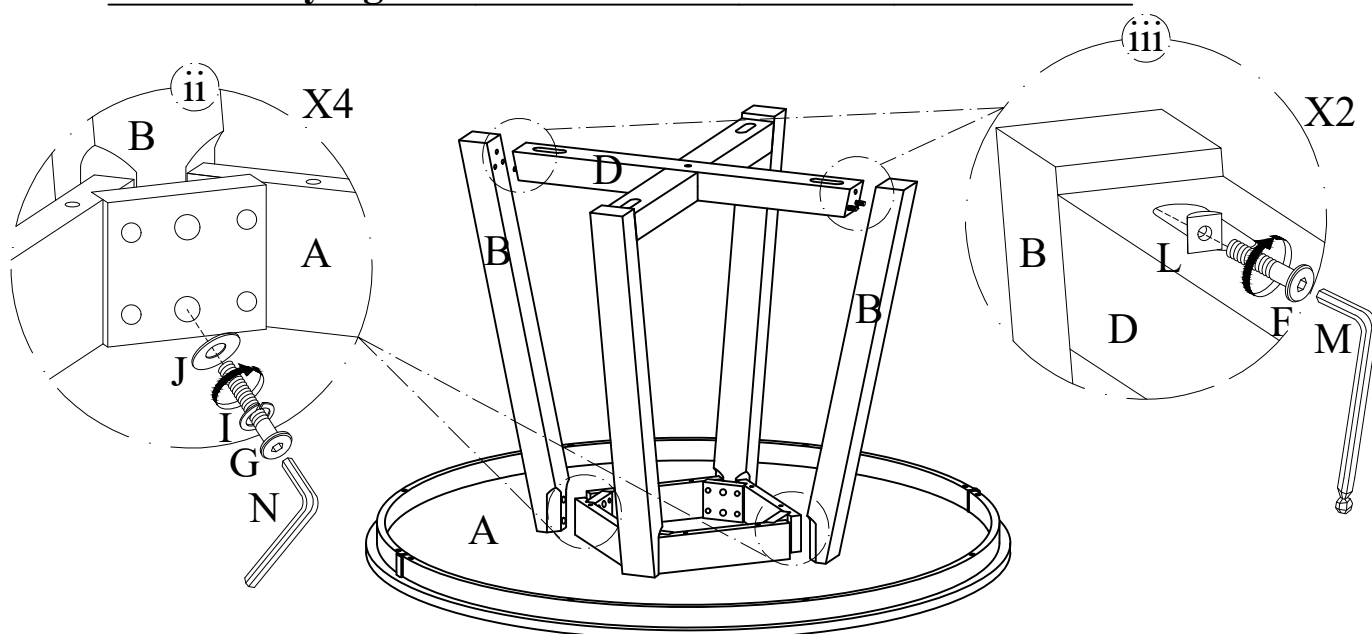

 
-
- 5** Secure the Lower Crossbar (D) to the Upper Crossbar (C) using JCBC Bolt (E) and Lock Washer (H) with the Allen Wrench (M).

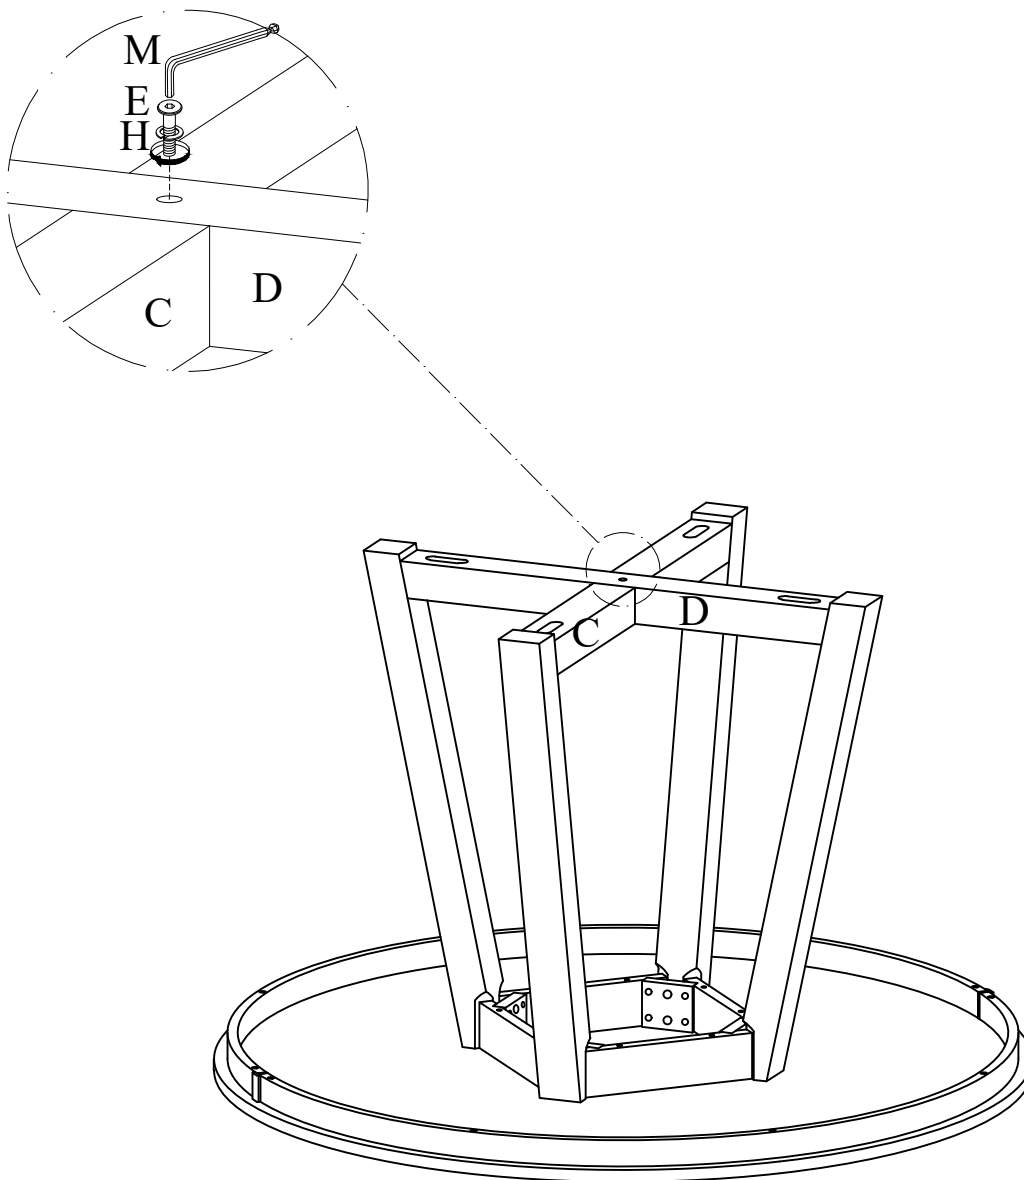

 
Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

 
ASSEMBLY INSTRUCTIONS

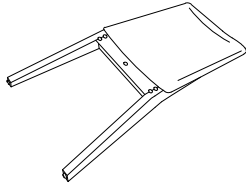A Back Frame

 
1 pc

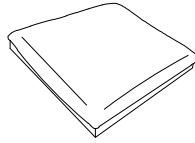B Seat Cushion

 
1 pc

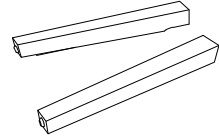C Leg

 
2 pcs

D Bolt
Ø5/16" x 1-1/2"

1 pc

E Bolt
Ø5/16" x 2-1/2"

 
4 pcs

F Bolt
Ø5/16" x 3-3/8"

4 pcs

G Lock Washer
Ø5/16" x Ø1/2"

 
9 pcs

H Flat Washer
Ø5/16" x Ø3/4"

9 pcs

 
I Allen Key
2-1/4" x 1/8"

1 pc

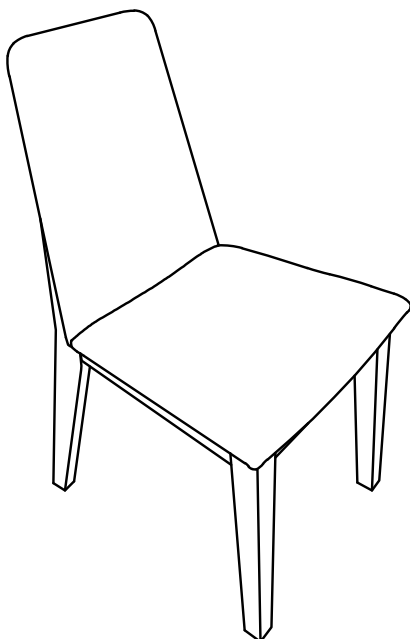

 
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

-
- 1** Attach the Seat Cushion (B) to the Back Frame (A) using Bolt (F), Lock Washer (G) and Flat Washer (H) into the corner holes, and using Bolt (D), Lock Washer (G) and Flat Washer (H) into the middle holes, tightening with the Allen Key (I).

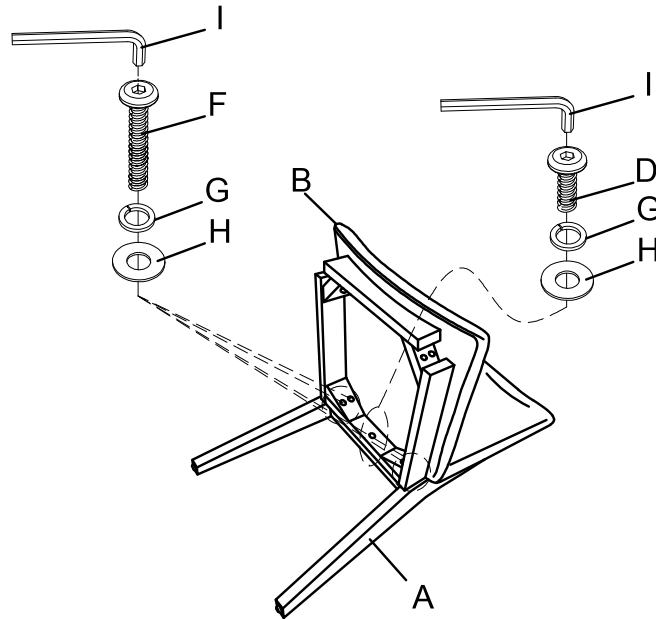

Take the Allen Key and turn the bolts until the legs are secured. **DO NOT TIGHTEN THE BOLTS COMPLETELY.** Stop when you feel you are adding force to tighten the bolts.

-
- 2** Attach the Leg (C) to the Seat Cushion (B) using Bolt (E), Lock Washer (G) and Flat Washer (H) with the Allen Key (I).

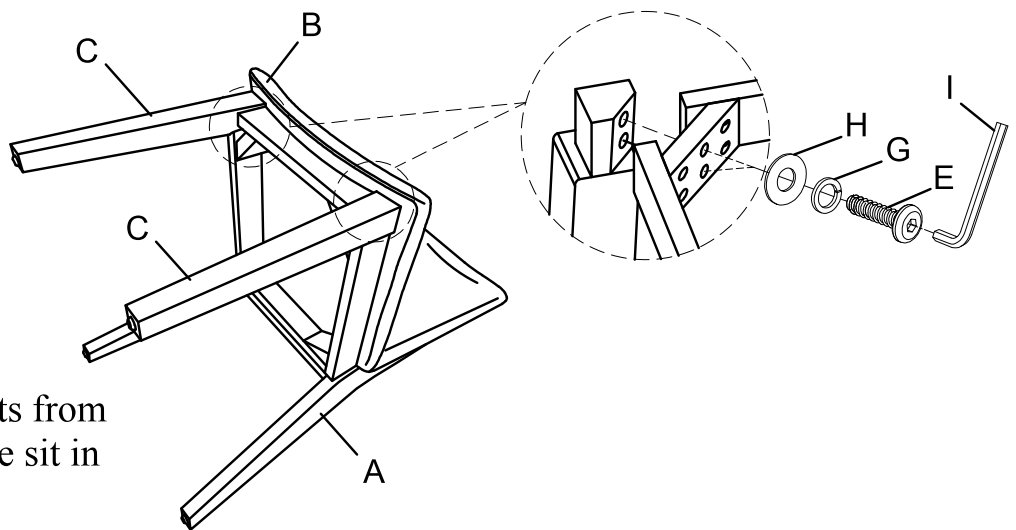

Helpful Tips

*While tightening the bolts from underneath, have someone sit in the chair.

Stand the chair on an even surface and check for balance. If the chair wobbles slightly, apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the chair is balanced, apply downward pressure evenly in the center of the chair and tighten all bolts, being careful not to over-tighten beyond the hole depth.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.