
## FPSC48CVD Assembly Instructions

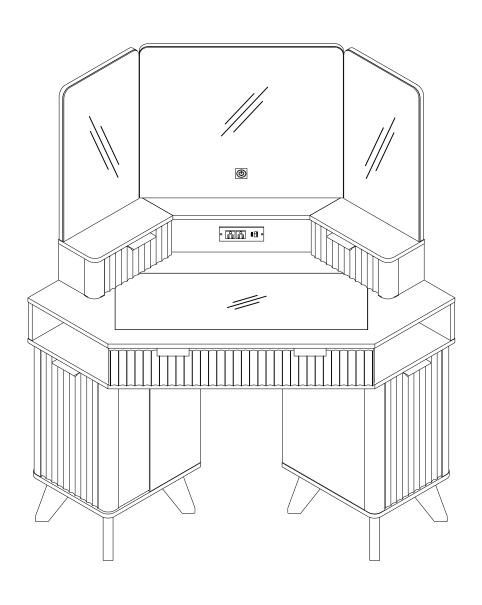

#### **General Assembly Guidelines**

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .




V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




- VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS
  - 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
  - 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
  - 3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
  - 4. Use the sticker to conceal the Cam.

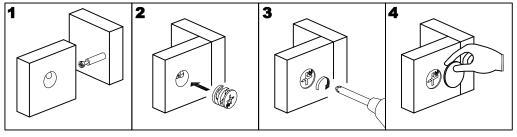

VII. Power tools should not be used to assemble this product.

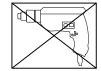

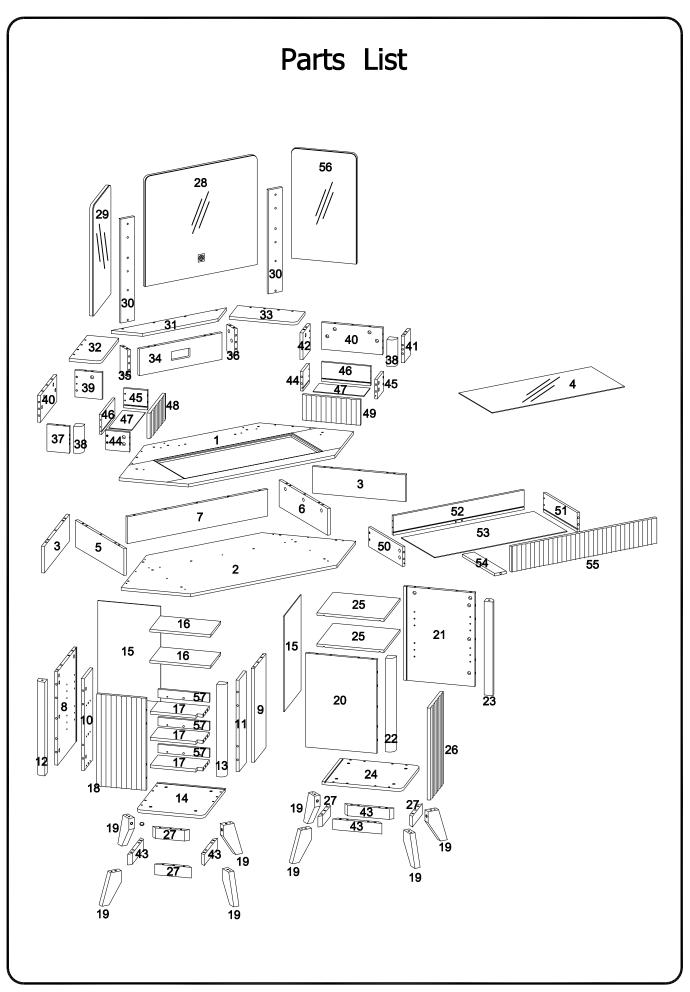

#### Hardware List


Α		Ø8x30mm	Large dowel	110 pcs
В		Ø6x35mm	Cam bolt	89 pcs
С		Ø15x11mm	Large Cam lock	58 pcs
D	0	Ø30mm	Cam cover	89 pcs
E			Glue tube	2 pcs
F	<b>S</b>	Ø5*16mm	Shelf Pin	16 pcs
G		M 4	Allen Wrench	1 pc
н		Ø3.5x12mm	Screw	28 pcs
J		Ø15x9mm	Small Cam lock	31 pcs
K	<b>⊕</b>	Ø4x38mm	Screw	41 pcs
L			Power Cord W/USB	1 pc
М			Plastic wedge	12 pcs
N	& Commission of the Control of the C	Ø3*17mm	Screw	12 pcs
0			Hinge	4 pcs
Р		Ø6x30mm	Small dowel	9 pcs
Q		Ø1/4"x50mm	Bolt	16 pcs
R	<b>⊕mmmm</b>	Ø6*50mm	Bolt	24 pcs





Philips head screwdriver required for assembly (not included)

### Hardware List


s		Ø1/4"x28mm	Bolt	8	pcs		
Т			Bracket	8	pcs		
U	<b>()</b>	Ø5*15mm	Screw	16	pcs		
٧	9	Ø1/4"x22mm	Bolt	4	pcs		
W		Ø8x20mm	Medium dowel	8	pcs		
X			Bracket	2	pcs		
Y			Handle	6	pcs		
Z		Tipping Restraint Hardware 2			sets		
AA		12"	Left Glide Track	1	рс		
ВВ		12"	Left Glide Runner	1	рс		
СС		12"	Right Glide Track	1	рс		
DD		12"	Right Glide Runner	1	рс		
EE			Magnetic catch	2	pcs		
FF		Ø3*15mm	Screw	4	pcs		
GG		Ø3.5x14mm	Screw	36	pcs		
нн			Metal piece	2	pcs		
JJ		<b>a</b>	Power plug	1	рс		
		Philips head screwdriver required for assembly (not included)					

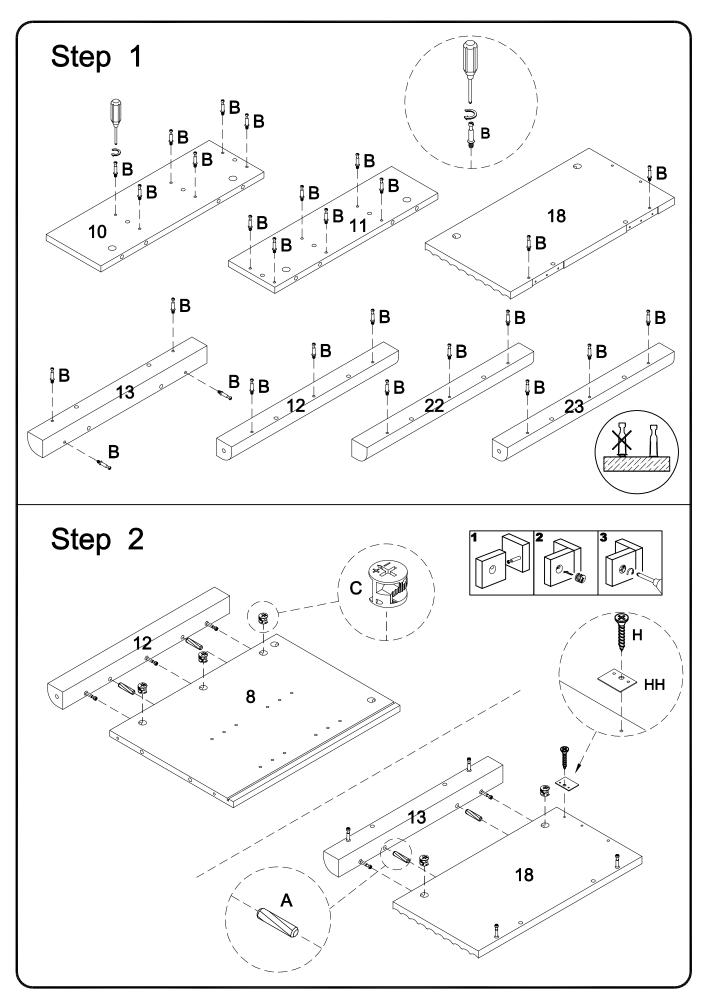


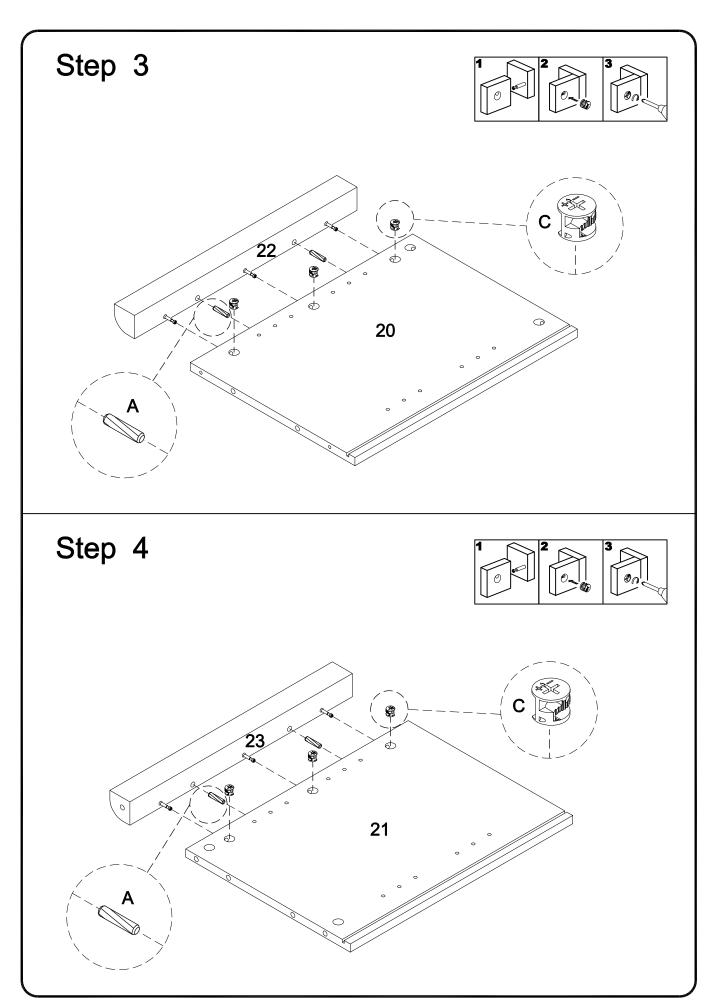


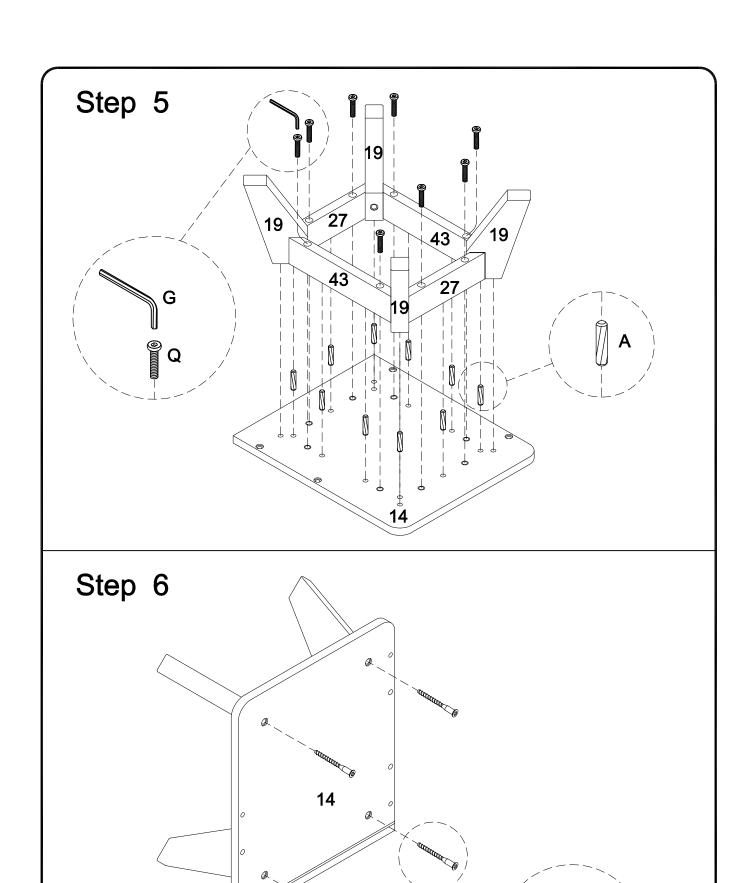



R

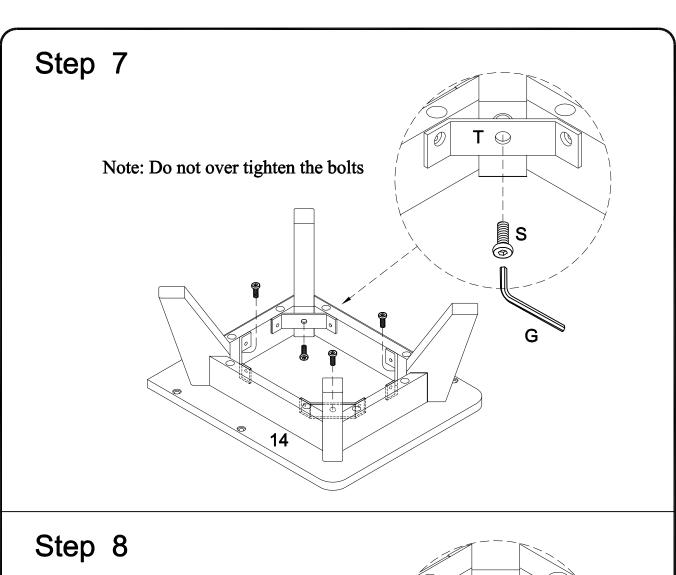


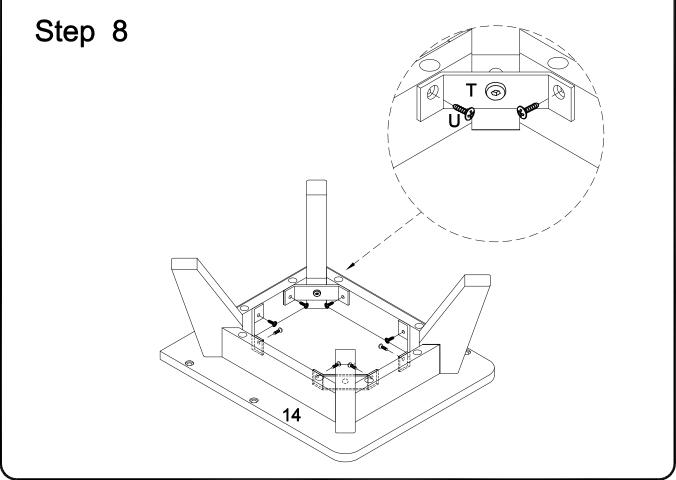


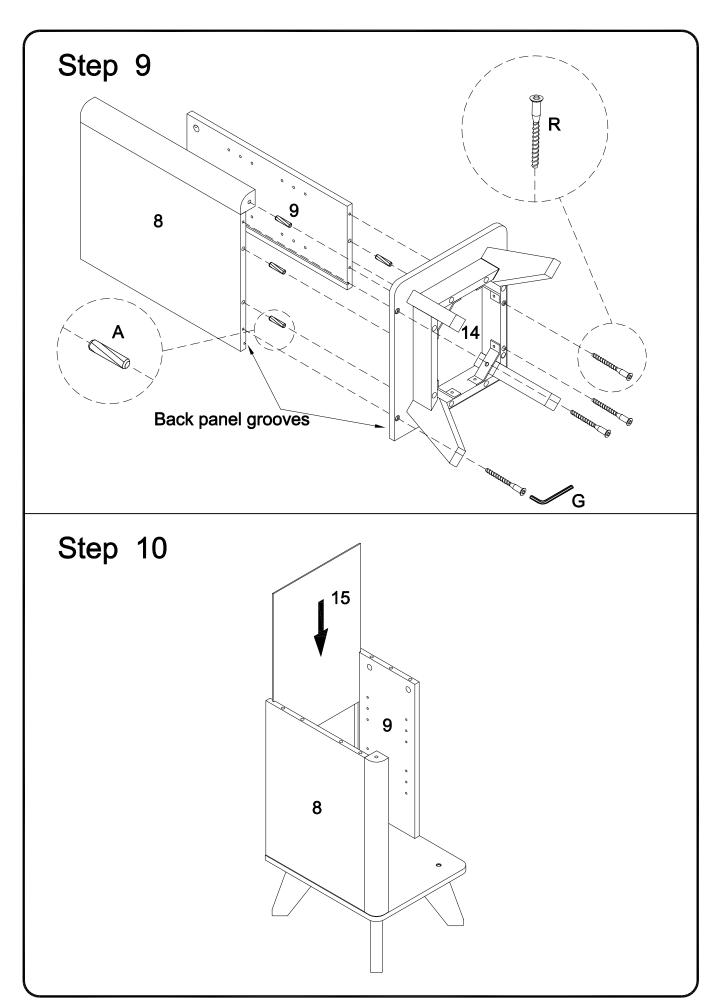


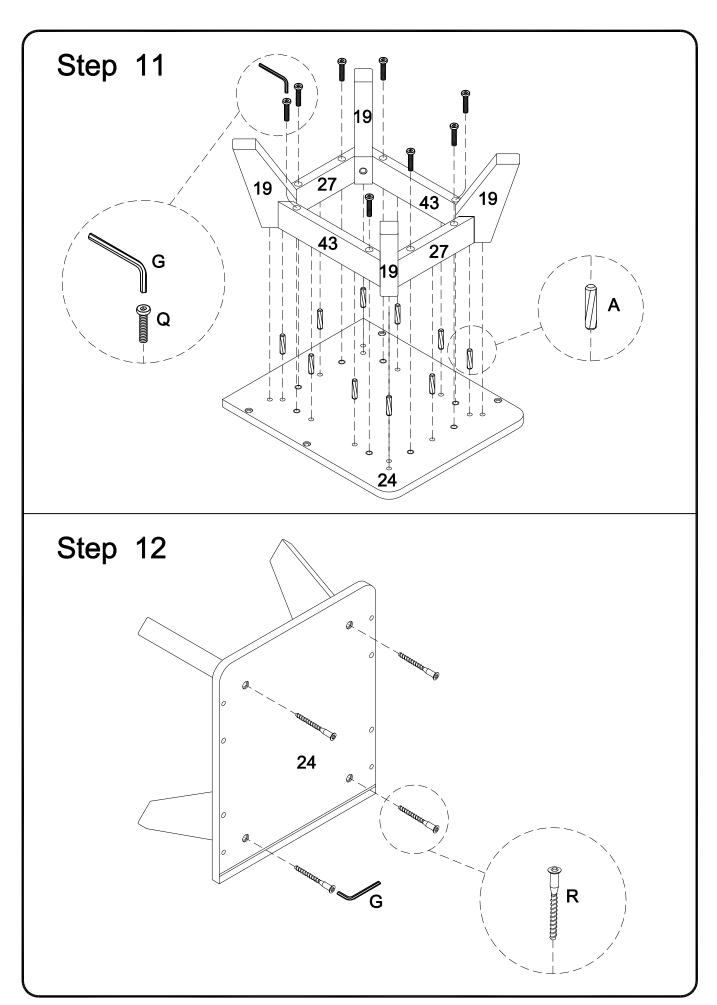


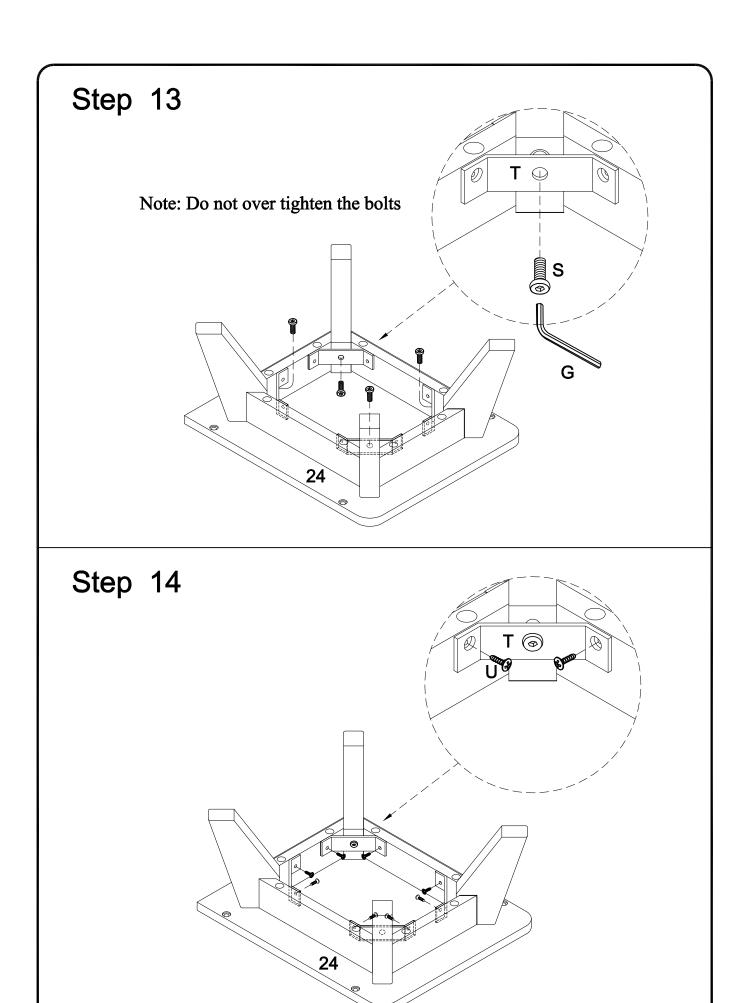


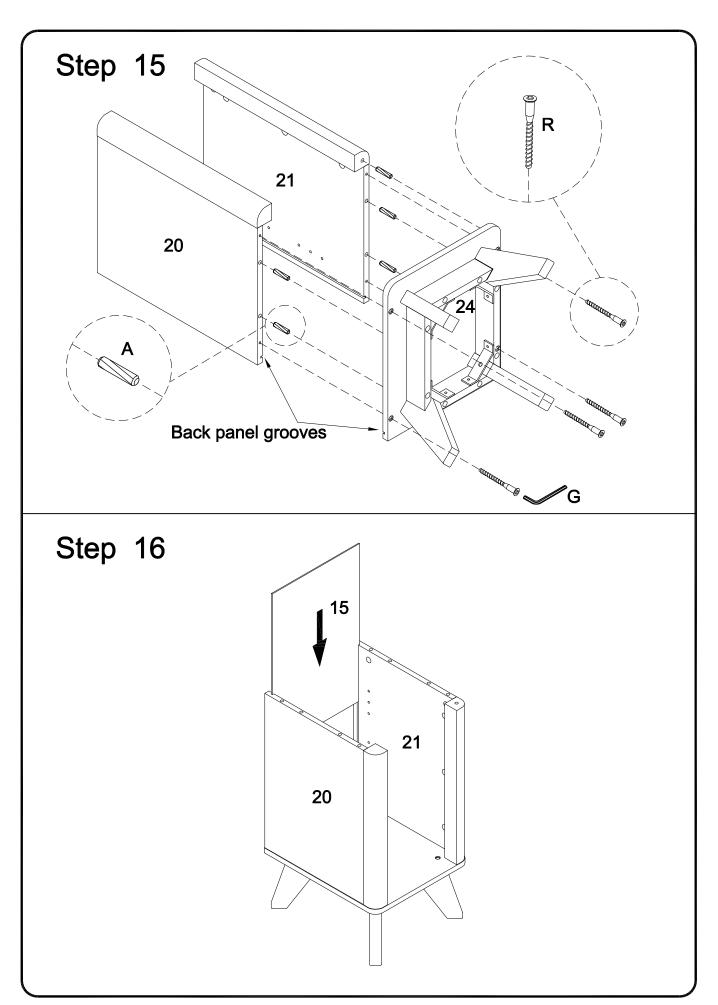


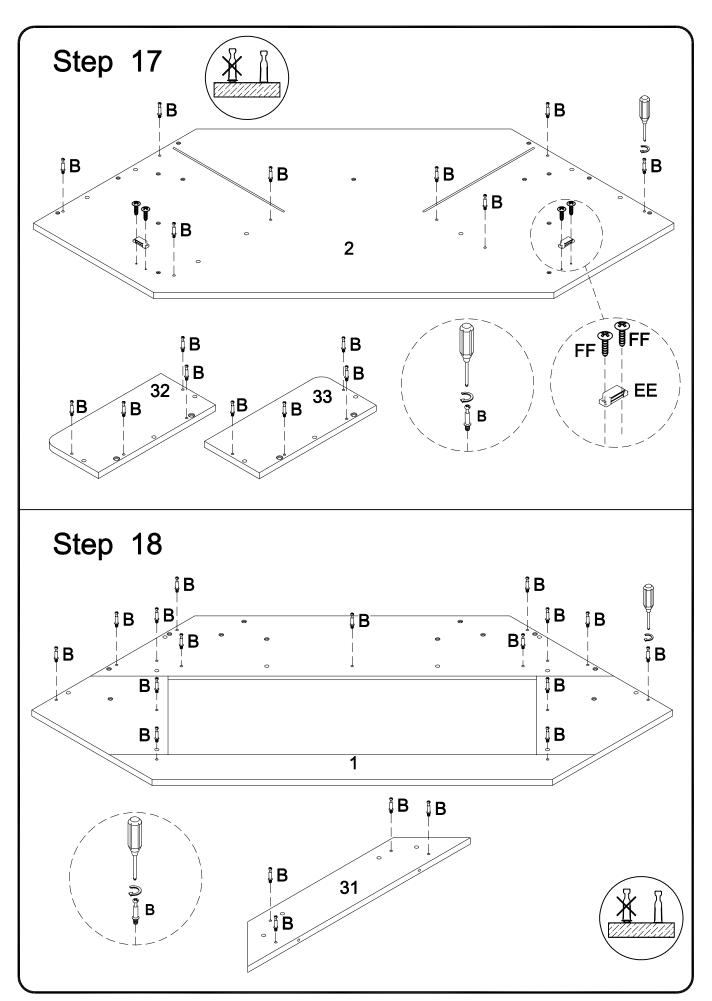


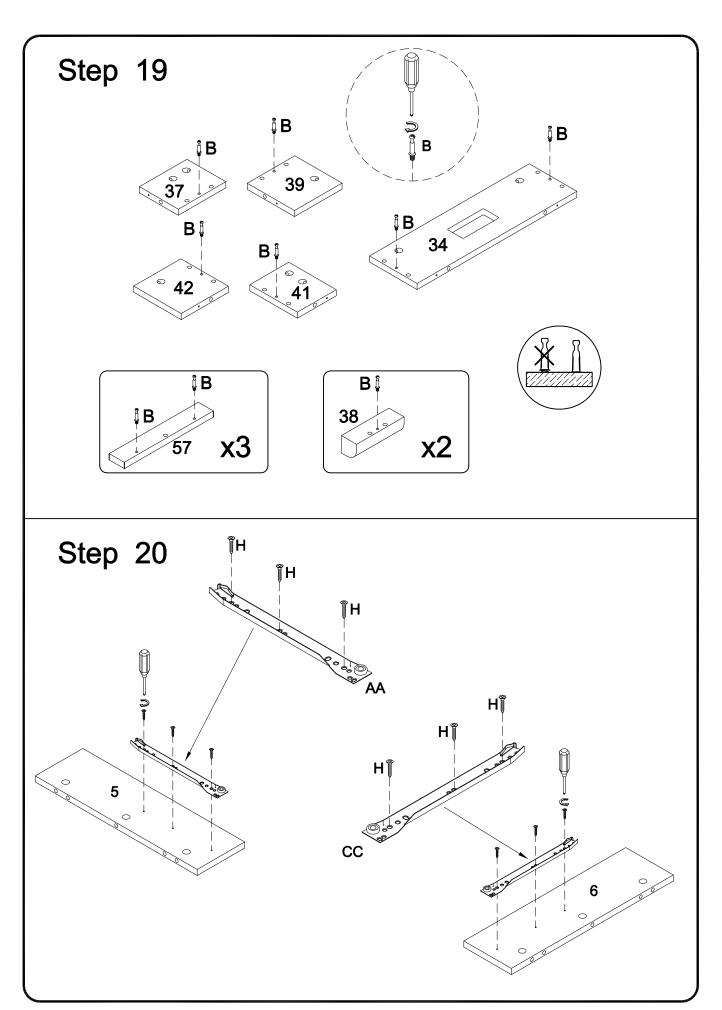


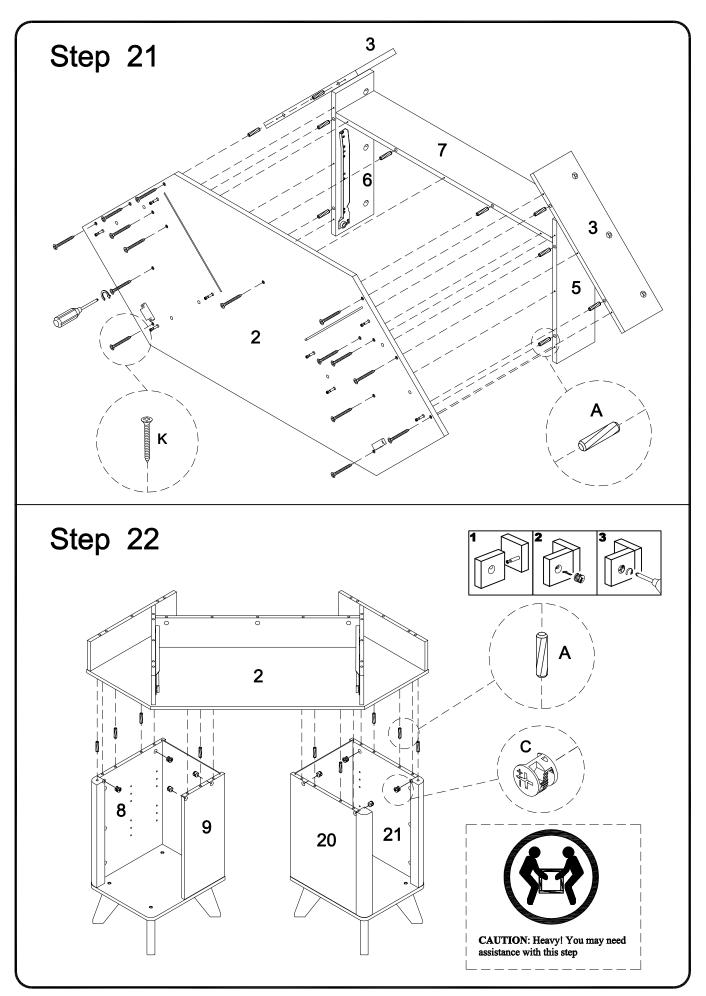


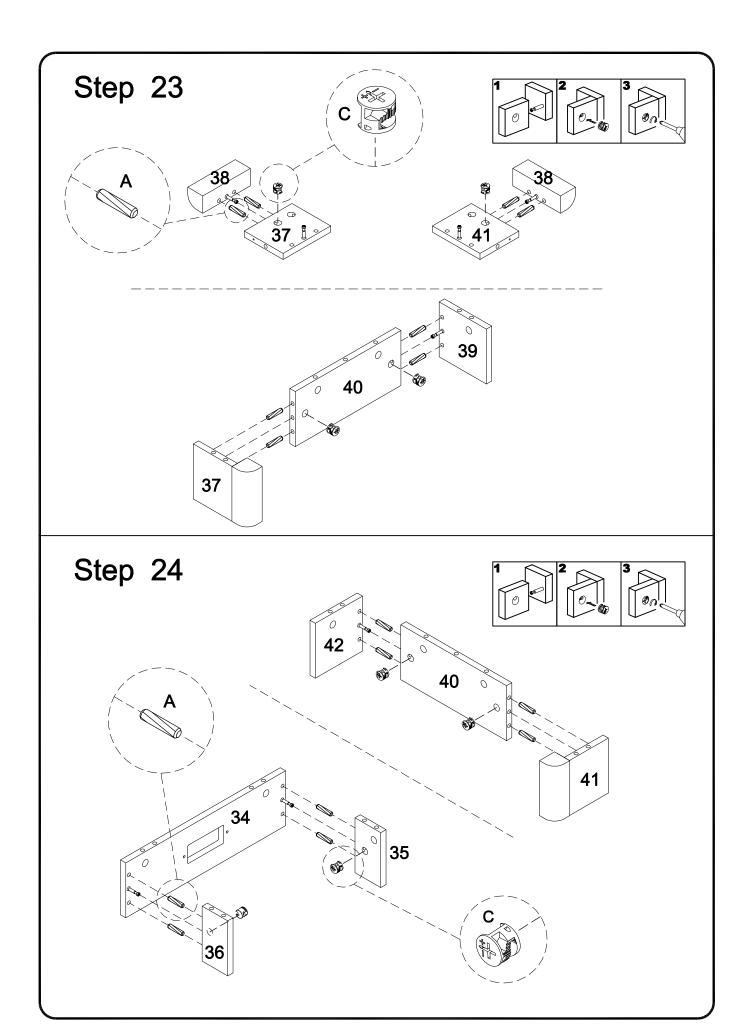


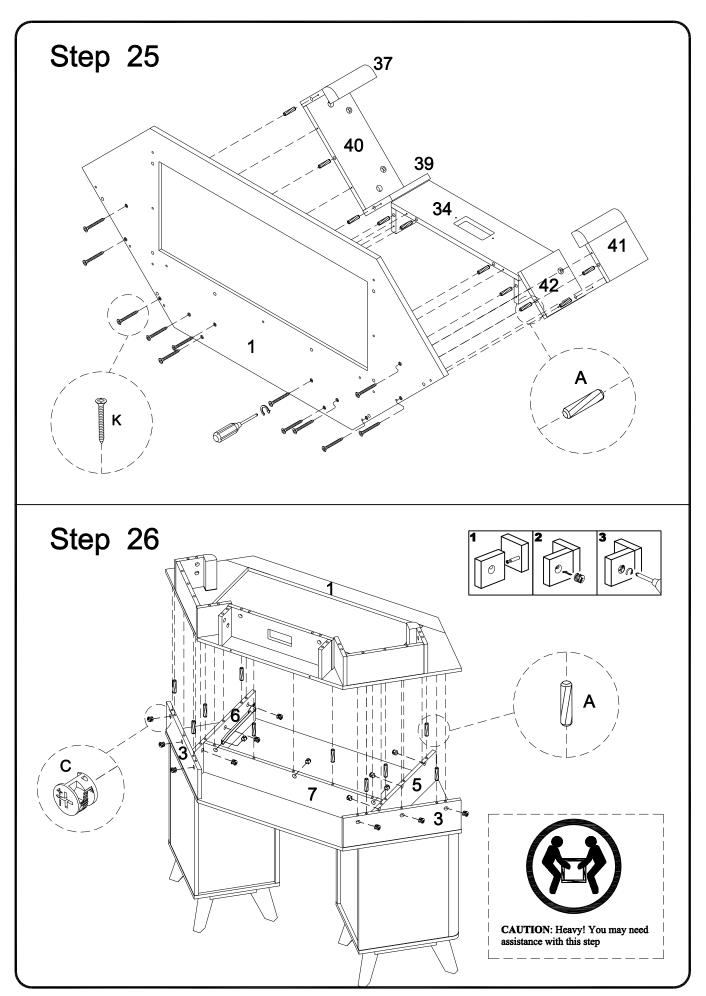


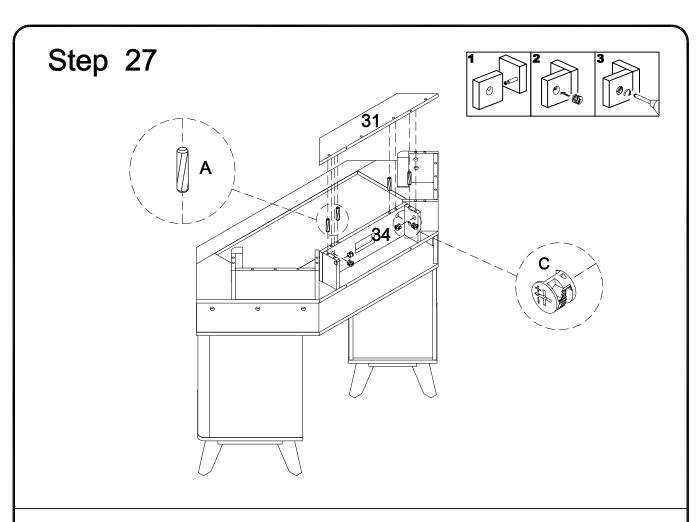


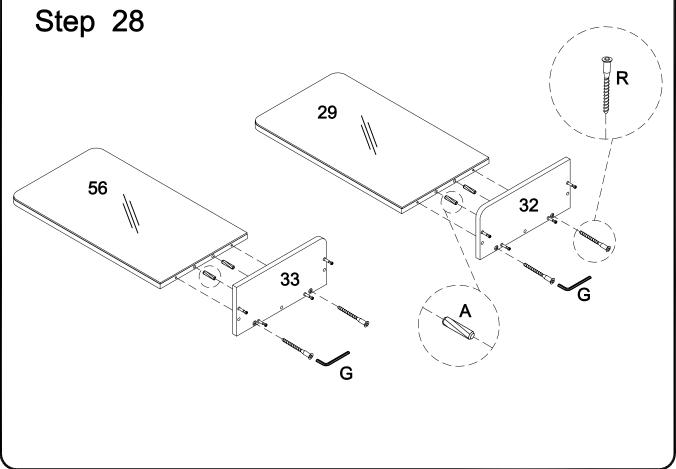


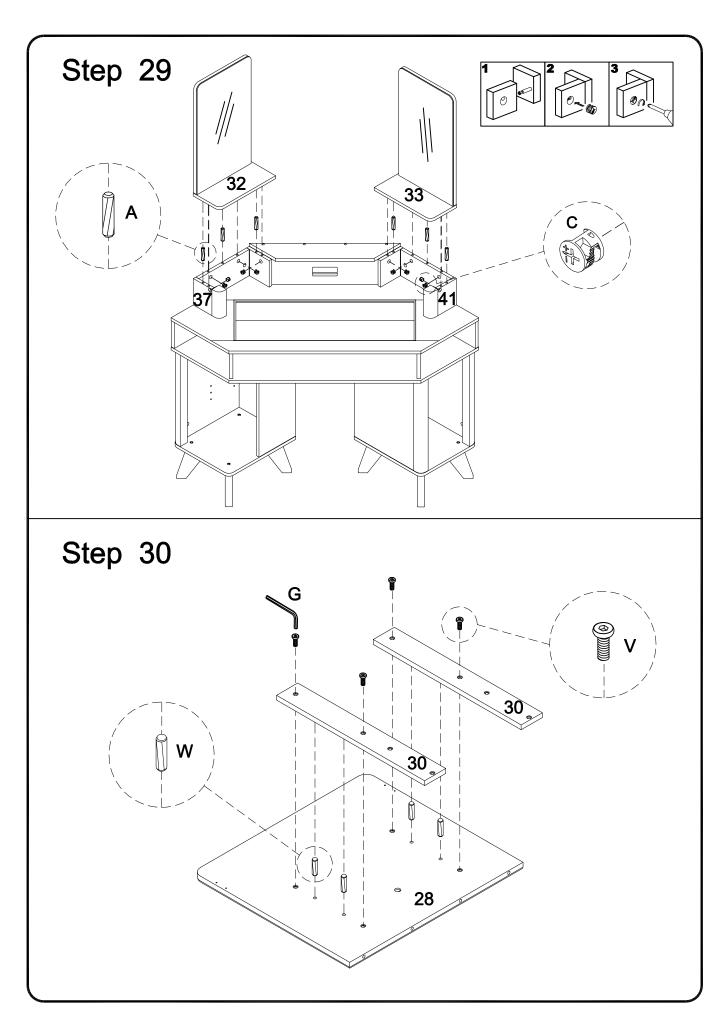


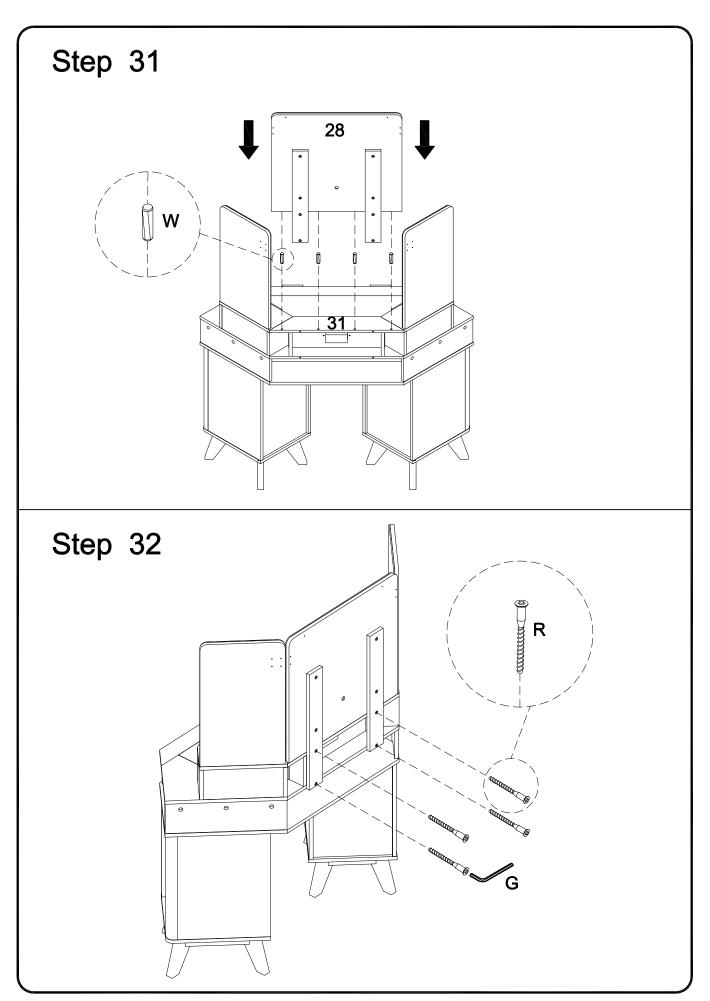

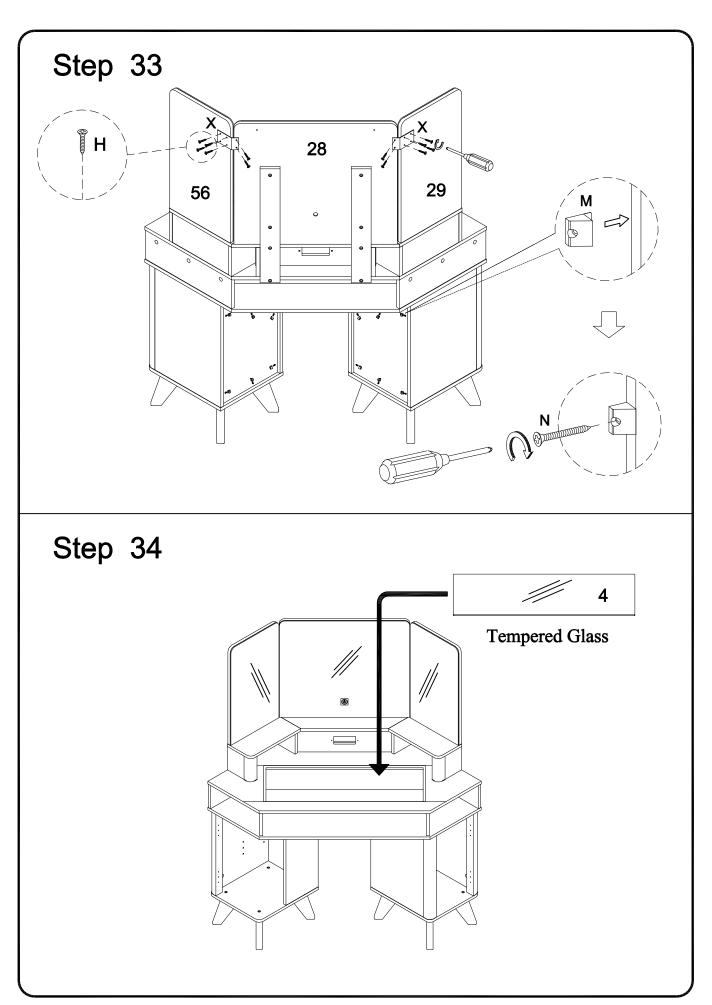


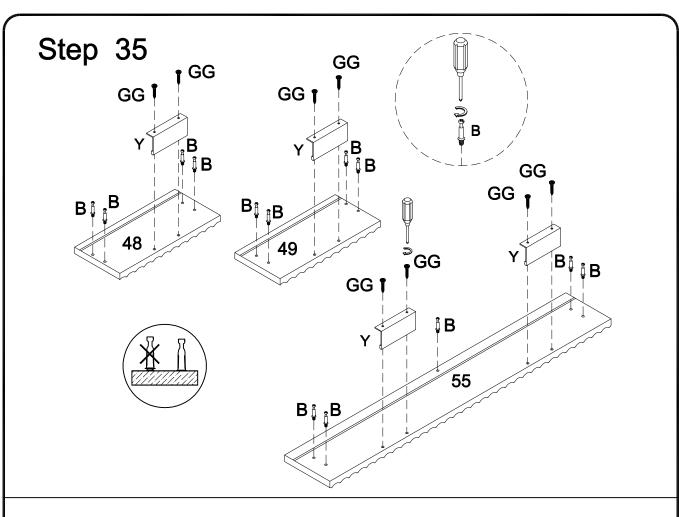


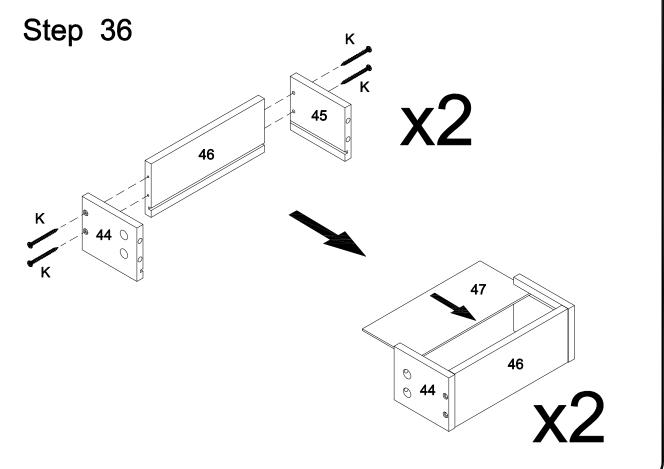


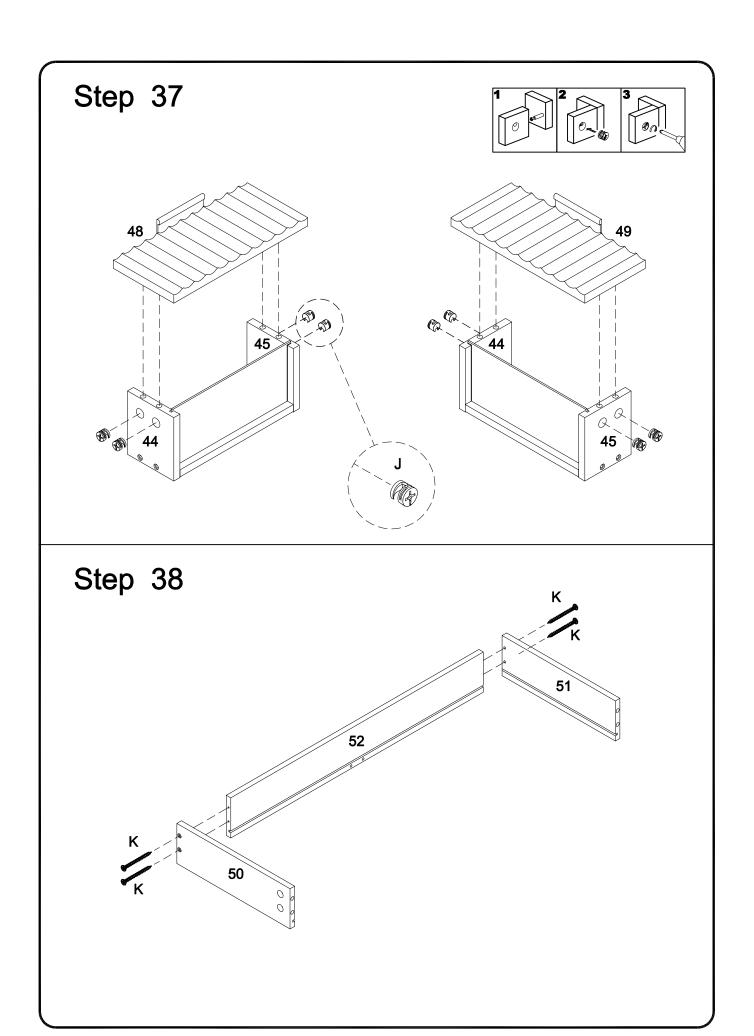



# Step 39 53 52 Step 40 52

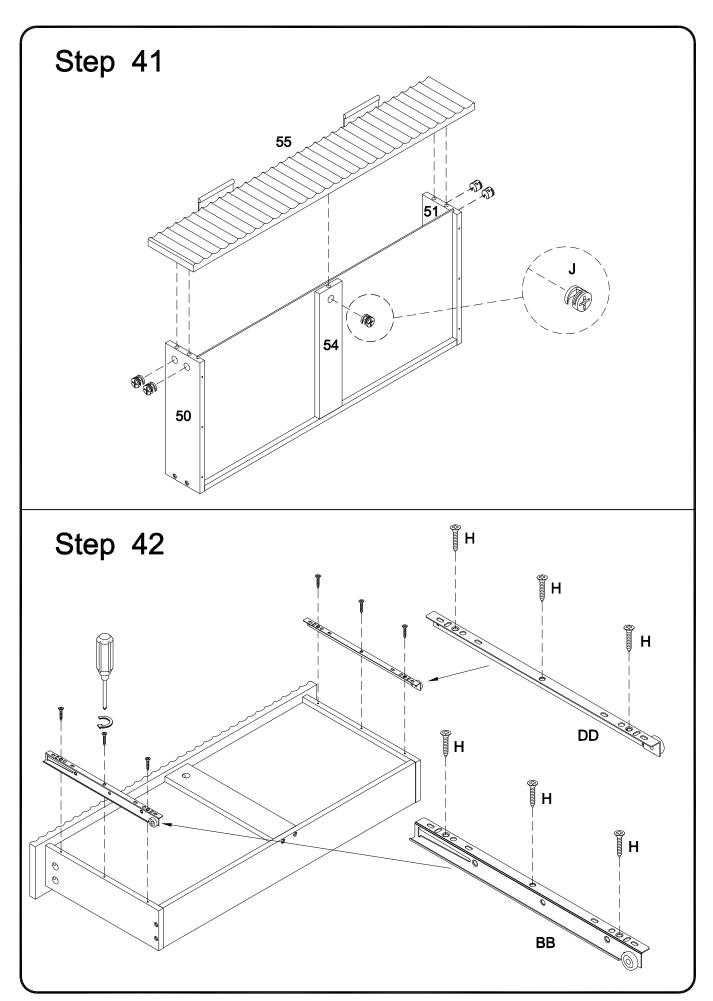


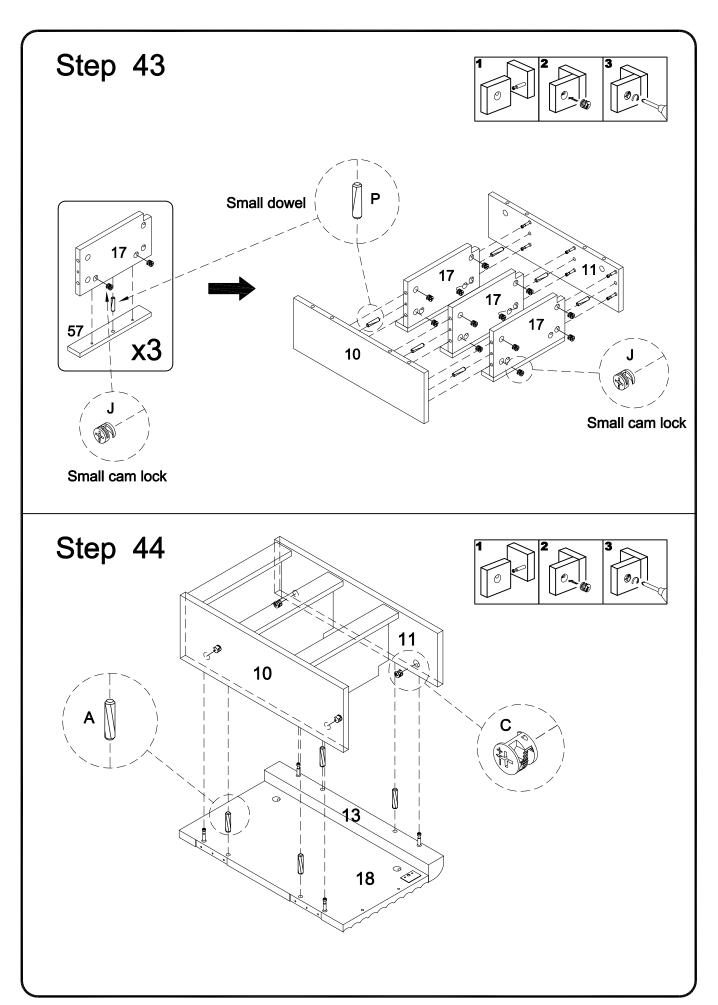

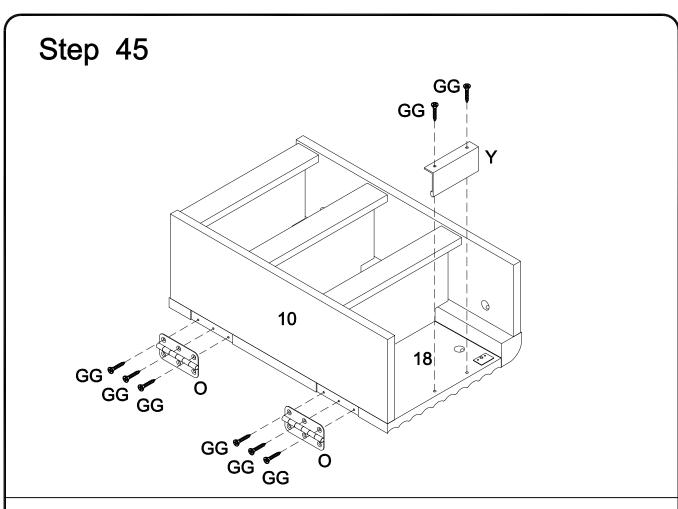

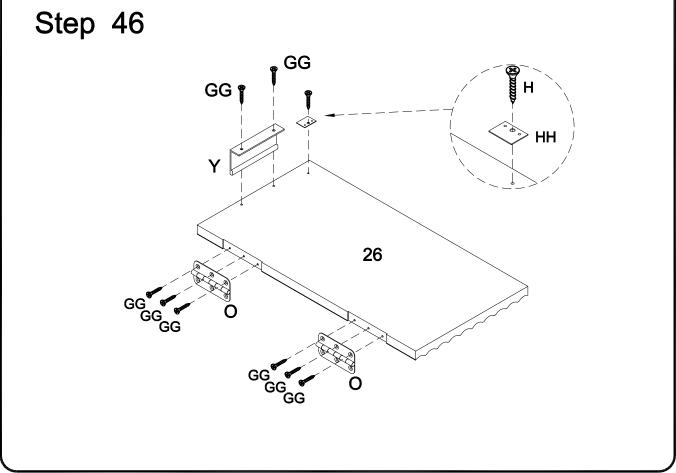

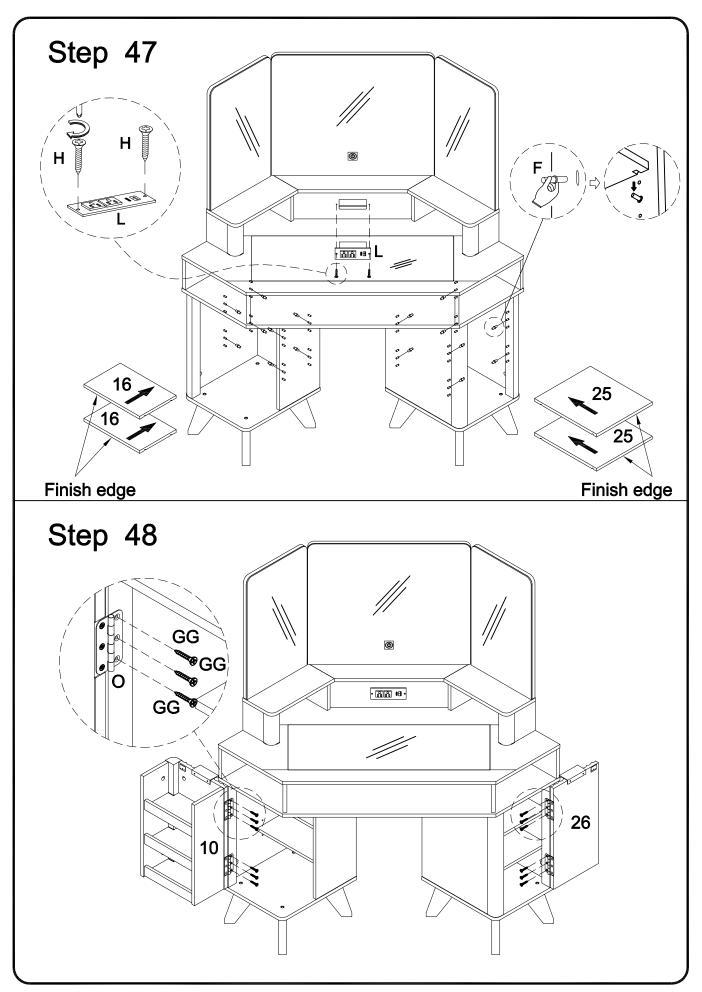

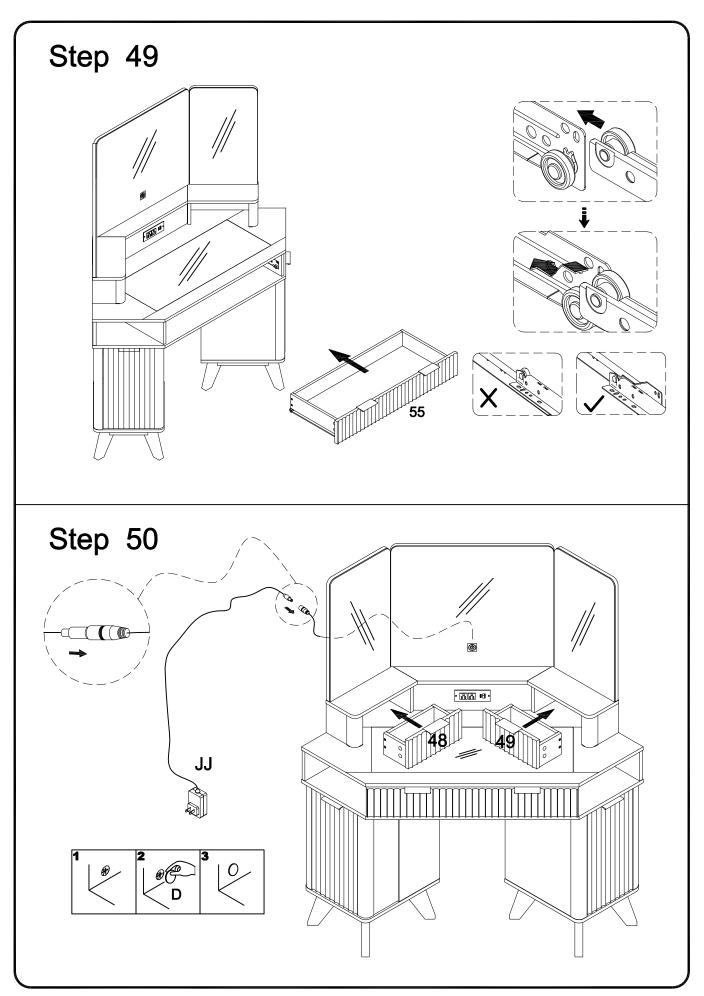

#### Step 51

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

