
# ELD60LS Assembly Instructions

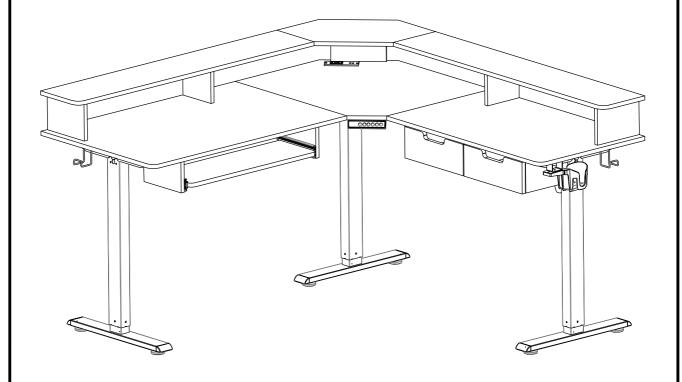


# **General Assembly Guidelines**

 - I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .




V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.



In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




- VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS
  - 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
  - 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
  - 3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
  - 4.Use the sticker to conceal the Cam.

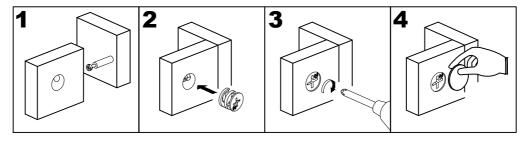


VII. Power tools should not be used to assemble this product.





**A WARNING**INGESTION HAZARD• DEATH or serious injury can occur if ingested • A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
• KEEP new and used batteries OUT OF REACH OF CHILDREN • Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

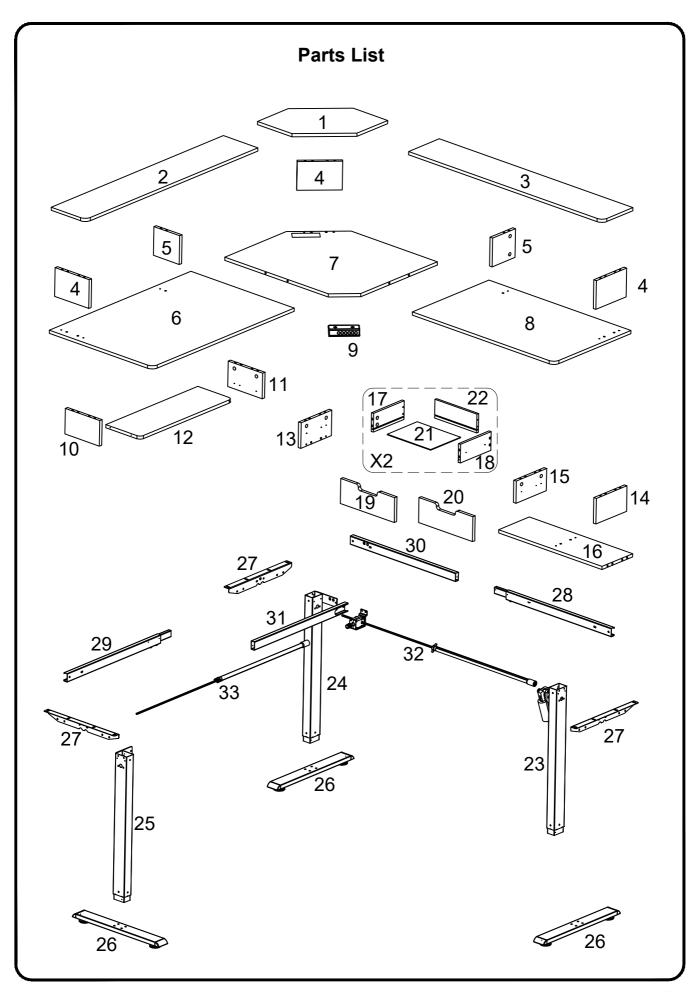



Hardware List				
Α		Ø8*30mm	Wooden dowel	36 pcs
В	0 jm	Ø6*35mm	Cam bolt	38 pcs
С			Cam lock	30 pcs
D			Cam lock(Small)	8 pcs
E	$\bigcirc$	Ø30mm	Sticker	38 pcs
F	<i>&lt;</i> €	Ø4*38mm	Screw	10 pcs
G	-	Ø3*12mm	Screw	32 pcs
Н			Clip	10 set
I	: c · · ·	8"	Drawer slider	6 pcs
J			Cup holder	1 pc
K			Adapter	1 pc
L			Connector cable	1 pc
М			USB Interface	1 pc
N			Cable clamp	4 pcs
0		Ø5*16mm	Screw	2 pcs
Р	6000	114*50mm	Metal plate	6 pcs
Q		Ø6*12mm	Bolt	58 pcs
R	6	Ø6*35mm	Bolt	12 pcs
S			Hooks	2 pcs
Т		M4	Allen Wrench	1 pc
U	( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( ) ( )	2	Led strip light (Included plastic bag)	1 set
V			Glue tube	1 pc

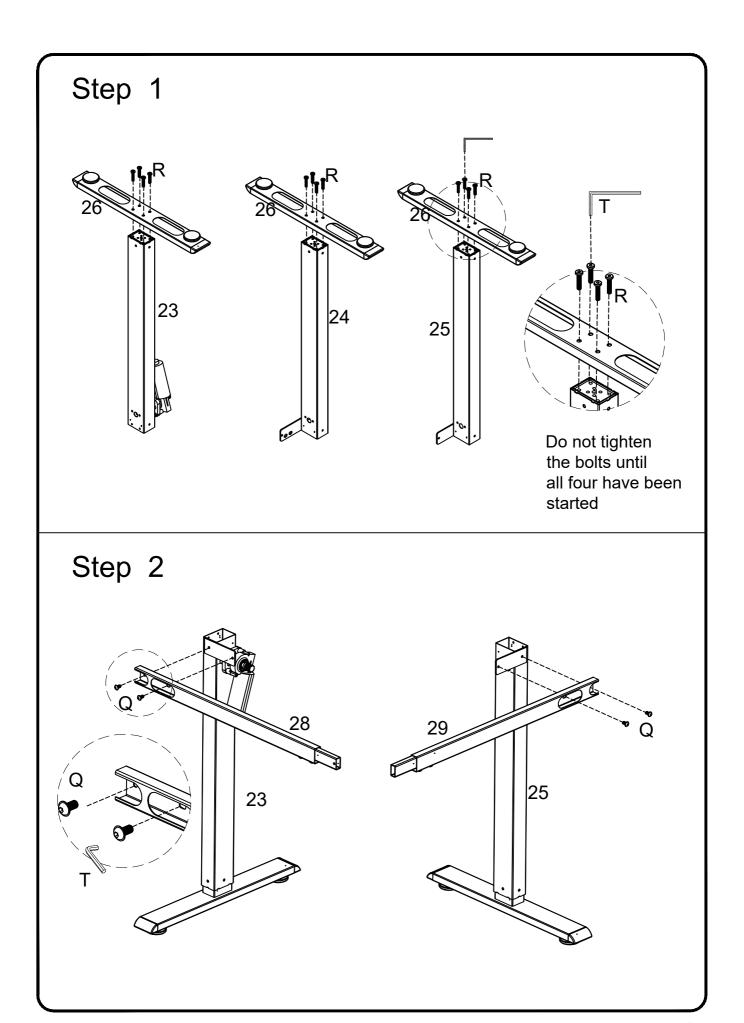


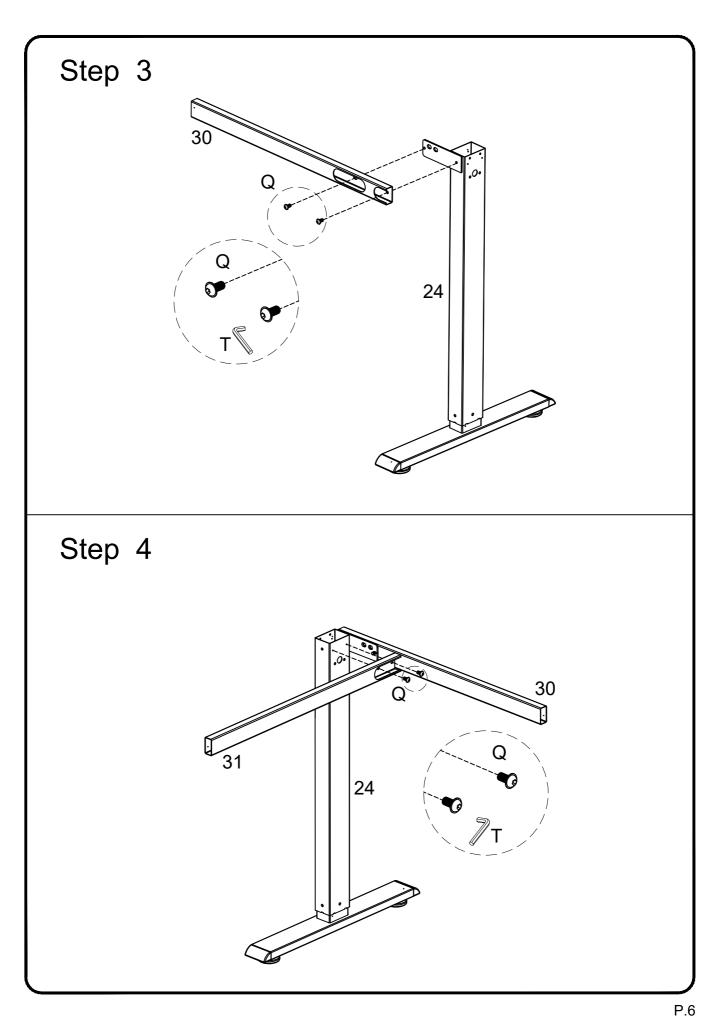


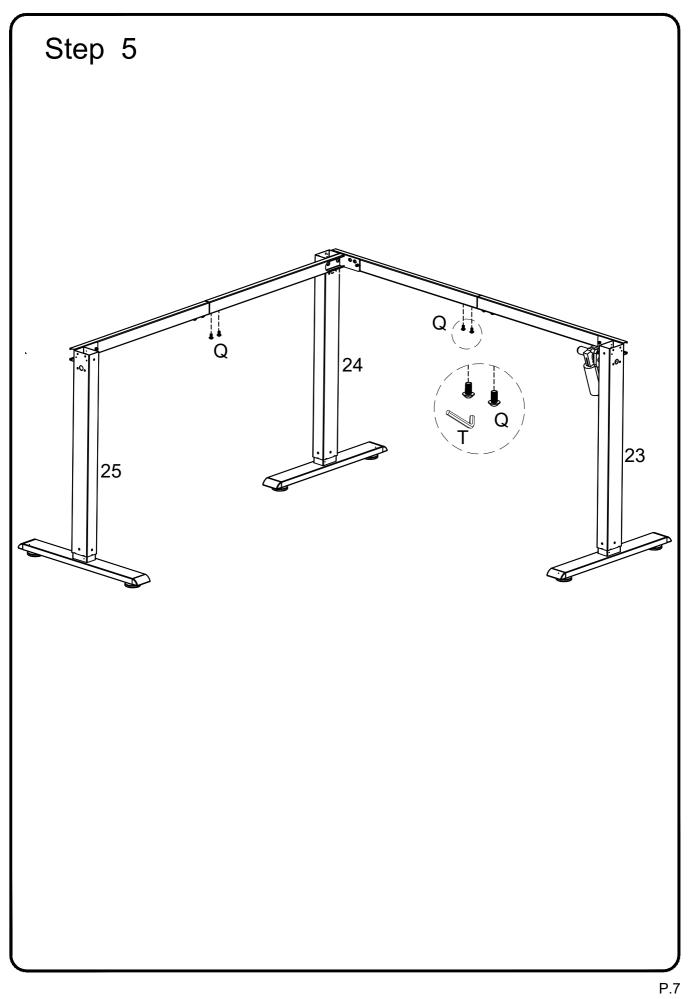


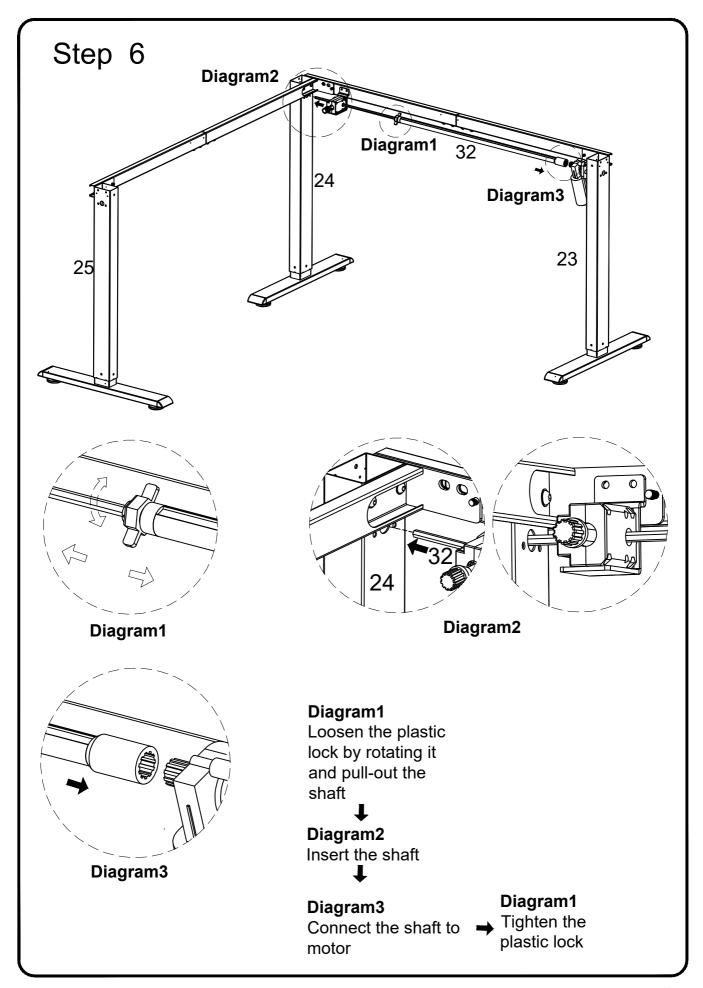


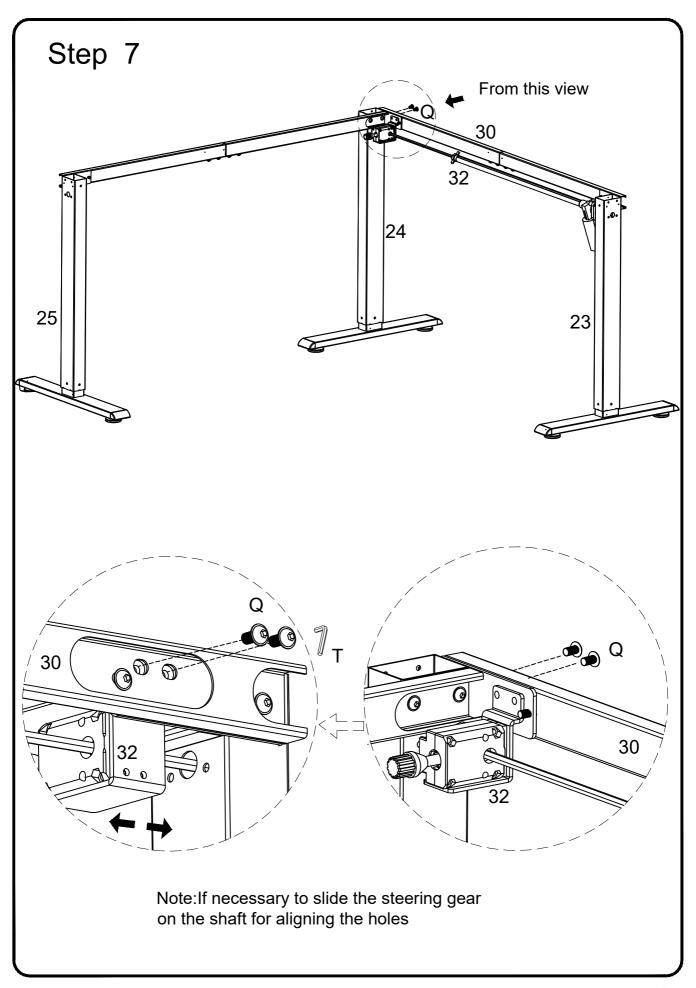


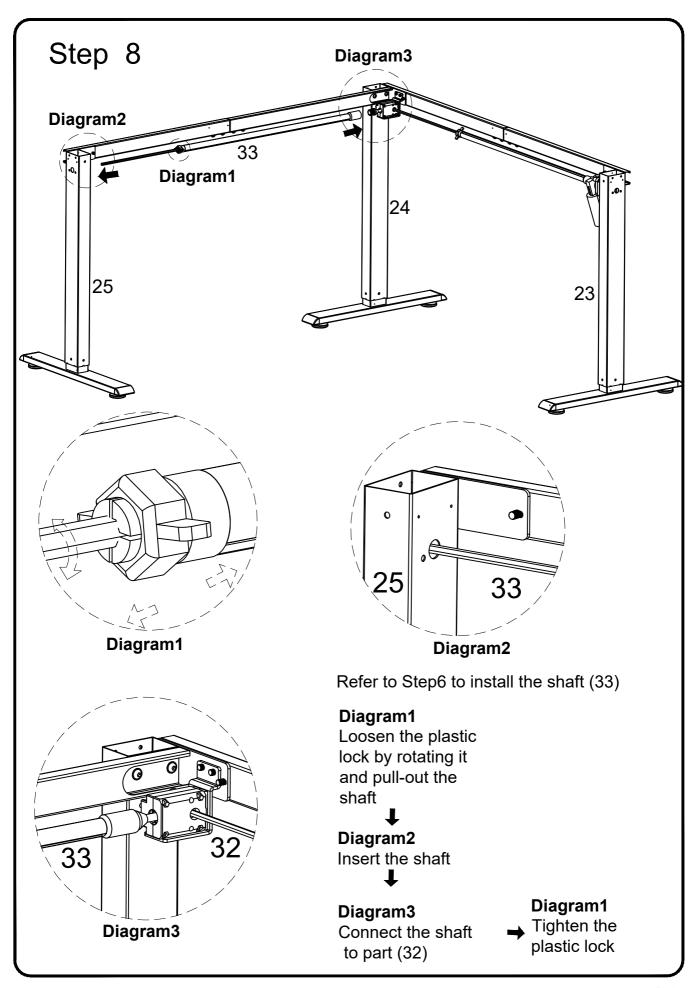


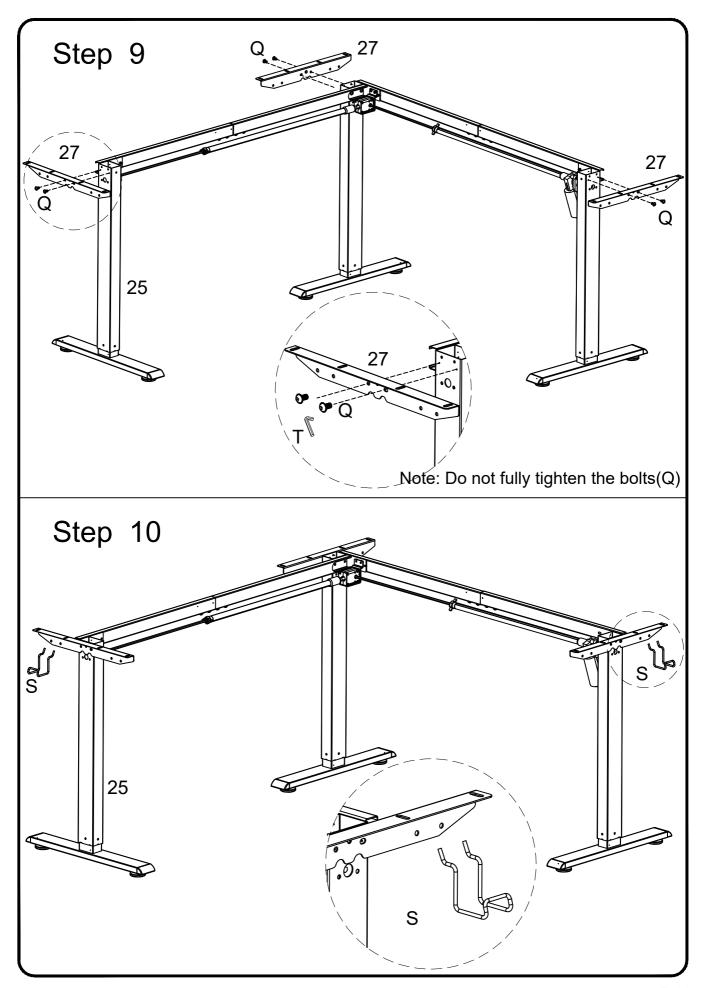


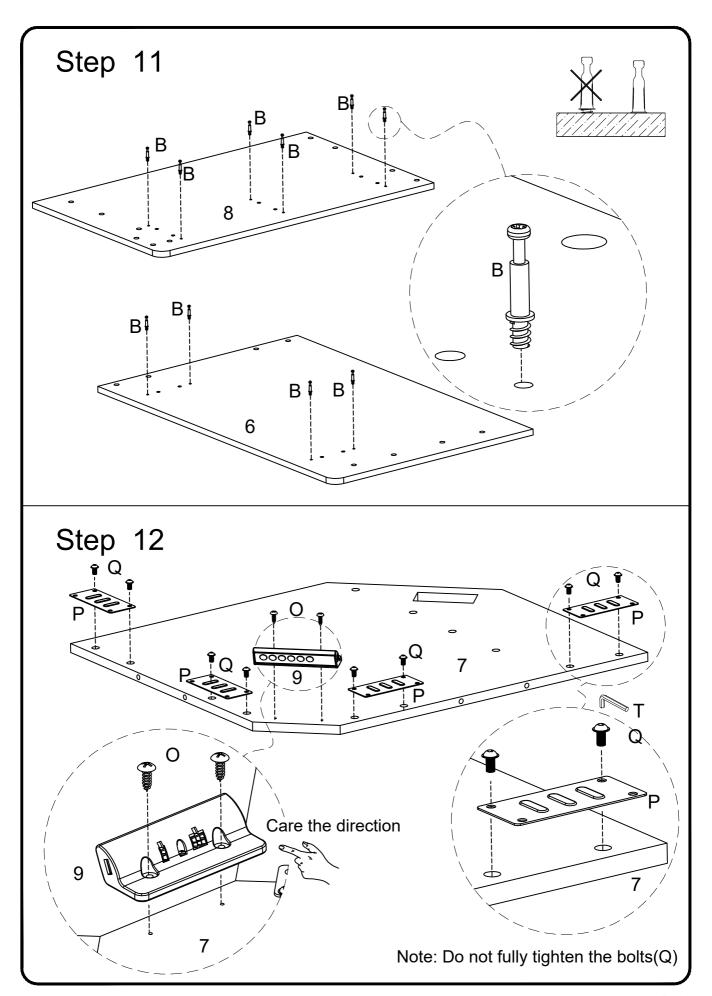


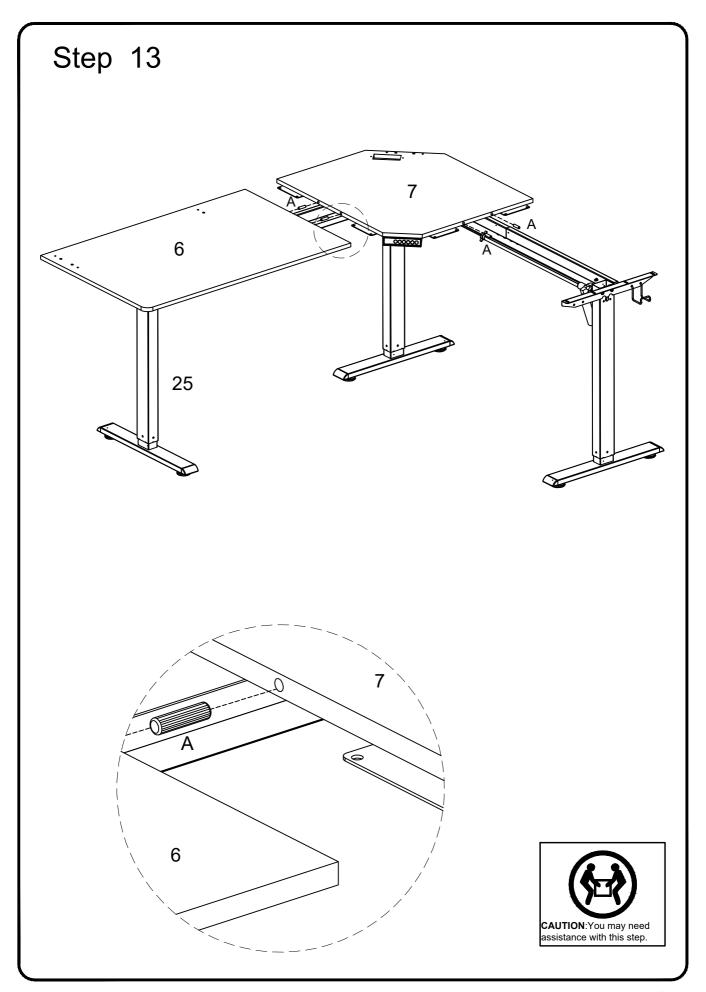


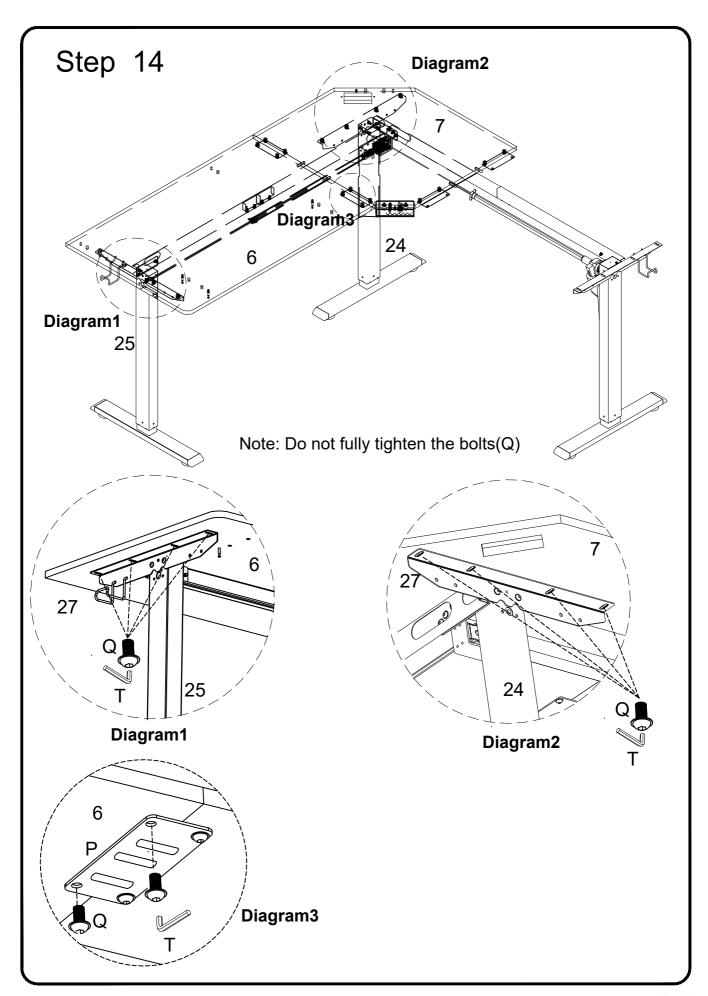


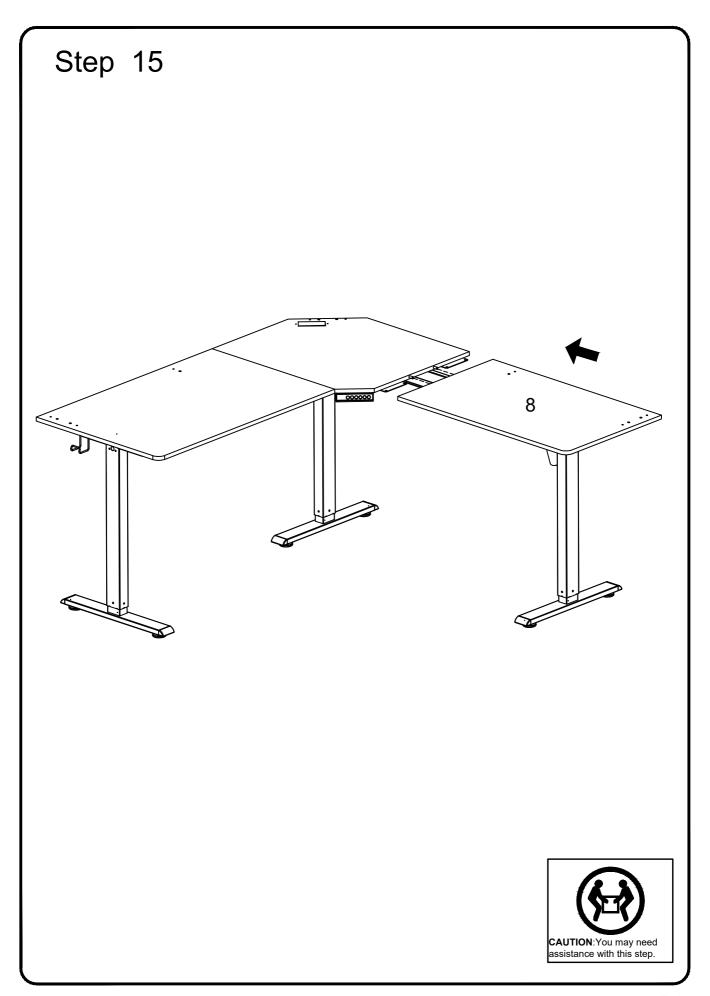


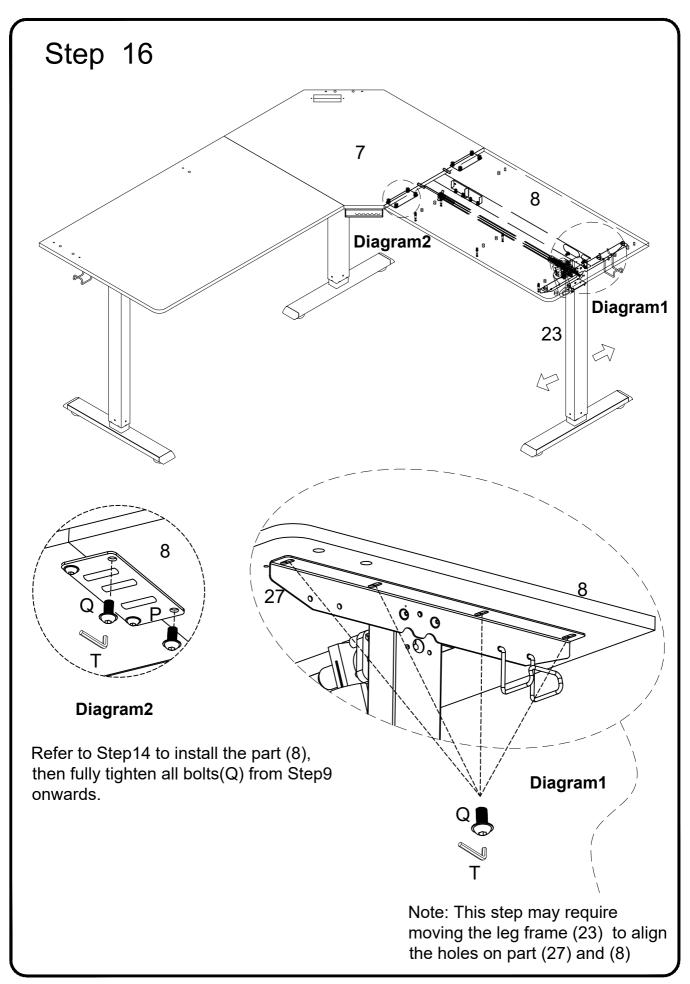


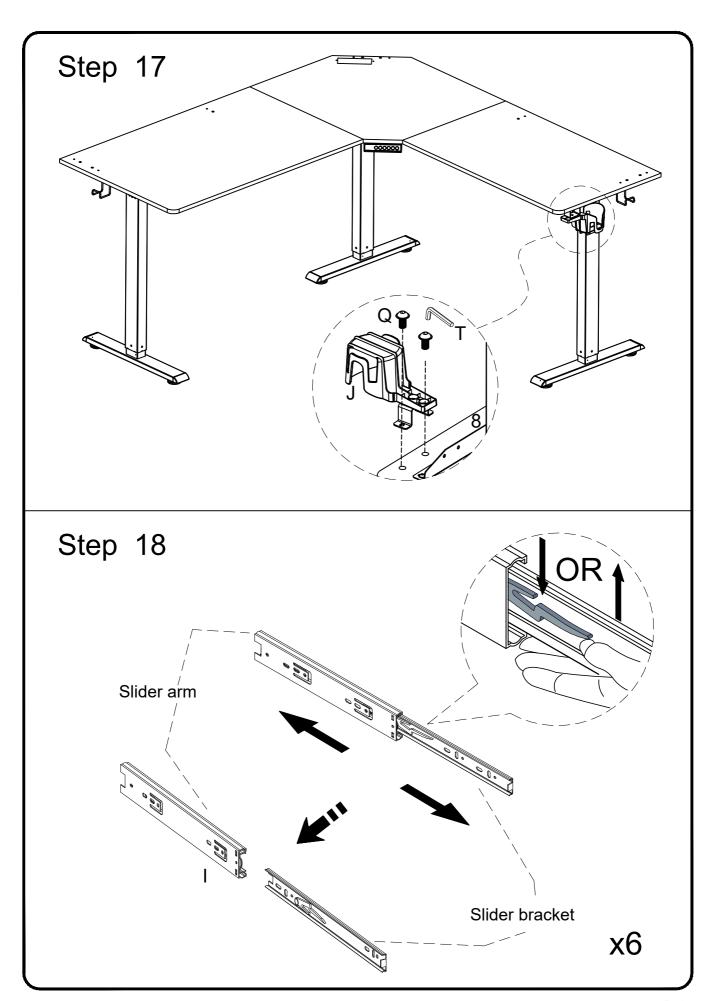


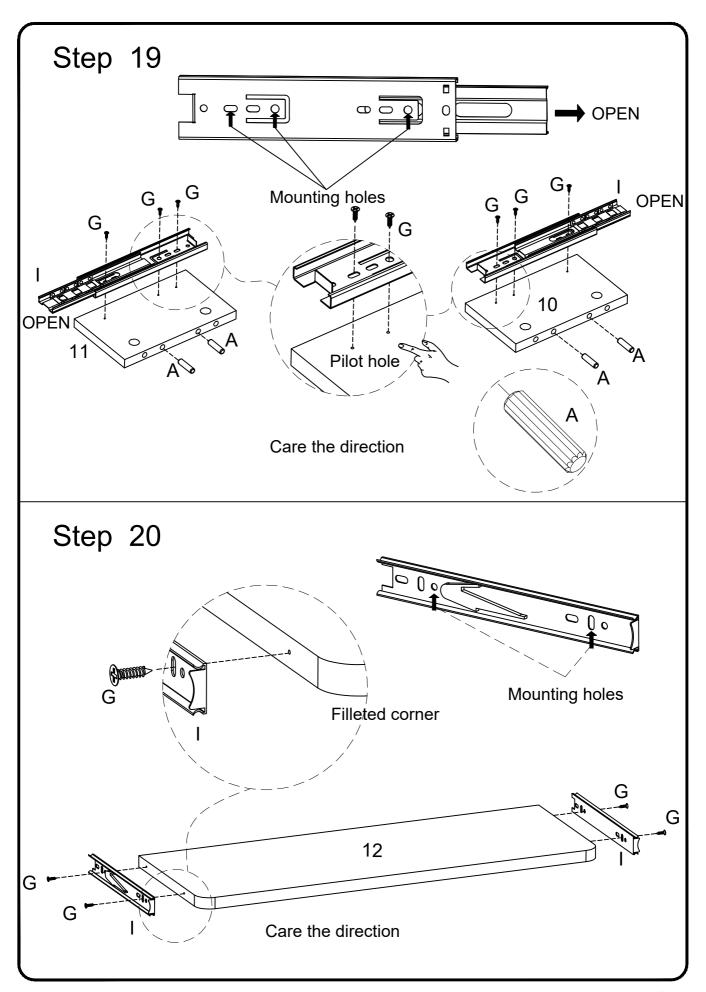


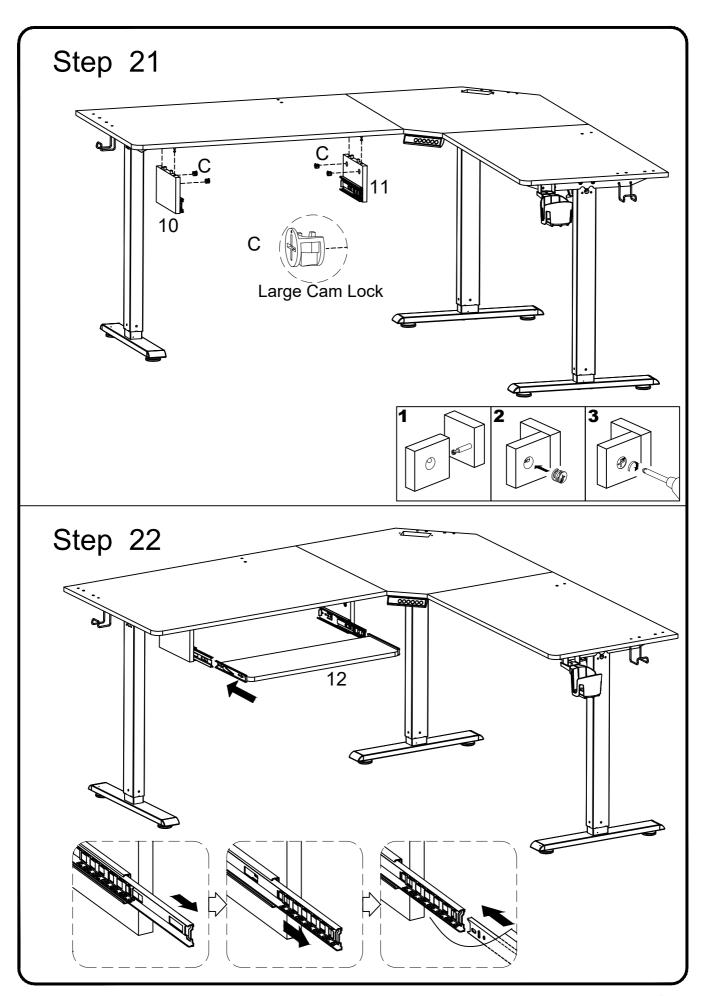


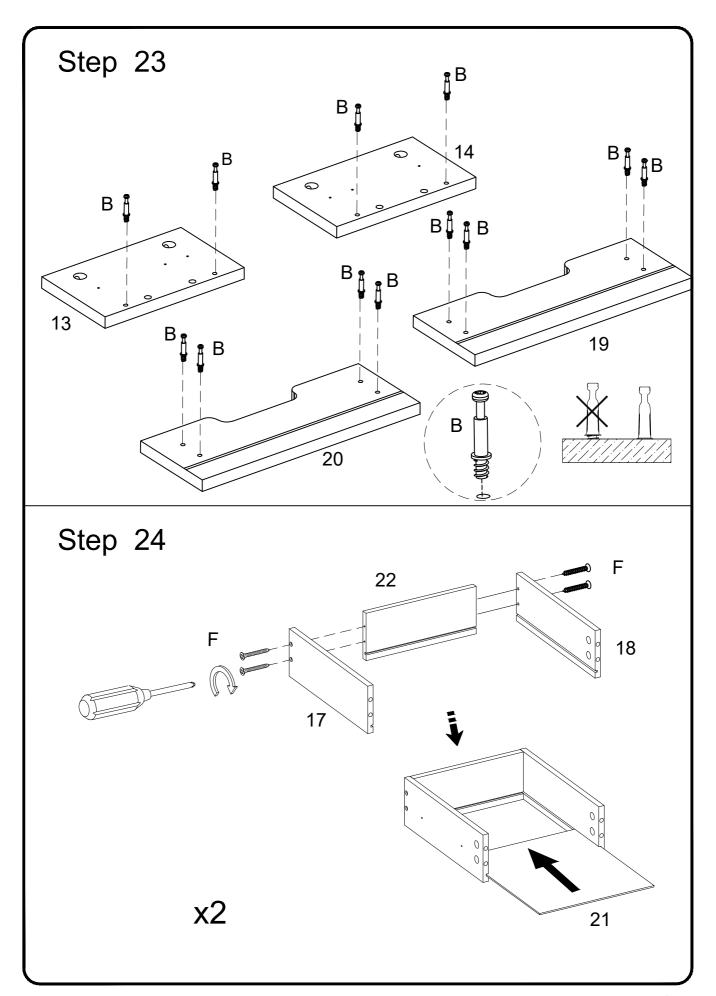


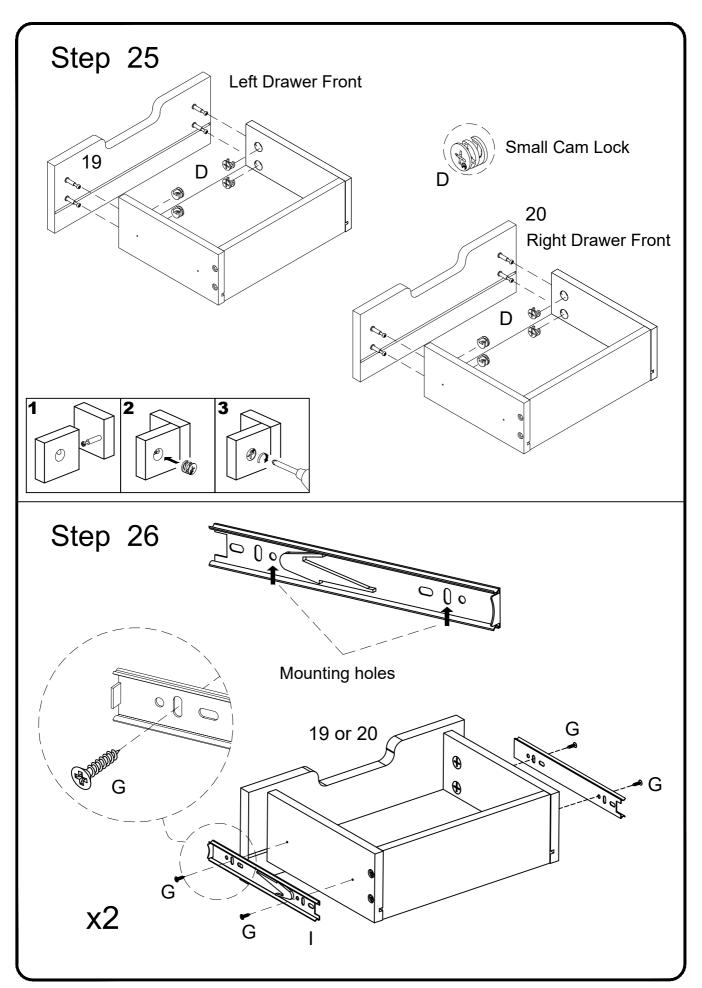


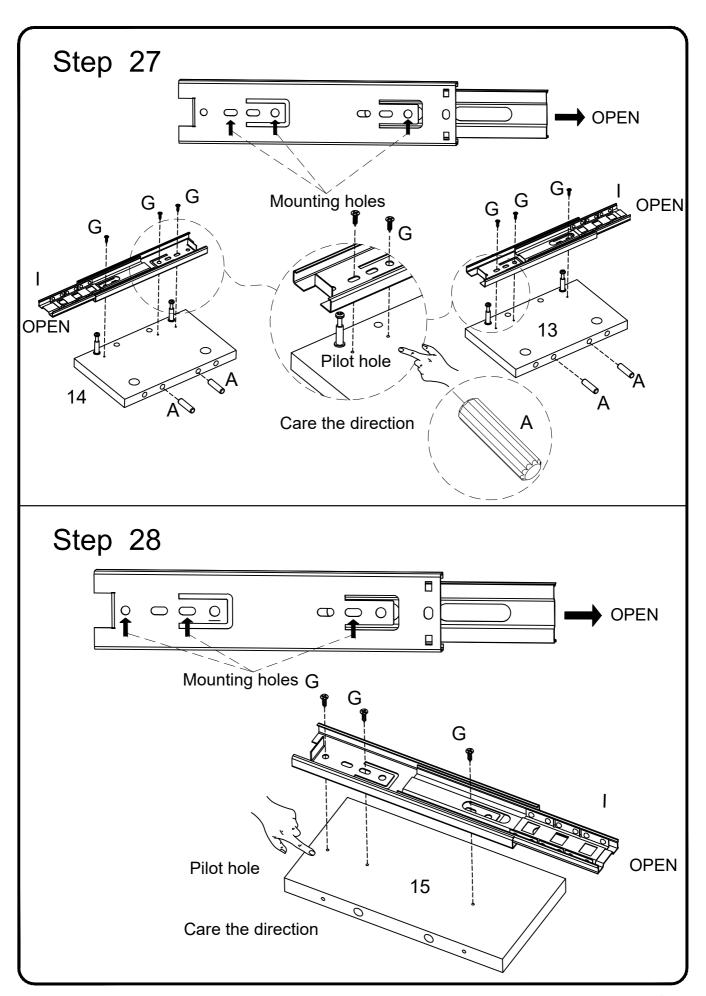


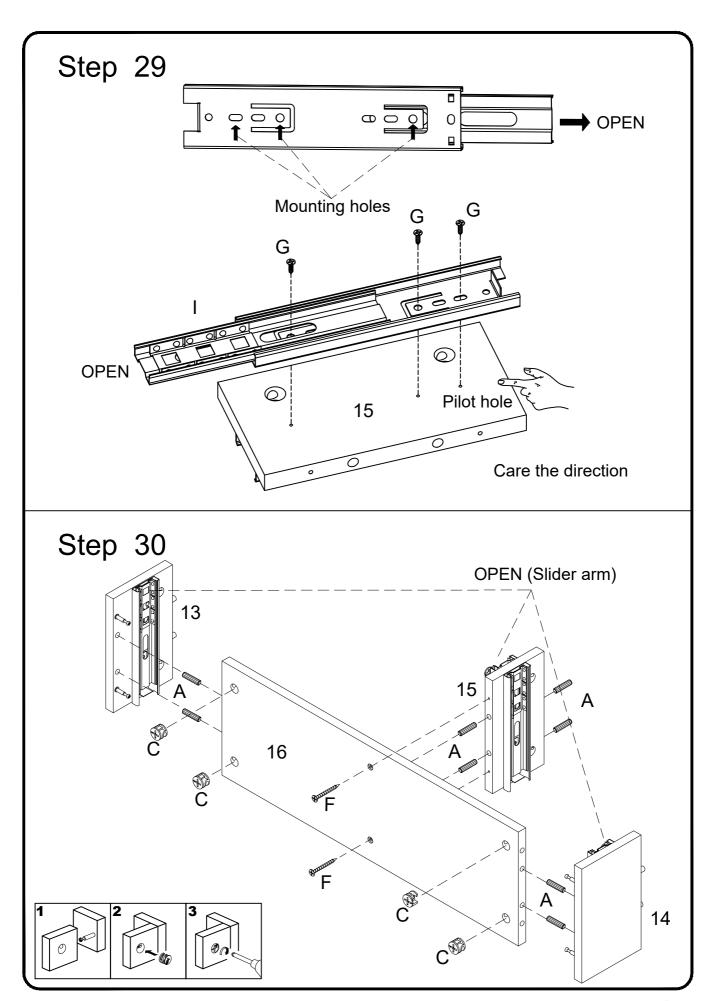


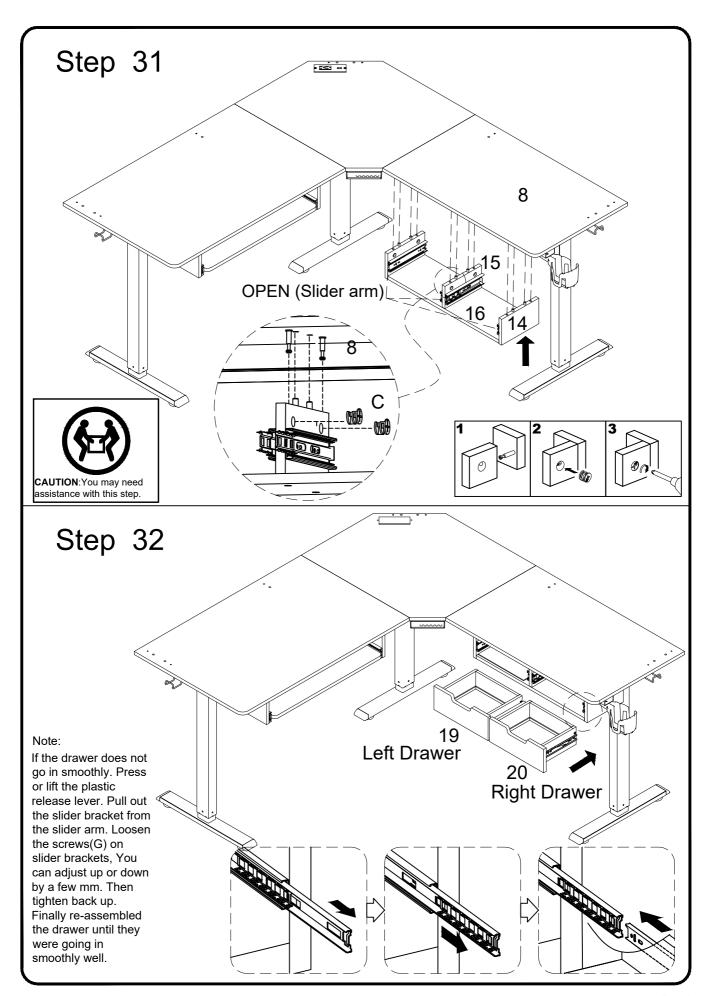


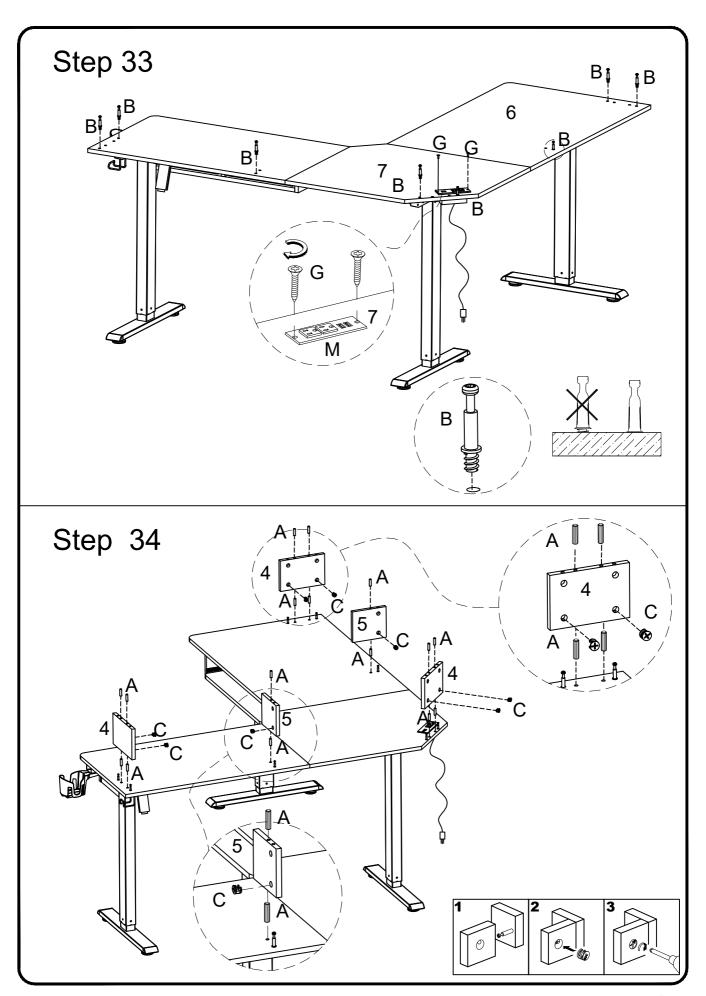


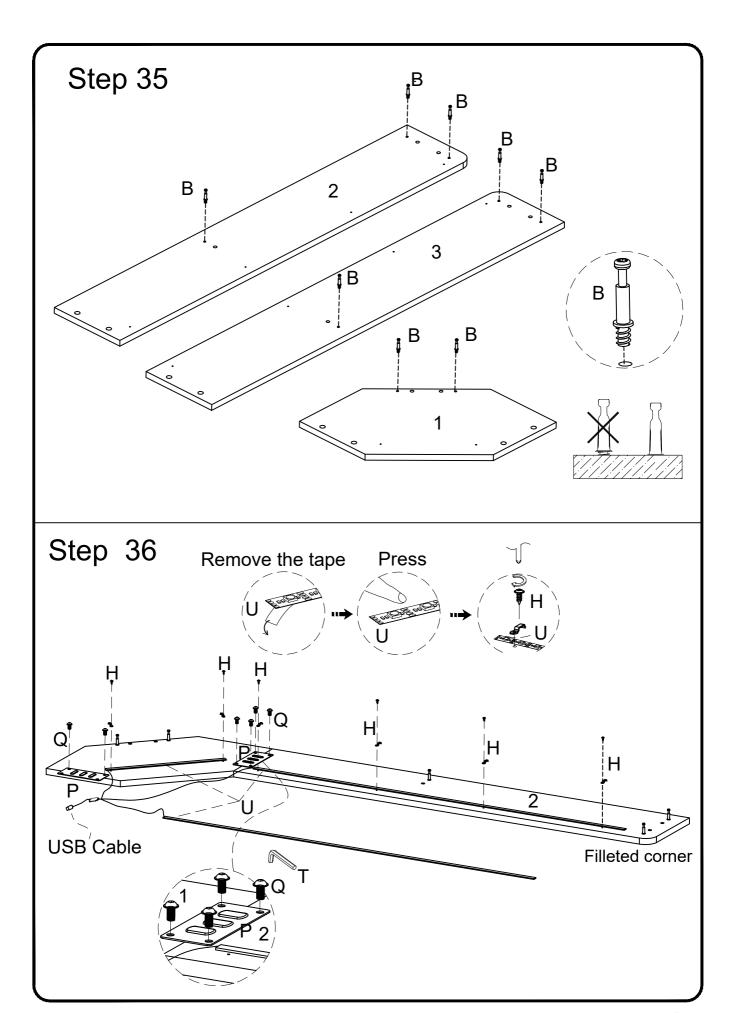

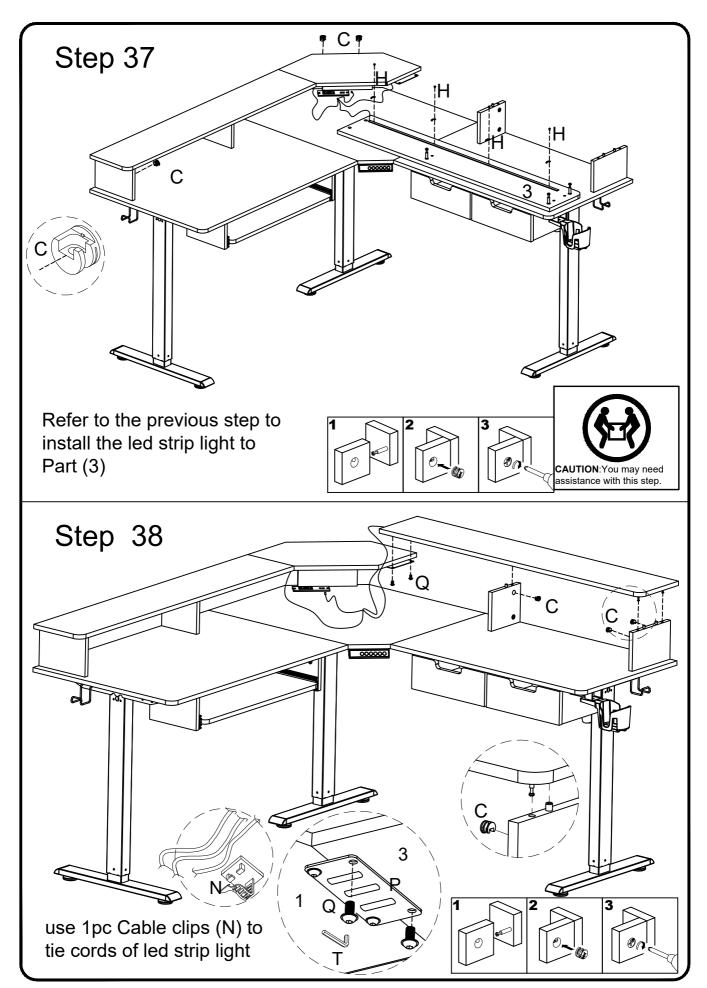

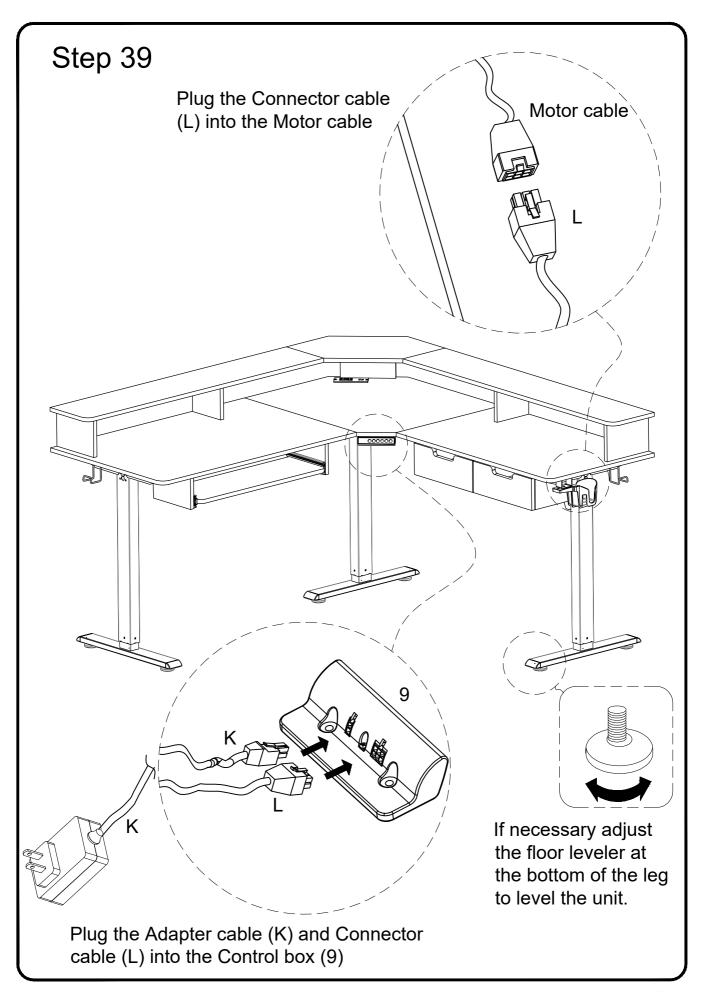

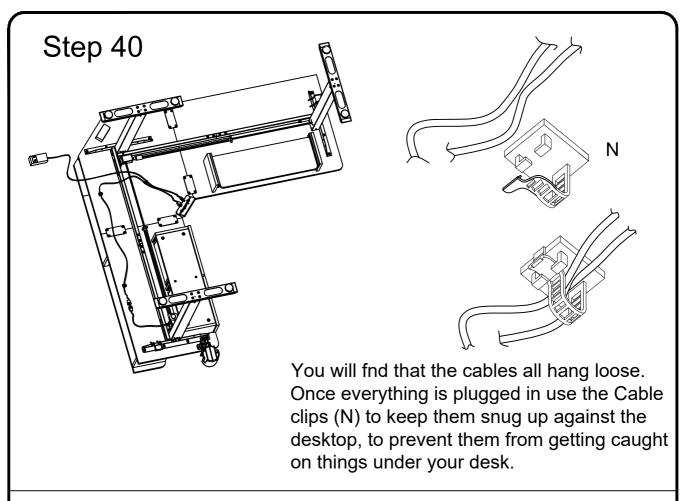

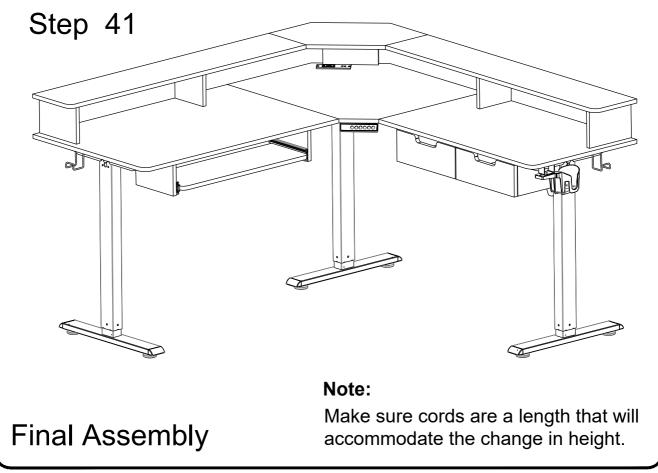

#### **User Instructions**

#### 1. Height adjustment

Press and hold the Upper arrow to lift. The height will be show on the LED control panel Press and hold the Down arrow to lower. The height will be show on the LED control panel

## 2. Save height setting.

This product provide 4 save heights for your choices.

Adjust the desk to the desired height. Press and hold the button 1 or 2 or 3 or 4 more than 2 s. if a flashing H1 or H2 or H3 or H4 appears on the LED control panel that means successfully save and store the desired height.

If you want to change the save height just repeat this step .the new save height would cover the last setting.

# 3. Parameter setting

Press and hold the 1&2 button at the same time on the LED control panel ,it will be flashing with the position (off ,L (light) N(normal),H(heavy)).

#### 4.Error code

Code	Problem	Action
E02	Desk sloping	Make sure desk is evenly and reset the desk
Hot	Over heat	Power off and power on after at least 15mins
E10	Motor fault	Power off and check the cables and control systems. and
		then power on ,if issue persists,contact the customer
		service.
E20	Over load	Remove some weight on the top panel until the error
		clears
E31	Lower voltage	Power off and check the cables and control systems. and
		then power on
E32	Height voltage	Power off and check the cables and control systems. and
		then power on,if issue persists,contact the customer
		service.

### 5 Initialize and reset

When the error code"E10""E20"appears on LED control panel or the desk at the lowest position, Press and hold the down arrow for more than 3s , if flashing RES on the LED control panel , Release the button , the desk will move downward to the end and rebound for a few distance that means successfully reset the lowest position.