
 

 



 
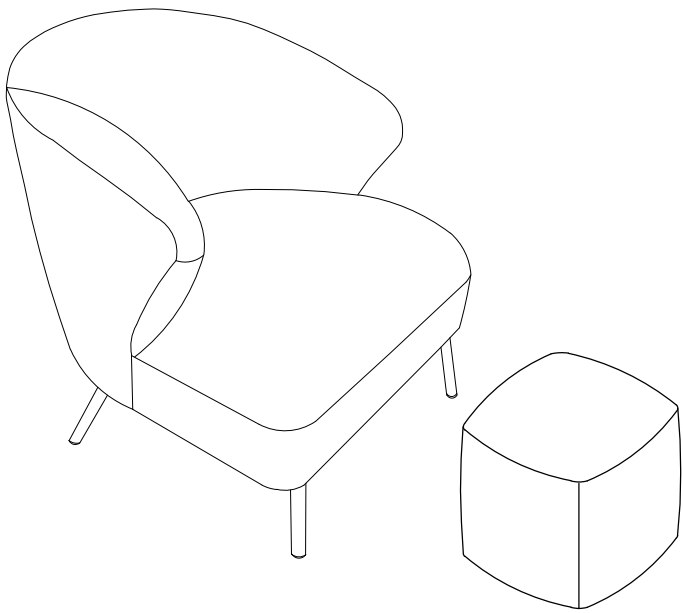


# ASSEMBLY INSTRUCTIONS

## ACCENT CHAIR & CUBE POUF

|  |   |  |   |
|--|---|--|---|
| <b>A</b> Seat<br><br>1 pc                           | <b>B</b> Pouf<br><br>1 pc                              | <b>C</b> Left Leg<br><br>2 pcs                     | <b>D</b> Right Leg<br><br>2 pcs                |
| <b>E</b> Allen Bolt<br>Ø5/16" x 1-1/4"<br><br>8 pcs | <b>F</b> Spring Washer<br>Ø5/16" x 15/32"<br><br>8 pcs | <b>G</b> Flat Washer<br>Ø5/16" x 3/4"<br><br>8 pcs | <b>H</b> Allen Key<br>4 x 2-23/64"<br><br>1 pc |




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

### IMPORTANT NOTE:


1. Do not tighten all screws / bolts until all completely assembled.
2. Keep all hardware parts out of reach of children.

\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.

- 1 Take out the Left Leg (C), the Right Leg (D) and the hardware bag from the bottom of the Seat (A).

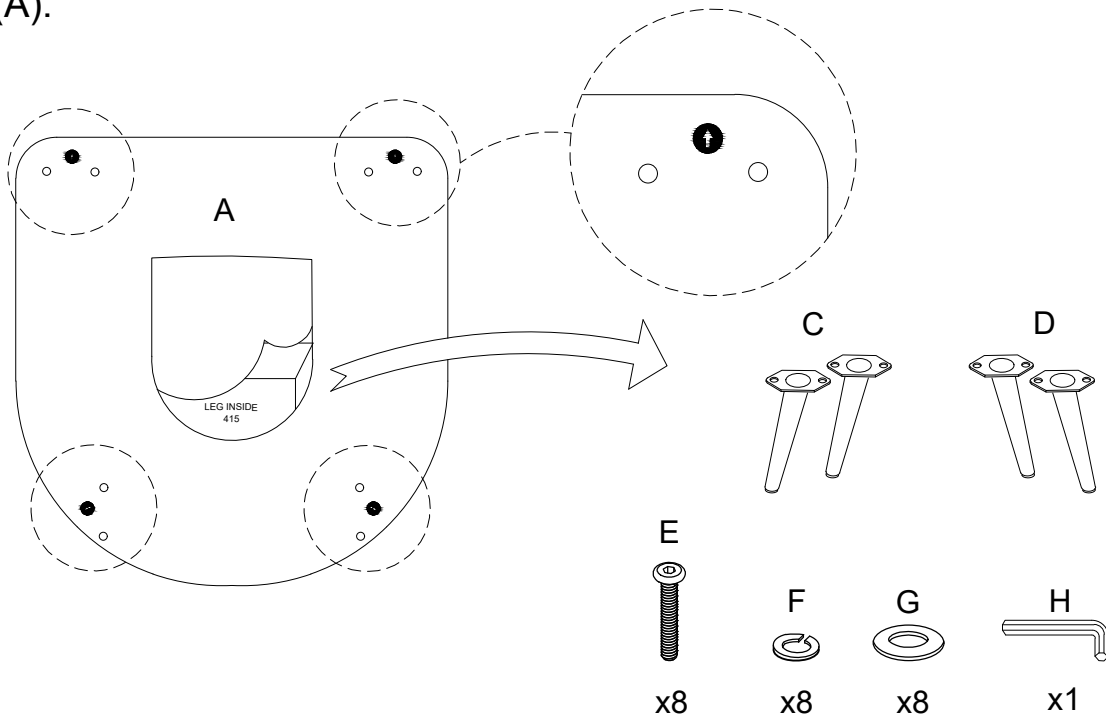

- 2 Attach the Left Leg (C) and the Right Leg (D) to the Seat (A) using Allen Bolt (E), Spring Washer (F) and Flat Washer (G) with the Allen Key (H).

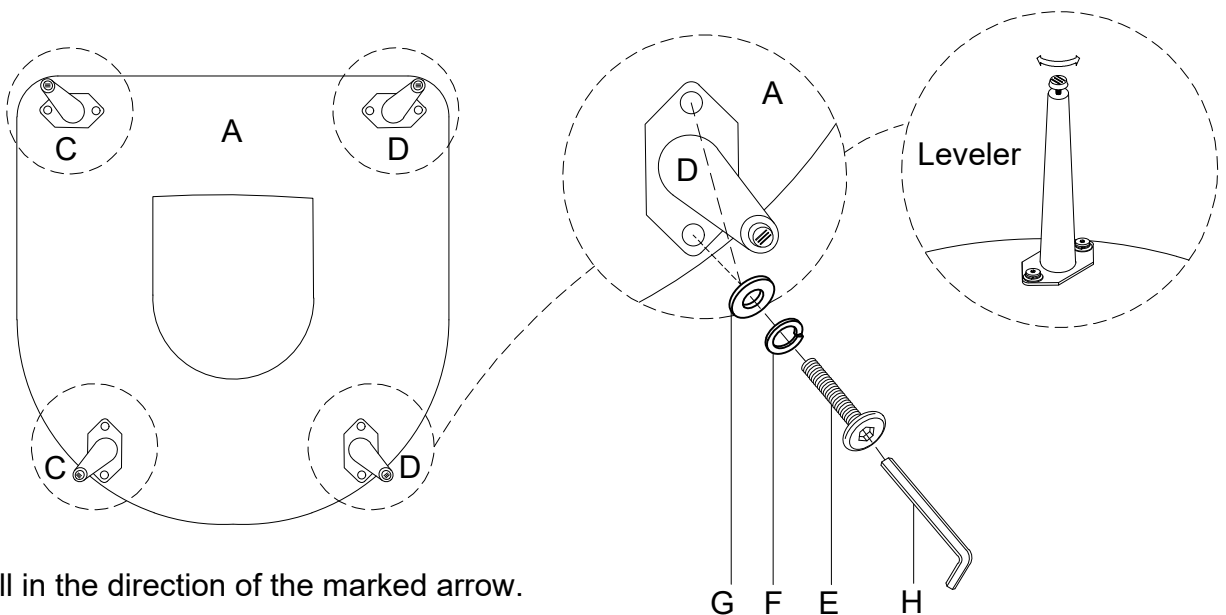

**ATTENTION:** Install in the direction of the marked arrow.

### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.