
 
Please read the instructions carefully before assembling the cabinet.


Two adults are required for assembly of this product on a clean, flat surface without a rough surface that could scratch the panels.


Top panel

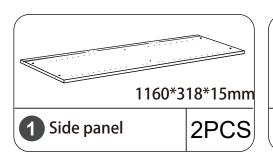






1PC

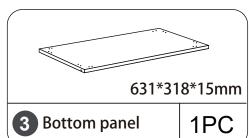

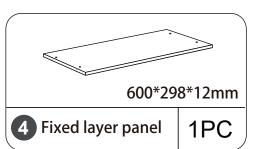

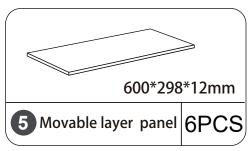

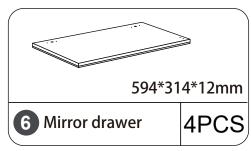

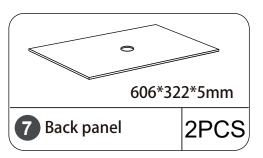

(K)MMMM


23


22

4PCS


Ø 3.5x14mm

2PCS

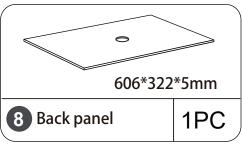

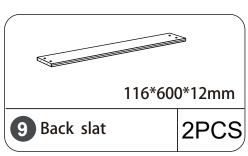

#### **Hardware fitting**

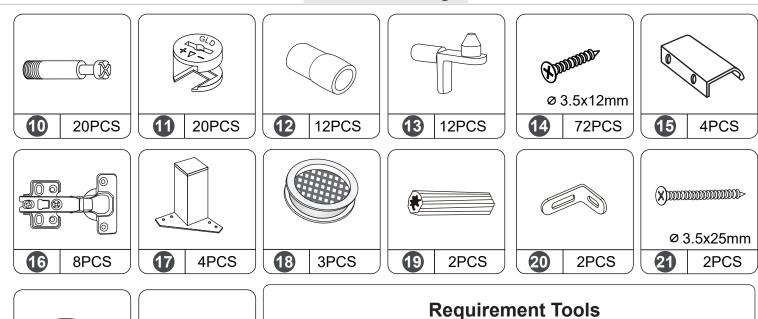


Please read the instructions carefully before assembling the cabinet.

Two adults are required for assembly of this product on a clean, flat surface without a rough surface that could scratch the panels.

#### **Board Identification**

**Not Actual Size** 

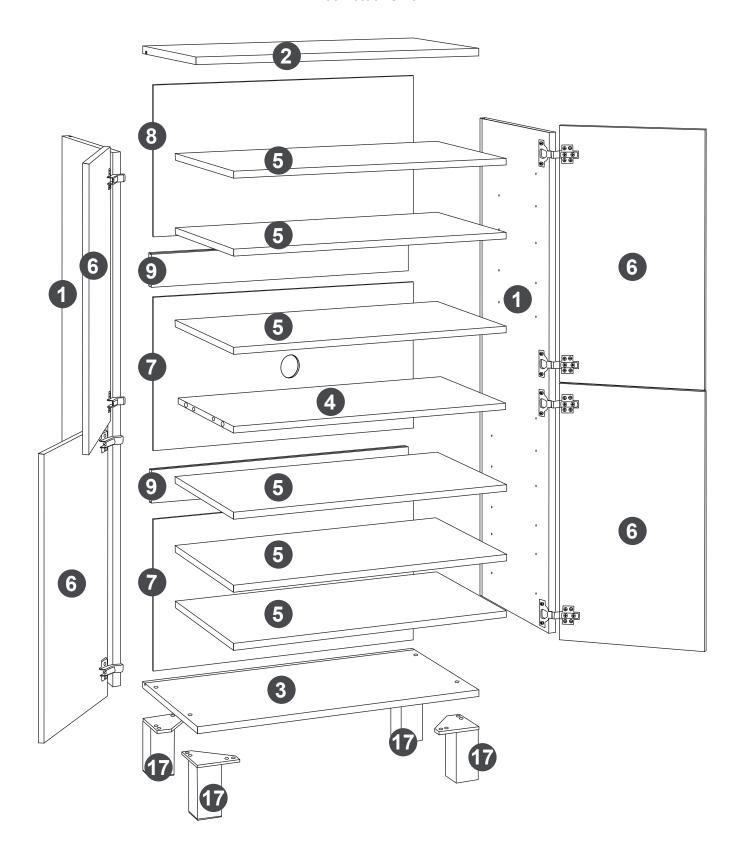

#### Assistance must be required for assembly of this product

Please read the instructions carefully before assembling the cabinet.

 
Two adults are required for assembly of this product on a clean, flat surface without a rough surface that could scratch the panels.

#### **ASSEMBLY INSTRUCTION**













**English** 

#### **WARNING**


Serious or fatal crushing injuries can occur from furniture tip-over.


ALWAYS secure this furniture to the wall using tip-over restraints.


To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lower drawer.
- Do not set TVs or other heavy objects on top of this product.
- Never let children climb or hang on drawers, doors, or shelves.




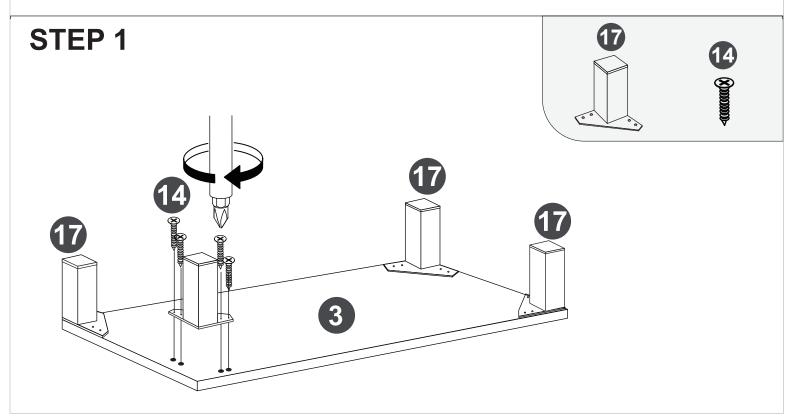


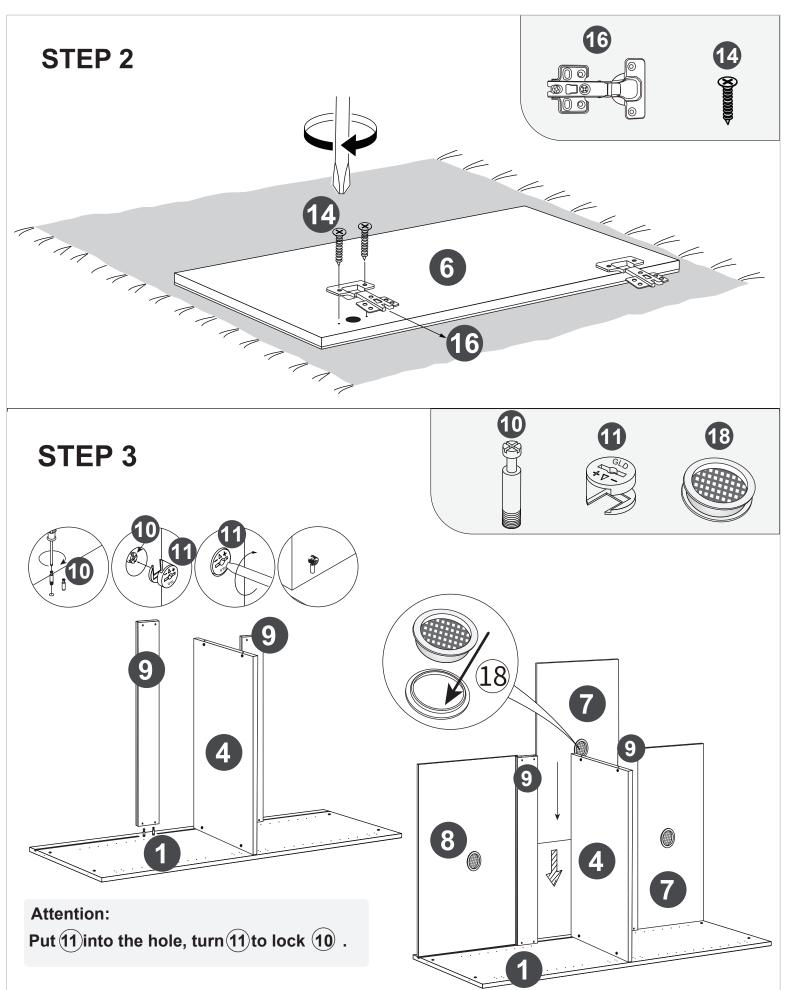

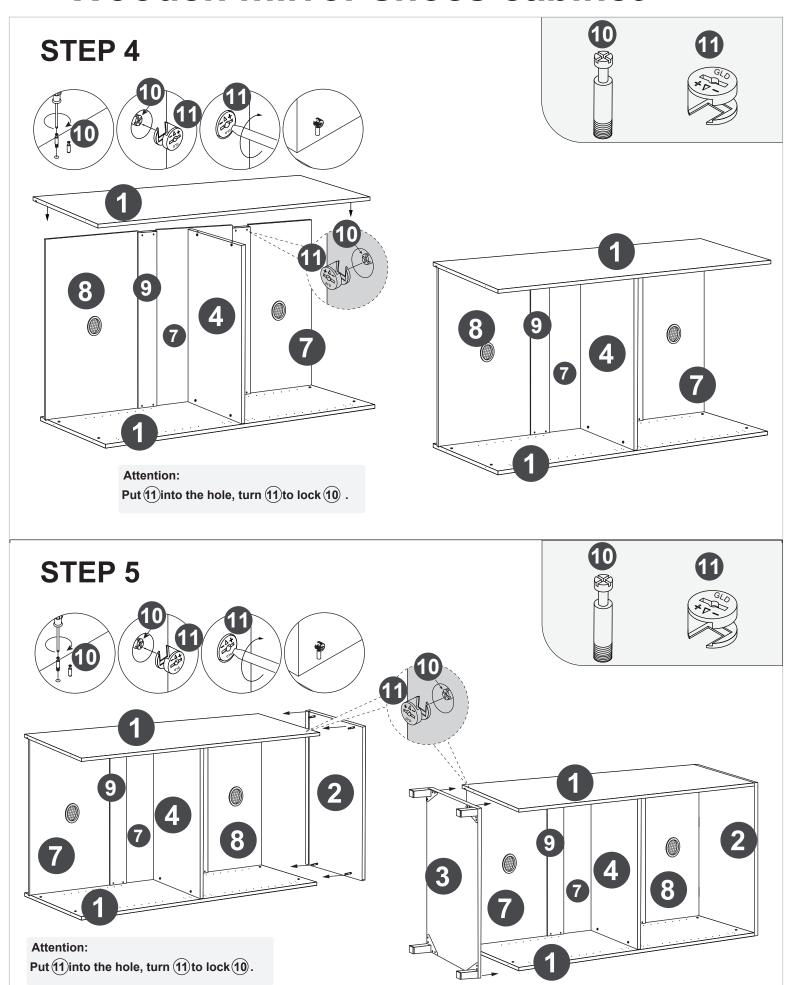



# STEP 6 This screw adjusts the upper and lower doors parallel to each other.

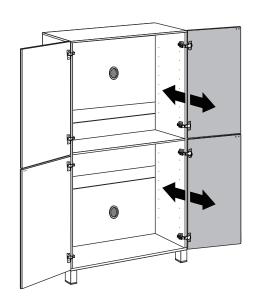

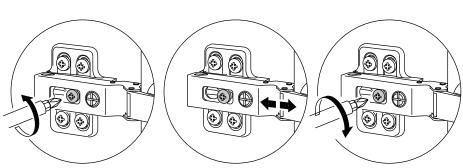


This screw can adjust the cabinet door to front or back, parallel cabinet boby with cabinet door.

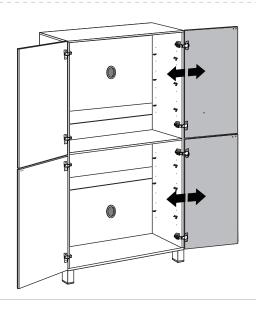

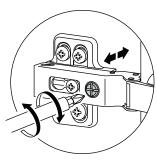

This screw can adjust the cabinet door to left or right, parallel cabinet boby with cabinet door.

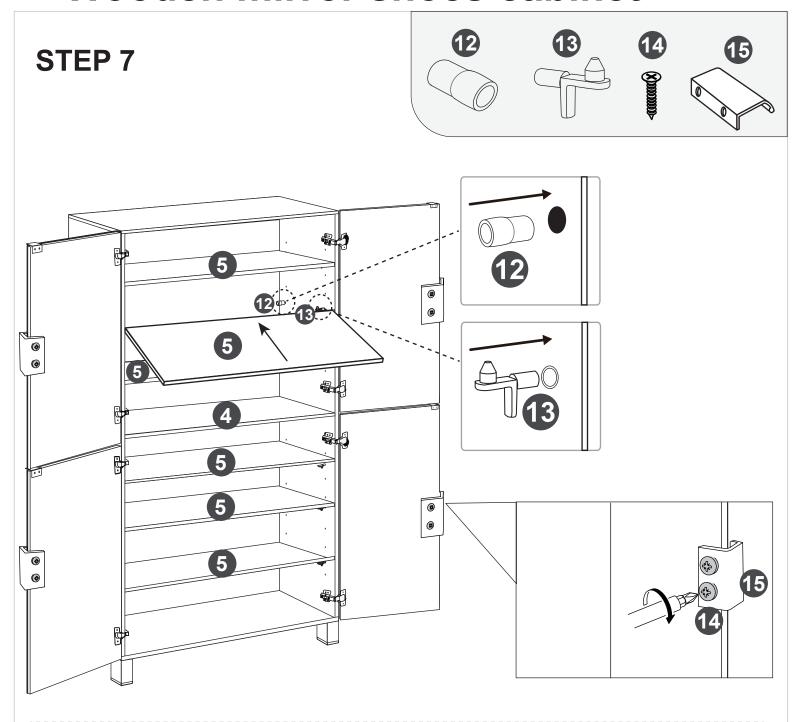

#### **Maintenance:**

- 1. Avoid exposure to direct sunlight and heat sources.
- 2. Keep the cabinet door closed when not in use.
- 3. Use mild furniture cleaners to clean the cabinet.
- 4. Open the cabinet door gently at the bottom of drawers.
- 5. According to your needed space, you can adjust the position of "5" as you like.

