


# ASSEMBLY INSTRUCTIONS


## OUTDOOR CONVERTIBLE TABLE & BENCH

**A** Top Frame

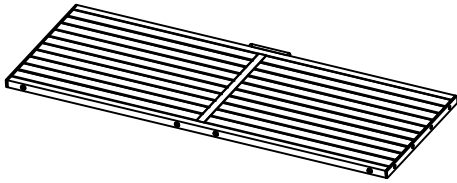


1 pc

**B** Seat Frame - Left

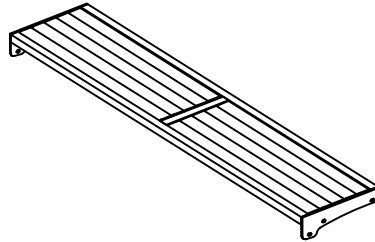


1 pc

**C** Seat Frame - Right

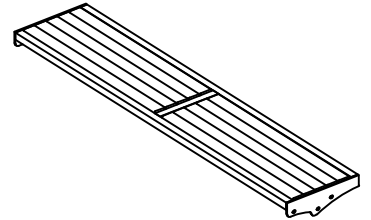


1 pc

**D** Left Frame

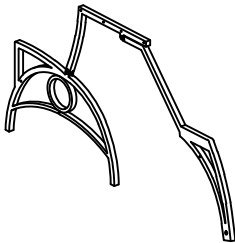


1 pc

**E** Right Frame

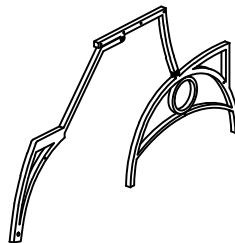


1 pc

**F** Support Rail

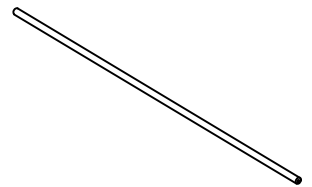

3 pcs

**G** Support Leg

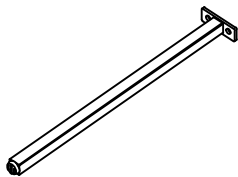


2 pcs

**H** Caster




2 pcs

**I** Bolt  
5/16" x 3"

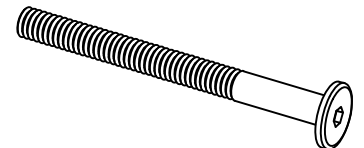


2 pcs

 **J** Bolt  
1/4" x 1-3/4"




6 pcs

 **K** Bolt  
1/4" x 1-1/4"



8 pcs

 **L** Bolt  
1/4" x 1"



16 pcs

---

**M** Lock Washer  
1/4" x 1/2"



30 pcs

**N** Flat Washer  
5/16" x 3/4"



4 pcs

**O** Flat Washer  
1/4" x 5/8"



30 pcs

---

**P** Hex Nut  
5/16" x 1/2"



2 pcs

**Q** Allen Key  
5/32" x 2-1/4"




1 pc

**R** Wrench  
1/2"





1 pc

---

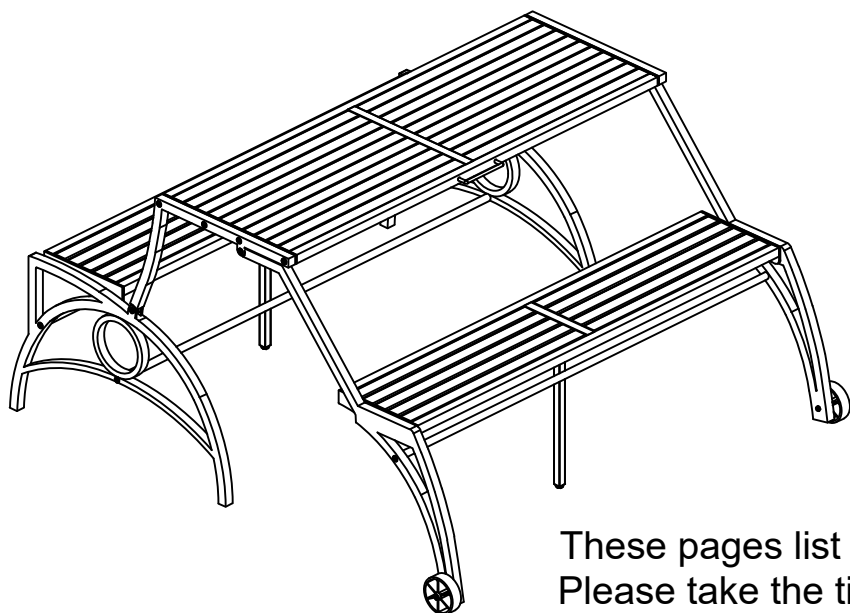


These pages list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Attach the Caster (H) to the Left & Right Frame (D & E) using Bolt (I) and Flat Washer (N) with the Allen Key (Q). Tighten the Caster (H) using Hex Nut (P) with the Wrench (R).

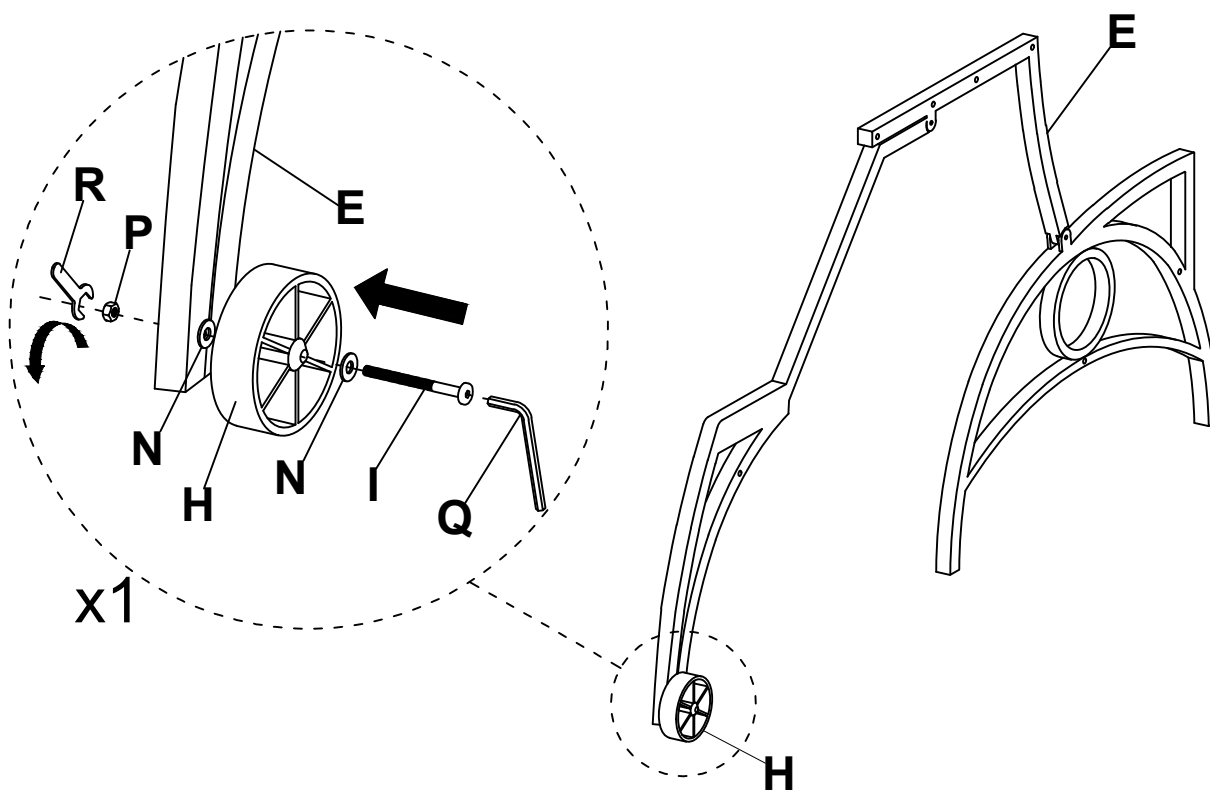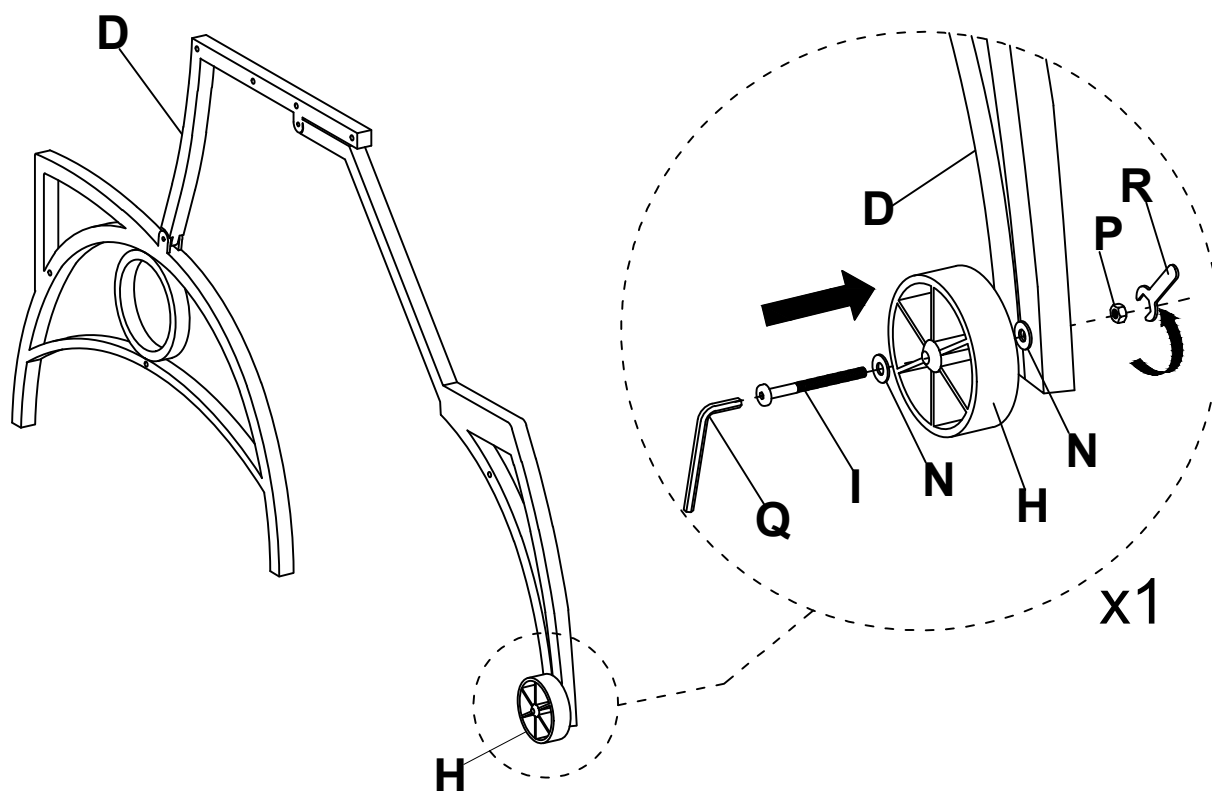


- 2** Attach the Support Rail (F) to the Left & Right Frame (D & E) using Bolt (J), Lock Washer (M) and Flat Washer (O) with the Allen Key (Q).


\*Do not fully tighten the bolts until all bolts are attached.

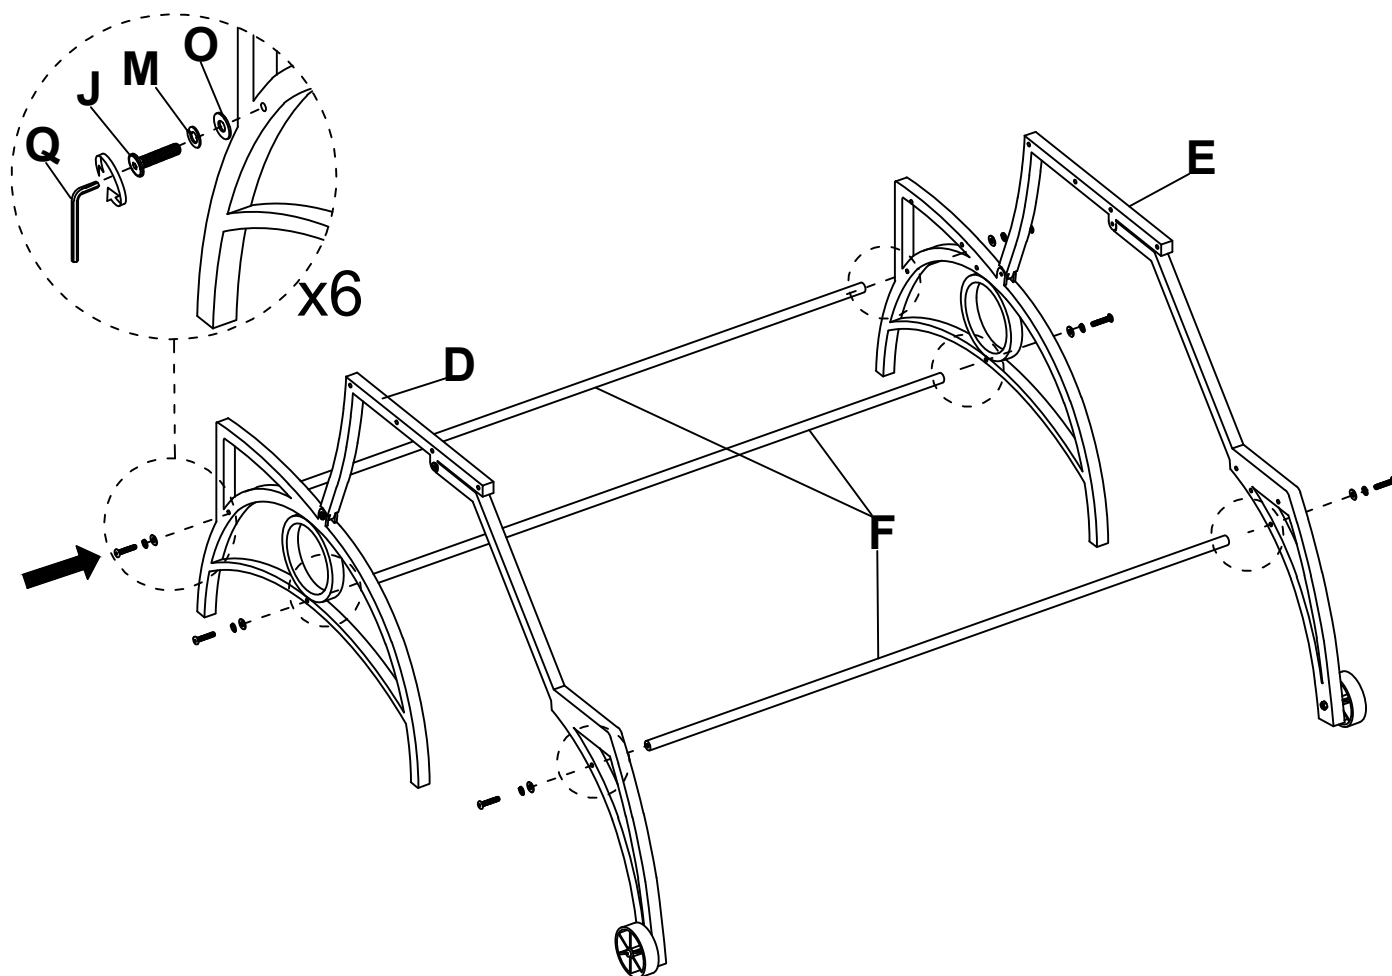

- 3** Attach the Support Leg (G) to the Seat Frame - Left (B) using Bolt (L), Lock Washer (M) and Flat Washer (O) with the Allen Key (Q).

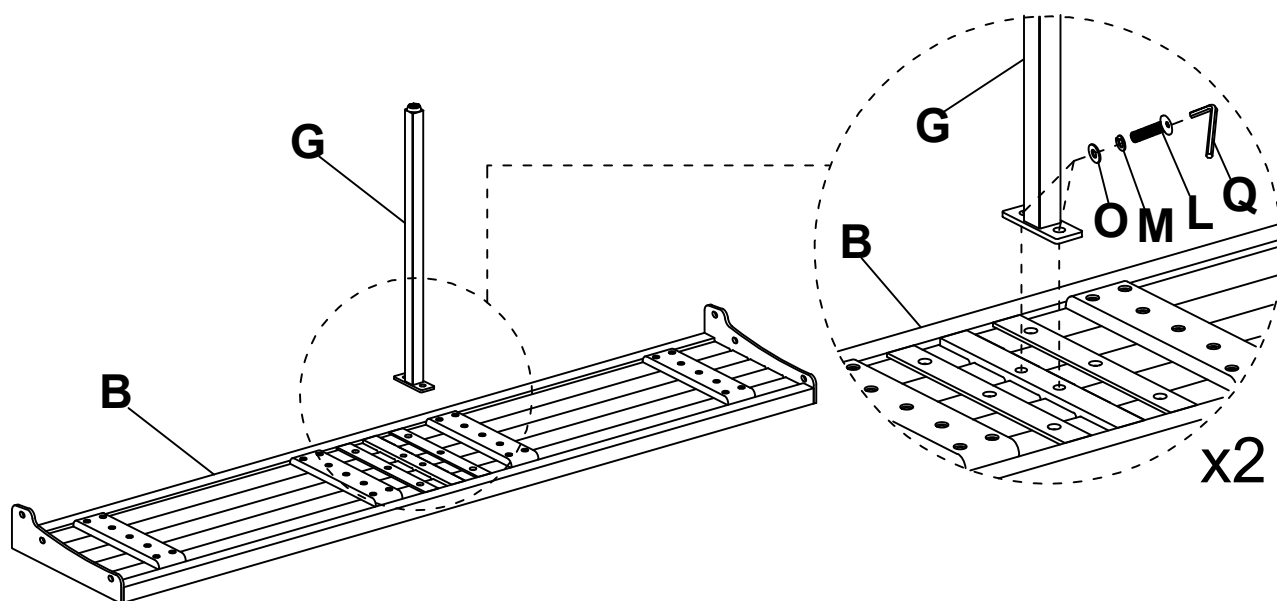


- 4** Attach the Support Leg (G) to the Seat Frame - Right (C) using Bolt (L), Lock Washer (M) and Flat Washer (O) with the Allen Key (Q).

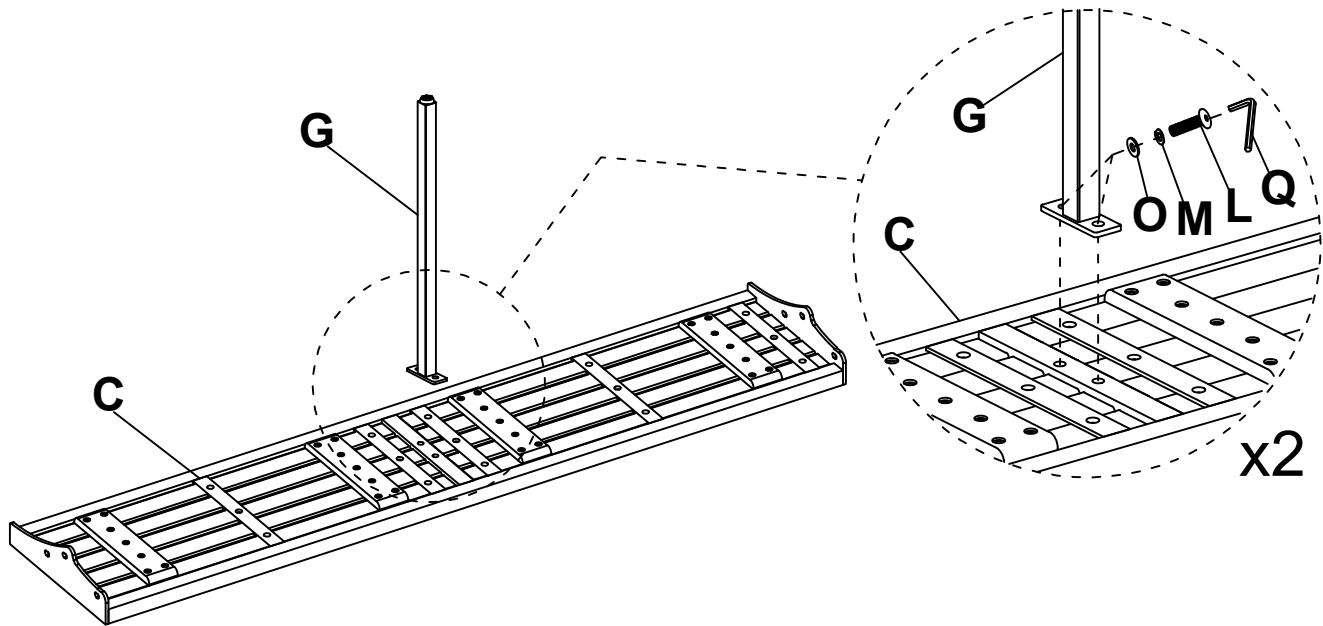


- 5** Attach the Seat Frame - Left (B) to the Left & Right Frame (D & E) using Bolt (L), Lock Washer (M) and Flat Washer (O) with the Allen Key (Q).

\*Do not fully tighten the bolts until all bolts are attached.

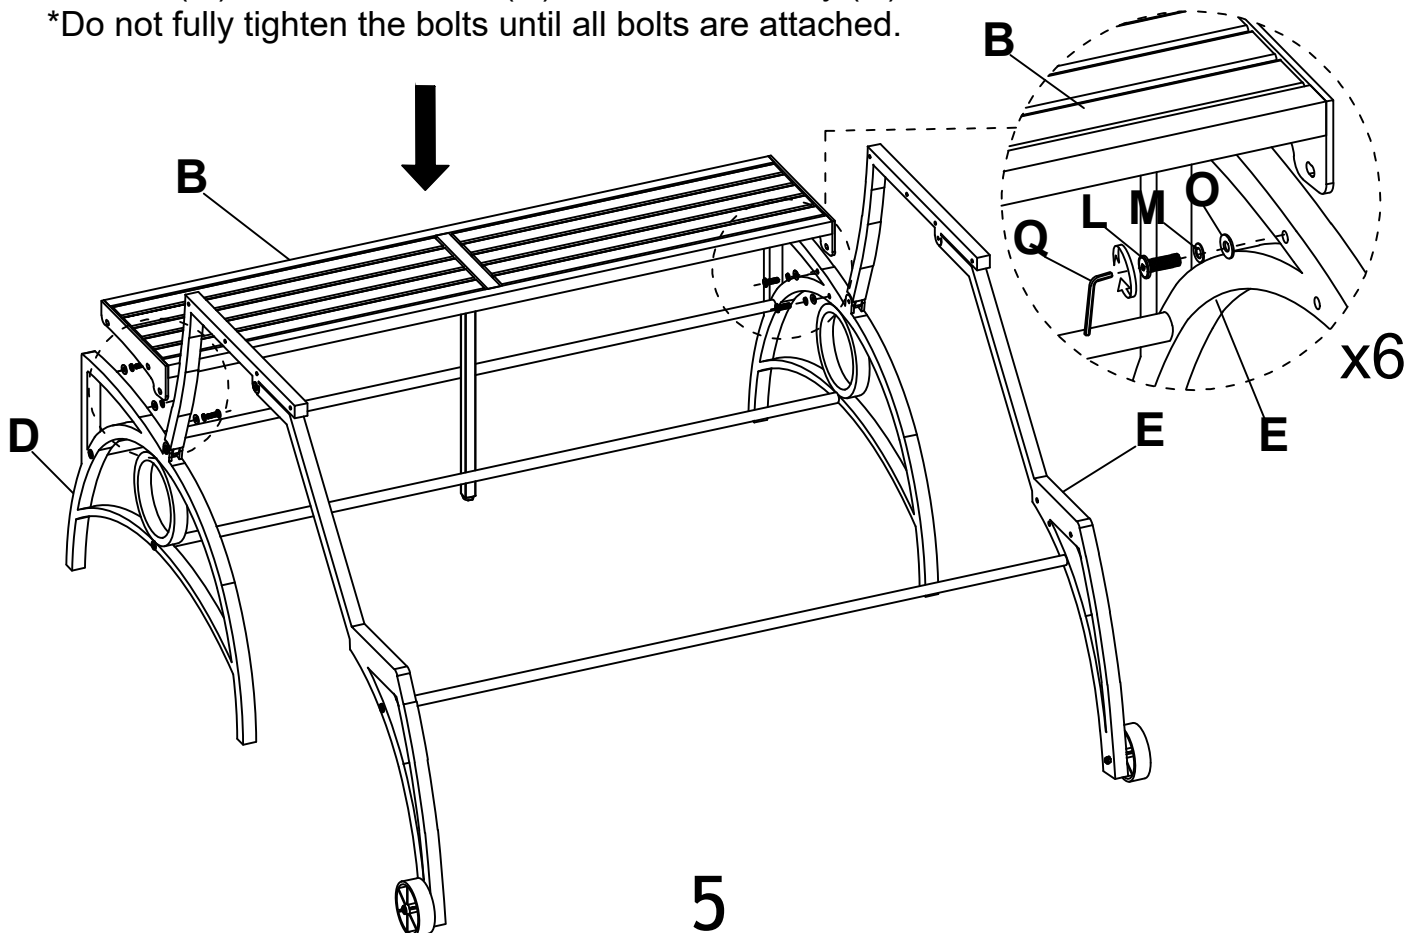


- 6** Attach the Seat Frame - Right (C) to the Left & Right Frame (D & E) using Bolt (L), Lock Washer (M) and Flat Washer (O) with the Allen Key (Q).

\*Do not fully tighten the bolts until all bolts are attached.

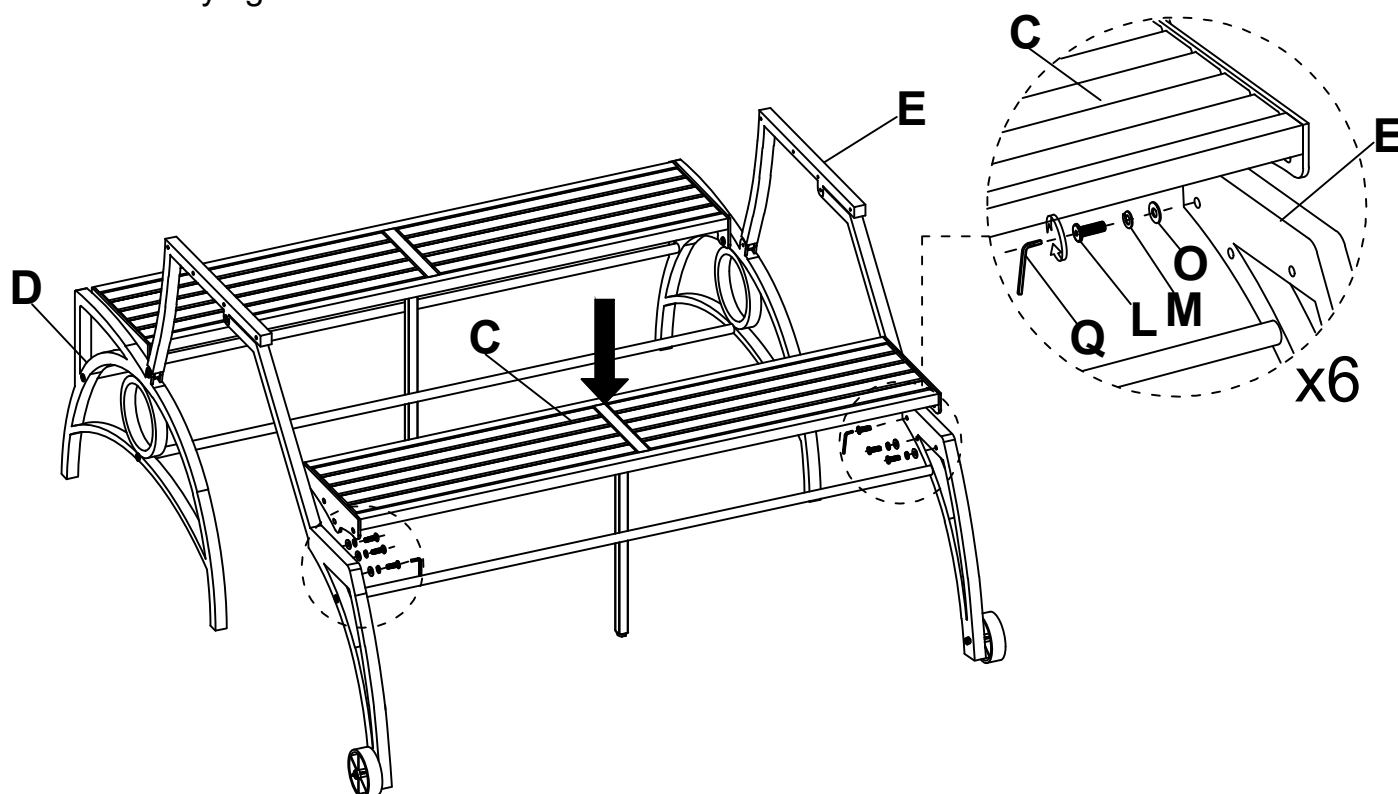


- 7** Attach the Top Frame (A) to the Left & Right Frame (D & E) using Bolt (K), Lock Washer (M) and Flat Washer (O) with the Allen Key (Q).

\*Fully tighten the bolts in this step.

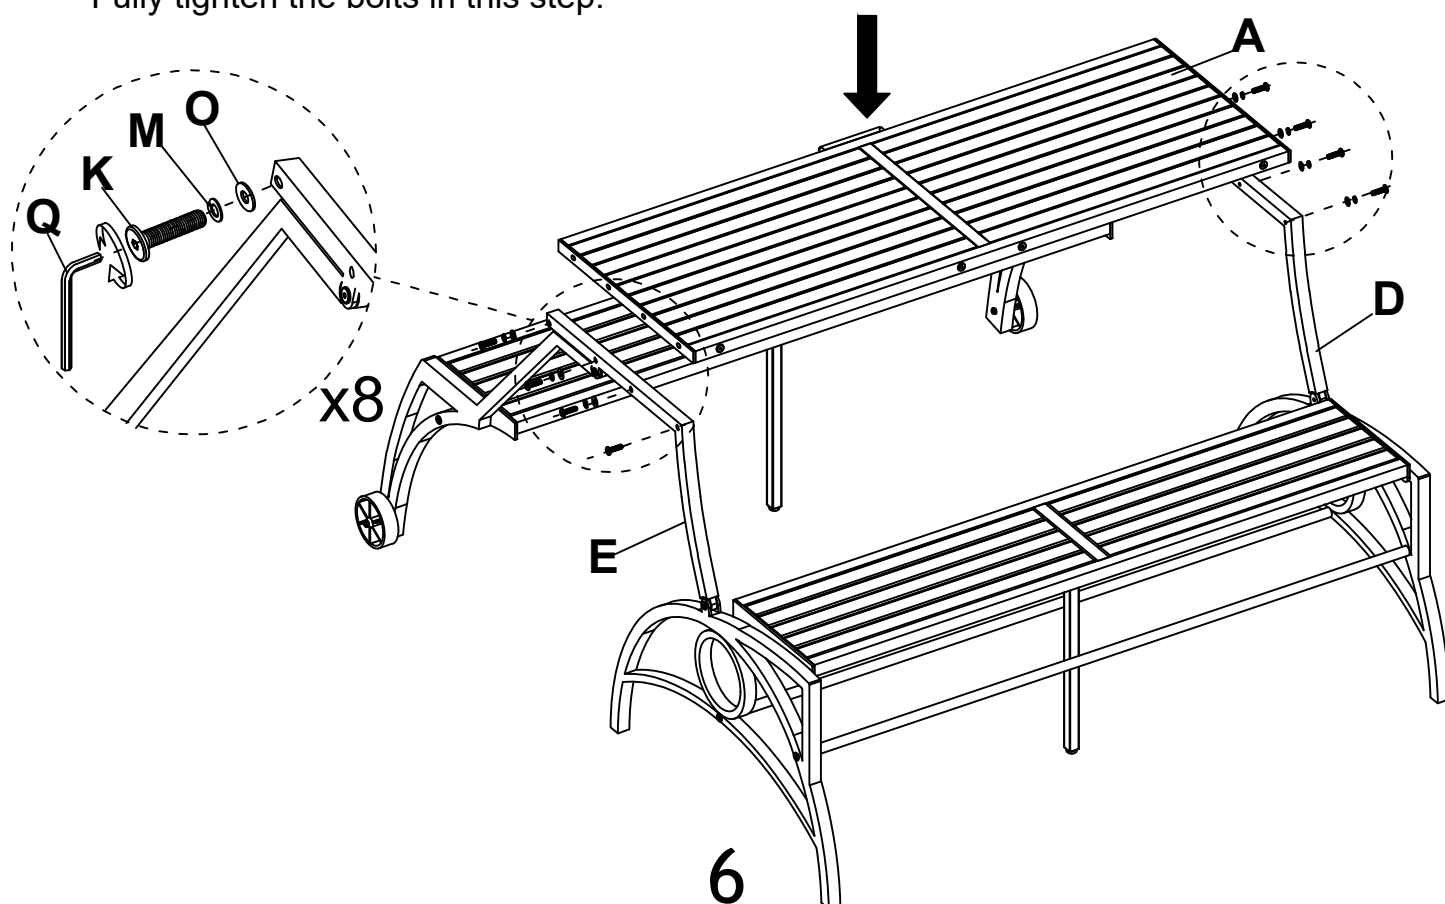


- 8** If you want to change your choice of table or seat, use the handle to pull up and down. Adjust the levelers as needed.

Option 1

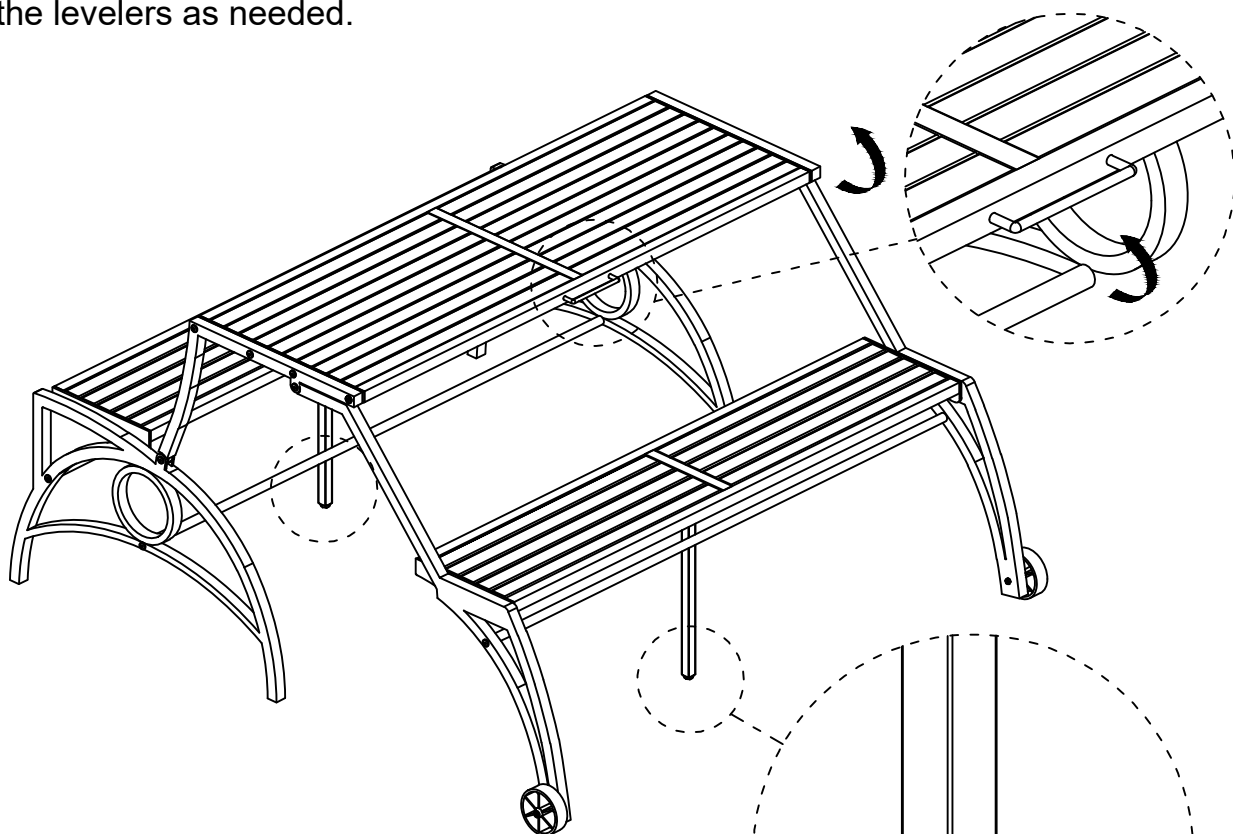

Option 2

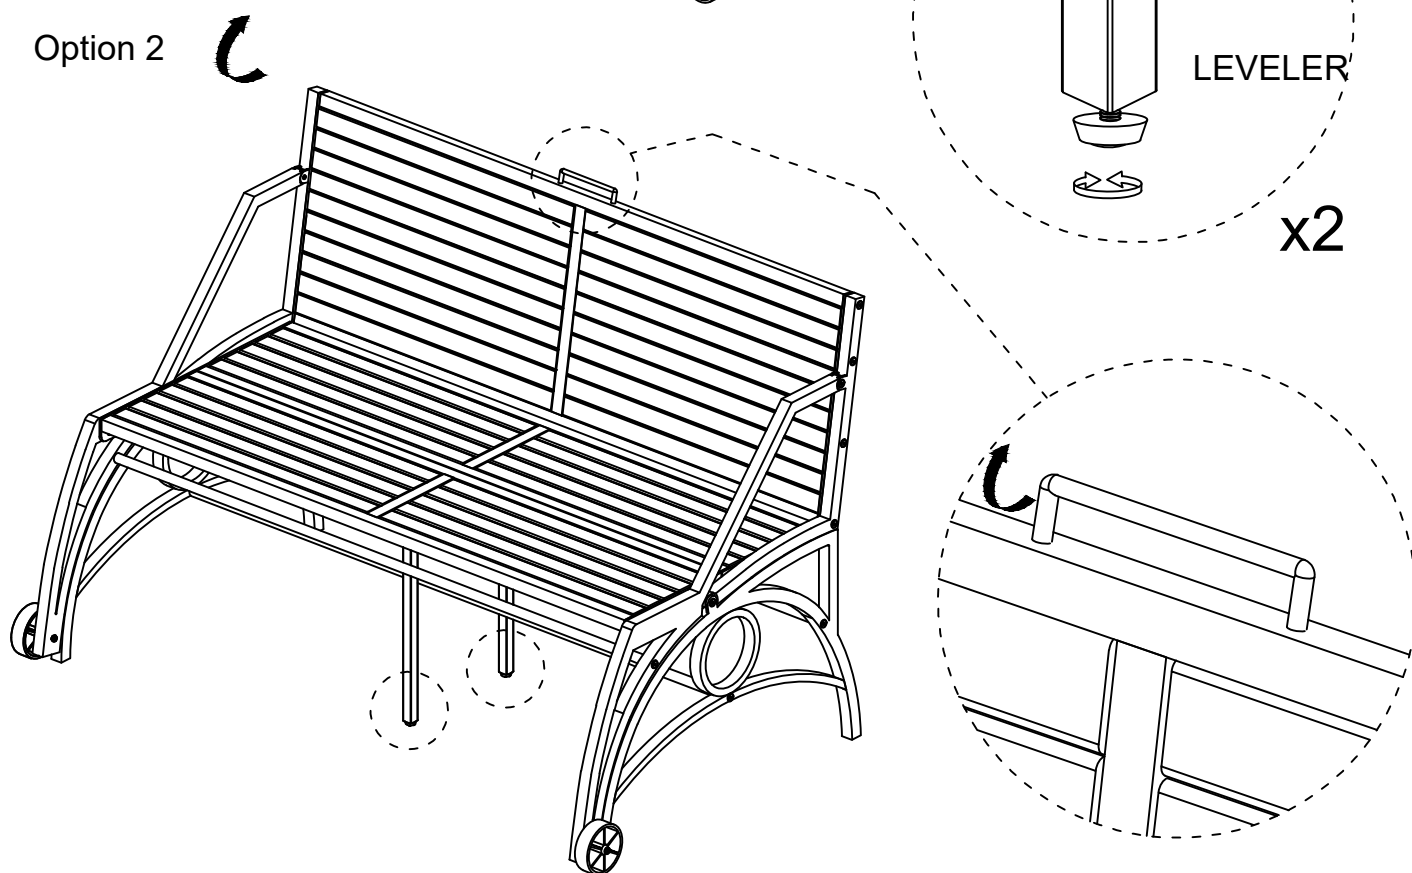

### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.