

200g铜版纸，双色印刷， 蓝色虚线为折痕示意 非印刷内容

540mm

220mm

A181-001-001
COZY CAMPING KIT
FOLDING WAGON + IGT TABLETOP + CANOPY

PRODUCT MATERIAL:
Plastic, Metal, Nylon

PRODUCT SIZE: 980x500x320mm(unfold wagon)
365 x200x645mm(folded wagon)
360x200x10mm(tabletop)
288x259mm(canopy)

QTY:
Folding wagon x1,Tabletop x1,Canopy x1

WEIGHT:
G.W.-16.75KG,N.W.-16.5KG
maximum load capacity of wagon is 100KG
maximum load-bearing capacity of tabletop is 30KG

Scan the QR code for assembly videos

Email: patio@homeselecting.com

WARNING

For your safety and to avoid any damage or inconvenience, please carefully review the following instructions before using this product.

This product is designed exclusively for adult use. It is not suitable for children. Children with restricted mobility to operate the product. Additionally, please ensure that children do not ride inside the wagon.

When this product is in use, children must always be under the supervision of an adult.

When using this product, always use proper techniques. Avoid overloading, improper folding, or using non-approved parts. Carefully review the provided instructions to ensure proper usage.

When using this product, always use proper techniques. Please maintain a safe distance from moving parts to prevent injury.

For your safety, please avoid using this product in areas with uneven surfaces.

When using this product, always ensure this product is kept away from fire, high temperatures, pools, power sources, and maintain a safe distance at all times.

This product is designed with a recommended weight capacity of 100KG and is important to distribute items placed within the wagon evenly to ensure optimal balance and stability.

Avoid placing this product on roads, ramps, or in hazardous areas to ensure safety and prevent injury.

When unfolding this product, please ensure the canopy is fully opened. If you detect any damage to this product, cease usage immediately and seek professional assistance for further assistance.

This product is designed for carrying objects. For personal safety, it is not recommended for adults or children to use it as a ride, as it may not be used to prevent falls, scratches, or other accidents. Not suitable for children to ride.

This is NOT a toy. Avoid Pinch Injury, keep fingers clear of collapsed joints when folding and unfolding the wagon.

Maintenance

1. Clean the fabric, hand wash it with water below 30 and do not bleach.

2. When cleaning the frame, use a soft, dry cloth to wipe it.

3. Regularly inspect your wagon and promptly replace or repair any loose or worn parts, fallen materials, or gaps in seams. Please avoid using sharp objects to clean the wagon to the sun to prevent the vehicle from aging or degrading.

5. In the event of rain or moisture, unfold the wagon to allow any water to drain, and fold it up once it's dry.

Warranty

For a period of one (1) year after date of purchase, the Manufacturer will either repair or replace defective parts or components of this product. This warranty is limited to the original consumer and is valid only when accompanied by the original purchaser's sales receipt showing original date of purchase.

The manufacturer or its authorized dealer can accept or reject warranty claims based on its findings. This warranty applies in normal residential use only and is not intended for commercial use. The Manufacturer can make substitutions as required of materials and components and can disclaim any required of comparable value and utility. This warranty is limited to product repair or replacement (to be determined solely by the manufacturer). Warranty return is limited to only the original consumer.

This limited warranty covers only manufacturing defects and does not cover normal wear and tear, damage due to acts of nature (such as, but not limited to freezing or high winds), abuse or misuse, including chemical damage from sunlight or other chemicals, exposure to extremes of heat or cold, abuse or excessive weight. This warranty is intended to be used in standard installations only. This warranty is void if the product is not used for its intended purpose. The manufacturer disclaims liability for any aspect of installation and any inconvenience caused by a defective part of a component.

These items are not covered by this warranty. These include, but are not limited to the following:

1. Damage caused by abuse, including abuse intended to simulate failure.

2. Damages caused by fire, water, or other installation errors.

3. Any part that only shows normal wear and tear on the surface, including debris, scratches, or material stretching/stitching.

4. Tears, punctures, scratches or any damage caused by improper installation or use.

If you need after-sales service, please provide the original purchase record and a brief description of the problem, please also provide your email address or mobile number

HOW TO USE WAGON

Wheel Installation

1. Rear wheel assembly
2. Front wheel assembly

Remove the wheels and frame from the package. Place the two rear wheels without brakes into the wheel seat on the rear side of the wagon body as indicated. Insert the remaining two front wheels into the wheel seat on the opposite side, as shown

Note: When installing the wheels, ensure you differentiate between the front and rear wheels. Pay close attention to the installation location and orientation to ensure proper assembly. The front wheel is a universal wheel, and the rear wheel is a directional wheel.

Body Unlock

Unlock from both sides, to release the wagon body

Expand the Wagon

After expanding, rotate the slat at the rear of the wagon to the front and fix it.

Table Slats Setting

After expanding, rotate the slat at the rear of the wagon to the front and fix it.

Pull Handle Use

1. Tug: When you need to tow the wagon, unbuckle the straps.
2. Adjustment button: Unlock the handle with one click

Wheel Brake

When you need to stop the wagon, press the "lock" pedal downward.

Wheel Quick Release

Wheel quick release: Press and hold the quick-release button on the wheel base's side to remove the wheel.

Step 1
Install vertical bar&cross bar
Insert and snap
Insert and lock

Step 2
Install the top aluminum pole frame
Insert, twist and lock

Step 3
Laying canopy fabric
Aluminum bar head featuring embedded webbing holes. Pull the webbing with one hand while holding the aluminum pole with the other.
Note: To ensure your safety and enhance your user experience, please utilize stakes for reinforcement in case of changing weather conditions.
Velcro fastens the pole (10 points)

Note:

1. It is not recommended to use this product in bad weather such as strong winds and heavy rains
2. Please do not expose the wagon to open flames, sharp objects, hazardous power sources, or bodies outside, maintaining a safe distance at all times.
3. Please check the weather forecast before using this product. If wind speeds reach level 4 or higher, we recommend securing it with stakes for added stability.
4. When there is severe damage to this product, cease use immediately and contact our customer service team for assistance.
5. This product is intended for operation by adults only. Children and elderly individuals with limited mobility are not permitted to install or use it.
6. We advise against using this product on uneven roads.

正面

背面