



ASSEMBLY INSTRUCTIONS

TV STAND

A TV Stand	B Left Leg	C Right Leg	D Mounting Plate
-------------------	-------------------	--------------------	-------------------------

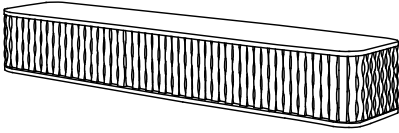


1 pc E Cross Bar	2 pcs F Hex Nut M8	2 pcs G Spring Washer M8 x 13mm	2 pcs H Flat Washer M8 x 18mm
----------------------------	---------------------------------	--	--

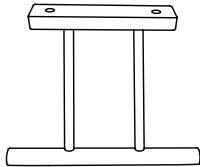

2 pcs I JCBC Bolt M6 x 40mm	4 pcs J Wood Screw M4 x 32mm	14 pcs K Allen Key M4	14 pcs L Wrench 12.8mm
--	---	------------------------------------	-------------------------------------




10 pcs	4 pcs	1 pc	1 pc
--------	-------	------	------

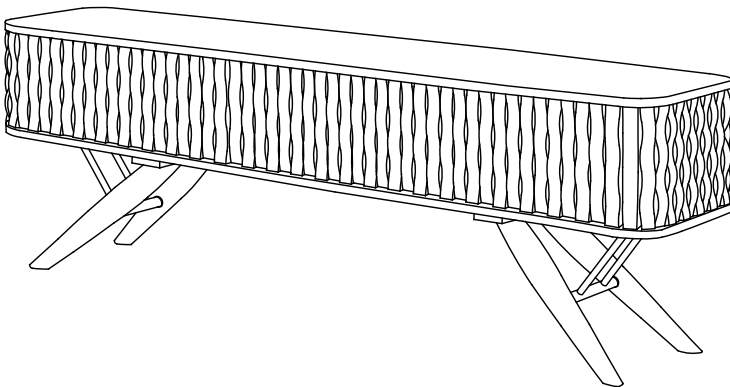

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach the Mounting Plate (D) to the Left & Right Leg (B & C) using Hex Nut (F), Spring Washer (G) and Flat Washer (H) with the Wrench (L).

****Do not fully tighten the bolts until all bolts are attached.**

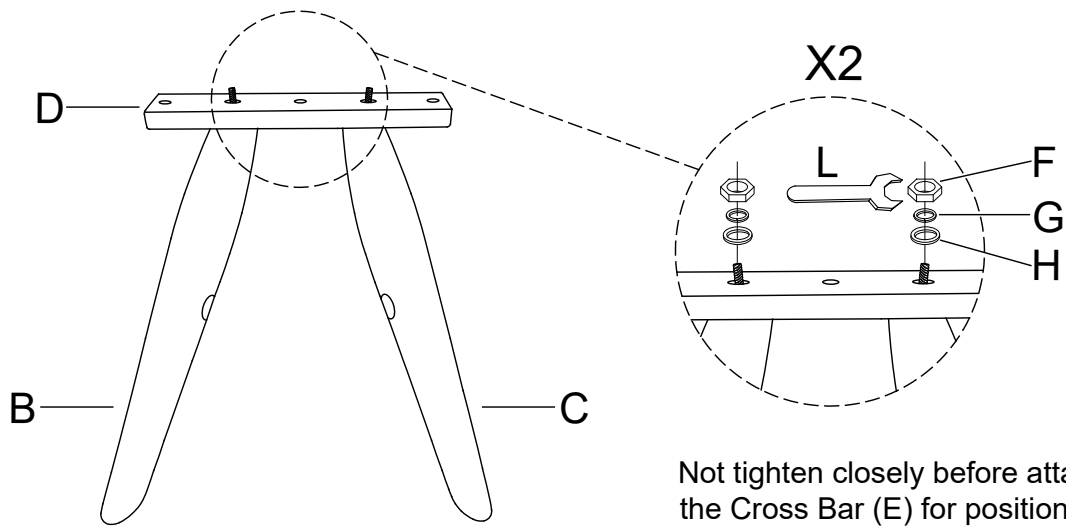

- 2** Attach the Cross Bar (E) between the Left & Right Leg (B & C).

****Fully tighten the bolts in this step.**

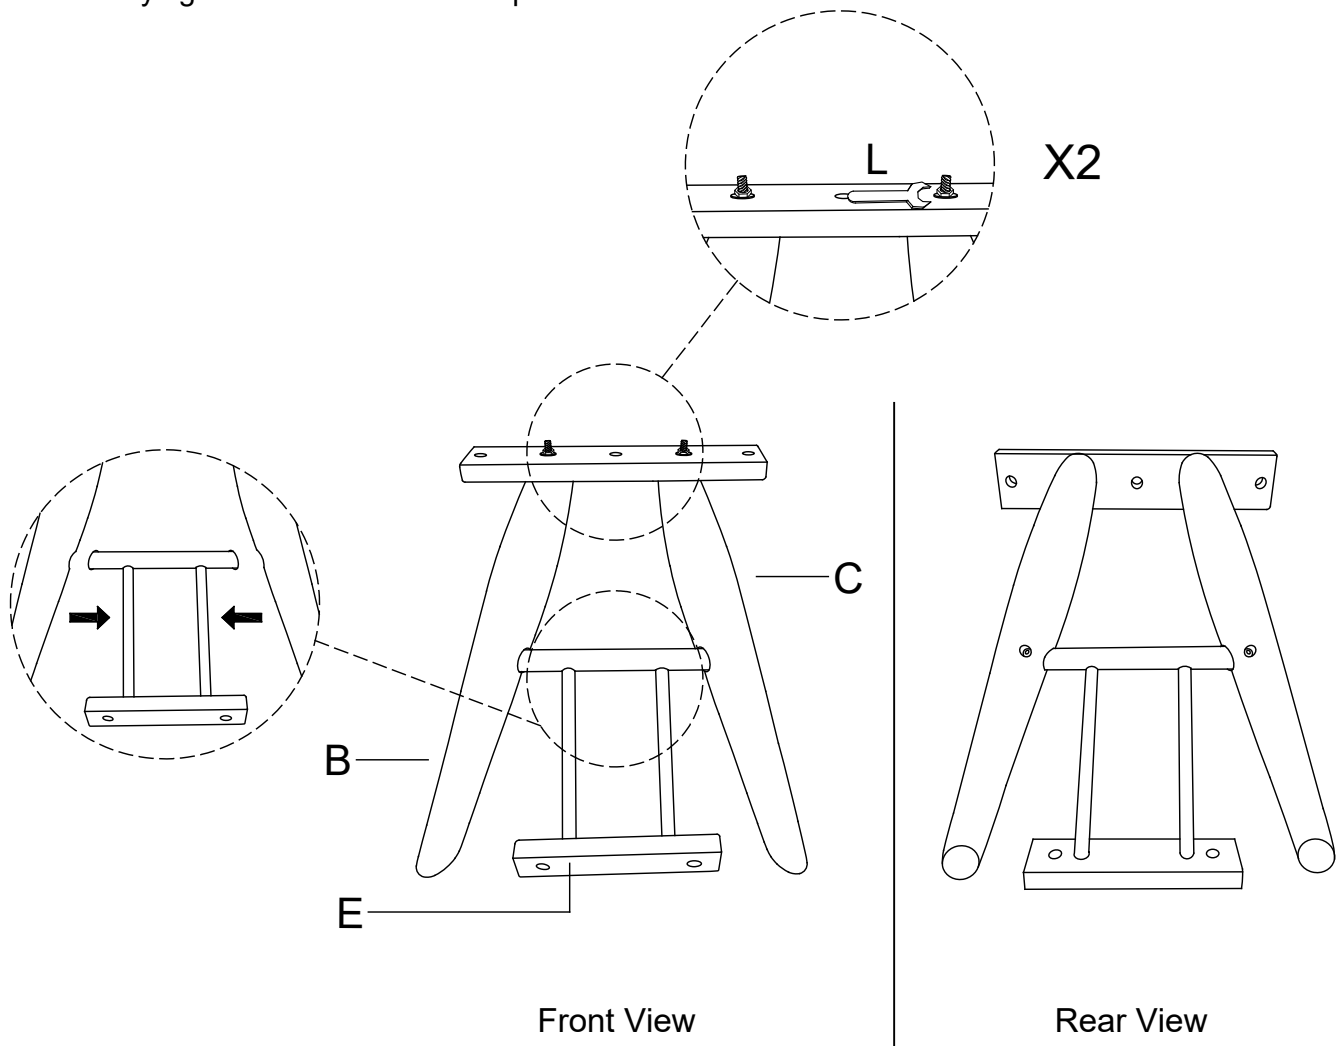


3

Place the TV Stand (A) on a protective surface.

(i) Attach the assembled legs to the TV Stand (A) using JCBC Bolt (I), Spring Washer (G) and Flat Washer (H) with the Allen Key (K).

(ii) Secure the assembled legs using Wood Screw (J) with a screwdriver (not provided).

****Fully tighten the bolts and screws in this step.**

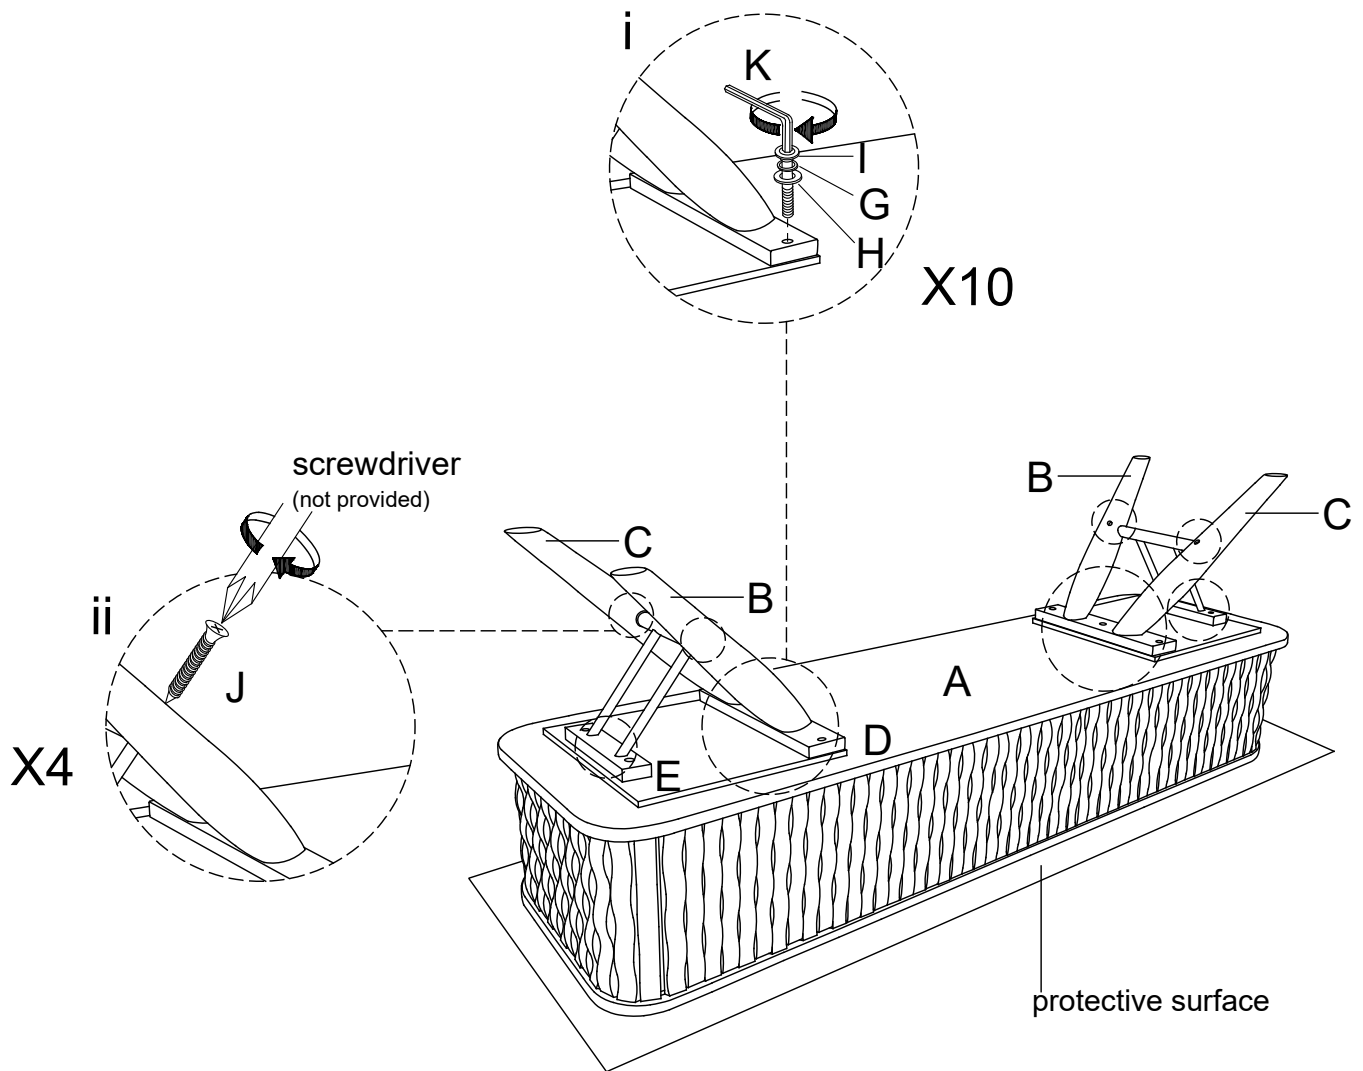

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.