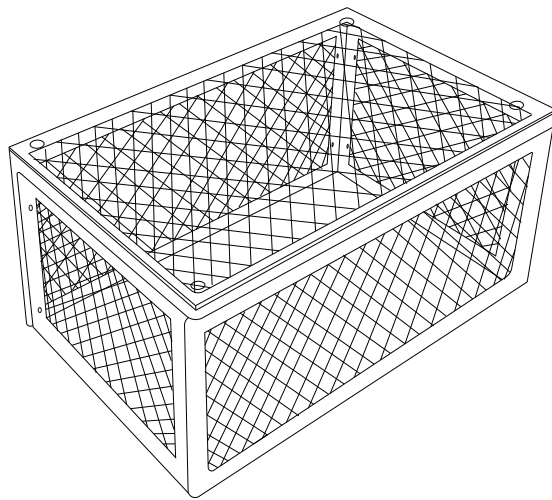


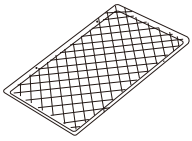
 
 
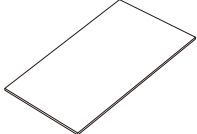
CROSLEY

FURNITURE

 


Outdoor Wicker Coffee Table CO6282



PART LIST

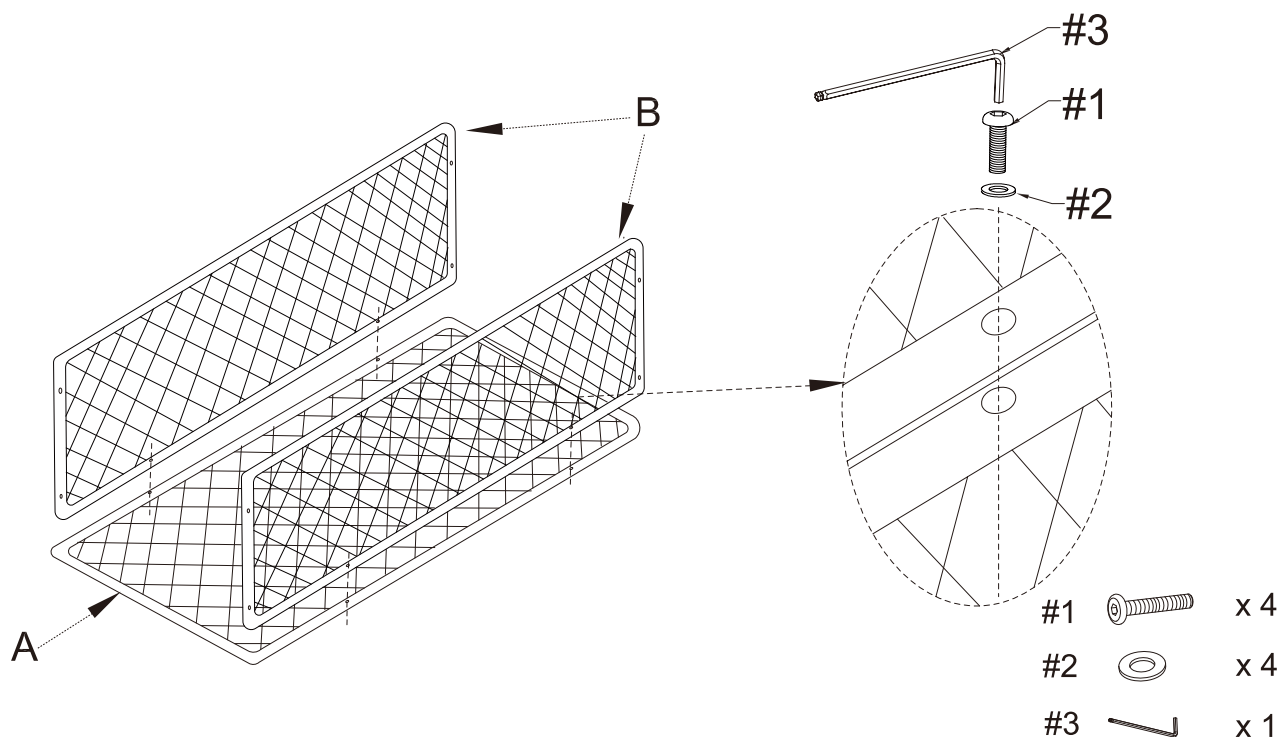
<div data-bbox="92 145 132 185" data-label="Text">A</div> 	<div data-bbox="354 145 394 185" data-label="Text">B</div> 	<div data-bbox="620 145 660 185" data-label="Text">C</div> 	<div data-bbox="887 145 927 185" data-label="Text">D</div> 
<div data-bbox="145 387 292 465" data-label="Text">Top Panel 1 PC</div>	<div data-bbox="411 387 572 465" data-label="Text">Side Panel 2 PCS</div>	<div data-bbox="678 387 833 465" data-label="Text">End Panel 2 PCS</div>	<div data-bbox="943 387 1086 465" data-label="Text">Glass Top 1 PC</div>

HARDWARE LIST

<div data-bbox="92 887 148 936" data-label="Text">#1</div>  <div data-bbox="137 1064 292 1097" data-label="Text">M6*45mm</div>	<div data-bbox="354 887 410 936" data-label="Text">#2</div>  <div data-bbox="429 1064 534 1097" data-label="Text">M6mm</div>	<div data-bbox="620 887 676 936" data-label="Text">#3</div>  <div data-bbox="703 1064 809 1097" data-label="Text">M6mm</div>
<div data-bbox="102 1120 344 1205" data-label="Text">Bolt 12 PCS (Extra 1)</div>	<div data-bbox="373 1120 616 1205" data-label="Text">Flat Washer 12 PCS (Extra 1)</div>	<div data-bbox="660 1120 857 1205" data-label="Text">Allen Wrench 1 PC</div>

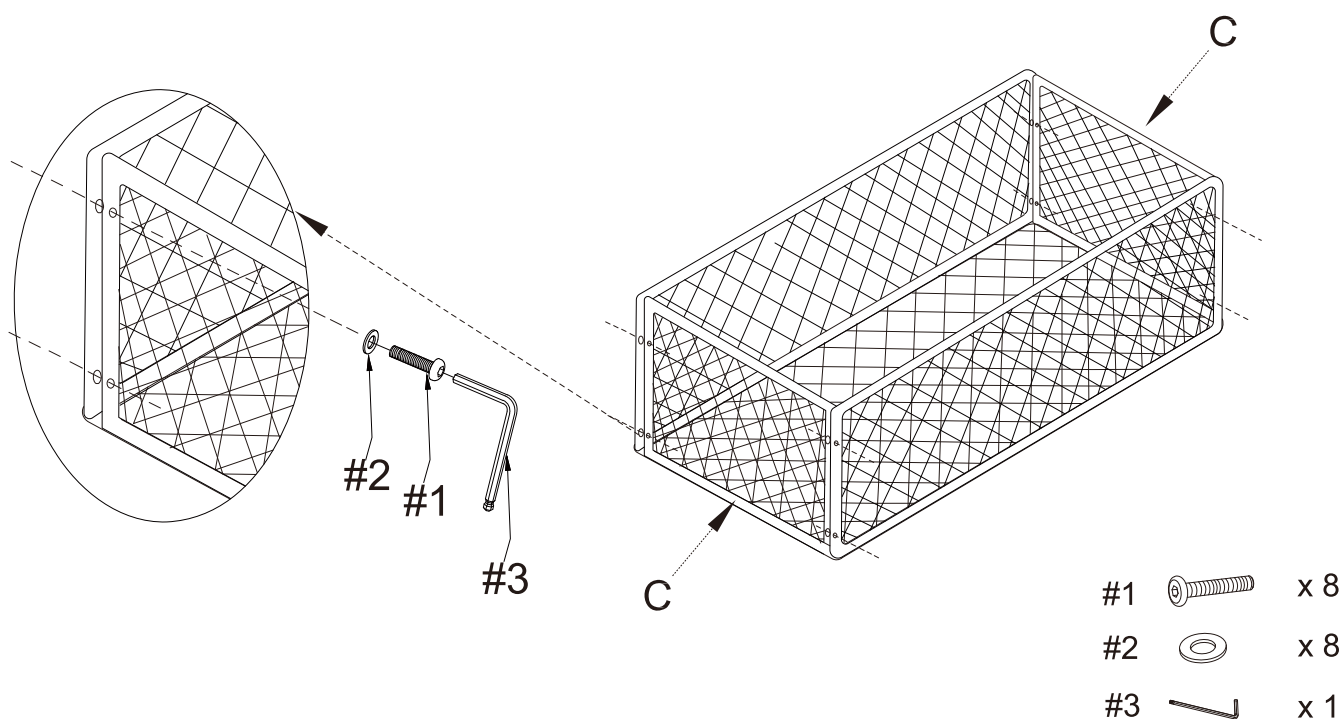
Step 1. Lay top panel (part A) down on a soft flat surface, such as carpet, as shown below. Attach side panels (part B) to top panel (part A) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please do not fully tighten bolts until unit is fully assembled.



Step 2. Attach end panels (part C) to side panels (part B) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

NOTE: Please fully tighten all bolts at this time.



Step 3. Carefully turn unit upright. Gently place glass top (part D) on assembled unit.

