

 

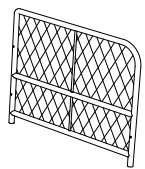


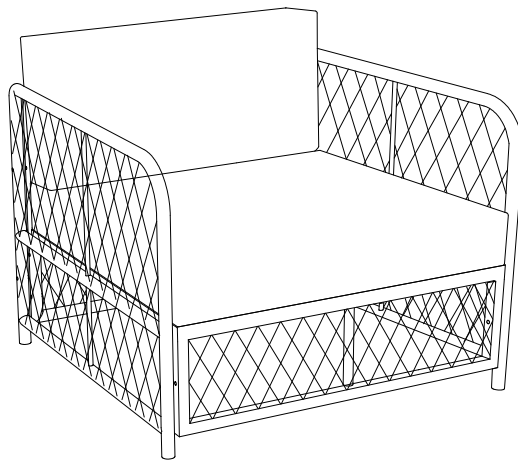

**CROSLEY**  
FURNITURE

 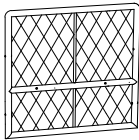


Outdoor Wicker Chair  
CO6281



## PART LIST


<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Back Panel 2 PCS	Seat Panel 2 PCS	Left Arm Panel 2 PCS	Right Arm Panel 2 PCS	Seat Cushion 2 PCS
<b>F</b> 				
Back Cushion 2 PCS				




## HARDWARE LIST

<b>#1</b> 	<b>#2</b> 	<b>#3</b> 
M6*45mm  Bolt 24 PCS (Extra 1)	M6mm  Flat Washer 24 PCS (Extra 1)	M6mm  Allen Wrench 1 PC

Step 1. Lay seat panel (part B) down on a soft flat surface, such as carpet, as shown below. Attach right arm panel (part D) to seat panel (part B) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

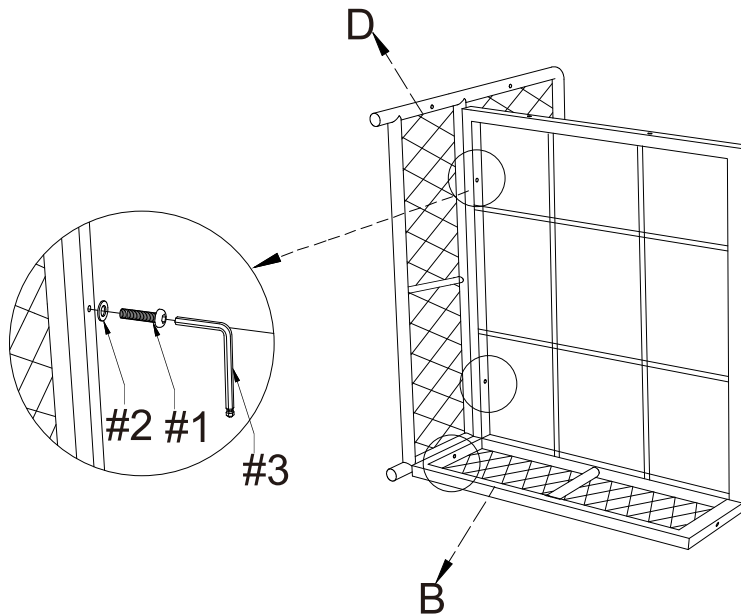
NOTE: Please do not fully tighten bolts until unit is fully assembled.






#1		x 3
#2		x 3
#3		x 1

Step 2. Attach left arm panel (part C) to seat panel (part B) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

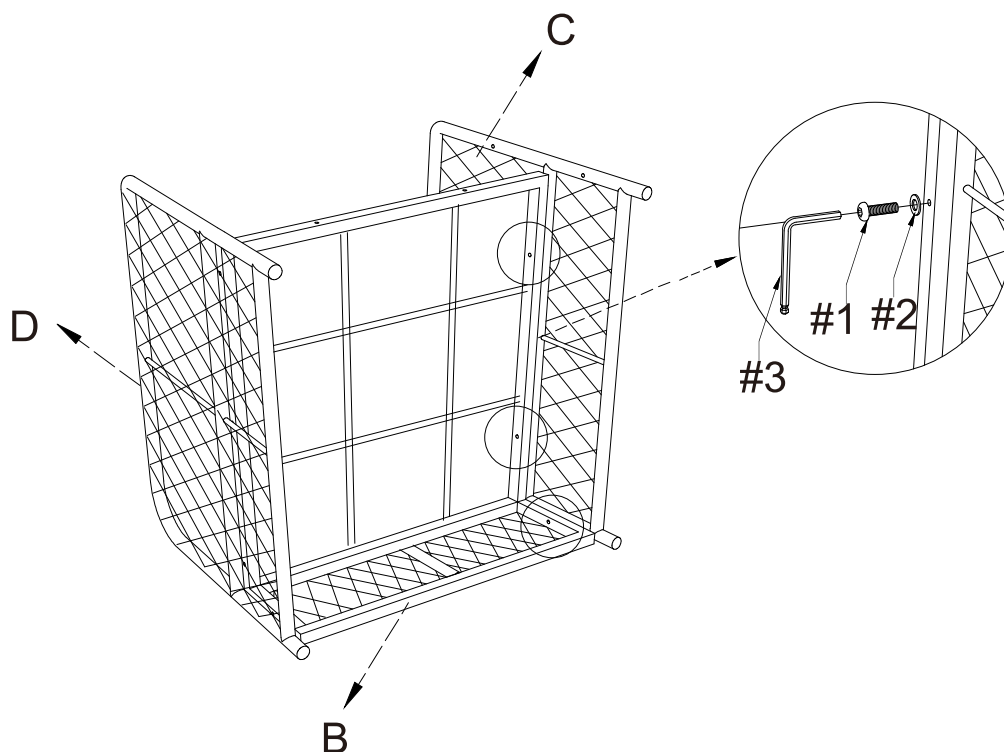
NOTE: Please do not fully tighten bolts until unit is fully assembled.






#1		x 3
#2		x 3
#3		x 1

Step 3. Attach back panel (part A) to assembled unit (parts B, C & D) using bolts (part #1), flat washers (part #2) and allen wrench (part #3).

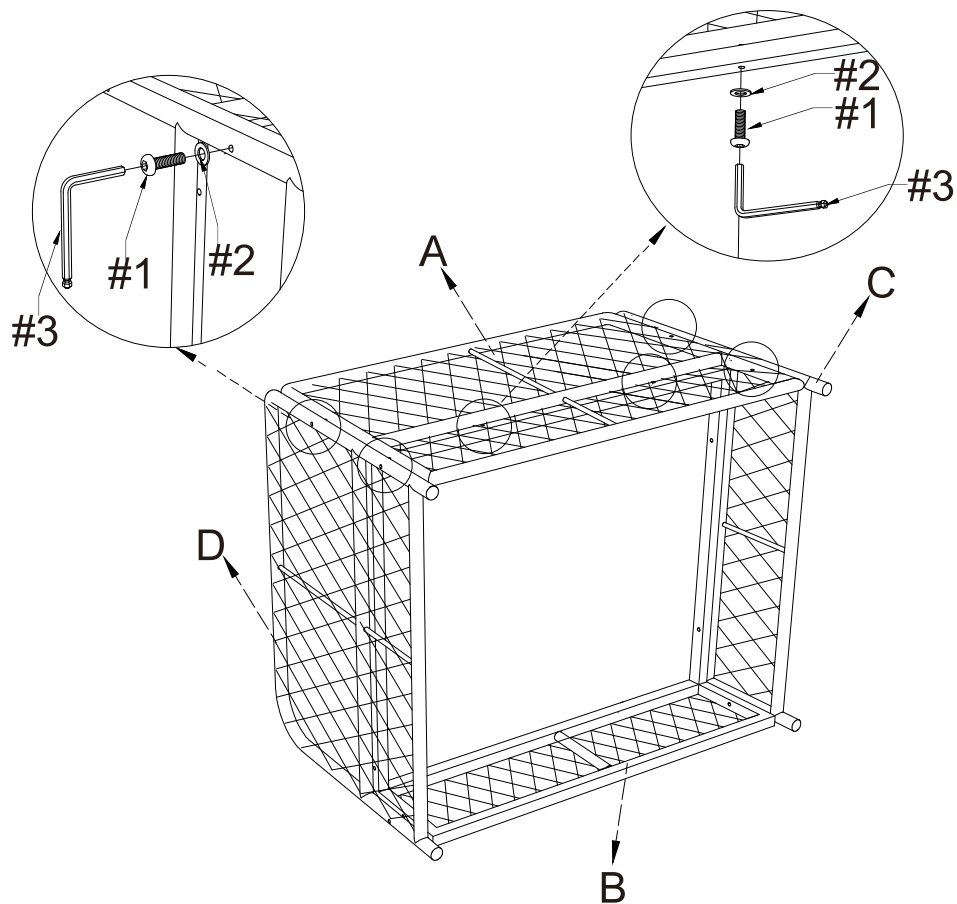NOTE: Please fully tighten all bolts at this time.



#1		x 6
#2		x 6
#3		x 1

Step 4. Carefully turn unit upright. Place seat cushion (part E) and back cushion (part F) as shown below.

Repeat steps 1-4 to assemble remaining chair.

