


2-Door Accent Cabinet

SKU WHIF2344

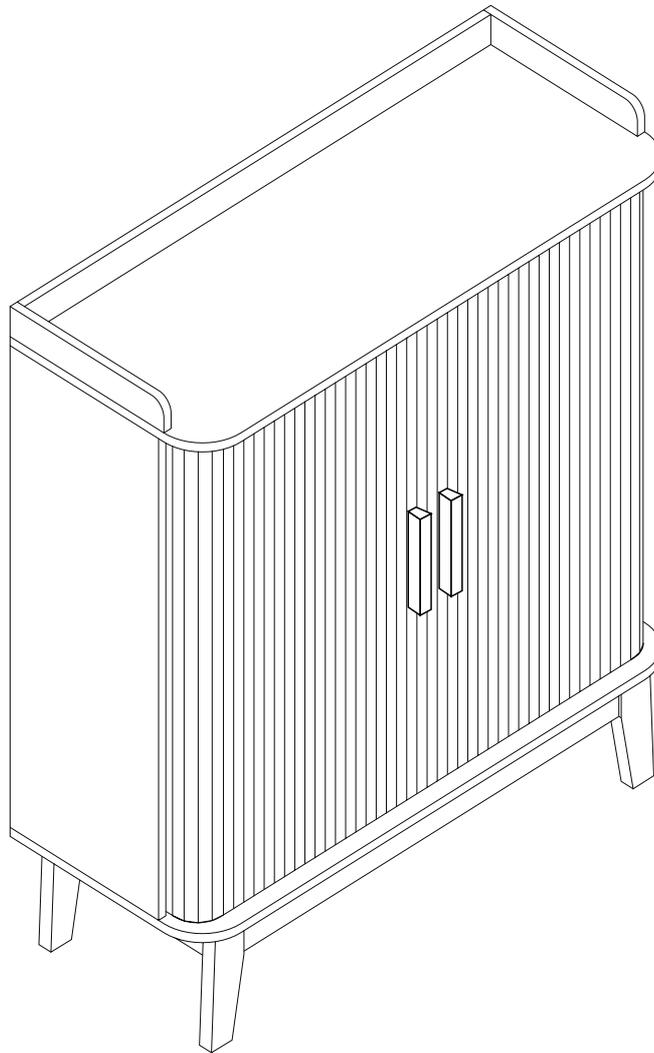

ASSEMBLY INSTRUCTIONS

 **60** min. assembly
2 person

*The estimated assembly time may vary depending on the individual.

Hey, there

Now is assembly time!

Deeeeeeep breathe.... and again....
Tools ready,
Easy peasy!

Estimated



60 min. assembly
2 person

Tools Required

- Allen Wrench (included)
- Phillips screwdriver (not included)
- Power Drill (not included)
- Hammer (not included)

***important:** Cautious when you use power tools*

Need Help?

Call us at +1 909 548 6688
Email customerservice@luxenhome.com
Submit a ticket on www.luxenhome.com/help

Thank you for purchasing this LuxenHome product. This product has been manufactured with the highest standards of safety and quality.

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY.

Un pack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. Lay out all the parts on a clean, flat, and soft surface to prevent scratches. Refer to the steps provided as assembling guide.

Do not attempt to assemble or use the product if any parts are missing or damaged.

REMINDERS

SAFE USAGE IS KEY

Your well-being is our top priority when you use our product. Please prioritize your safety by diligently following the assembly guidelines and inspecting the product carefully both when it arrives and before each use.

Please be aware that LuxenHome and Winsome House, Inc. cannot be held liable for any injuries or fatalities that occur due to not adhering to the provided instructions or misuse of the product.

DO NOT MODIFY

Our products undergo rigorous testing to ensure they meet established safety standards before being released for sale. Altering the product in any way can lead to serious safety concerns, for which LuxenHome cannot assume responsibility.


What's in the box

Parts



1 X 1

 Table top
middle bar



2 X 1

Table top
left bar



3 X 1

Table top



4 X 2

Outer side
panel



 
5 X 1

Left inner
side panel




6 X 1

Right inner
side panel



7 X 1

Table top
right bar

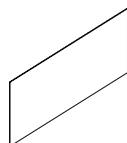


8 X 2

Back panel




9 X 1

Back support
bar

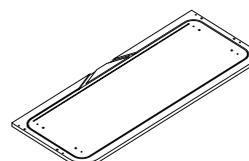


10 X 1

Bottom panel

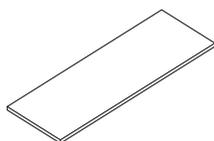


11 X 1

Shelf panel

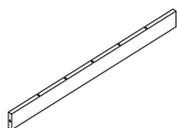

12 X 2

 Bottom support
bar



13 X 2

Bottom support
bar



 
14 X 2

Foot



15 X 2

Foot



16 X 2

Door panel

What's in the box

Hardware & Accessory



A X 22+3
M6 x 36mm



B X 22+3
M15 x 9mm



 
C X 32+3
M5.8 x 30mm



D X 17+2
M4 x 35mm



E X 4
M7 x 50mm




F X 1



G X 8



 H X 8
M3 x 16mm



I X 2



J X 4
M4 x 18mm



K X 2



 
L X 2



M X 2
M4 x 12mm



N X 4
φ12mm



O X 4




P X 10+2
M4 x 50mm





Q X 4
25 x 20mm

Assembly

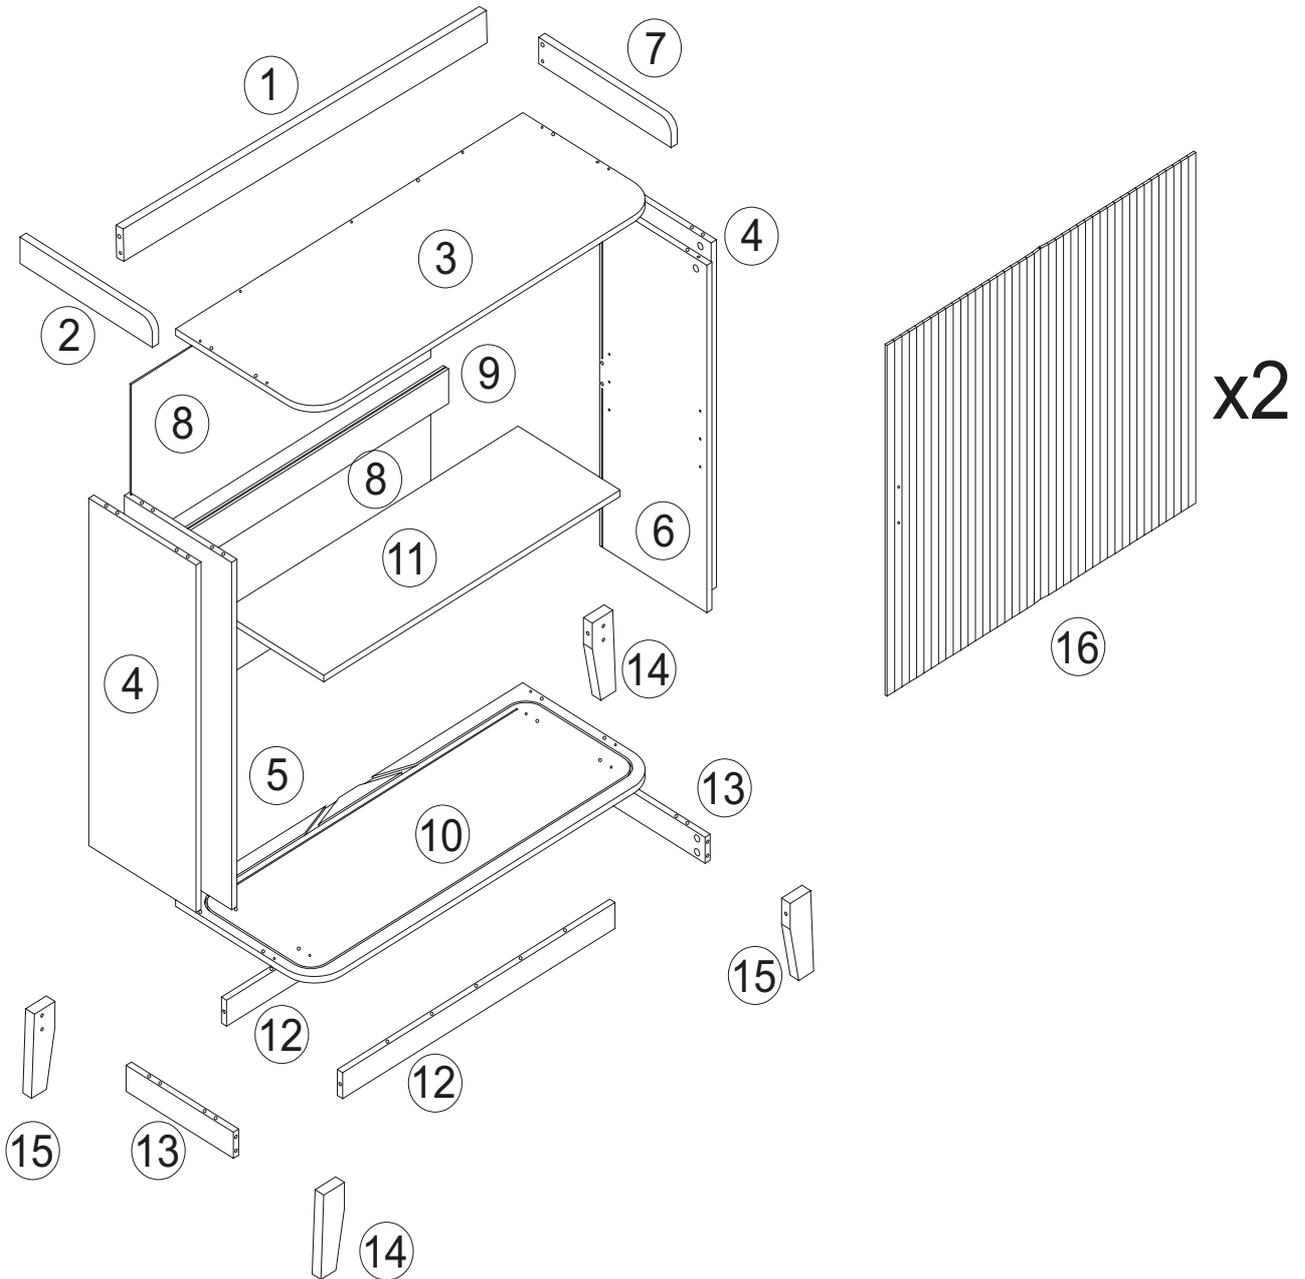

Step 1

Insert quickfit screws (A) into parts 5 and 6, as shown.

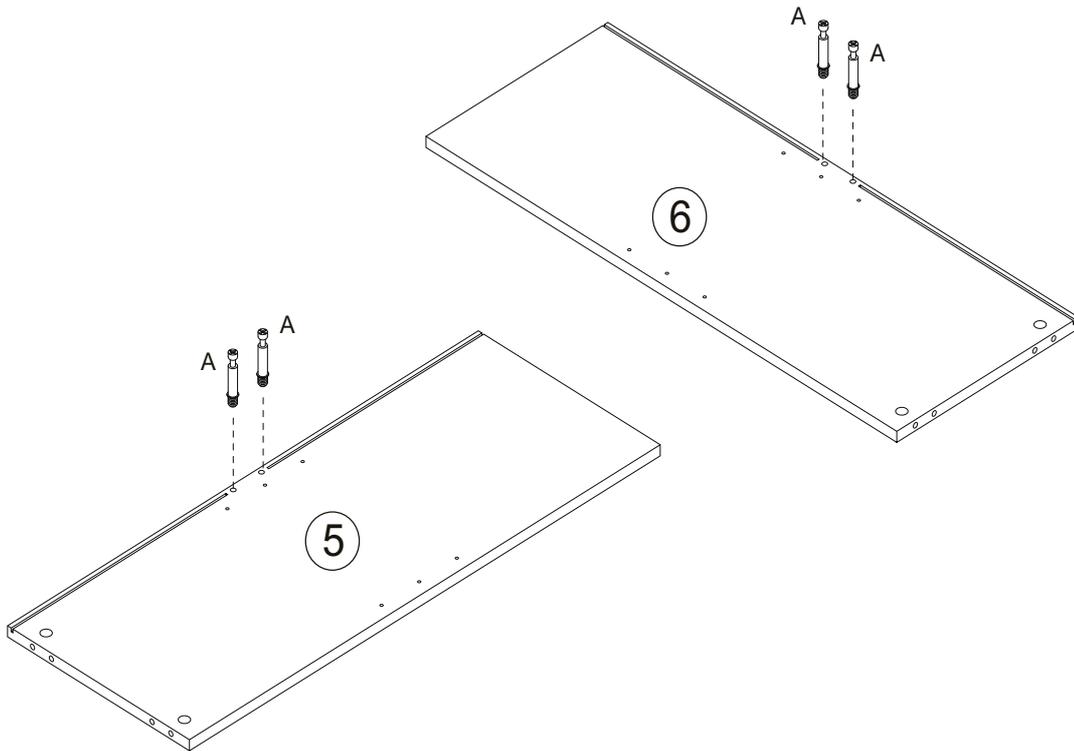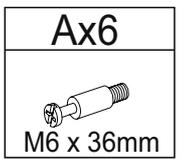



Step 2

Insert quickfit screws (A) into parts 2 and 7, as shown.

Insert cam locks (B) and wooden dowels (C) into part 1, as shown.



Fit parts 2 and 7 to part 1.

Turn cam locks clockwise to tighten.

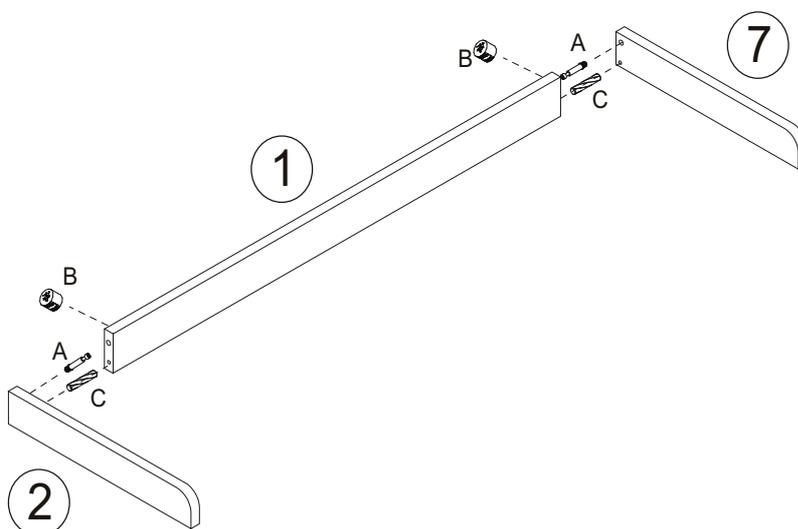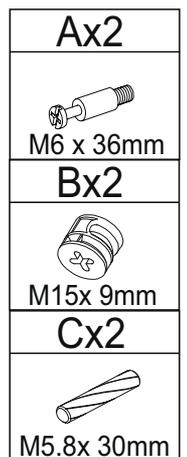



Step 3

Insert cam locks (B) into part 9, as shown.
Fit part 9 to part 5.
Turn cam locks clockwise to tighten.

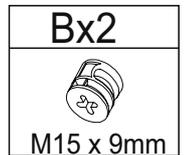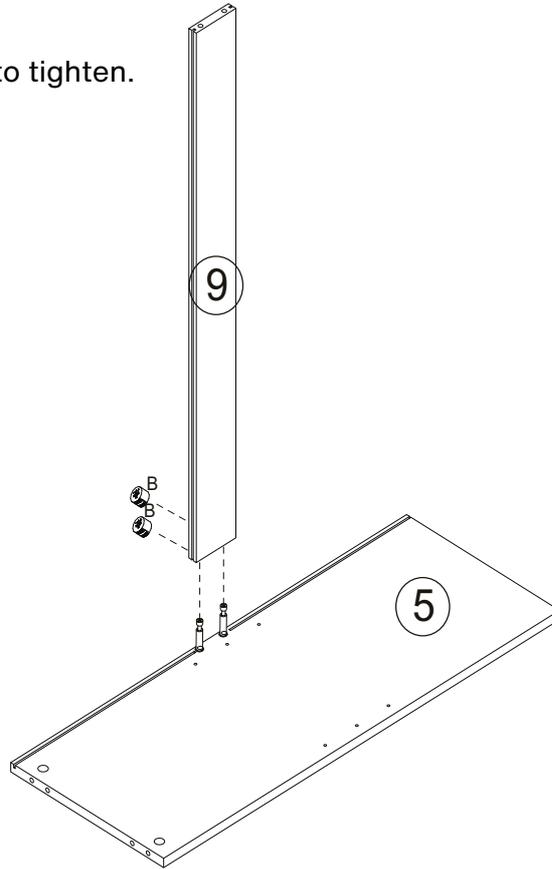



Step 4

Insert cam locks (B) into part 9, as shown.
Fit part 6 to part 9.
Turn cam locks clockwise to tighten.

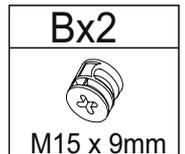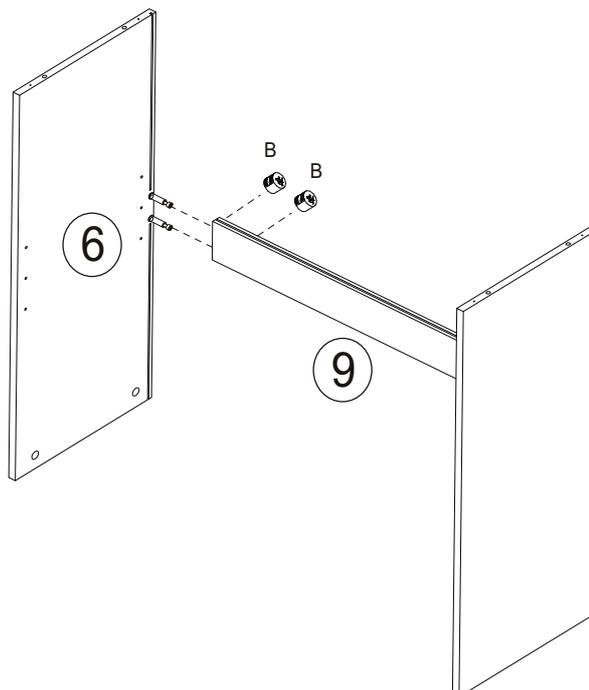

Step 7

Insert quickfit screws (A) to part 3, as shown.

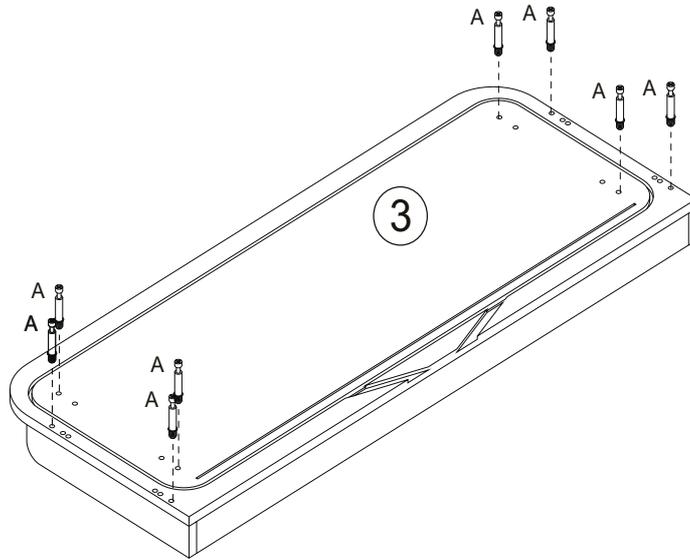
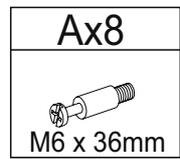


Step 8

Insert cam locks (B) and wooden dowels (C) to parts 4, as shown.


Fit parts 4 to part 3.

Turn cam locks clockwise to tighten.

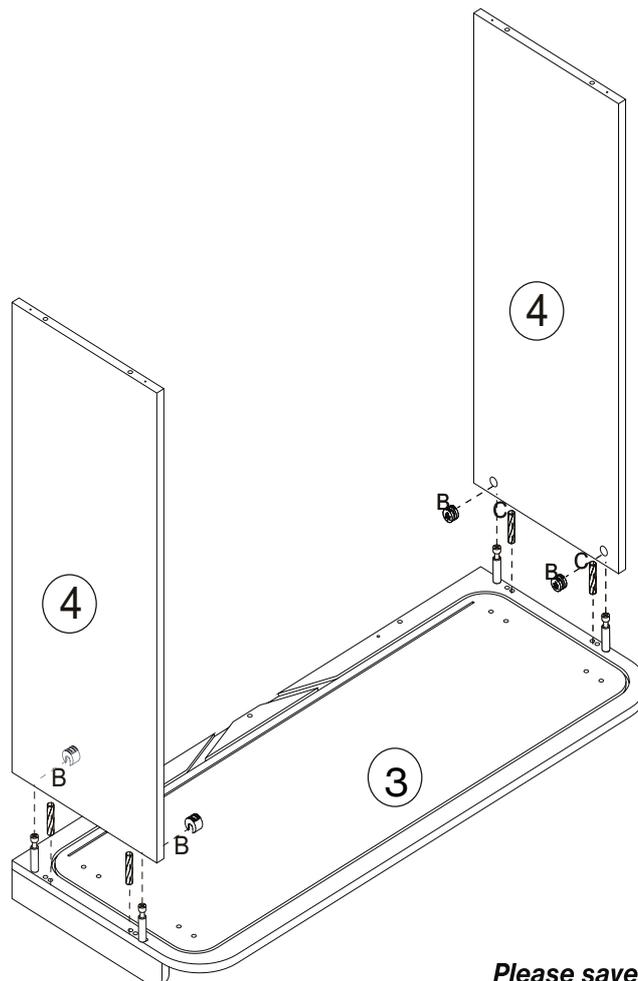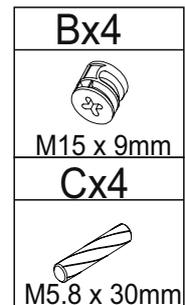


Step 5

Insert part 8 into grooves between parts 5, 6 and 9, as shown.

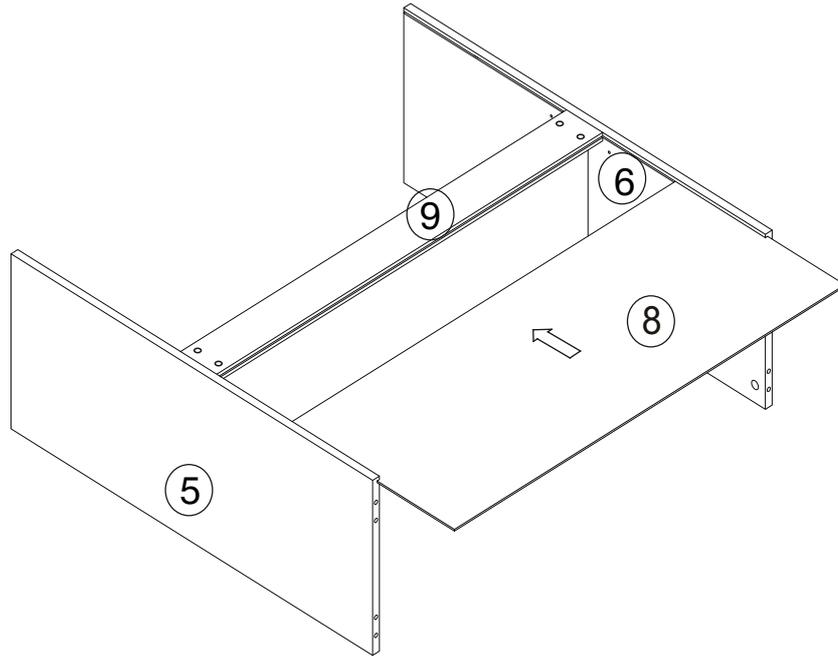

Step 6

Fix parts 1, 2 and 7 to part 3 using wooden dowels (C) and screws (D), as shown.

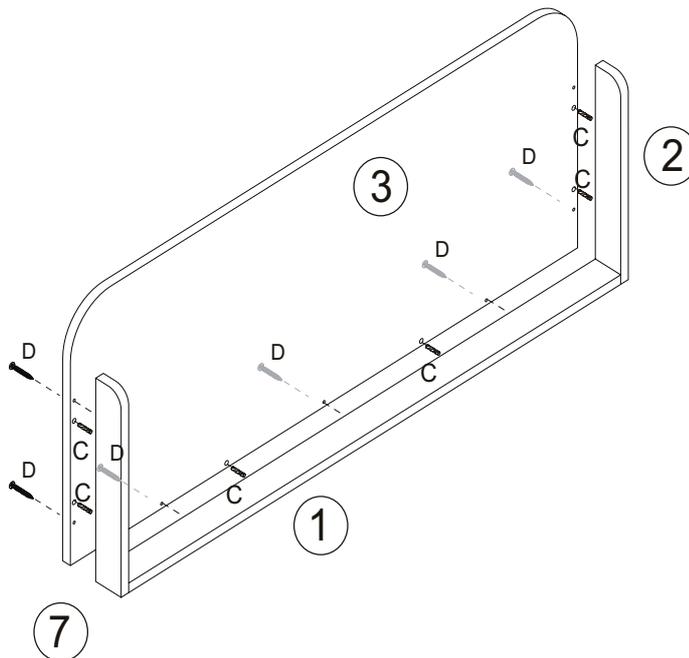

Cx6
 M5.8 x 30mm
Dx7
 M4 x 35mm


Step 9

Insert cam locks (B) and wooden dowels (C) into parts 5 and 6, as shown.

Fit parts 5 and 6 to part 3.

Turn cam locks clockwise to tighten.

Slide part 8 into grooves between parts 5, 6 and 9, as shown.

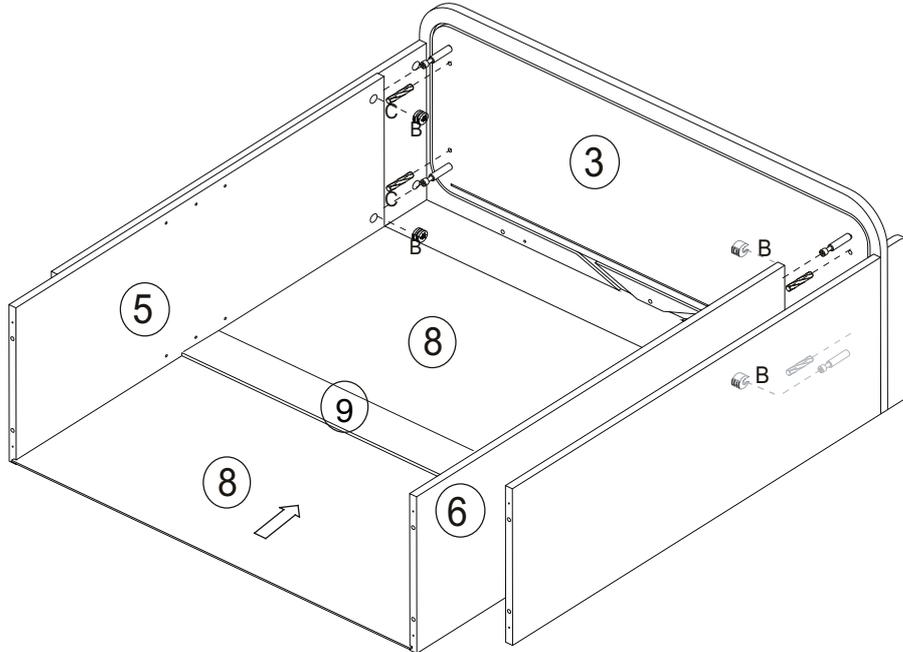


Bx4
 M15 x 9mm
Cx4
 M5.8 x 30mm

Step 10

Insert wooden dowels (C) into parts 4, 5 and 6, as shown.

Fix part 10 to parts 4, 5 and 6 using screws (D) and wooden dowels, as shown.

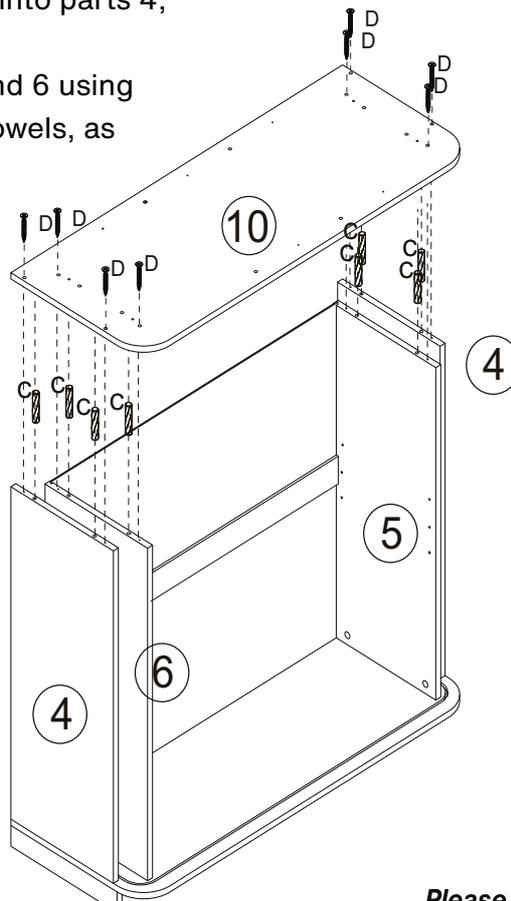

Cx8
 M5.8 x 30mm
Dx8
 M4 x 35mm

Please save this manual for future reference.

Step 11


Insert quickfit screws (A) into parts 14 and 15, as shown.

Insert cam locks (B) to parts 13.

Fit parts 14 and 15 to parts 13, and turn cam locks clockwise to tighten.

Fix parts 14 and 15 to parts 12 using screws (E) and allen key (F), as shown.

Ax8
 M6 x 36mm
Bx8
 M15 x 9mm
Ex4
 M7 x 50mm
Fx1

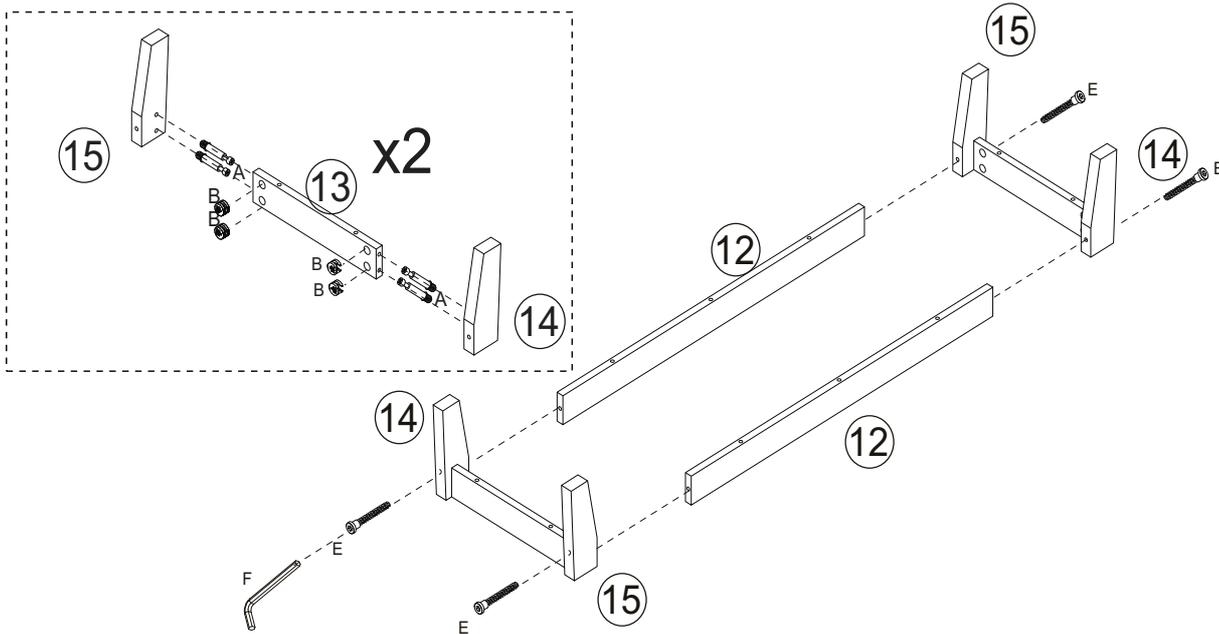



Step 12

Attach assembled foots to part 10, fix parts 12 and 13 to part 6 using screws (P) and wooden dowels (C), as shown.

Attach foot pads (Q) to parts 14 and 15, as shown.

Cx8
 M5.8 x 30mm
Px10
 M4 x 50mm
Qx4
 25 x 20mm

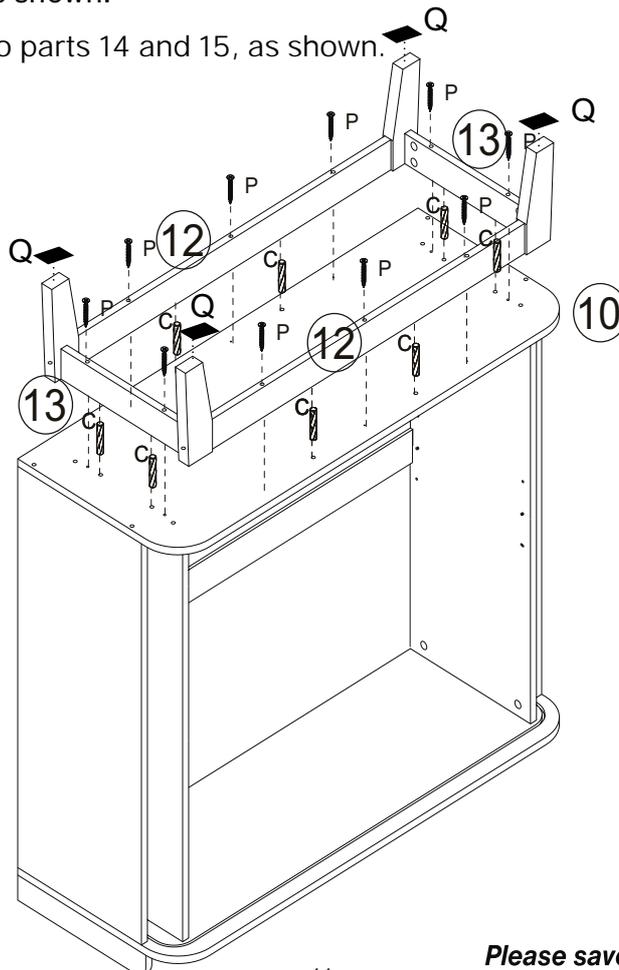

Please save this manual for future reference.


Step 13

Fix wall straps (K-1) to part 3 using washers (K-2) and screws (M), as shown. Secure backing panels 8 by fixing wedges (G) using screws (H), as shown.

ATTENTION PLEASE

Please ensure the structure is straight and level and all panels are at right angles before installing hardware (G).

MUST install hardware (G) to strengthen product stability.

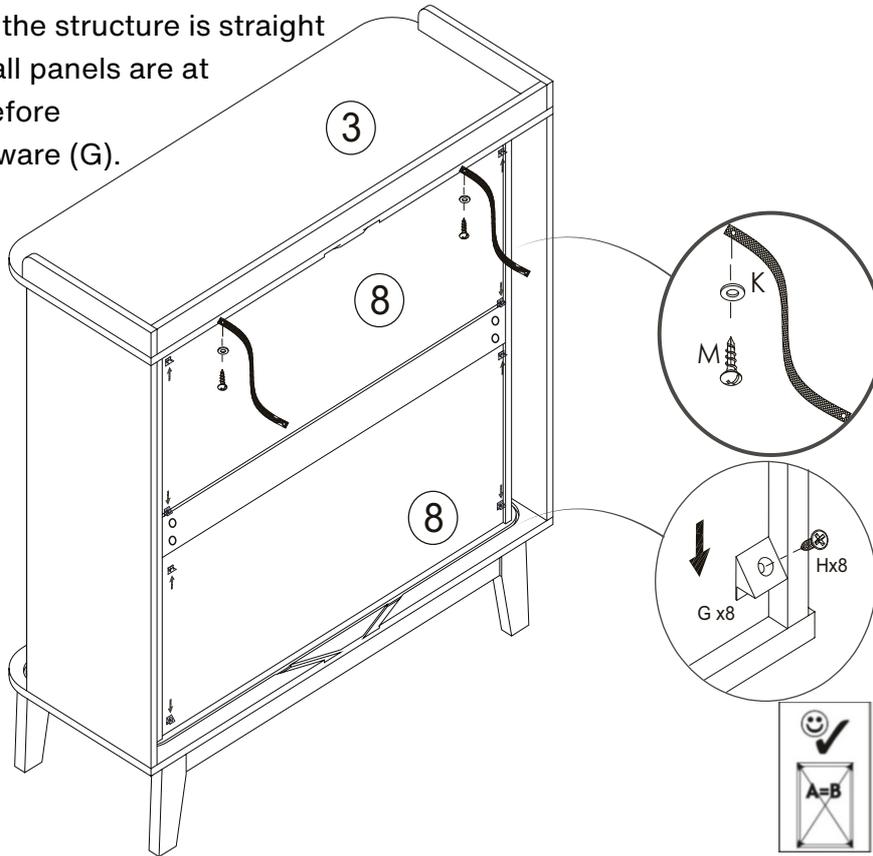


Hx8

M3 x 16mm
Gx8

Kx2


Mx2

M4 x 12mm

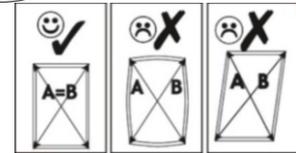

Step 14


Fit shelf supports (O) into desired position in the assembled unit.

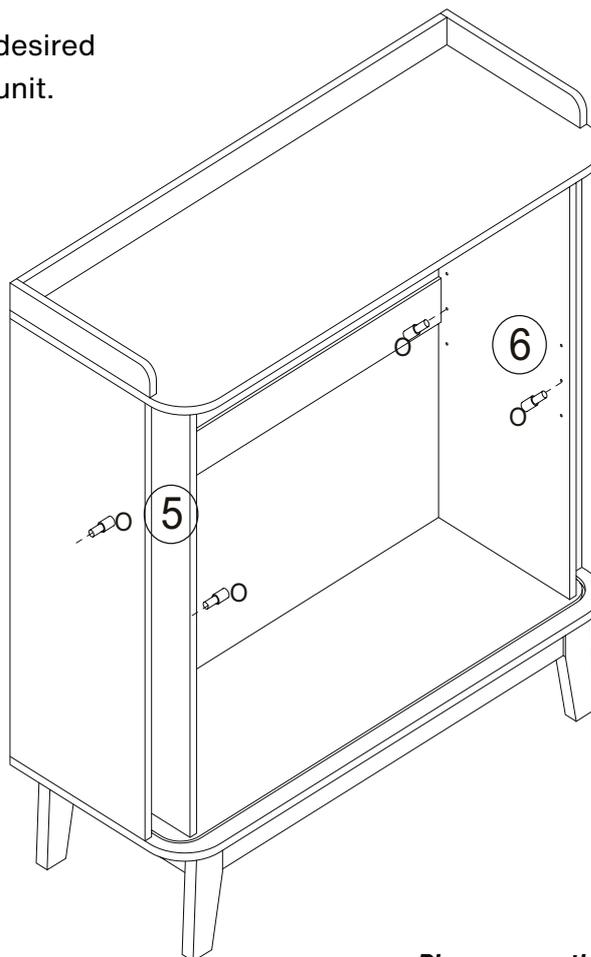

Ox4



Step 15

Place shelf 11 on top of shelf supports, as shown.

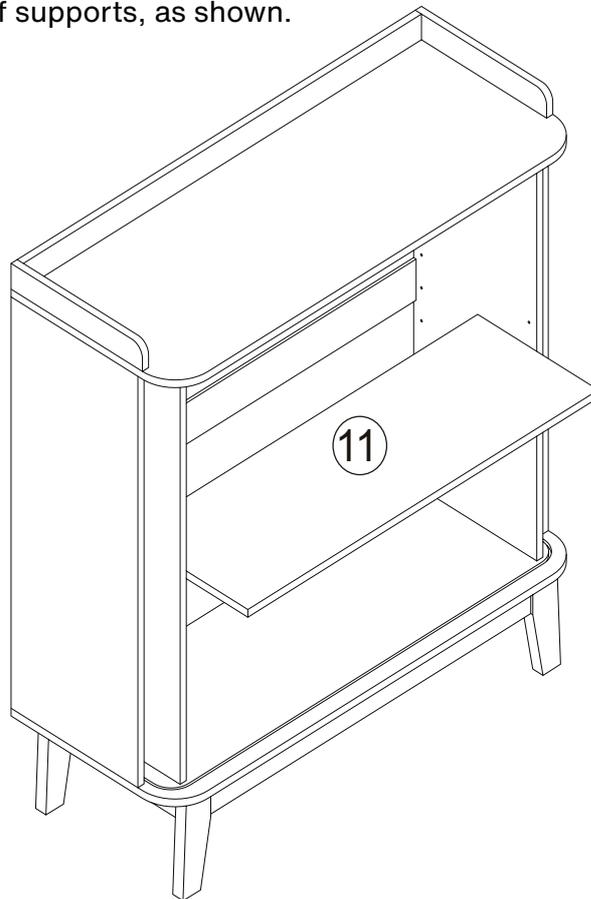


Step 16

Insert door 16 into grooves between top and bottom from back right side, as shown.

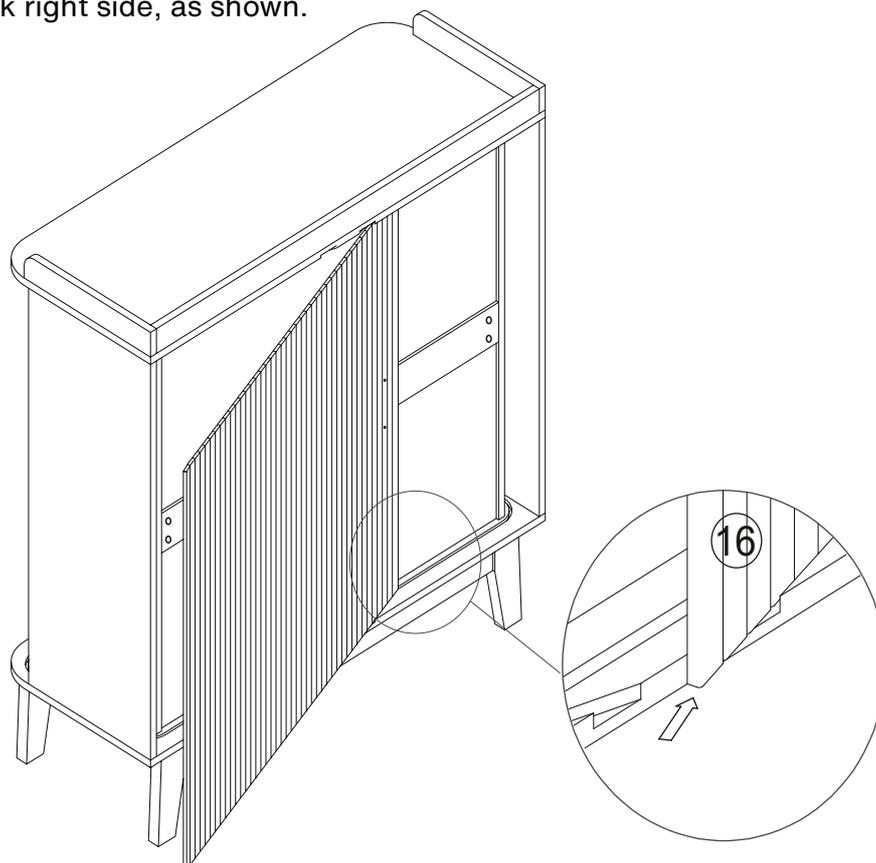


Step 17

Insert door 16 into grooves between top and bottom from back left side, as shown.

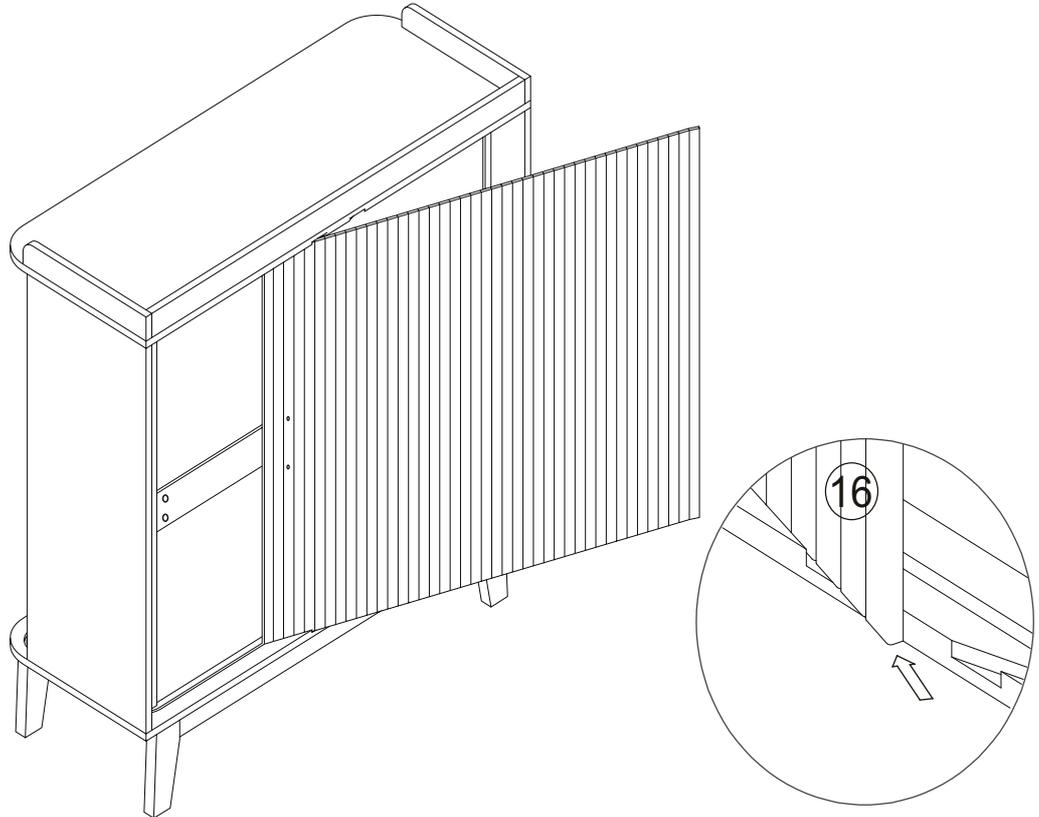

Step 18

Fix handles (I) to doors 16 using washers (N) and screws (J), as shown.

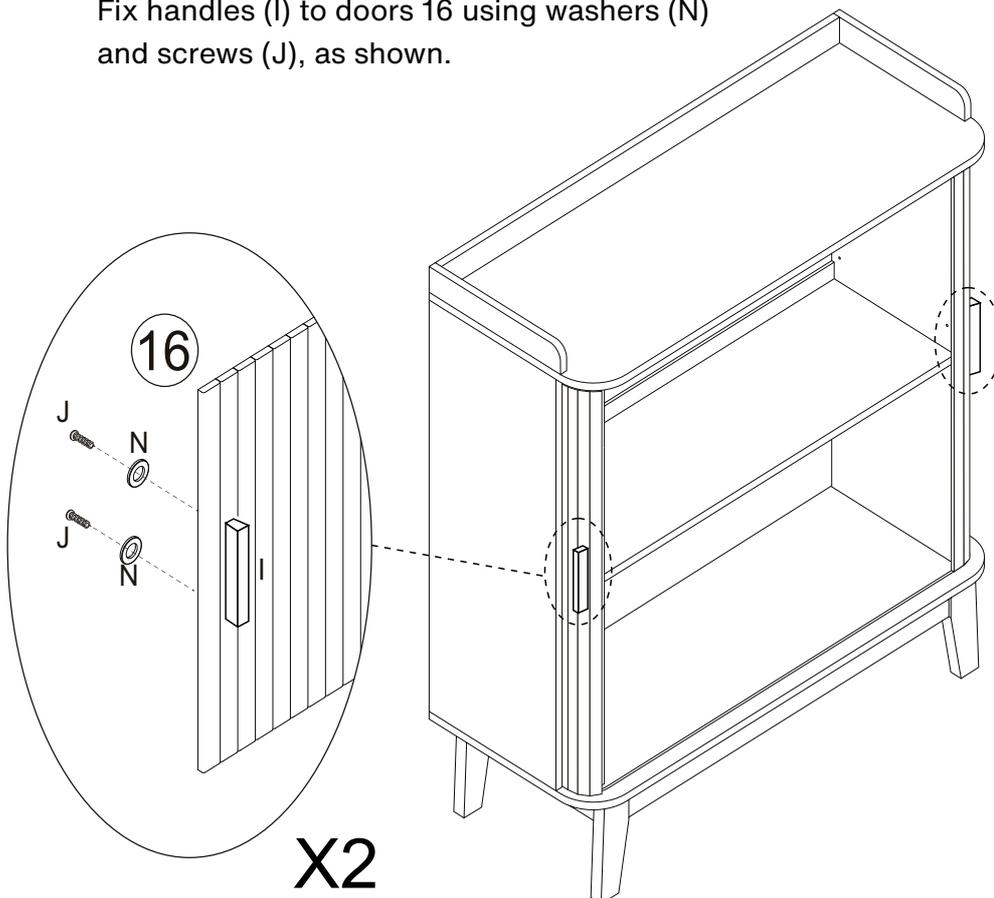

Ix2
Jx4
 M4 x 18mm
Nx4
 φ12mm

Please save this manual for future reference.

Step 19


For extra stability, it is recommended that fix your cabinet to the wall using hardwares (D, K and M), as shown.


Screws (D) are fixed through washers (K) and wall straps and into the wall plugs (M).

Should you choose not to ax the product to the wall, serious injury may be caused if the product tips over.


Dx2

 M4 x 35mm
Kx2

Mx2

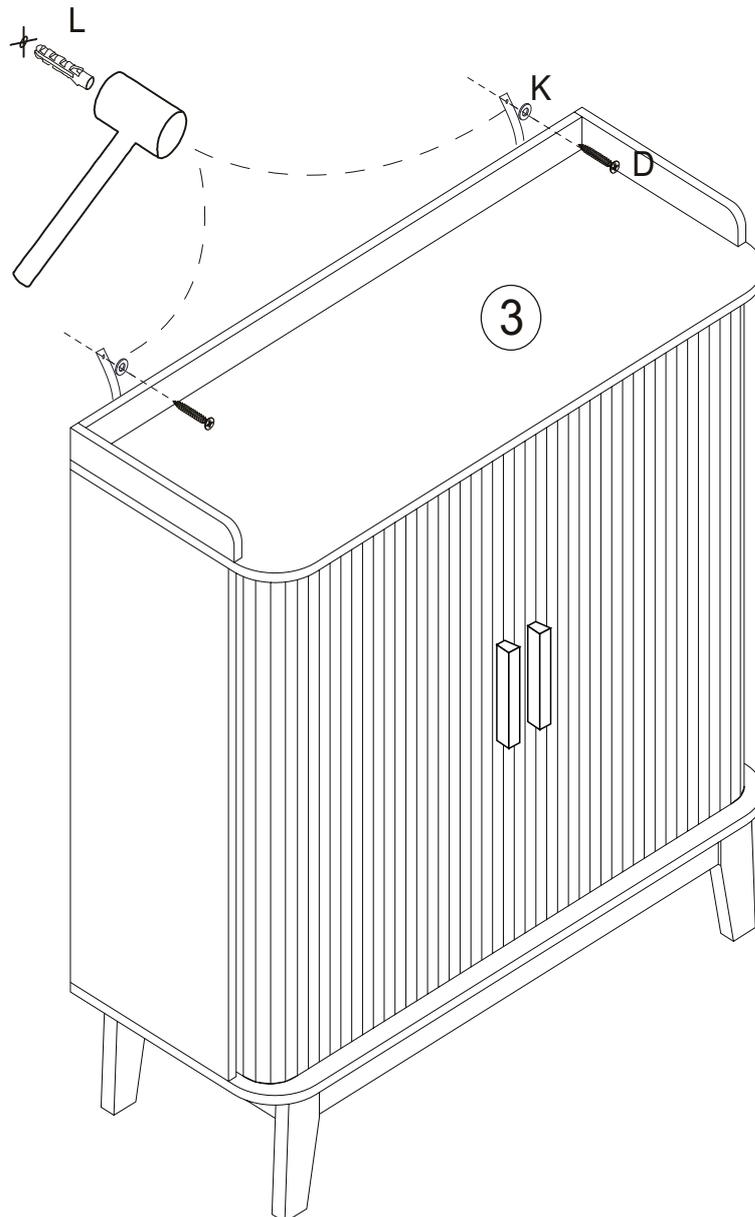


VOILA!
Now enjoy.

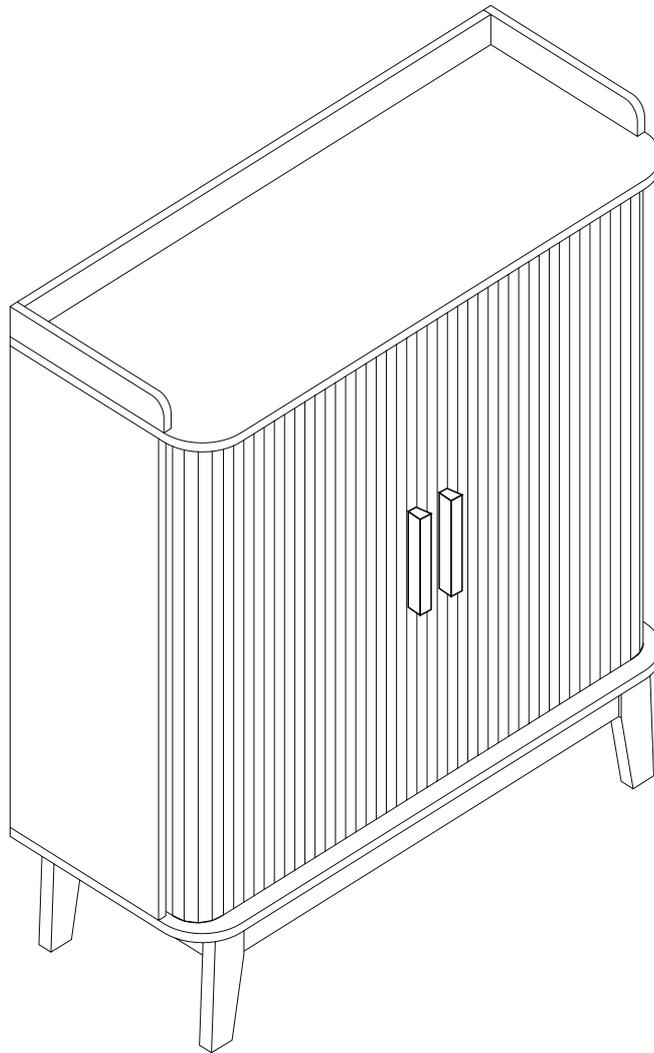

Warning

DO NOT sit or stand on the Cabinet as this may damage the product and cause serious bodily injury.

Something not right?

We are always here to help.

We make mistakes like every human does.

Though we always strive to provide the best possible products at competitive prices and the best service in the industry, it's not possible to completely eliminate mistakes. If you experience any dissatisfaction, feel free to contact us immediately. Our in-house customer care team will respond ASAP.



customerservice@luxenhome.com
Get response within 24 hrs



909.548.6688
Mon-Fri 9am-5pm PST/PDT



www.luxenhome.com/help
Submit a ticket on our website

Things to do to expedite the process

- Have your order# ready
- Take photos/videos to help us better identify the issues
- DO NOT throw away the packaging

Happy with our product?

Leave us a review

It really help us as a small business

- Find the product you purchased on our website (tip: search by SKU) and leave us a review.
- Alternatively, you can always return to the marketplace where you purchased it and leave a review there.

Share with others

Our customers look for REAL stuff



- Follow us on IG @luxen.home
- Share your #liveluxen moments



**Please save this manual
for future reference.**