











Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance


- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.






- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in chair seat for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.



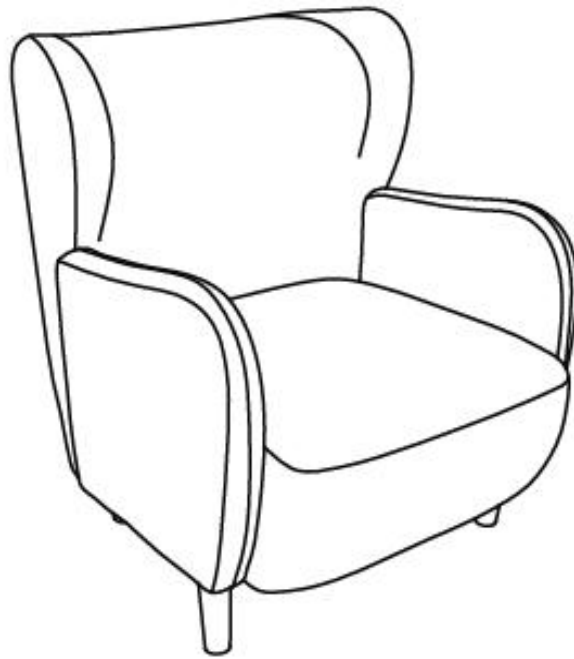


Club Chair

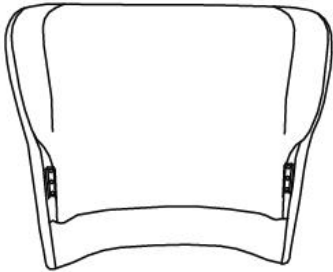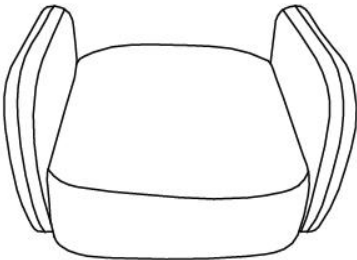

Parts List


Label	Picture	Description	QTY
A		Backrest	1
B		Seat	1
C		Leg	4

Hardwares

Label	Picture	Description	QTY
①		Bolt (M8*70MM)	1
②		Washer(M8*22MM)	1
③		Spring Washer(M8)	1
④		Allen Wrench	1
⑤		Gasket	7

Assembly Preparation

Before
Beginning
Assembly:

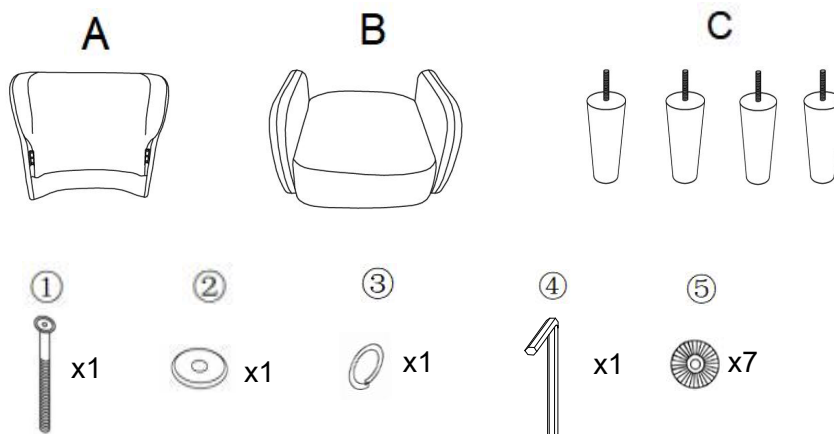

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-

Assembly Steps

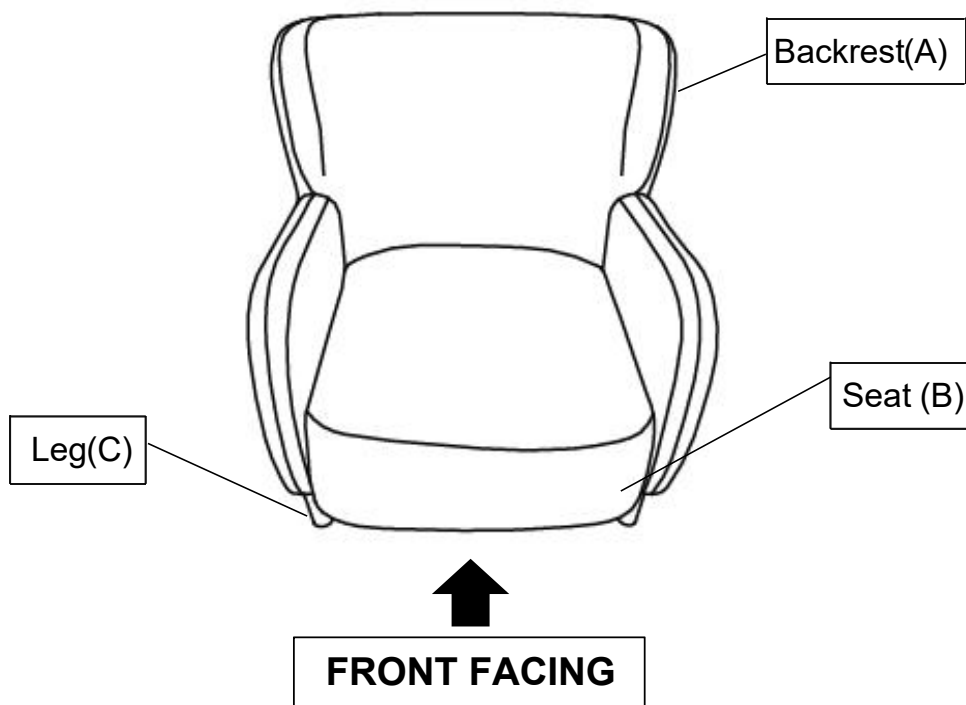


This Chair has multiple parts and may require up to 30 minutes to assemble.

To give you an overview of the Chair, the above picture is to help you put the various parts into perspective.

Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1

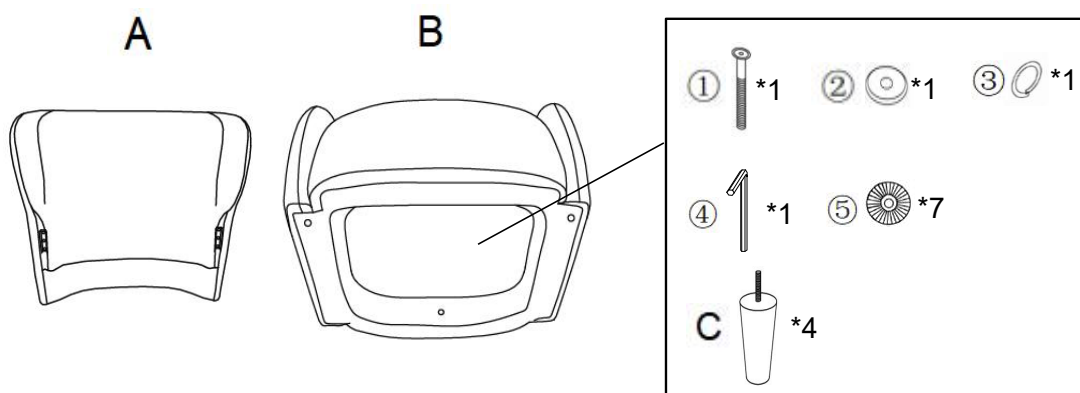

Position the Backrest(A) and Seat(B) on a clean, non-marring surface, as shown.
Do not place on surface that can scratch or damage the upholstery.
Take out the 4 legs and Hardwares from the bottom of Seat(B).

Step 2

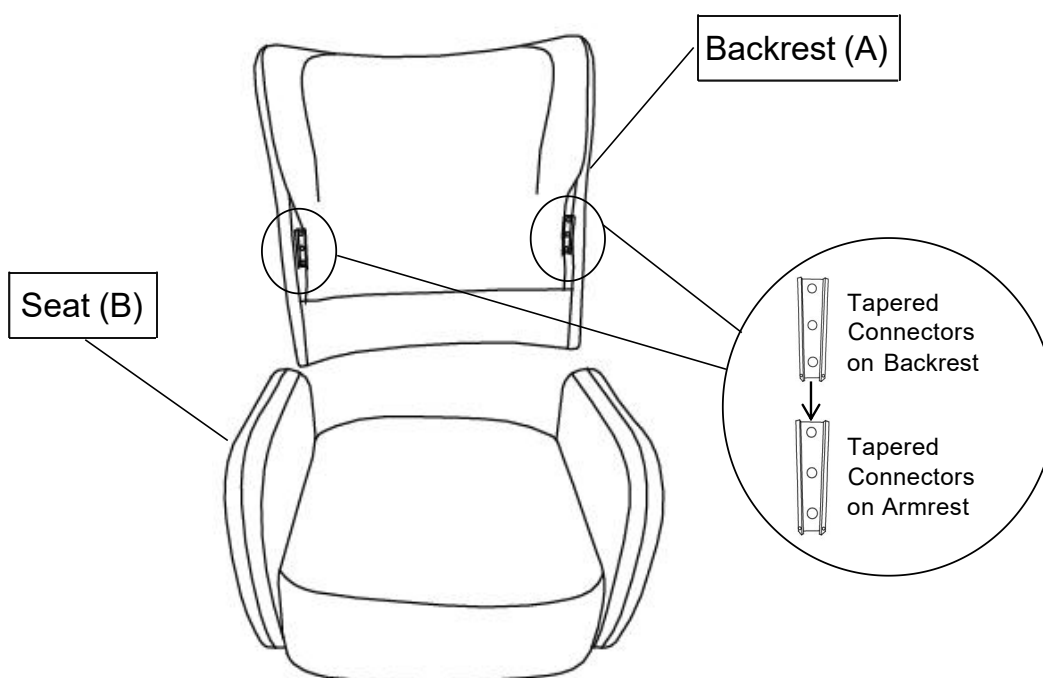


With assistance from an adult partner, lift the Backrest(A) up. Align the Tapered Connectors on the Backrest(A) and the Seat(B).
Push down on the Backrest (A) until it is fully locked into the Tapered Connectors.
Put the Club Chair facedown as pictured above.

Note: Make sure the Tapered Connectors on the Backrest(A) fully lock into the Tapered Connectors on the Seat(B).

Note: If the bottom of the Backrest (A) completely touches the Seat (B) edge, and it feels secure, not loose, when pushing the Backrest(A) backwards, then the Backrest(A) is fully locked in position.

Step 3

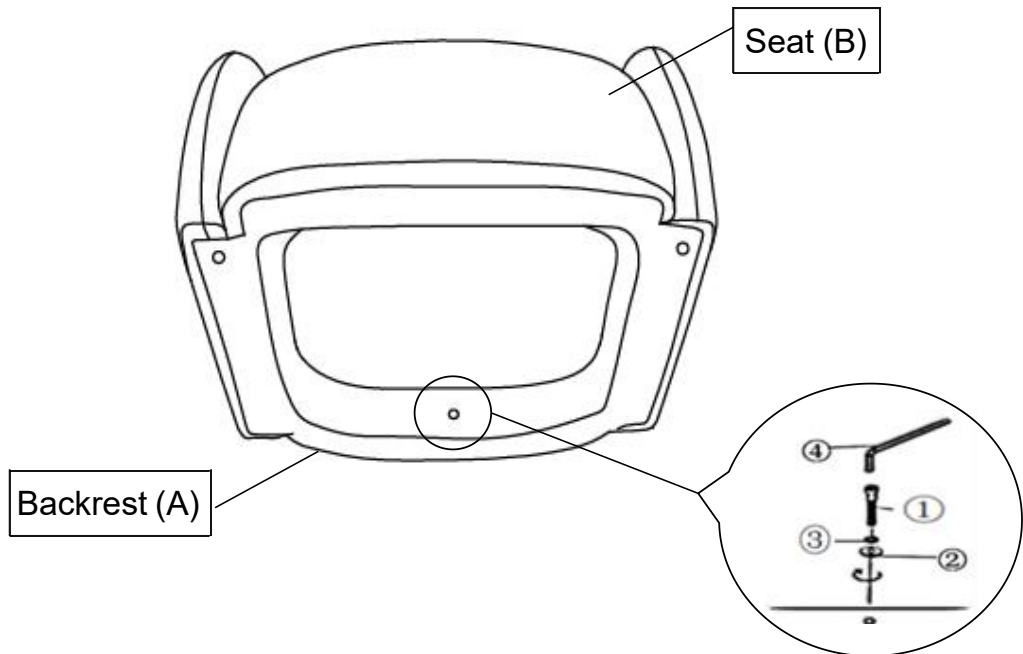


Turn the assembled Backrest as picture shown.

Attach Seat(B) to Backrest(A) using Bolts(①), Washers(②) and Spring Washer(③) with the Allen Wrench (④) as pictured above.

Tighten the Bolts fully.

Step 4

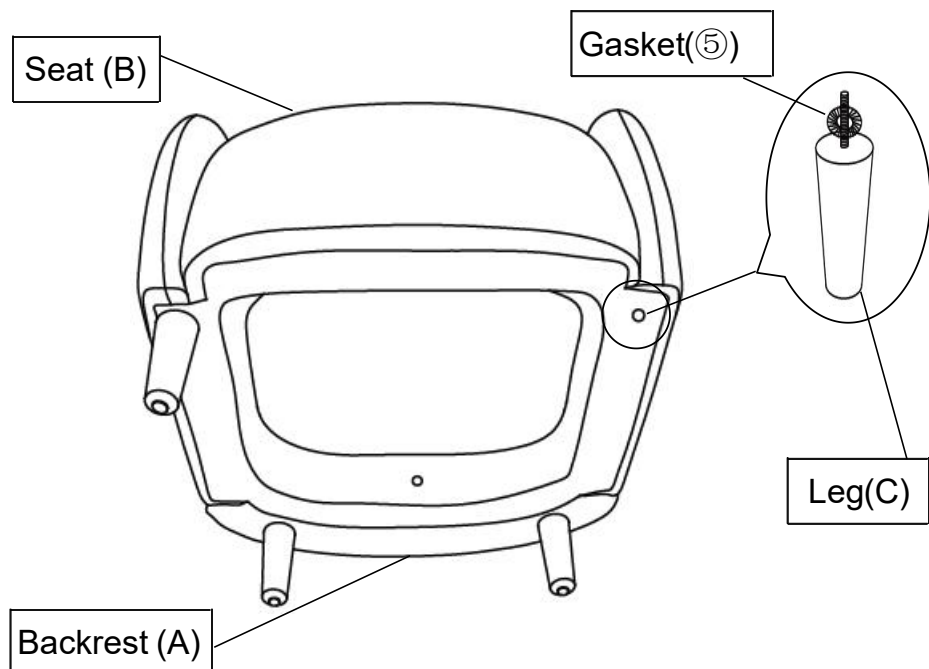

Install the Leg(C) onto the bottom of the Chair by placing one Gasket(⑤) on the threaded stem. Then insert the threaded stem into the threaded mounting position at the corner of the Chair.


Tighten by turning the Leg clockwise.

Repeat this process with the remaining three Legs.

Note: The use of Gaskets are OPTIONAL and are especially useful to help alleviate slight wobble.

Some Legs may need more than one whilst some legs may not need any.

Step 5

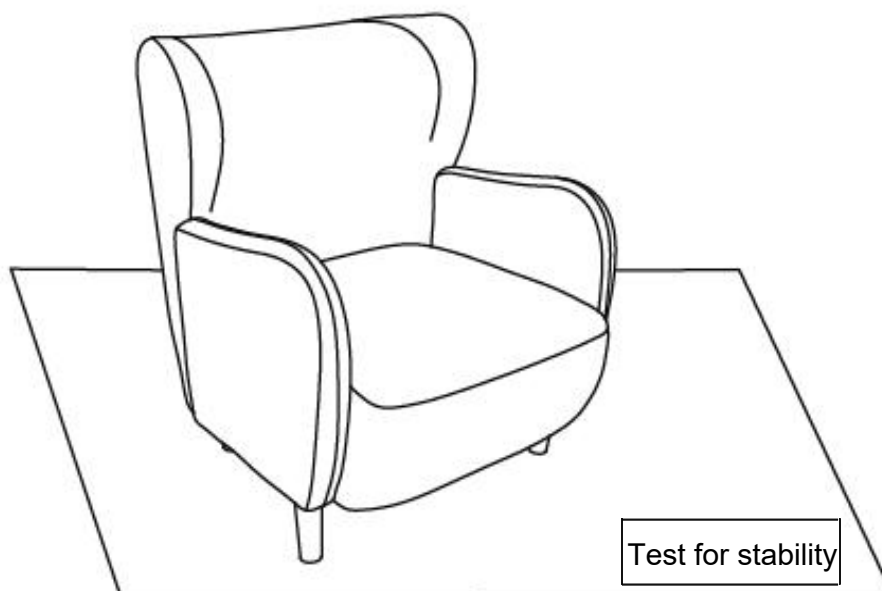

Your Club Chair is ready for use.
This Club Chair can only be used on a flat, level surface.