# ASSEMBLY INSTRUCTIONS 36INCH BATH VANITY (COMBO)



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

 
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"













uded)

(Not included)

**IMPORTANT:** 

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

# PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


# **Before Installation**


#### Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


#### **Cam Lock Assembly Instructions**

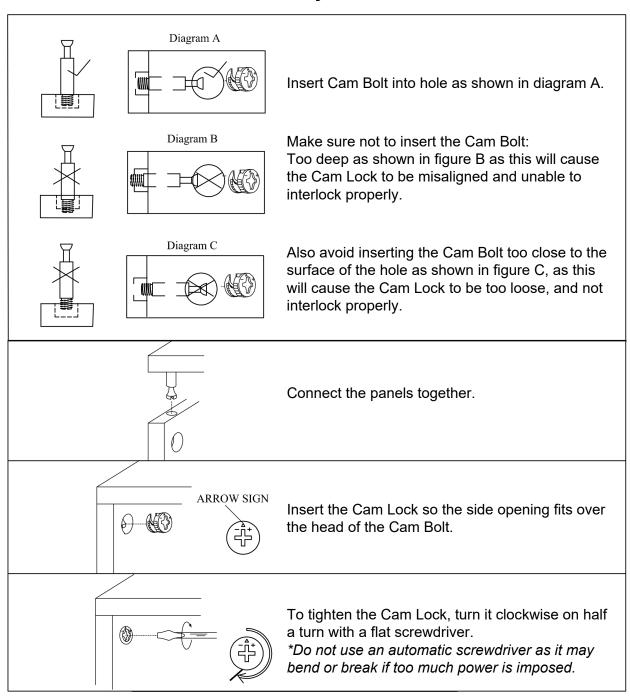

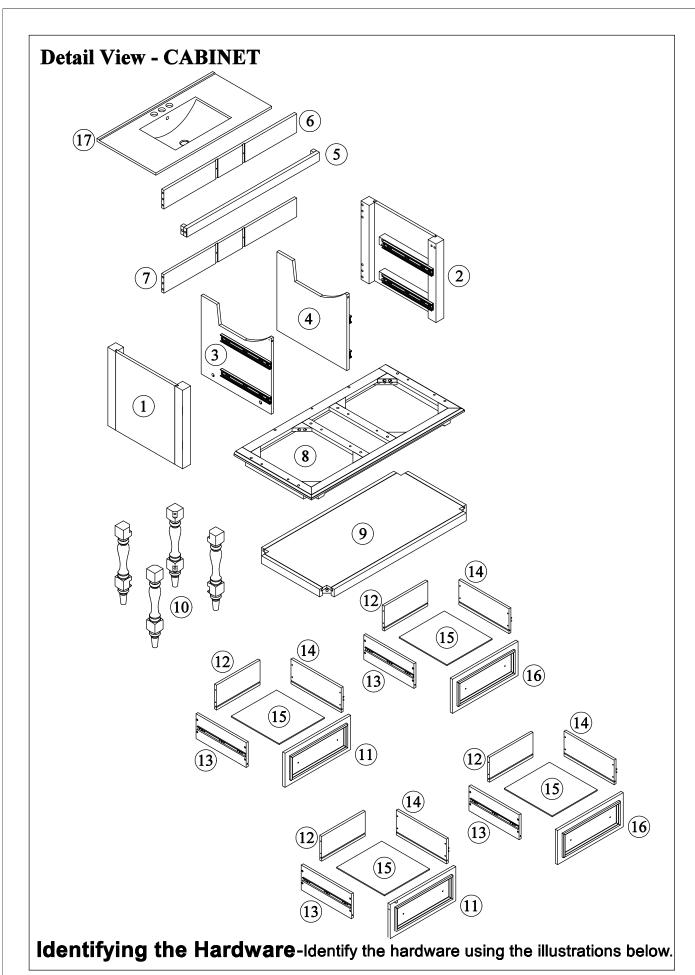


| Part List - N710P250654 |                              |    |                              |  |
|-------------------------|------------------------------|----|------------------------------|--|
| 1                       |                              | 2  |                              |  |
|                         | Side Panel (L) - 1pc         |    | Side Panel (R) - 1pc         |  |
| 3                       |                              | 4  |                              |  |
|                         | Mid Panel (L) - 1pc          |    | Mid Panel (R) - 1pc          |  |
| 5                       |                              | 6  |                              |  |
|                         | Top Bar Front - 1pc          |    | Top Panel Rear - 1pc         |  |
| 7                       |                              | 8  |                              |  |
|                         | Bottom Panel Rear - 1pc      |    | Mid Frame - 1pc              |  |
| 9                       |                              | 10 |                              |  |
|                         | Bottom Frame - 1pc           |    | Cabinet Feet - 4pcs          |  |
| 11                      |                              | 12 |                              |  |
| 40                      | Left Drawer Face - 2pcs      |    | Drawer Back Panel - 4pcs     |  |
| 13                      |                              | 14 |                              |  |
|                         | Drawer Side Panel (L) - 4pcs |    | Drawer Side Panel (R) - 4pcs |  |
|                         |                              |    |                              |  |


#### Part List - N710P250654

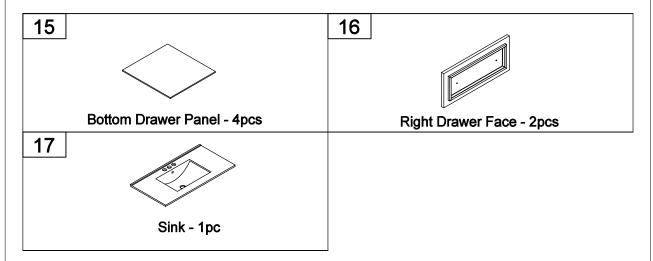



## Hardware List - N710P250654


| Α                         | В                        | С                        |
|---------------------------|--------------------------|--------------------------|
|                           |                          | (a)                      |
| ø6x35mm                   | ø14.5x12mm               | ø13x1/4"x38mm            |
| Three in one bolts(18pcs) | Three in one lock(18pcs) | Hex-Head bolts(8pcs)     |
| D                         | E                        | <u></u>                  |
| <u> </u>                  |                          | 0                        |
| ø13x1/4"x28mm             | ø1/4"x16x1mm             |                          |
| Hex-Head bolts(2pcs)      | Washer(10pcs)            | Handle (8pcs)            |
| G                         | H                        |                          |
| (5)                       |                          |                          |
| ø5/32"x15mm               | ø5/32"x28mm              |                          |
| Handle screw (4pcs)       | Handle screw (4pcs)      | L-Bracket (2pcs)         |
| J                         | K                        | L                        |
| €mmm>                     | Ø/////                   | 6)mmm>                   |
| ø7xø3.5x12mm              | ø8x30mm                  | ø8xø4x25mm               |
| Round head screw (4pcs)   | Wood dowel(17pcs)        | Round head screw(4pcs)   |
| M                         | N                        | 0                        |
| <b>€</b> ]mmmm>           |                          |                          |
| ø8xø4x32mm                | 4mm                      |                          |
| Round head screw(32pcs)   | Allen key(1pc)           | Anti fall hardware(1set) |
| Р                         |                          |                          |
| 9////                     |                          |                          |
| ø6x30mm                   |                          |                          |
| Wood dowel(16pcs)         |                          |                          |

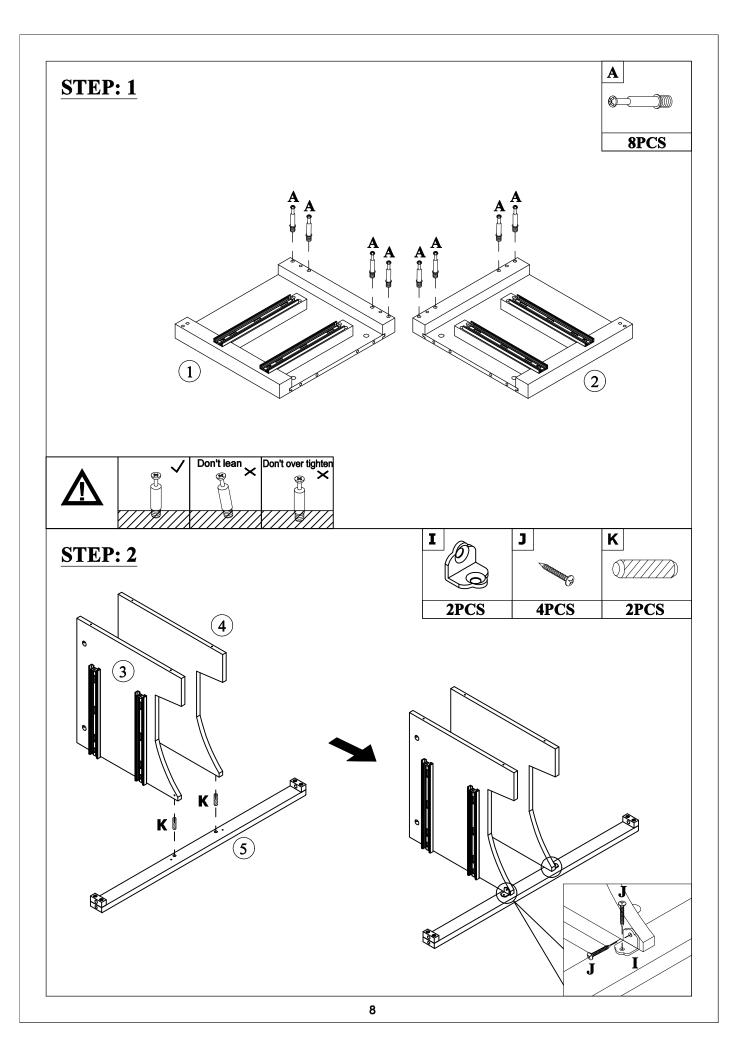


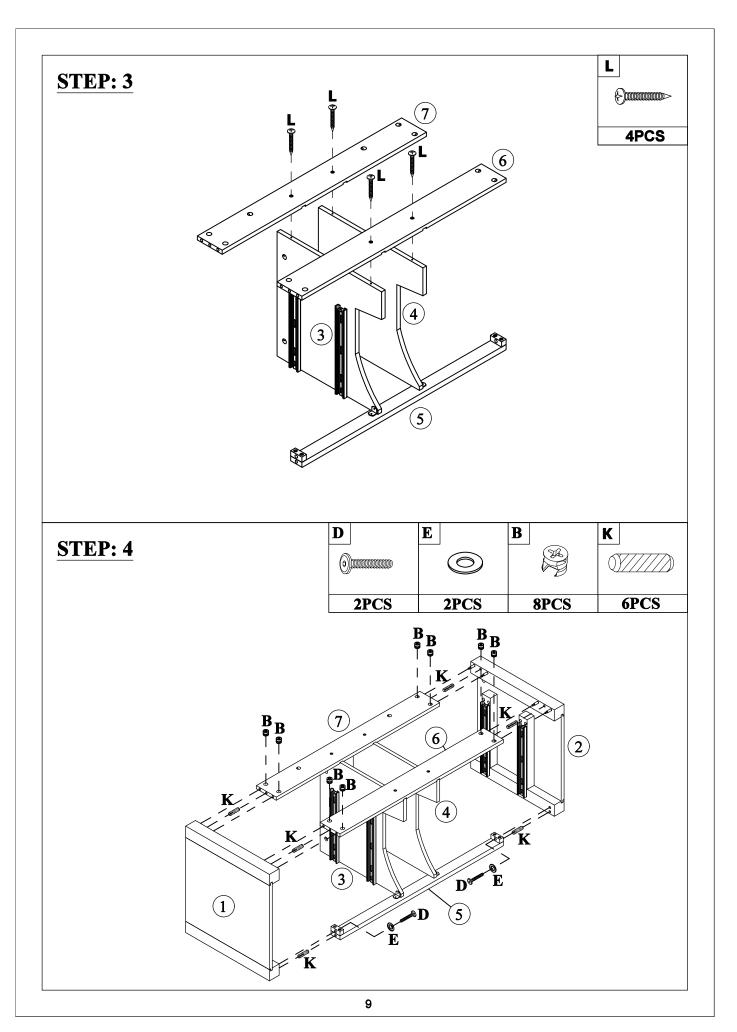


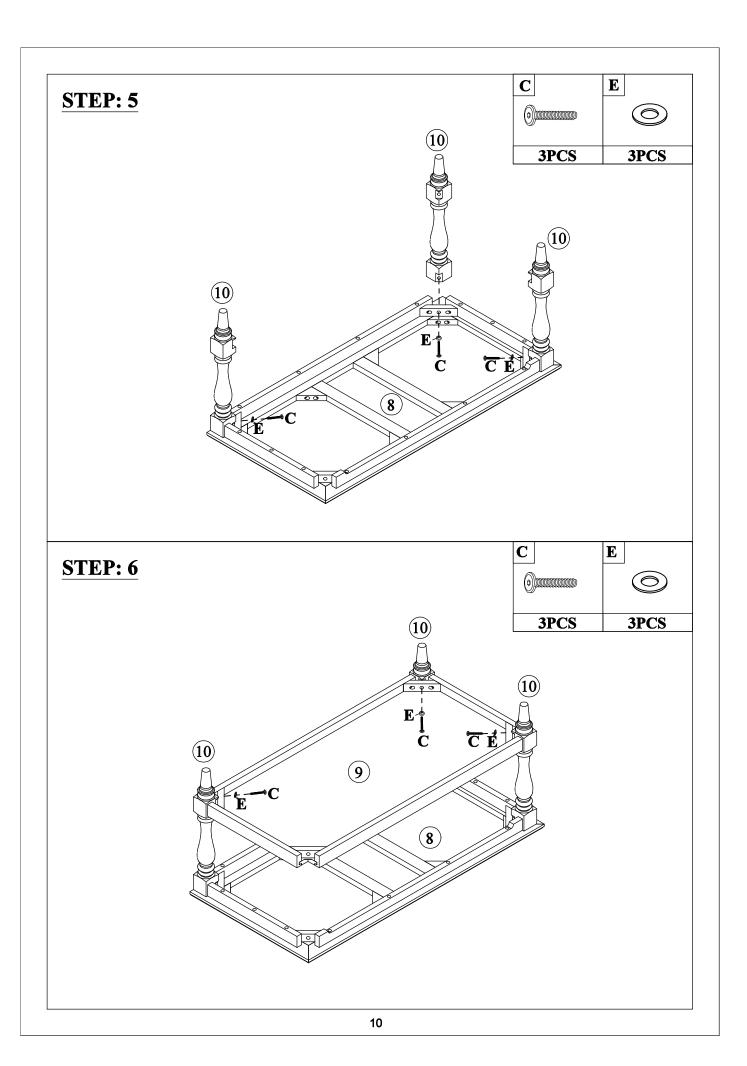

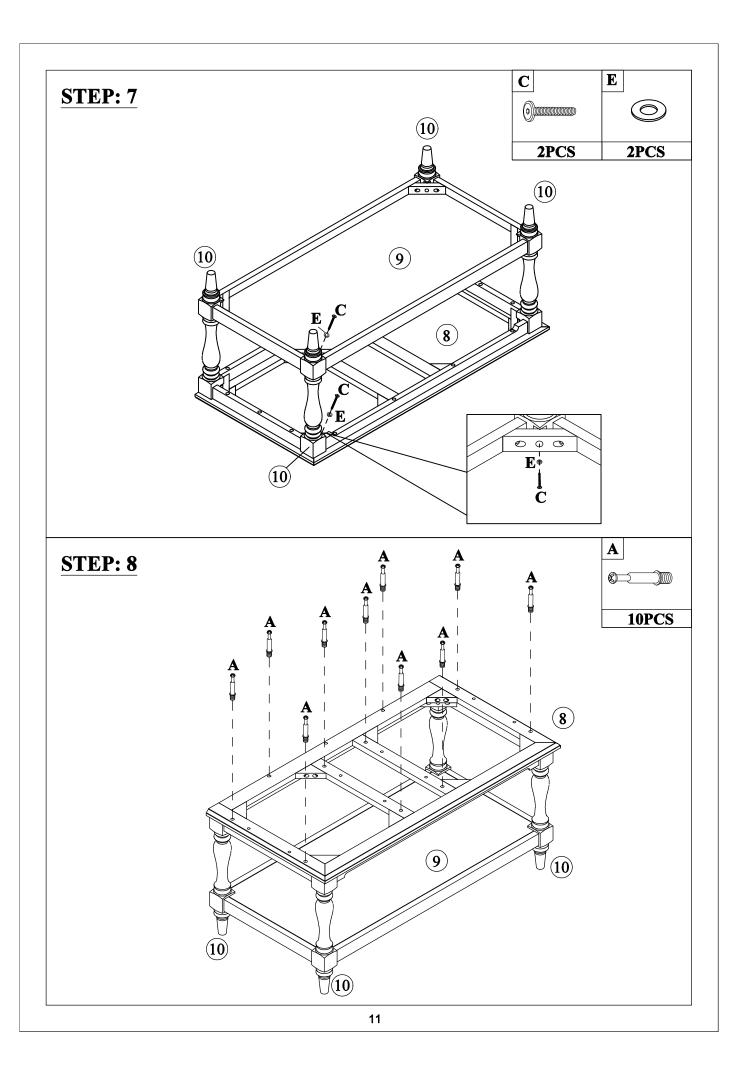

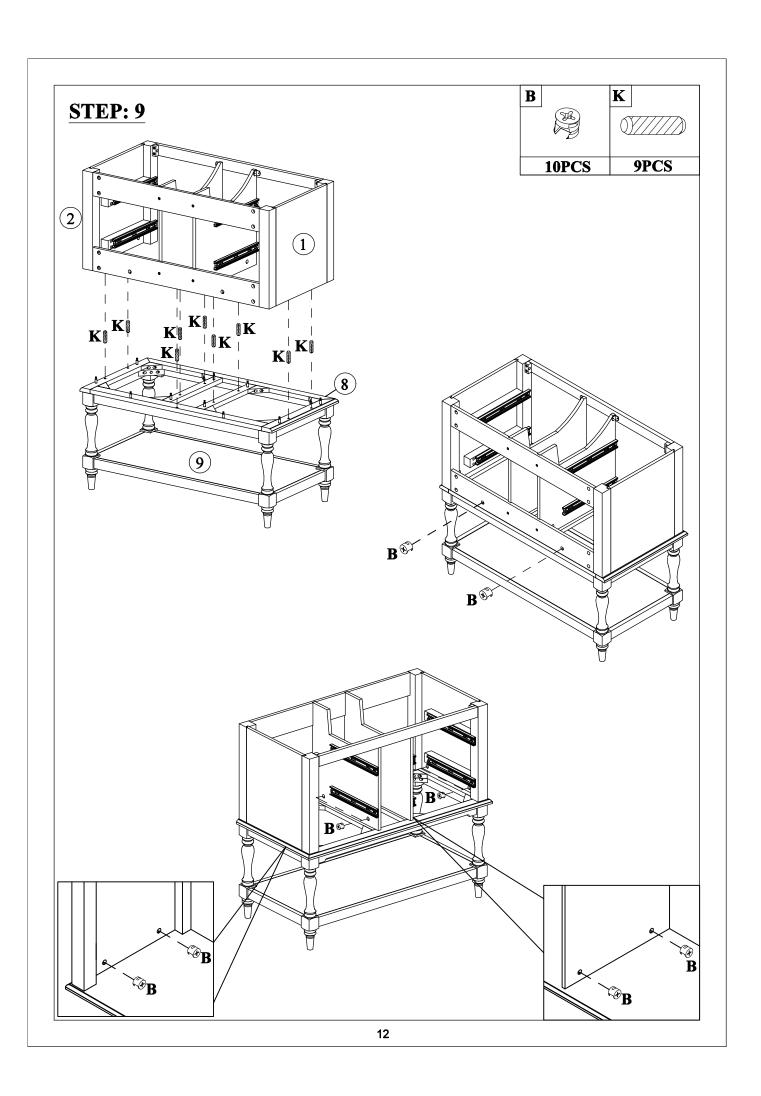


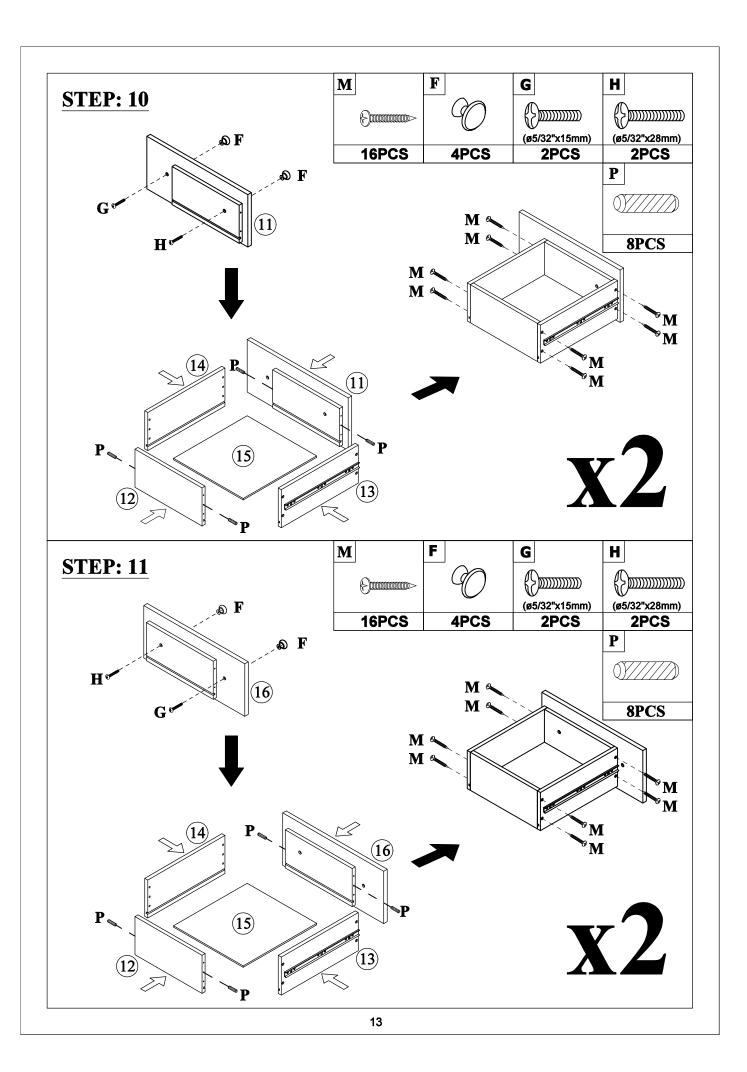

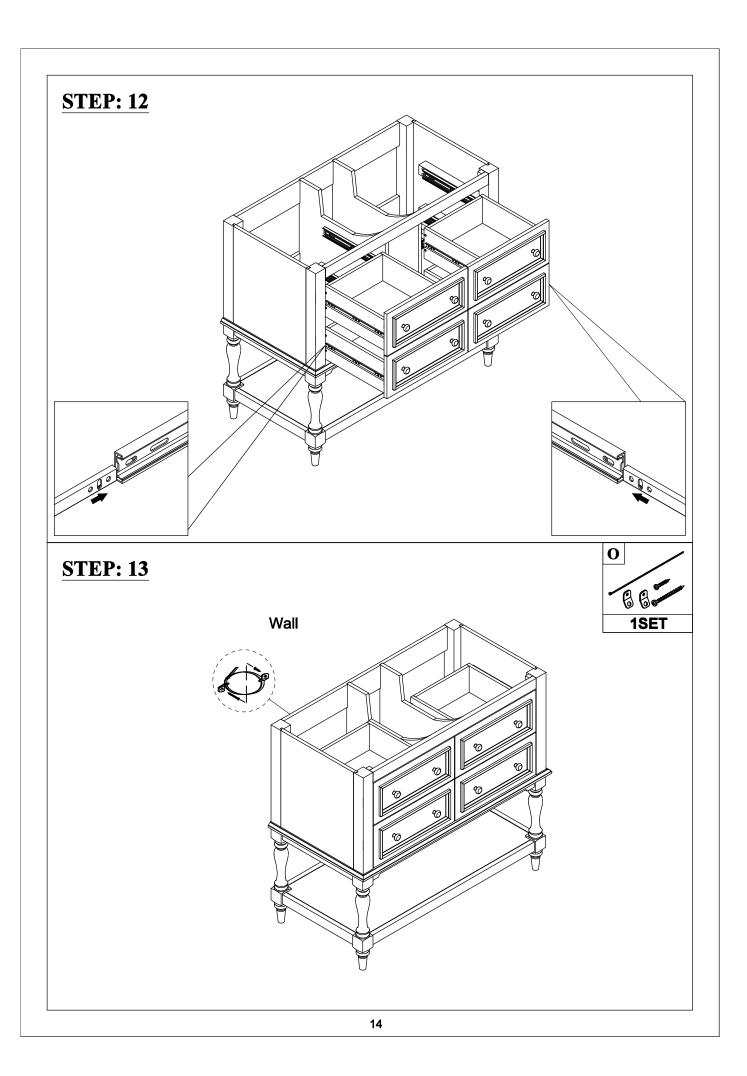




Install the sink on the cabinet with glue. Let stand for 24 hours

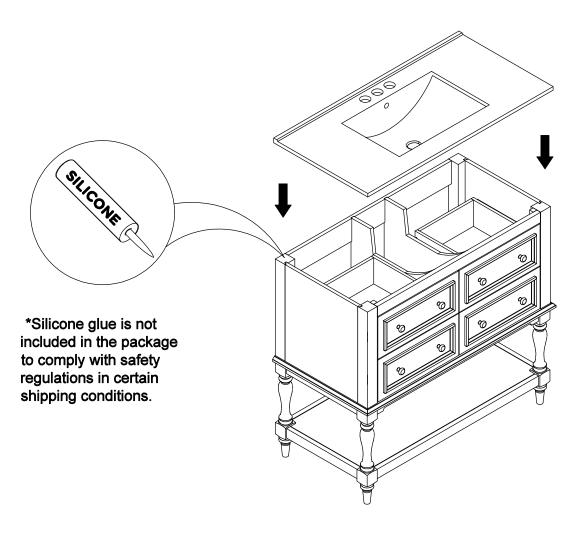


#### **STEP: 15**

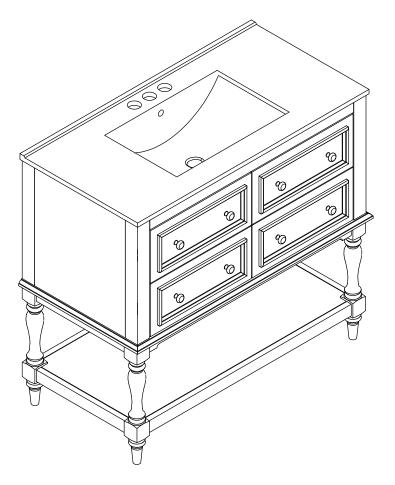




# HINGE ADJUSTMENTS

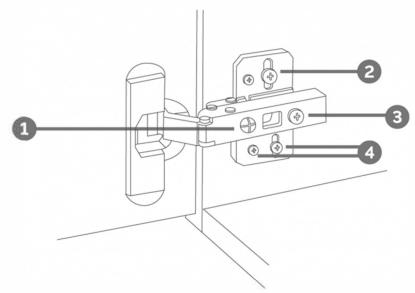

## 1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

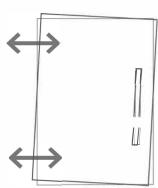

### 2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

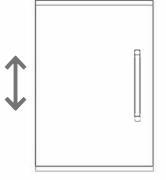

#### 3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

