
TV STAND-N724P261475/N724P261476

Assembly Instructions - Please keep for future reference.

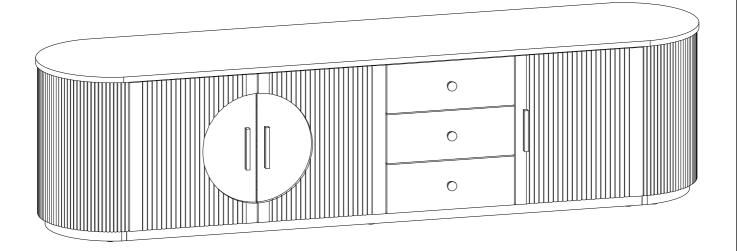

DIMENSIONS

width - 70.87inch

Depth - 15.75inch

Height - 17.91inch

Important - Please read these instructions fully before starting assembly.

- 1. Thank you for choosing our products.
- 2. Return Policy



DO NOT RETURN TO THE STORE! Skip the process of returning your product and contact us directly for a replacement

If you find that parts of your order are missing or damaged, we will gladly ship any needed replacement parts free of charge.

If your product's quality does not meet your expectations or you have found any sort of defect, please contact our customer service department and let us know the details of your order and any issues encountered, we will try our best to provide you with a solution. Feel free to also directly contact our manufacturer concerning needed replacement parts and they will be happy to help provide you with a solution or answer any questions you may have.

Recommendations Before Beginning Assembly

- Read instructions, cover to cover
- **†** Have 2-4 adults on hand for assembly depending on product size
- Do not assemble directly on flooring or carpet
- Assemble on a clean non-marring surface (example: packing foam)
- Save all packaging until finished

3. Assembly Notice:

- If you encounter any problems during assembly and find that you cannot continue, rest
 assured we will help you solve the situation as soon as possible. Simply keep all of the
 parts of the product stored in a safe place and contact us immediately so we may assist
 you further.
- Once you have opened your package, remove all inner hardware packages and take the
 parts out. One by one, Place the parts out neatly in front of you, then refer to the
 instructions to ensure no parts are missing. If any pieces are found missing, please
 carefully look in the box first, as the hardware packaging might have torn making the

hardware spill in the box.

 
- Some key parts of your product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to remove all parts. (example: cushions and legs being stored in the underside of a sofa)
- IMPORTANT: When setting up your product, DO NOT INSTALL THE SCREWS ALL THE WAY
 IN THE BEGINNING. Place each screw into their proper hole and use your hand to twist
 the screw halfway. Twist all the screws in halfway to ensure the holes will match up
 properly and the product is level on the ground. When everything seems fitted, then
 tighten the screws.
- When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

Care & Maintenance

- Do not put hot items directly on furniture surface
- O Do not clean furniture with harsh cleansers or polish
- Do not place furniture under direct sunlight
- Do not place furniture near heating or cooling vents
- Do not write on furniture without a padded barrier to protect the surface
- Do not place furniture outside. For indoor use only
- Not for commercial use. For residential use only
- Stains may be removed with mild soap solution and damp cloth
- Children should not climb or jump on the furniture
- Dust and pick-up spills using a clean, non-colored, lint-free cloth

Caution


- This product contains small components. Please ensure that they are kept away from small children.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.




components - fittings

Please check you have all the panels listed below. Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

N724P261475 - Box:1/2

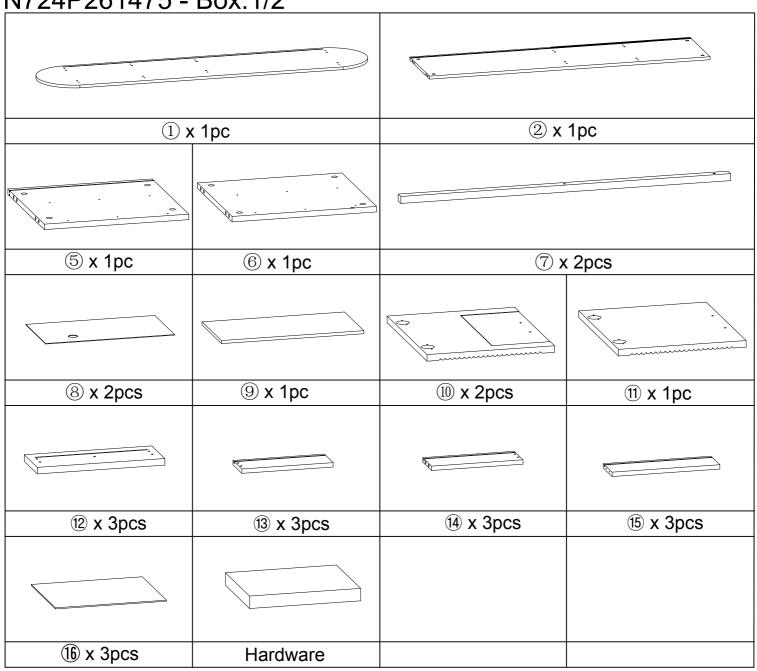

N724P261476 - Box:2/2

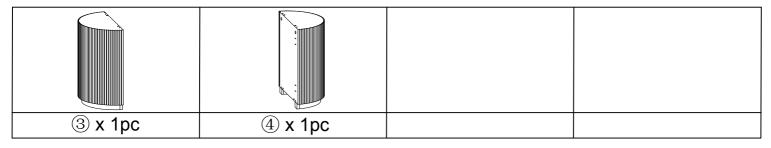


components - fittings


Please check you have all the panels listed below.


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


Hardware-Liste + N724P261475 - Box:1/2


	•		
M6x35mm	Ф15x9mm	Ф8x30mm	M3x12mm
A x 28pcs	B x 28pcs	C x 16pcs	D x 24pcs
	M4x30mm		M6x30mm
E x 6pcs	F x 12pcs	G x 12pcs	H x 6pcs
M4x22mm			M4x16mm
I x 5pc	J x 3pcs	K x 3pcs	L x 36pcs
	M4x8mm		
M x 4pcs	N x 4pcs	O x 4pcs	P x 2pcs
Q x 1pc			

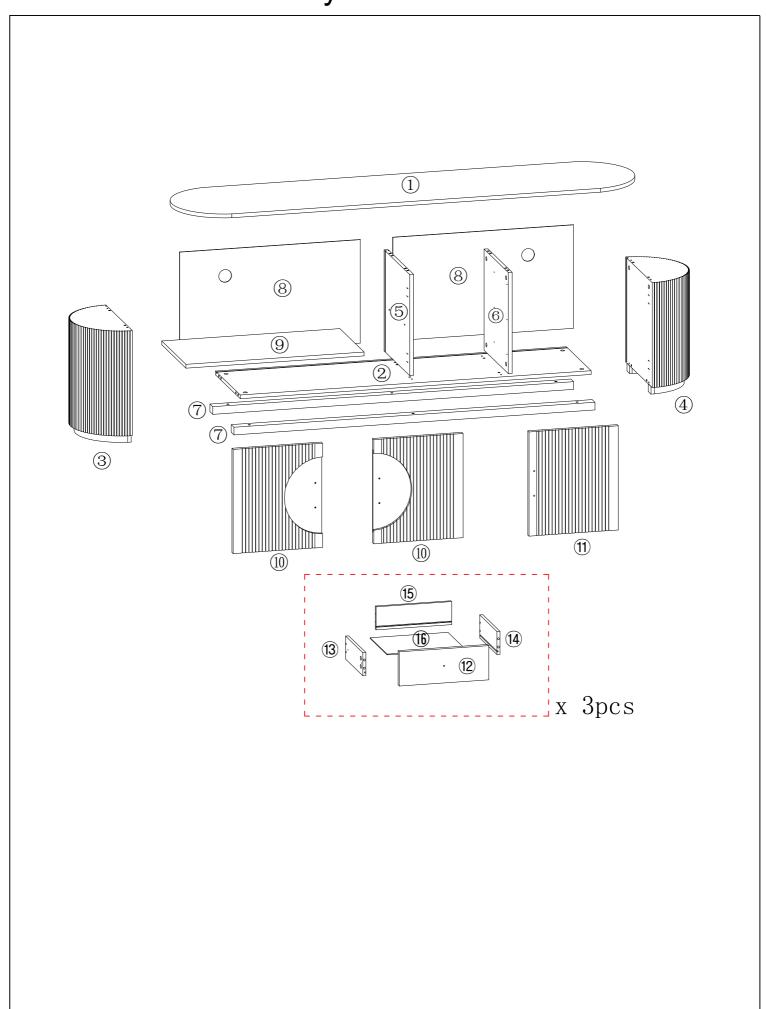


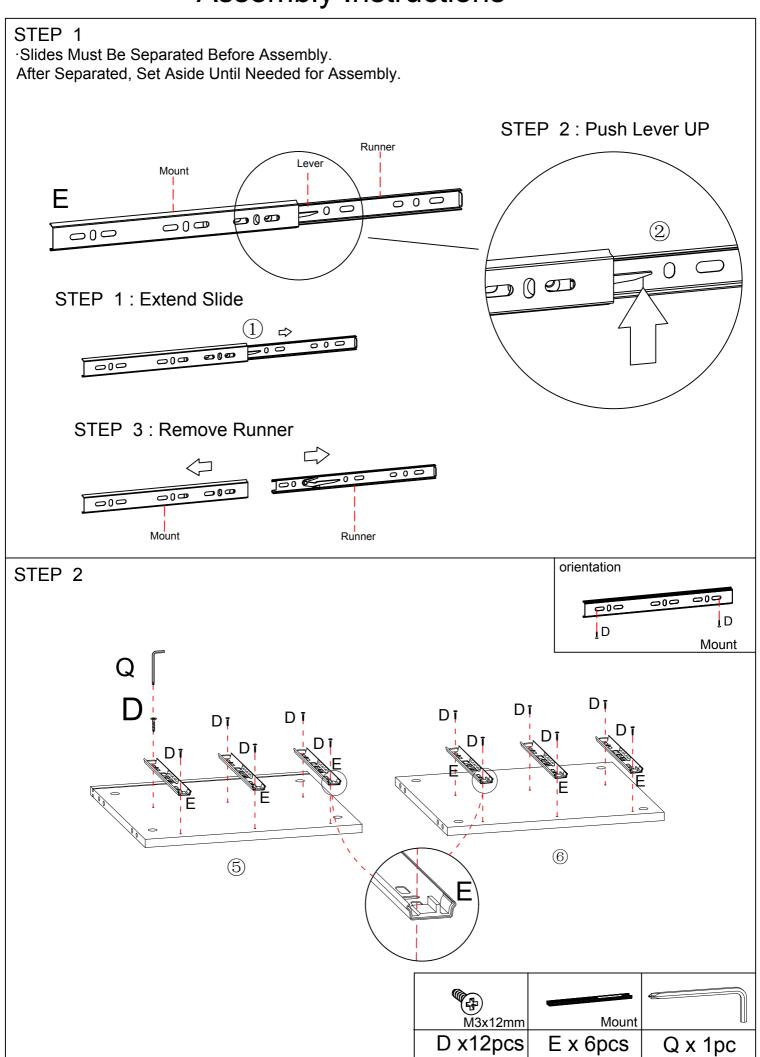


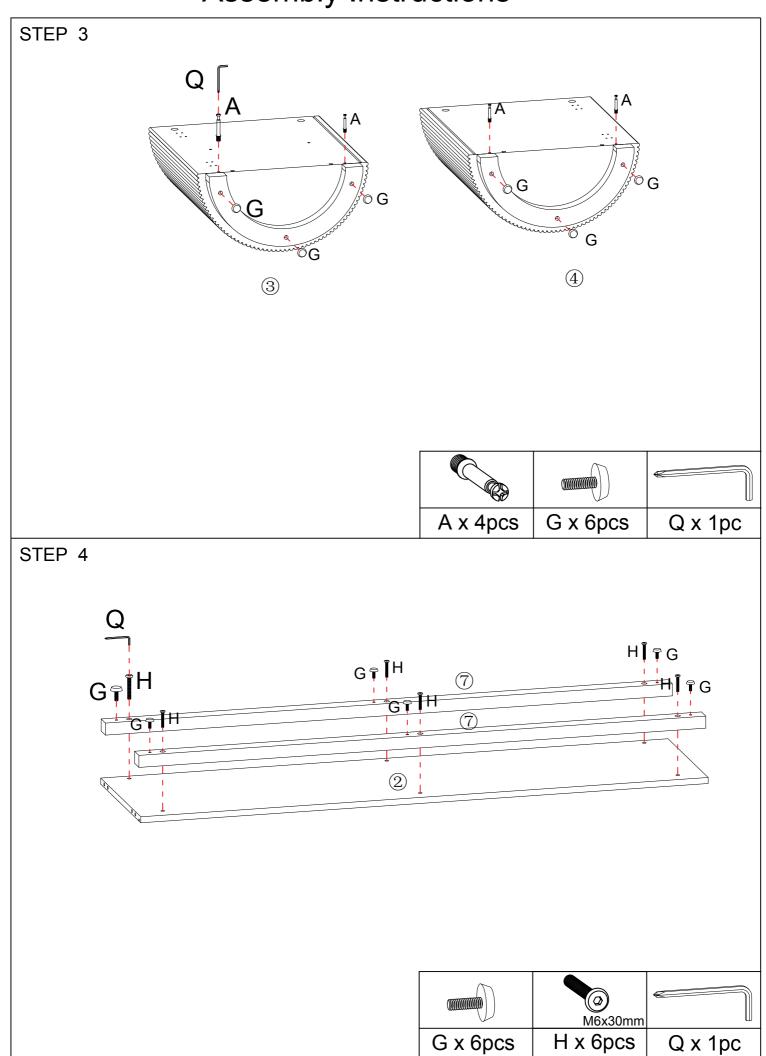


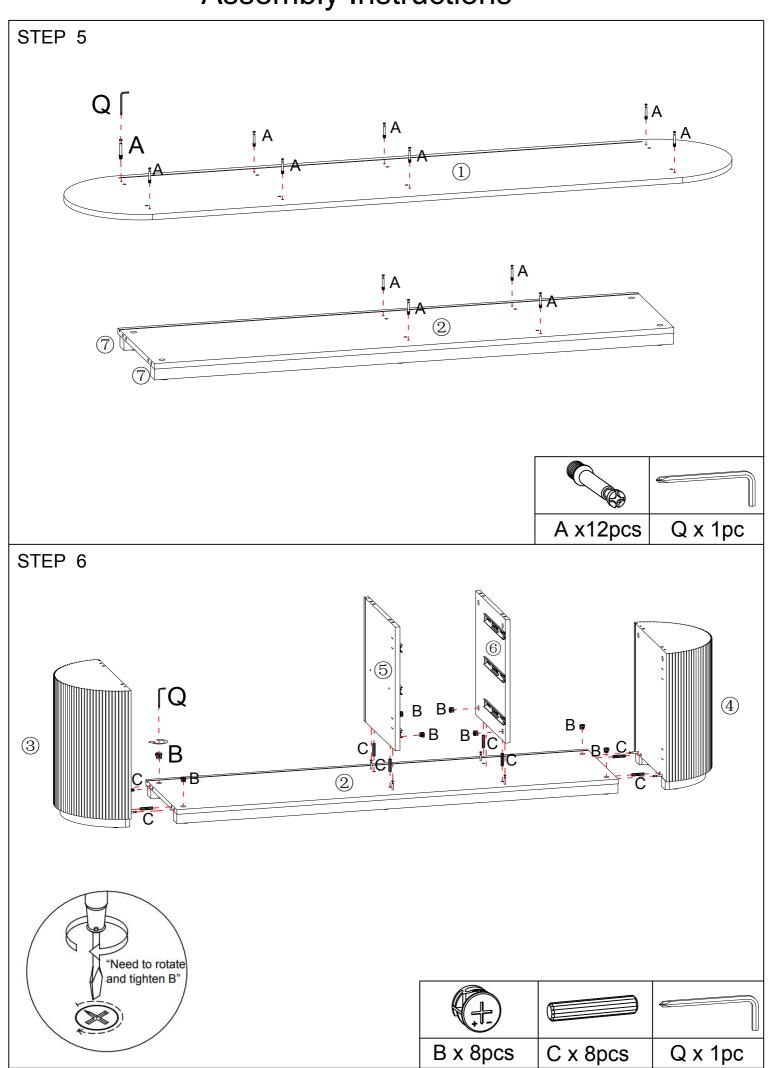

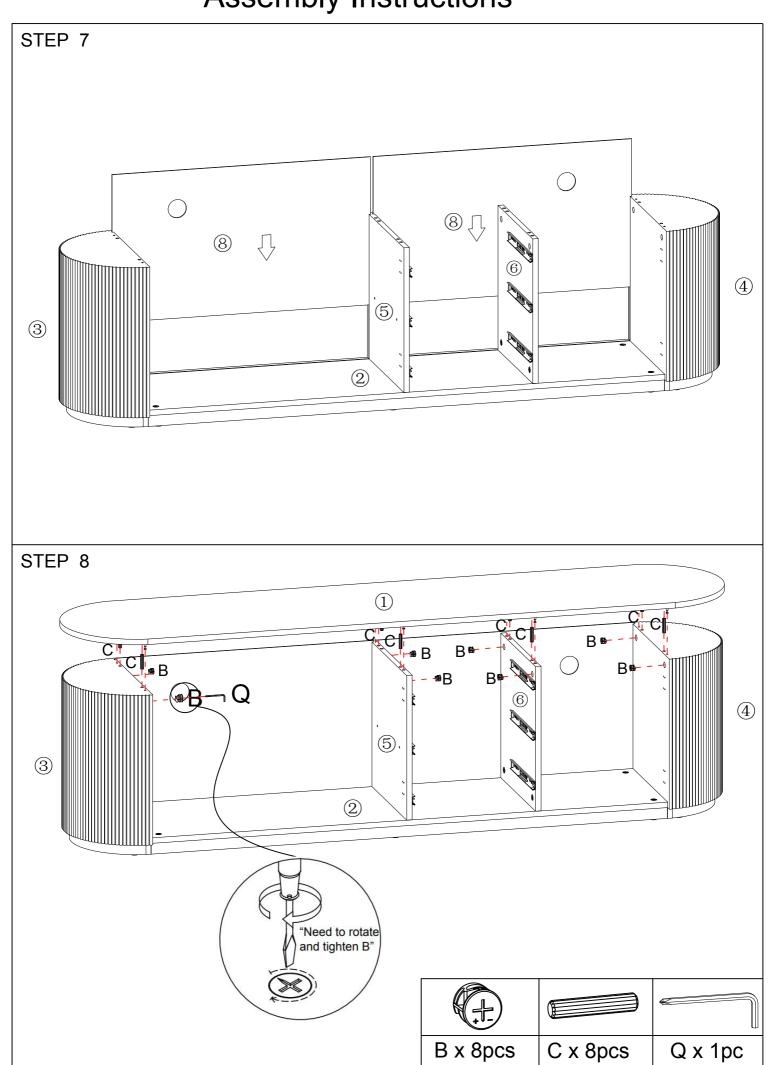


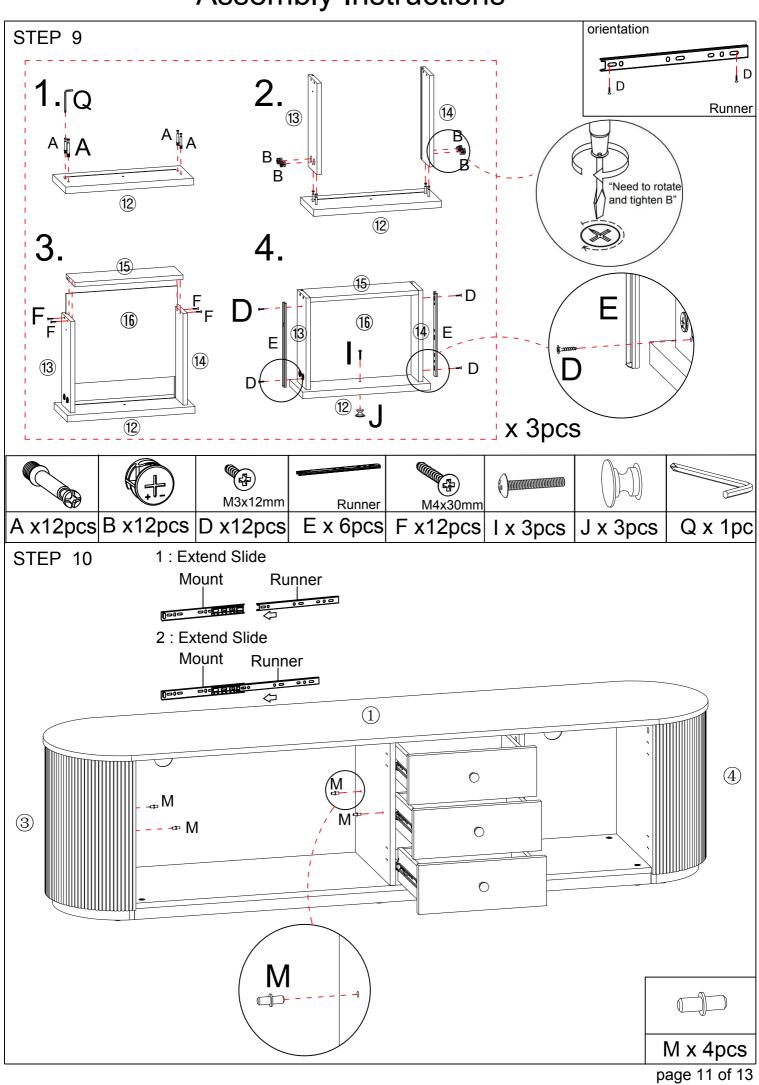

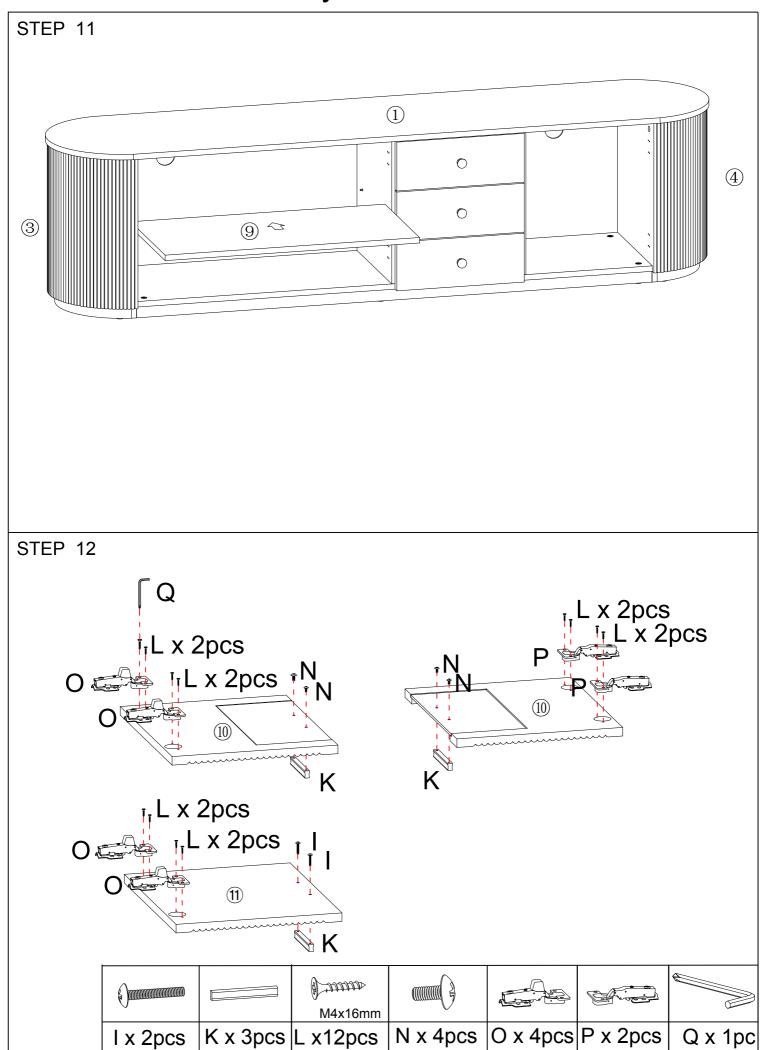

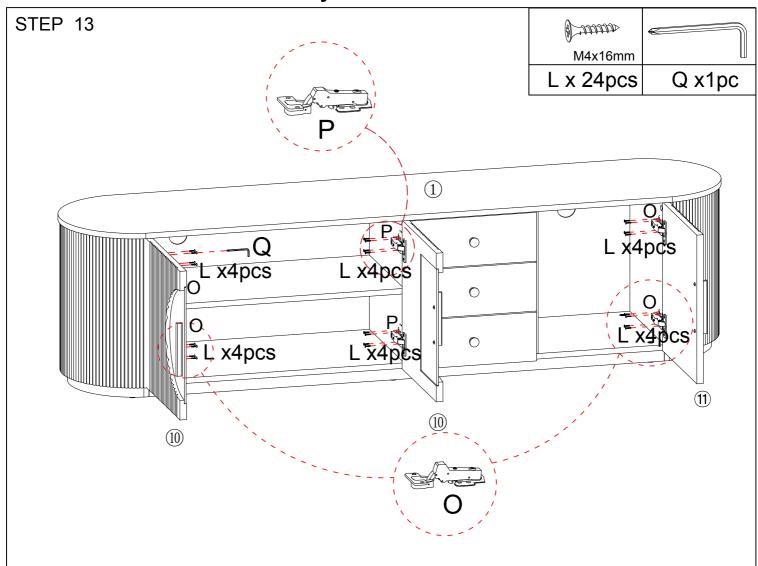

When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect:

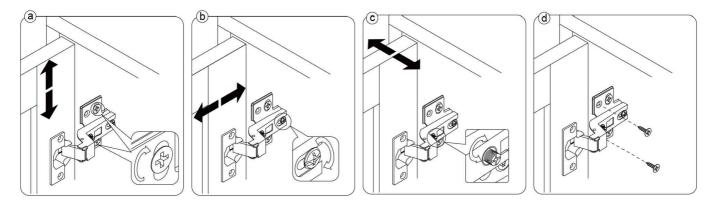

- 1. To adjust the doors up and down, please refer to step (a)
- 2. To adjust the distance between the doors and side panels, please refer to step(b)
- 3. To adjust the gap between two doors, please refer to step (c)
- 4. After the adjustment finished, please tight the screws, refer to step (d)