

C90261CH ASSEMBLY INSTRUCTION

We believe you will absolutely love your new furniture. Please immediately examine this product carefully. Any request for missing part or damage replacement must be received within 90 days of your receipt of the product. For some reason you want to return the product, please contact us directly before you decide to return your product to the retailer. Our Customer Service team can answer most concerns and can assist you with any questions you may have about your new product.

Please contact us first by emailing service@casepiece.com

Have these ready when you email:

- Item Number
- PO #
- Purchaser Name
- Proof of Purchase
- Description of the problem and/or the Part Number needed

Replacements for missing or damaged parts or hardware are normally shipped within 3 to 5 business days and we thank you for your patient.

The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories, within the time frame specified by the retailer it was purchased from.

90-Day Limited Warranty Statement for Manufacturing Defects

Please read this Limited Warranty carefully. To maintain your Warranty, you will need to comply with the conditions stated here.

This warranty is for manufacturing defects only and does not cover damages as a result of misuse.

1. Our products sold comply with the description contained in this Warranty. All parts and products are warranted 90-Day from the original date of delivery except: parts and products used for commercial, contract, rental trade, institutional, or any other non-residential purposes; parts and products that have not been maintained in accordance with the care recommendations provided; parts and products damaged resulting from the consumer's improper assembly; or parts and products that are damaged or defective due to normal wear and tear.

 

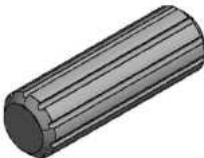 
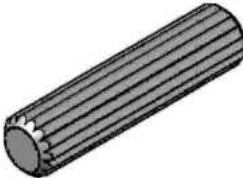 





2. To exercise rights under this warranty, proper documentation, i.e., photography, purchase order number, manufacturer's bar code label, and or any other pertinent information upon request is required. We reserve the right to repair or replace the product within the warranty period based upon the documentation received as support of a claim for consideration. We will not replace or repair any product if improper maintenance, improper handling, or improper use caused the damage. Any product sold from or modified by a Non-Authorized Dealer, Seller or Consumer will void the Warranty.

3. Cost of packaging and shipping to and from us is not covered by the warranty unless expressly arranged by us. This warranty does not extend to furniture that has been exchanged or replaced by us as settlement of an original claim of defective merchandise. This warranty does not extend to furniture that has been moved from delivery location on original purchase order.

 We appreciate your business!

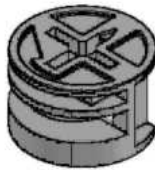

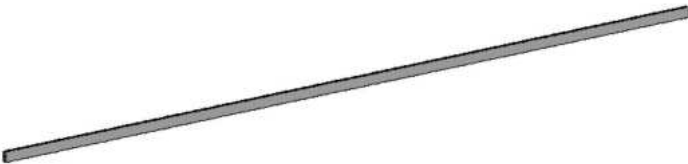
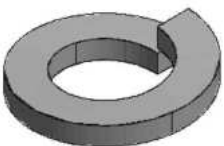 
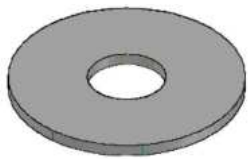 
C90261CH ASSEMBLY INSTRUCTION

HARDWARES LIST

ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		48 PCS
B	MINIFIX CAM BOLT		48 PCS
C	WOOD DOWEL (M8 x 25MM)		6 PCS
D	WOOD DOWEL (M6 x 25MM)		46 PCS
E	HANDLE		4 PCS
F	6/8" NAIL		22 PCS
G	PLASTIC STRIP (H SHAPE)		1 PC
H	M4 ALLEN KEY (65MM)		1 PC
I	JCBC SCREW M6 x 35MM		6 PCS

 



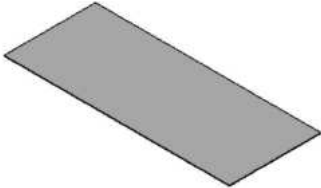 
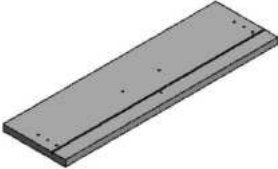 
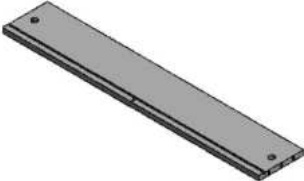 
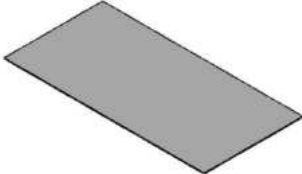 

C90261CH ASSEMBLY INSTRUCTION

HARDWARES LIST

ITEM	DESCRIPTION	DRAWING	QTY
J	PAN HEAD SCREW (M4 X 50MM)		1 PC
K	TRUSS M-SCREW (16MM)		8 PCS
L	TIPPING RESTRAINT		1 PC
M	SPRING WASHER M6 x 13MM		6 PCS
N	FLAT WASHER M6 x 19MM		6 PCS


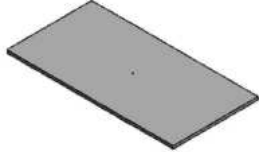 


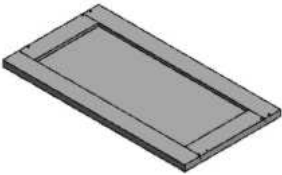 



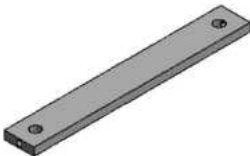 
C90261CH ASSEMBLY INSTRUCTION

PARTS LIST

ITEM	DESCRIPTION	DRAWING	QTY
C1	TOP PANEL		1 PC
C2	LEFT PANEL		1 PC
C3	RIGHT PANEL		1 PC
C4	SUPPORT RAIL		3 PCS
C5	BACK PANEL		2 PCS
C6	DRAWER HEAD		4 PCS
C7	DRAWER BACK PANEL		4 PCS
C8	DRAWER BOTTOM PANEL		4 PCS
C9	BOTTOM PANEL		1 PC

C90261CH ASSEMBLY INSTRUCTION

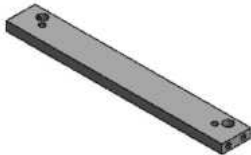
PARTS LIST

ITEM	DESCRIPTION	DRAWING	QTY
C10	TIPPING PANEL (i)		1 PC
C11	TIPPING PANEL (ii)		3 PCS
C12	LEG FRAME (FRONT)		1 PC
C13	LEG FRAME (SIDE)		2 PCS
C14	LEG FRAME (MIDDLE)		1 PC
C15	LEG FRAME (BACK)		1 PC
19	DRAWER LEFT PANEL		4 PCS
20	DRAWER RIGHT PANEL		4 PCS
21	DRAWER BOTTOM SUPPORT RAIL		4 PCS


*Note: All parts needed are shown in above picture.
Numbers only indicate the specific parts for easy assembly.

ASSEMBLY TOOLS REQUIRED

 1. Screwdriver (not provide)




 2. Hammer (not provide)




C90261CH ASSEMBLY INSTRUCTION

 NOTE : - The outer board is for protection of packaging only, not part of furniture. Please throw it before assembly.

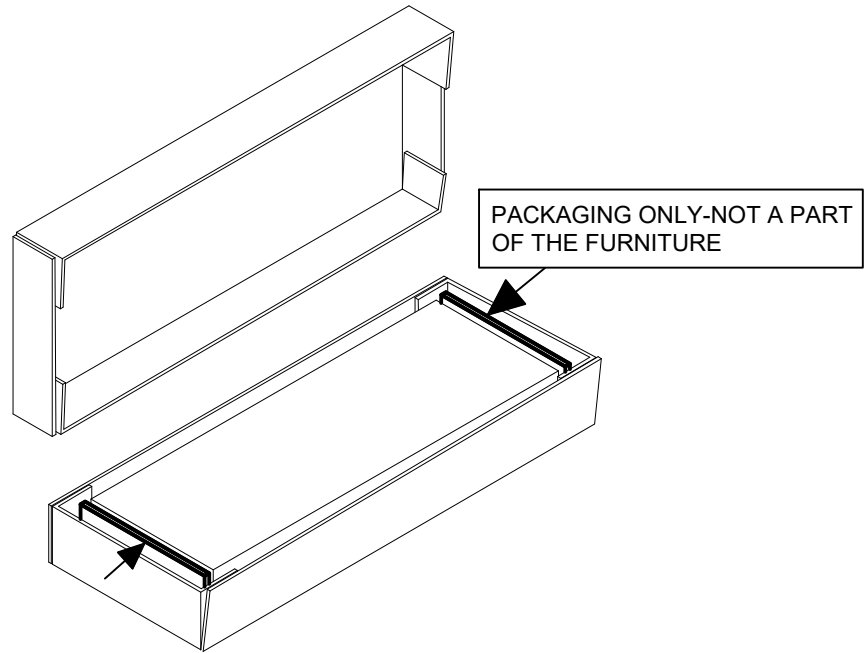


 STEP 1

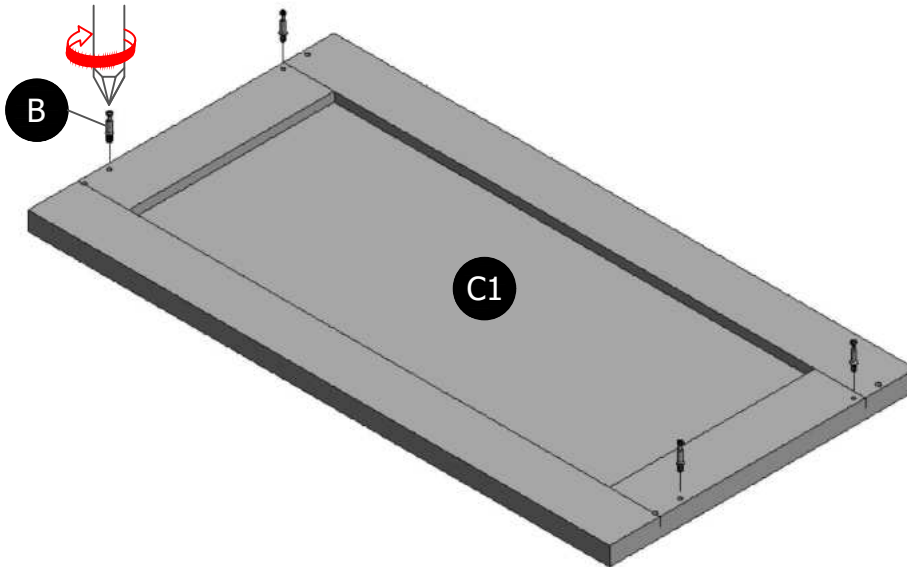

STEP 2

 
NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

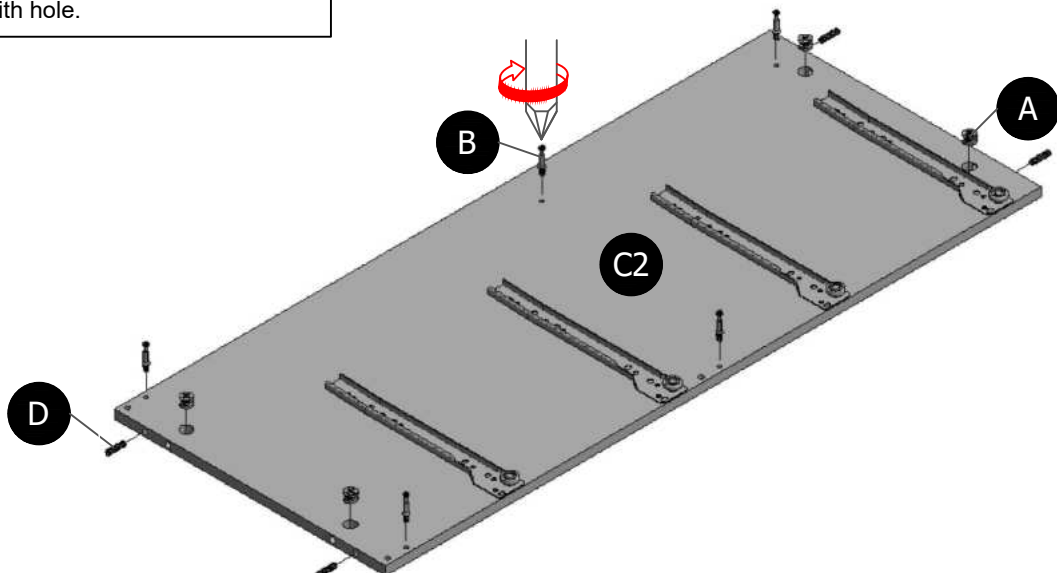

C90261CH ASSEMBLY INSTRUCTION

STEP 3

 
NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

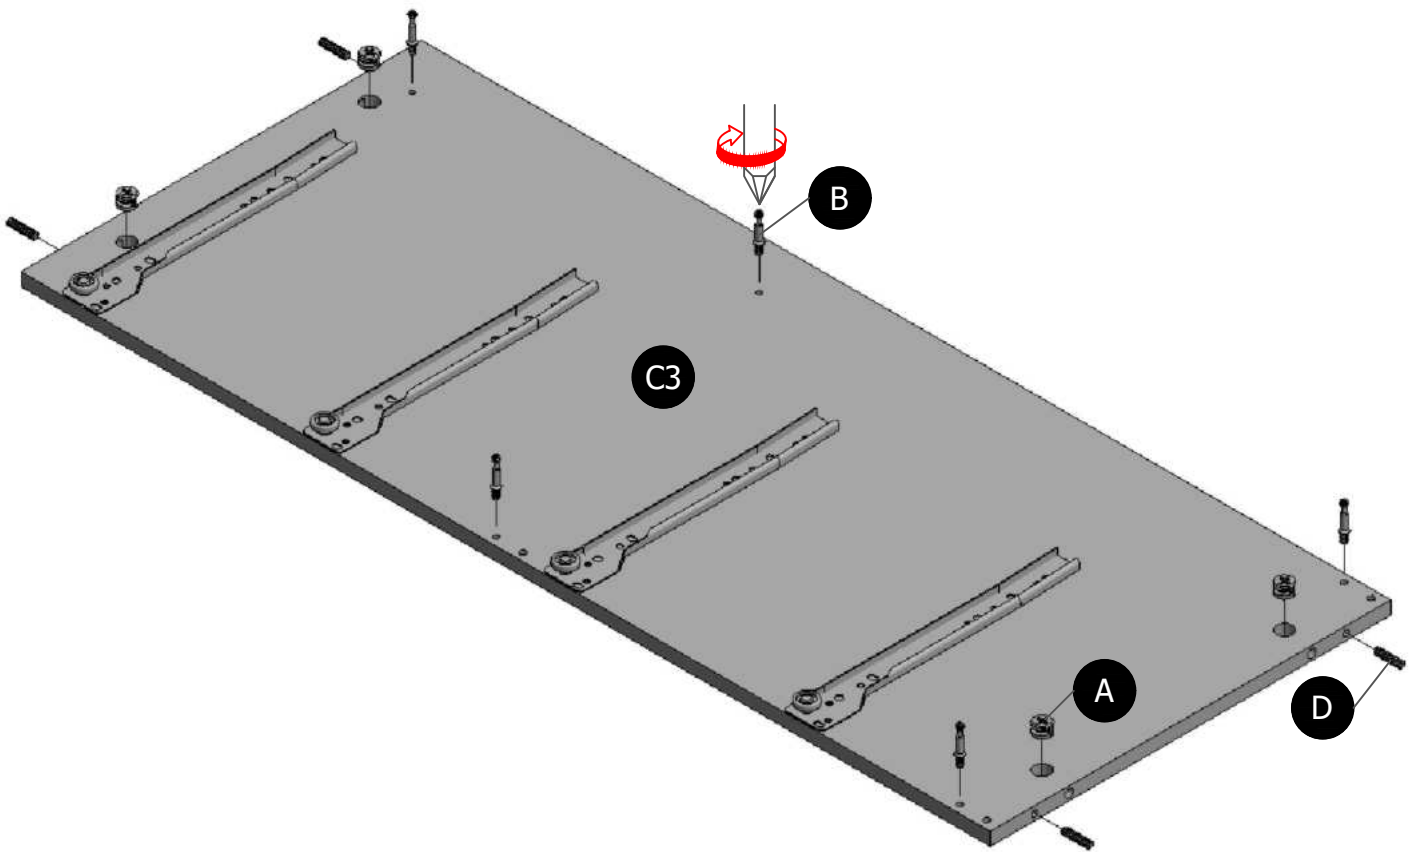

STEP 4

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 
x 3

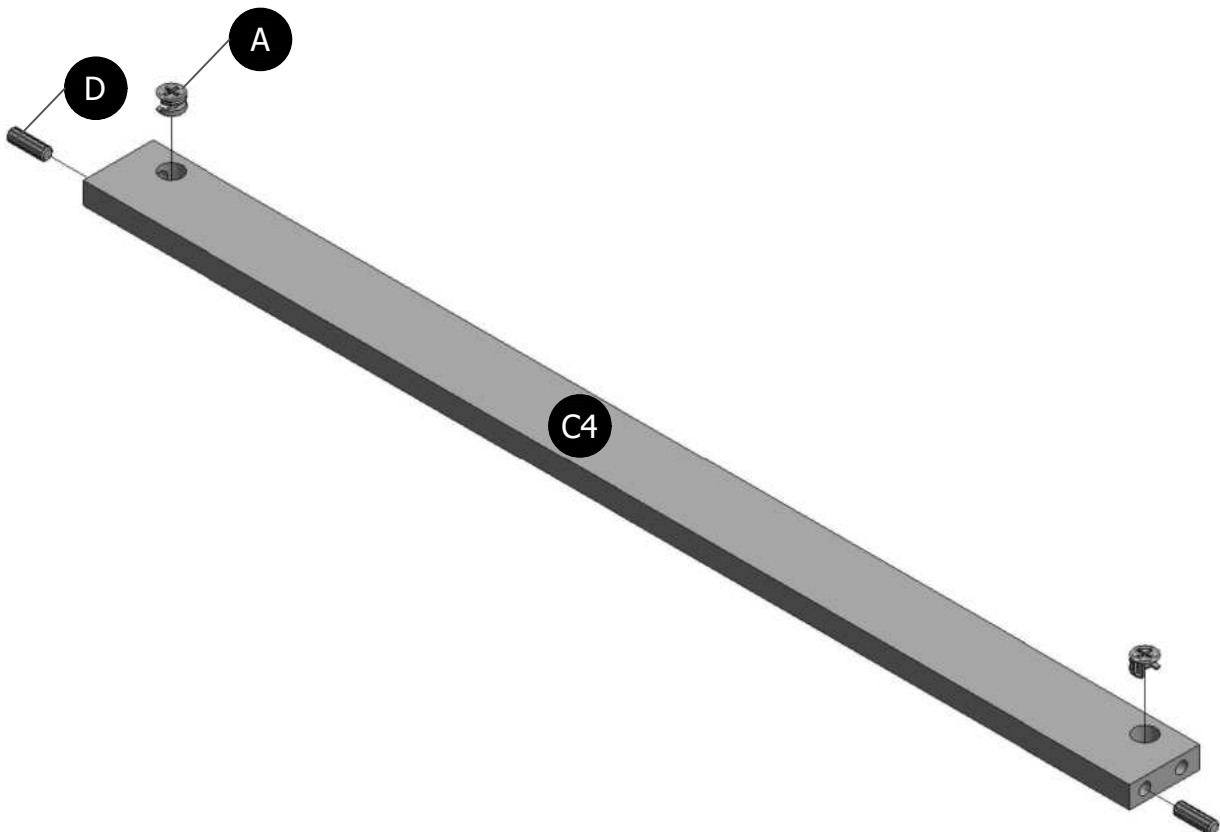


C90261CH ASSEMBLY INSTRUCTION

STEP 5

 NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

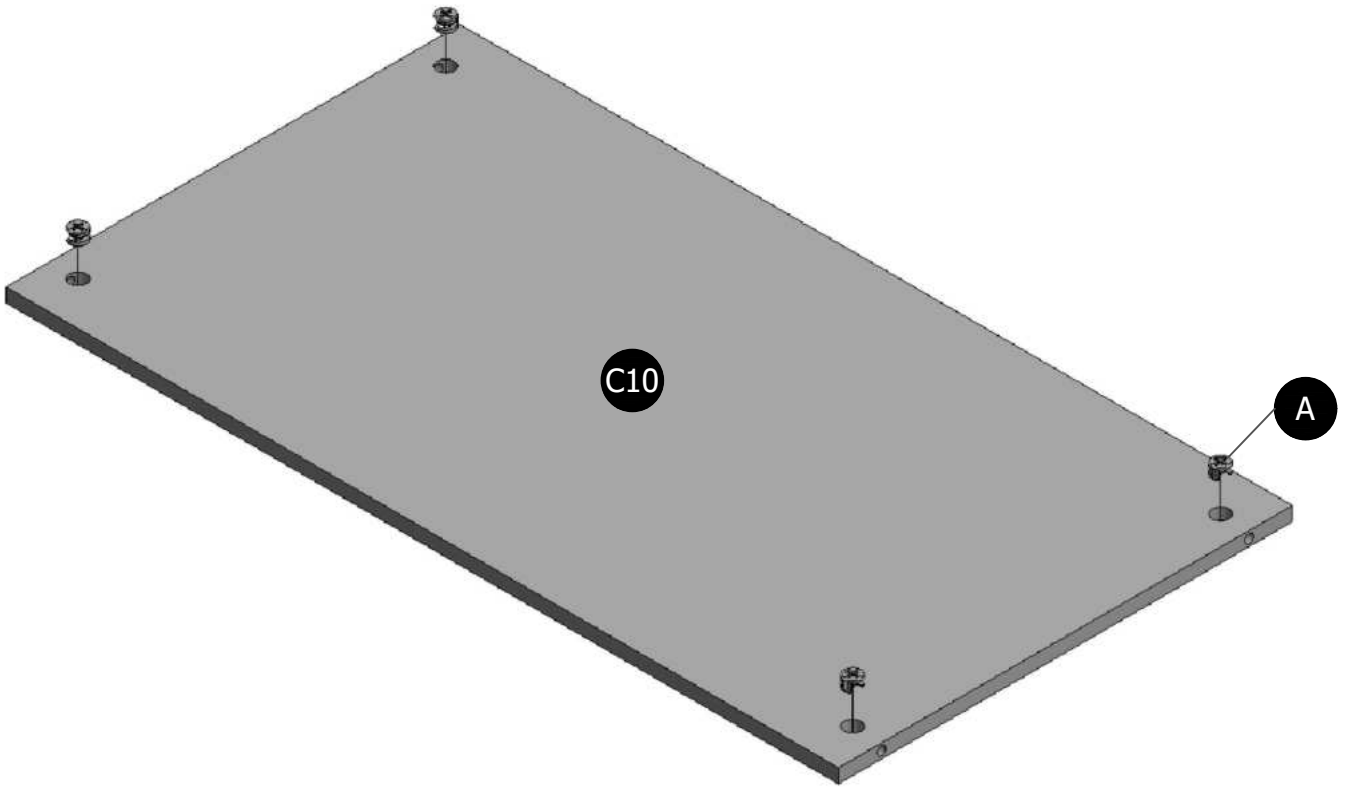

 STEP 6

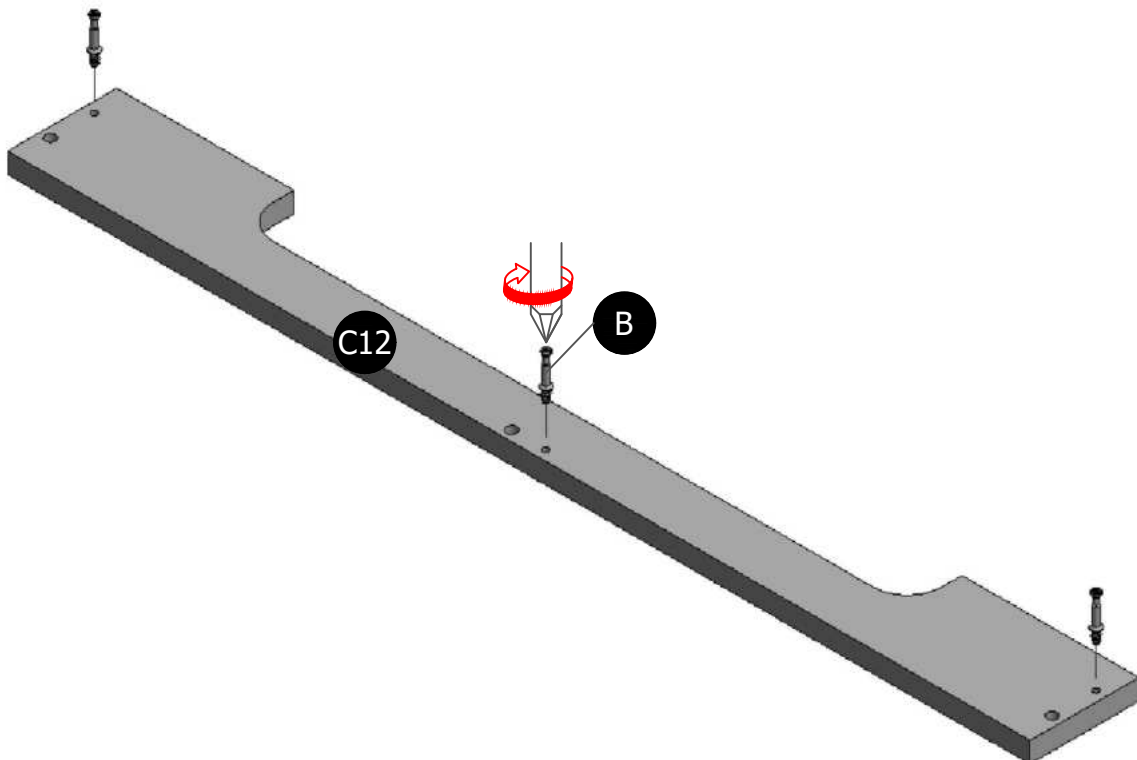


C90261CH ASSEMBLY INSTRUCTION

STEP 7


NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 x 2

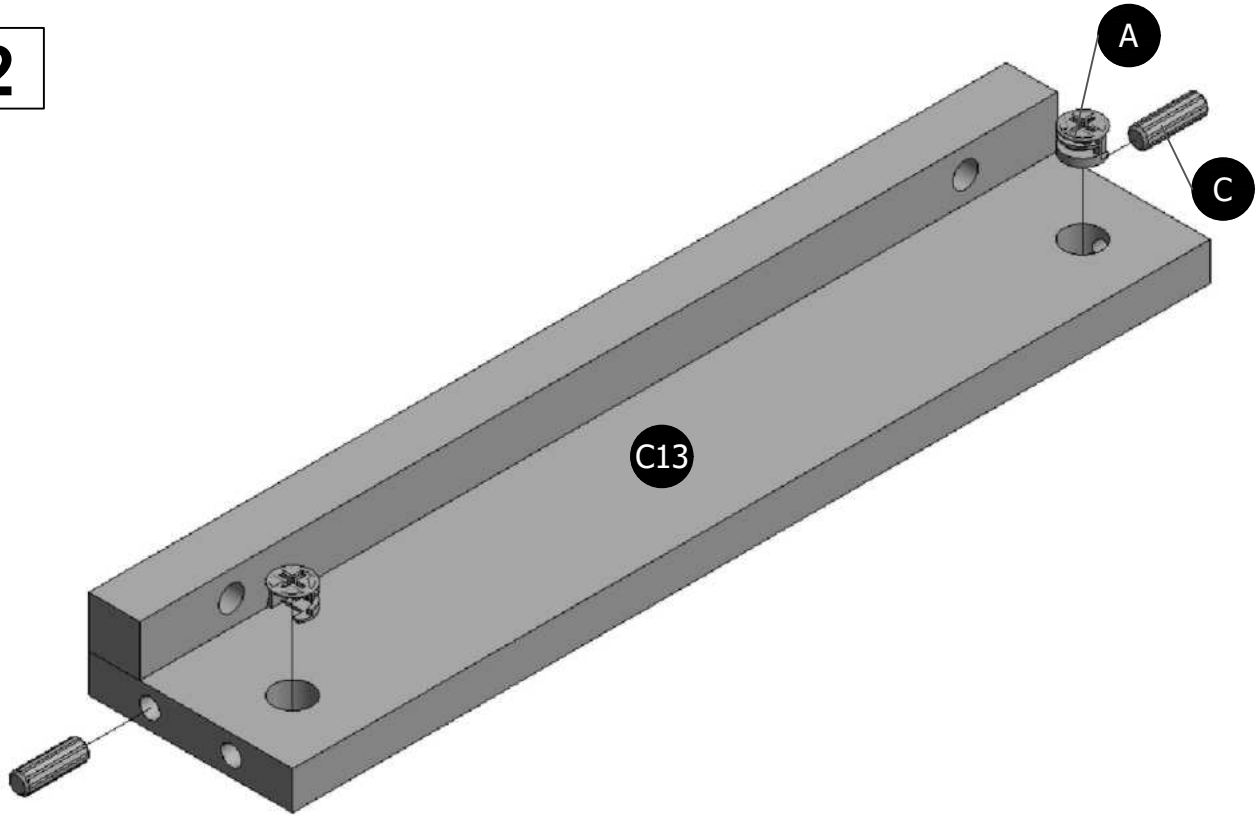


STEP 8

 NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

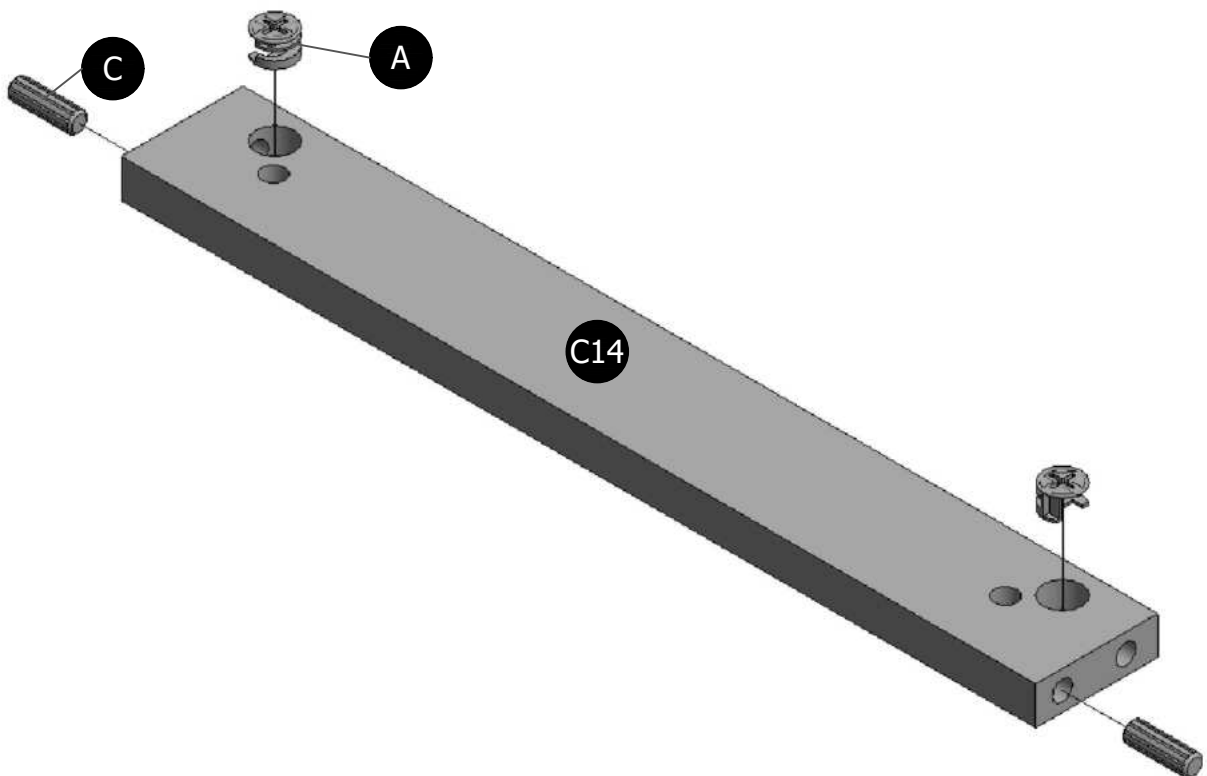


C90261CH ASSEMBLY INSTRUCTION

 STEP 9

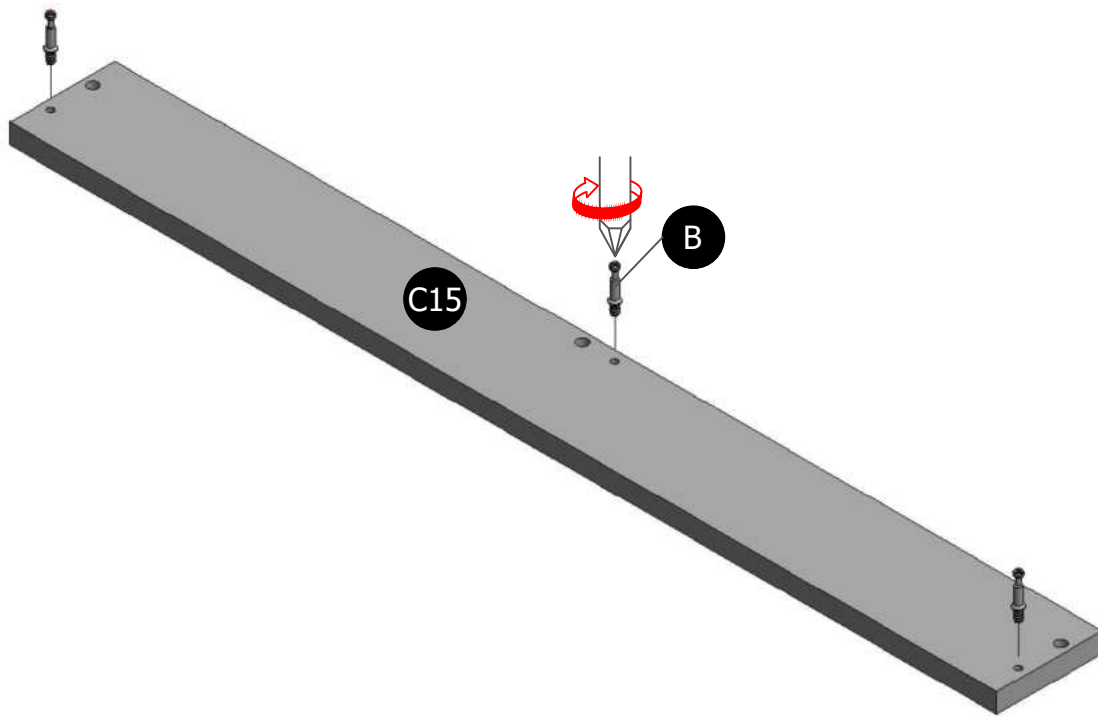


 STEP 10

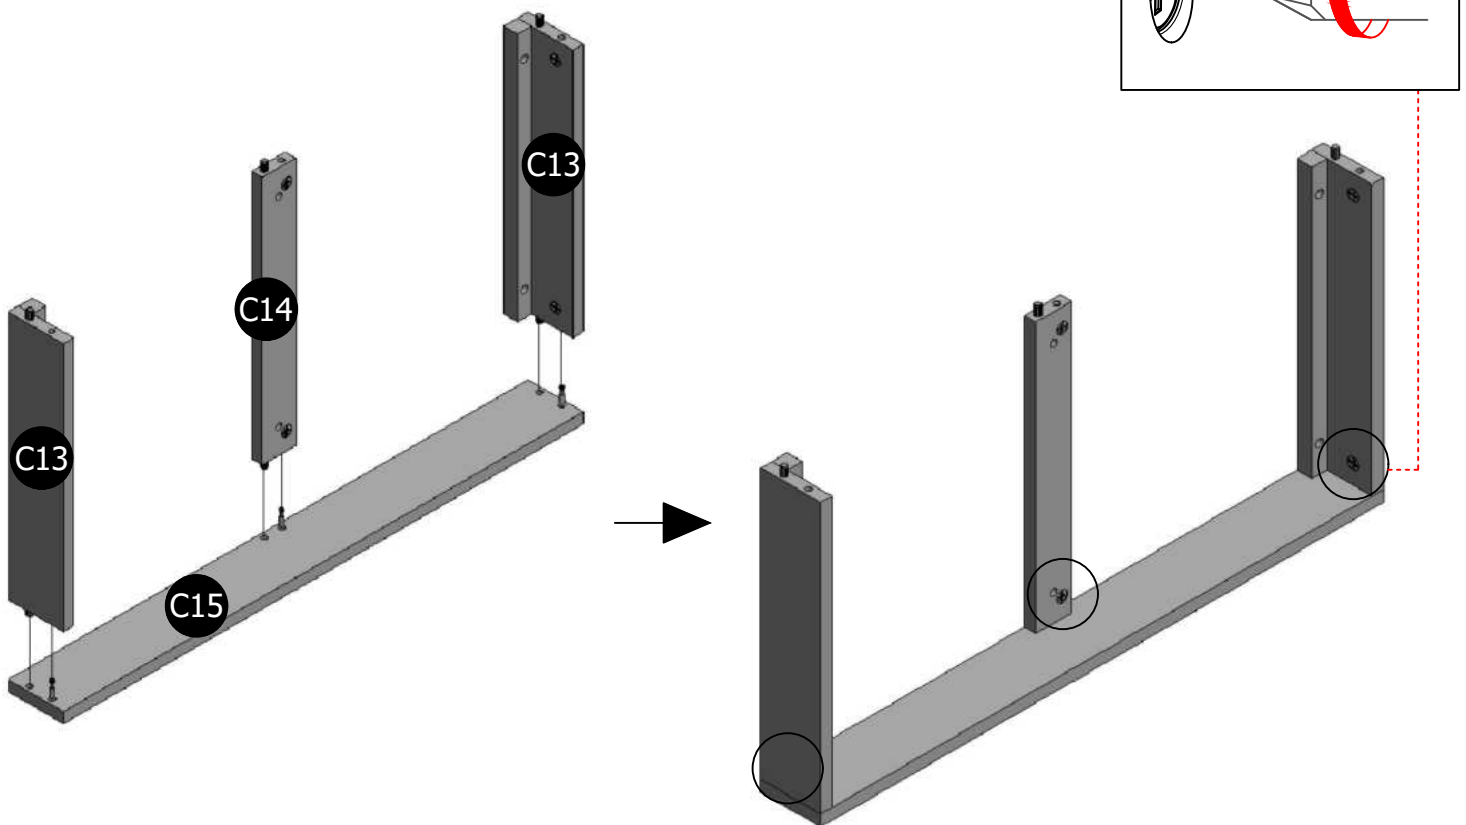


C90261CH ASSEMBLY INSTRUCTION

 STEP 11

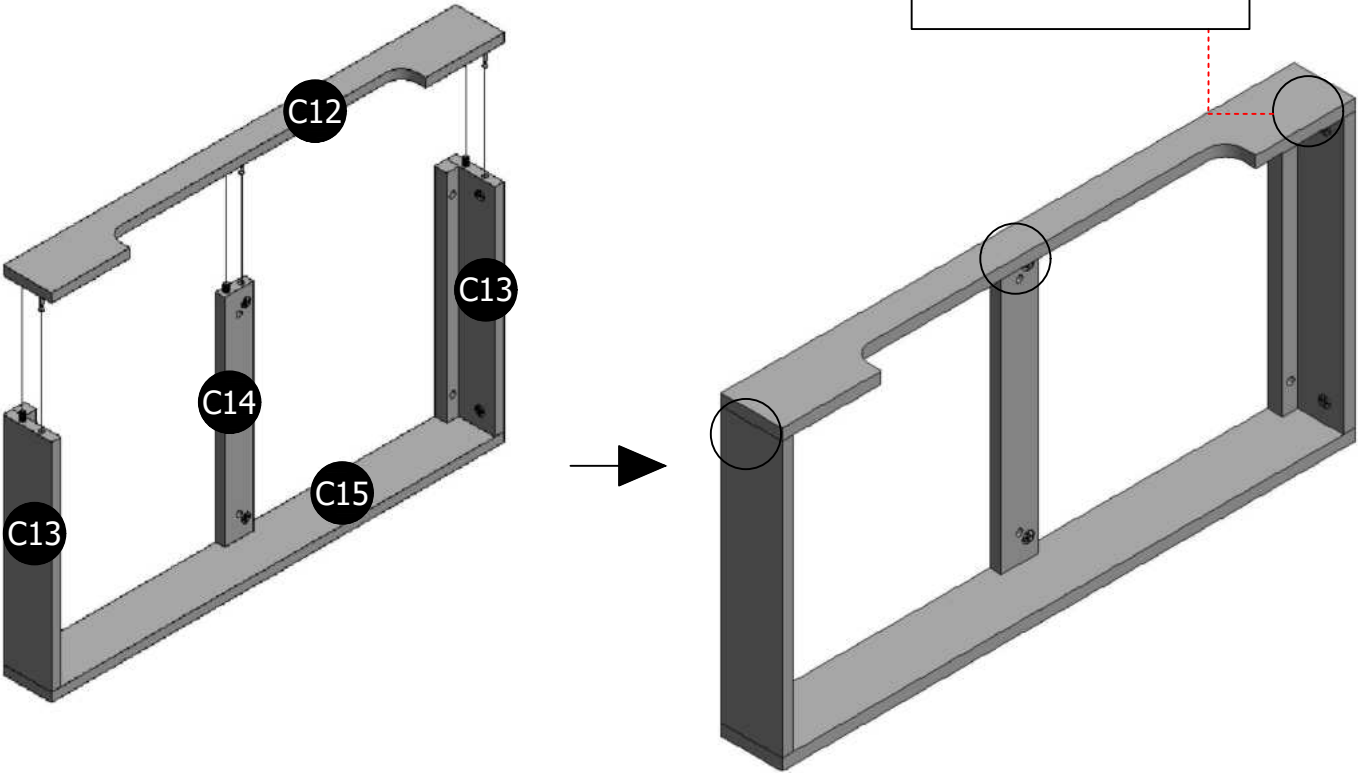


STEP 12

 
STEP 12.1

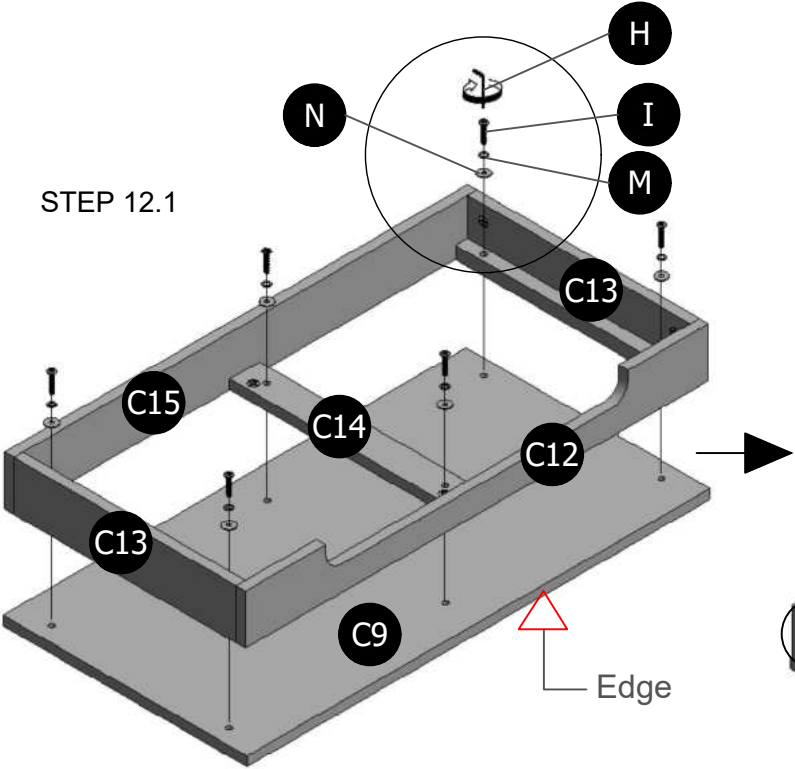

INSIDE VIEW

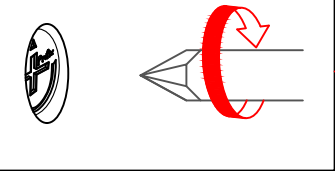 


 STEP 12.2

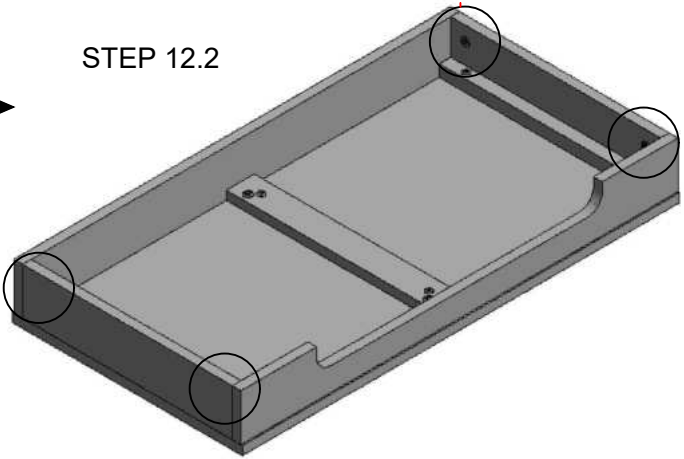


C90261CH ASSEMBLY INSTRUCTION

 STEP 13


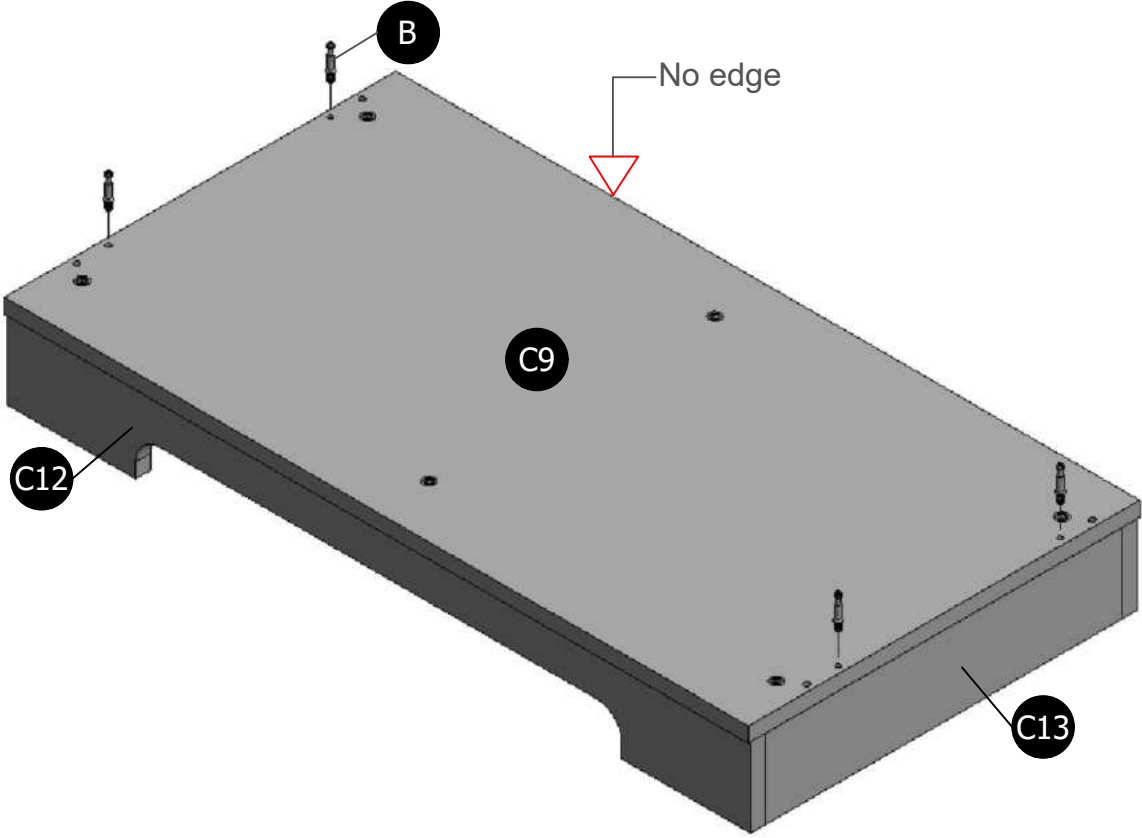


 STEP 14

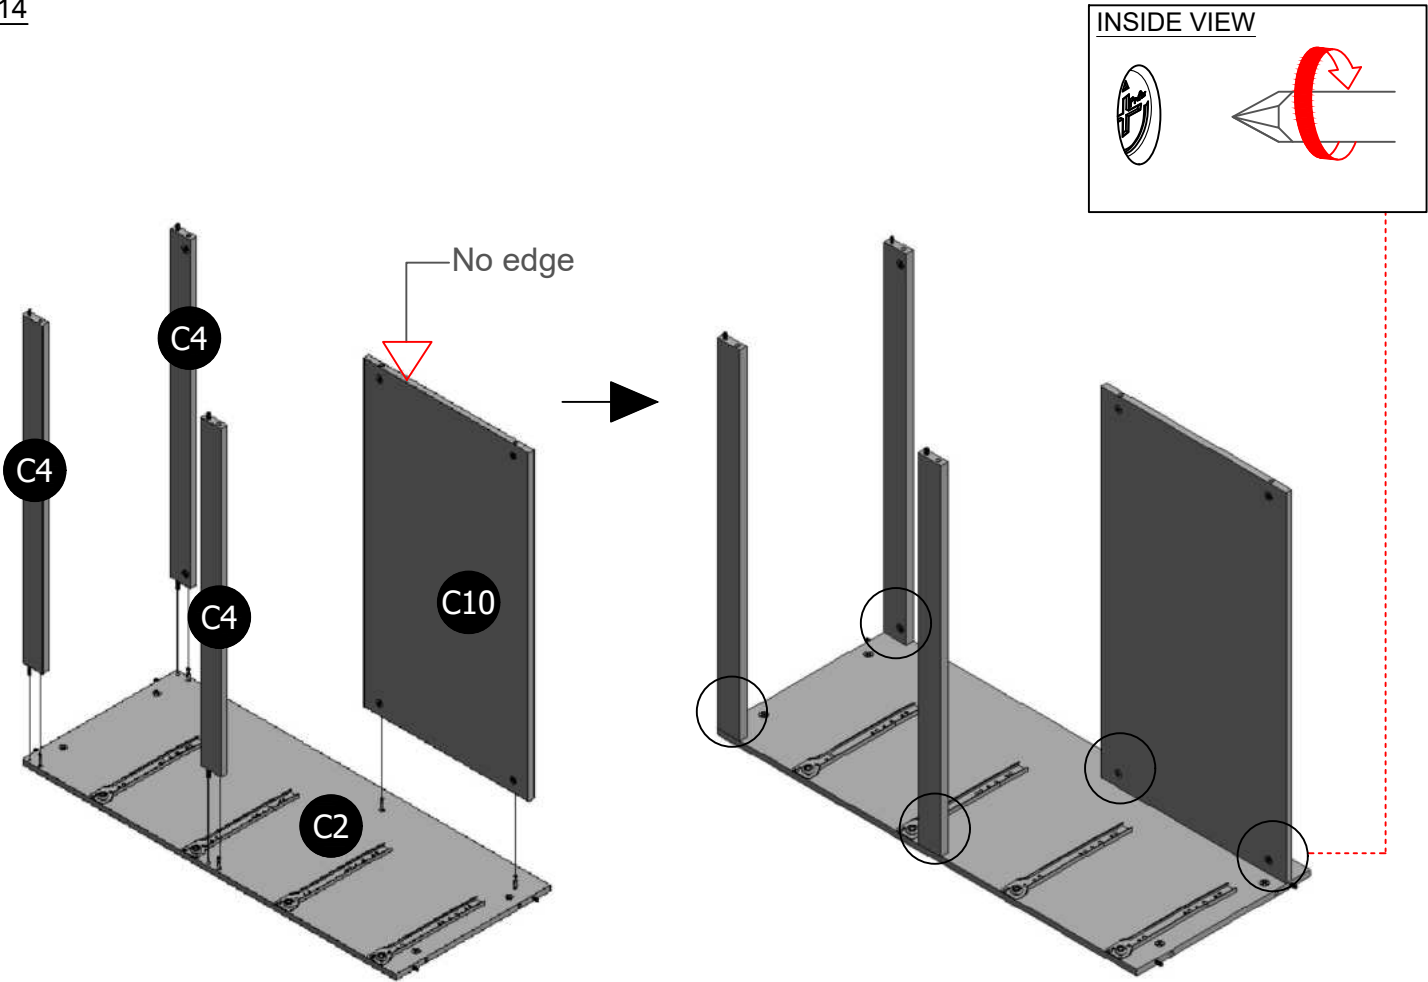


C90261CH ASSEMBLY INSTRUCTION

 
 
STEP 15

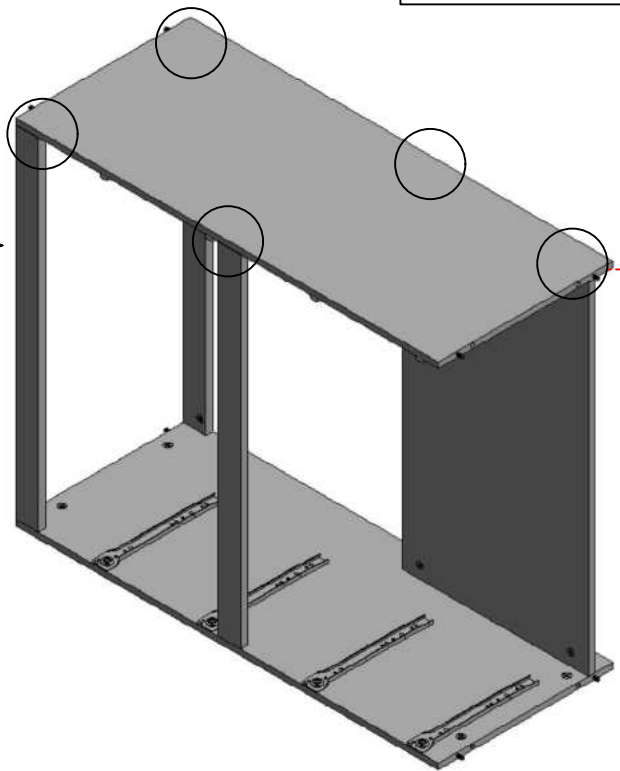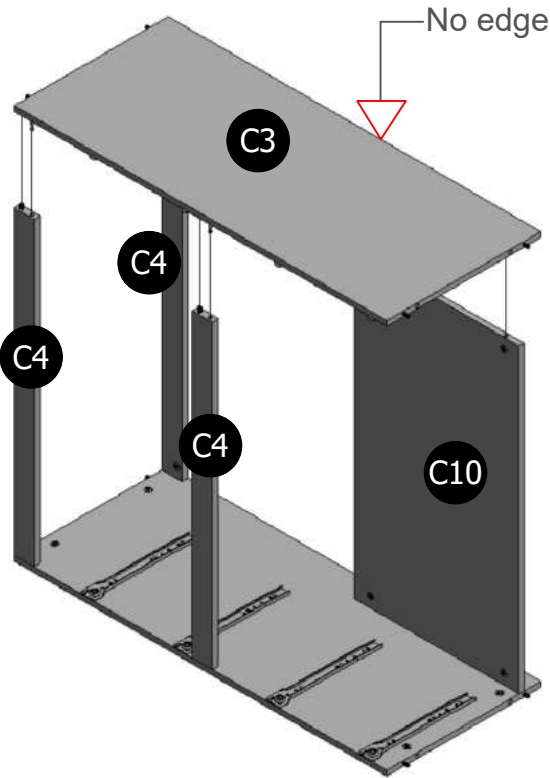


INSIDE VIEW

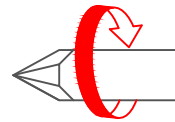 

  STEP 16

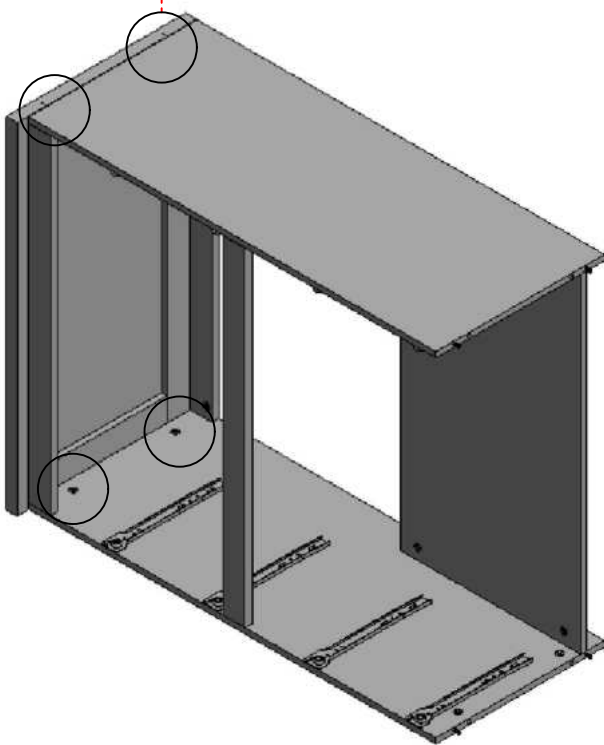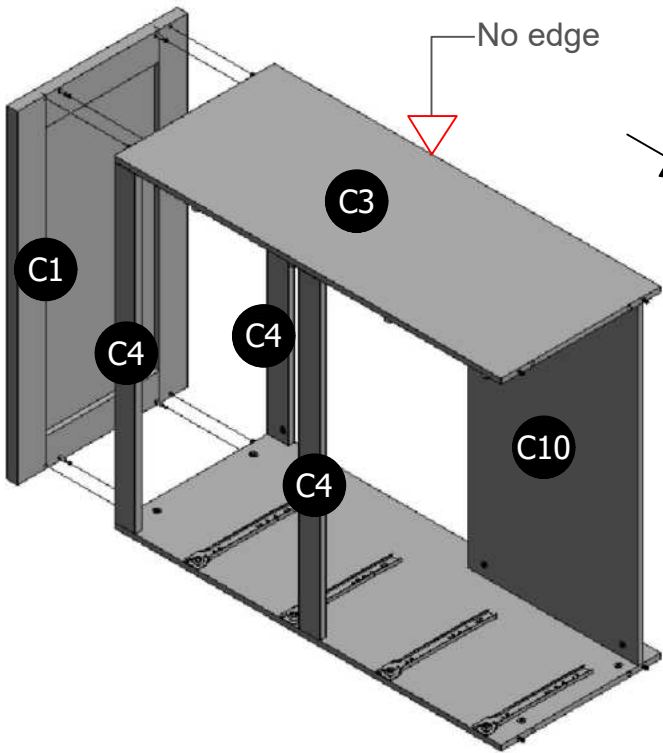

INSIDE VIEW

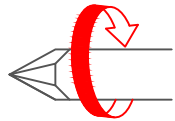 


C90261CH ASSEMBLY INSTRUCTION


STEP 17

CAUTION

 This step requires second adult's assistance to avoid injury or product damage.

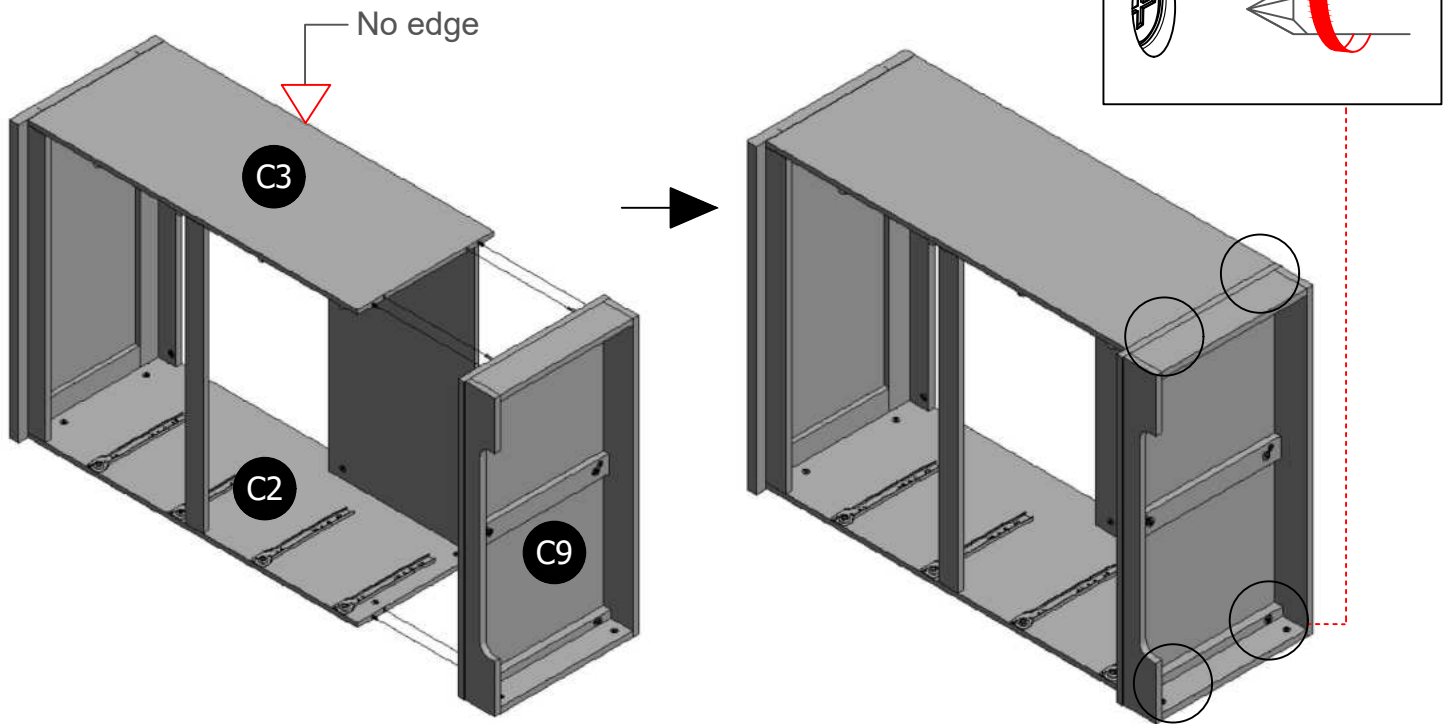

 
STEP 18

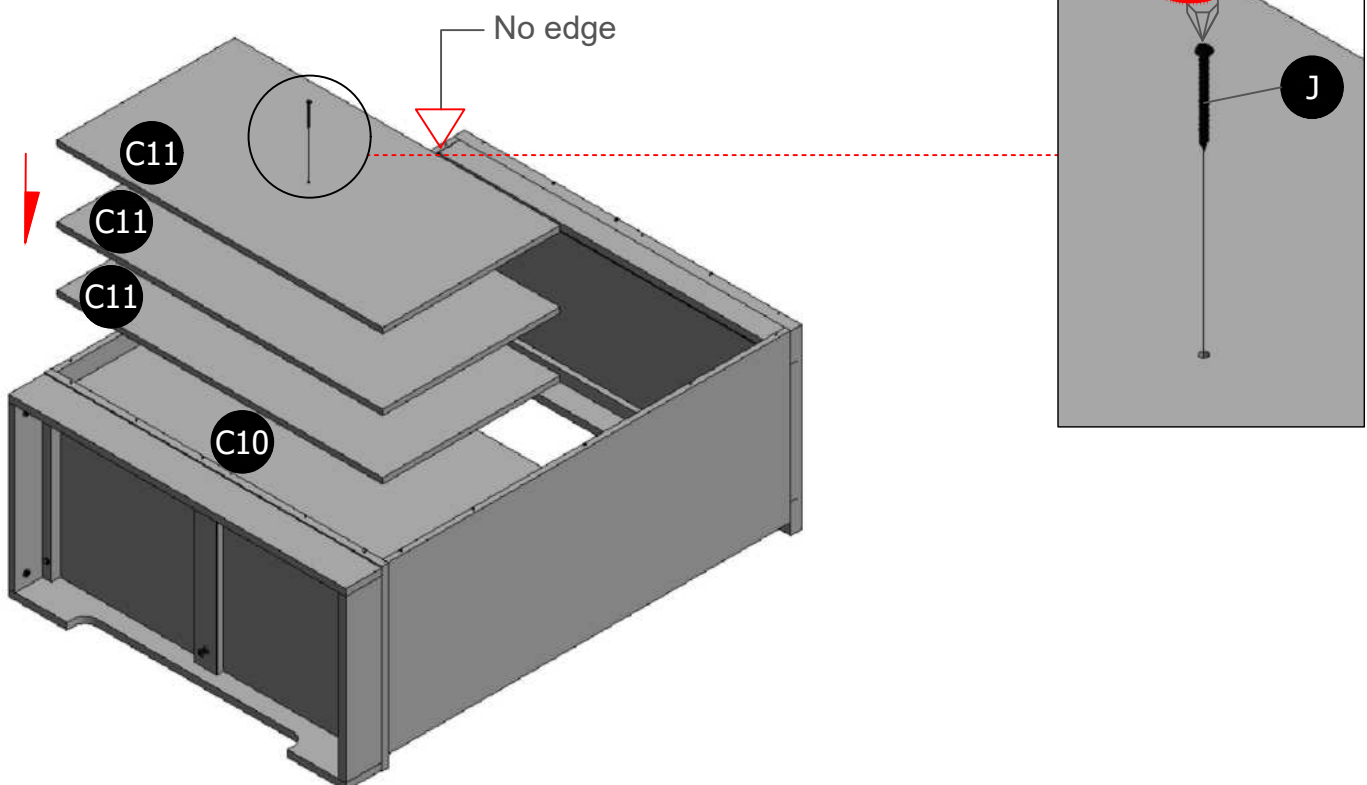

C90261CH ASSEMBLY INSTRUCTION


STEP 19

 Side with color paper must be the same.

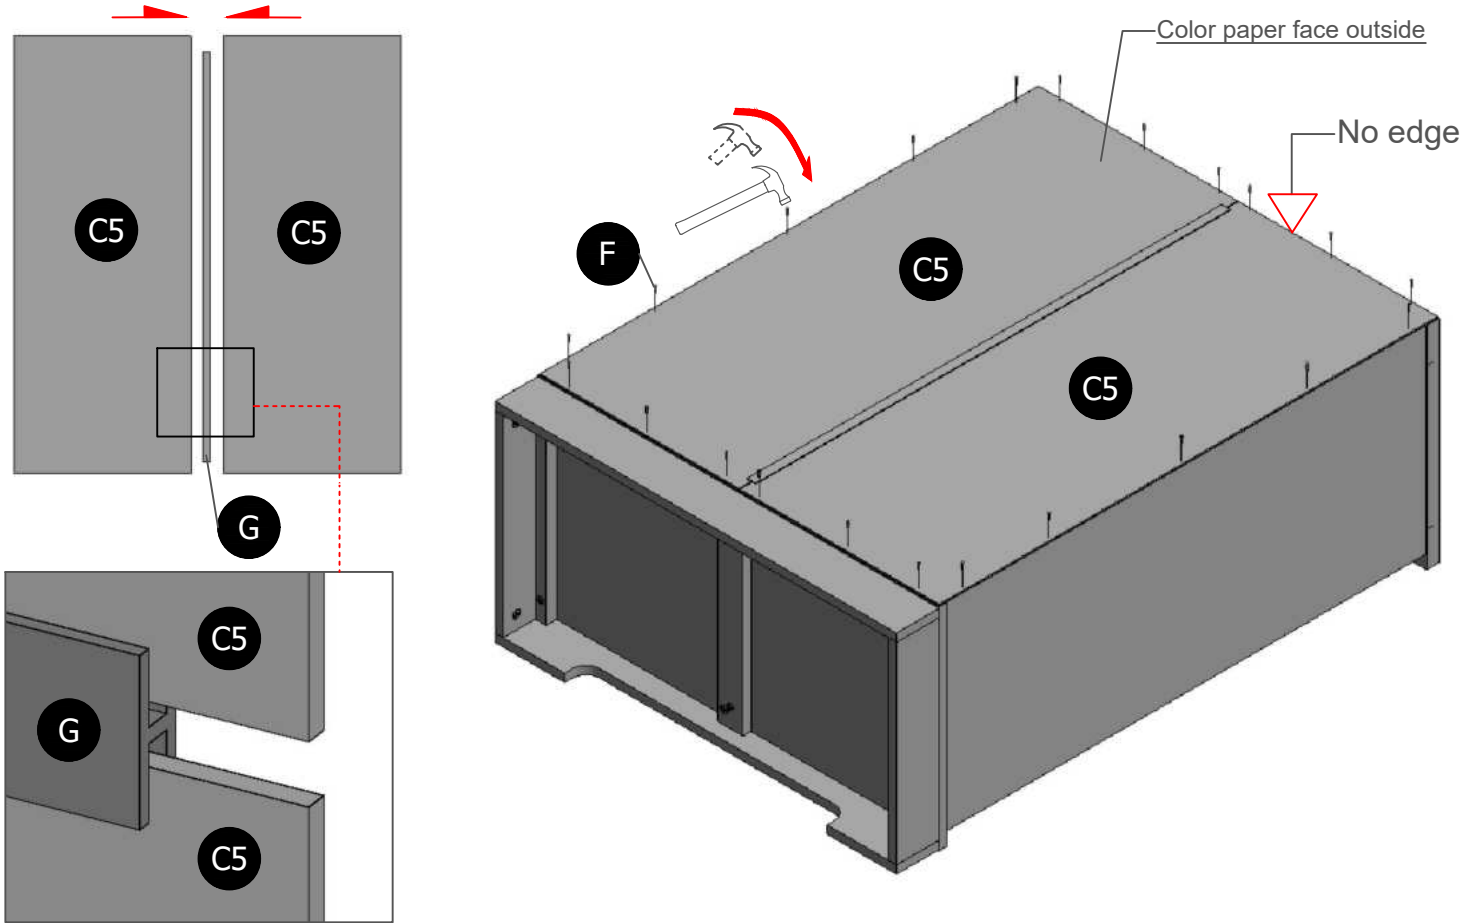

STEP 20

 x 4

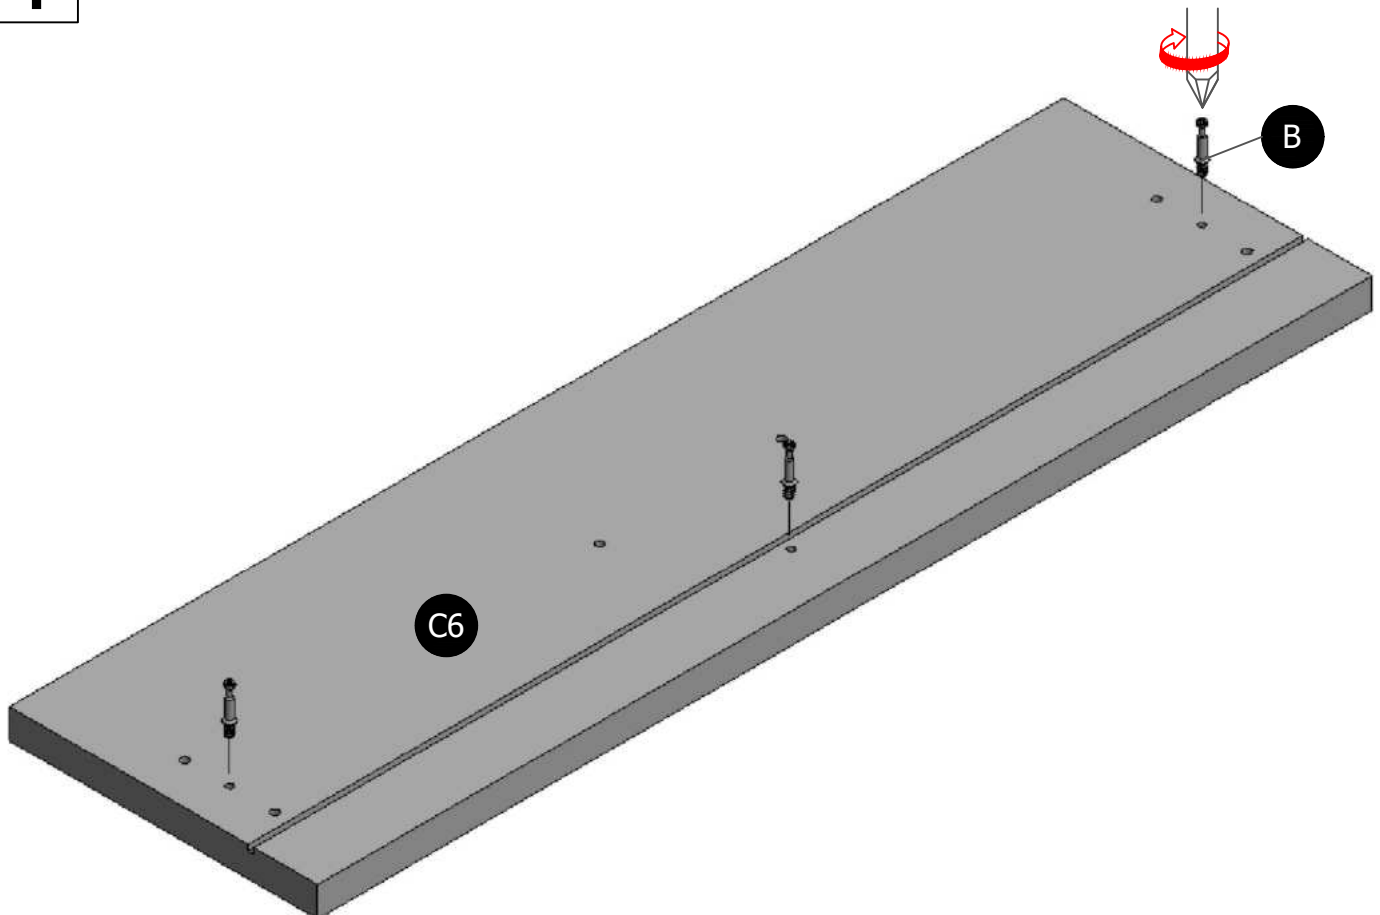


C90261CH ASSEMBLY INSTRUCTION

STEP 21

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 
x 4

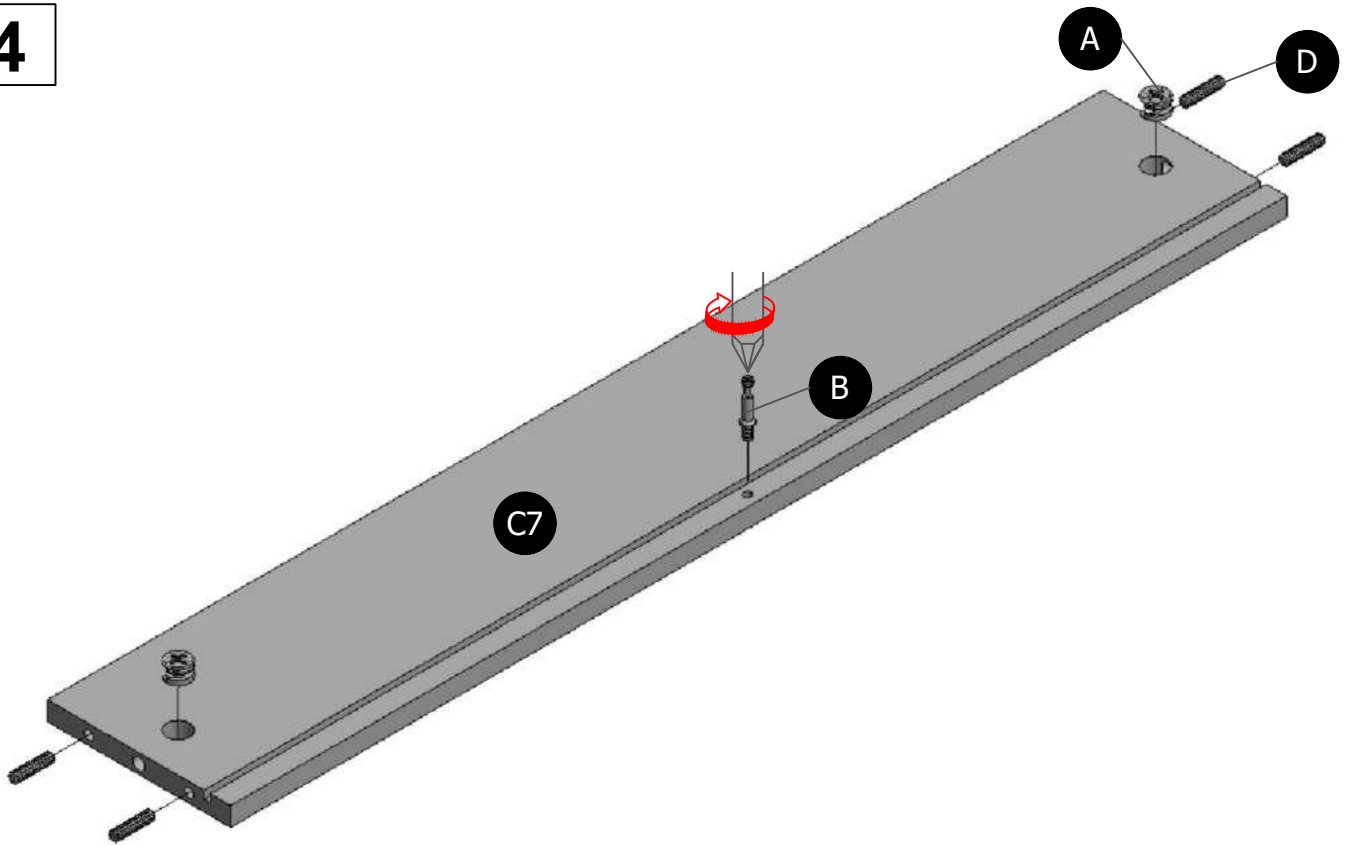

STEP 22

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 x 4

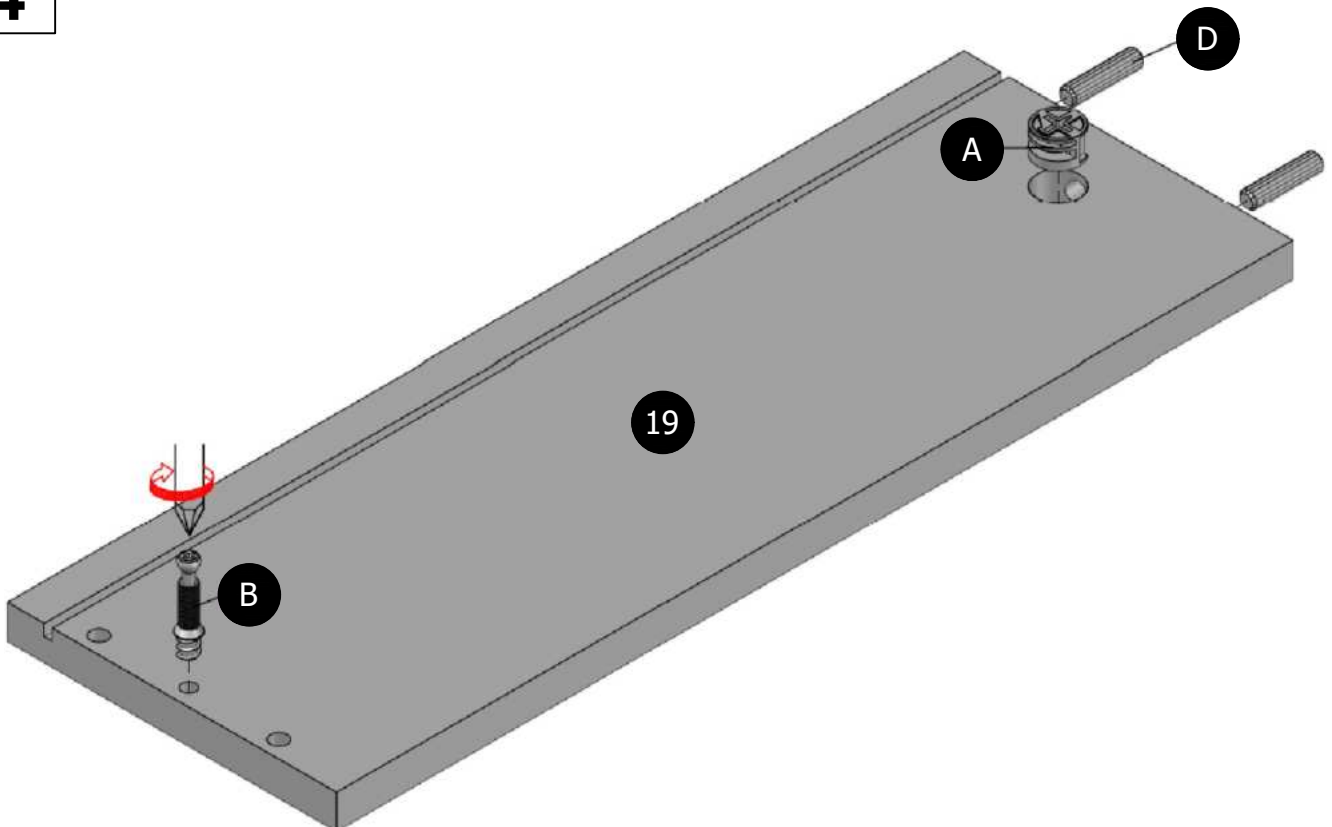


C90261CH ASSEMBLY INSTRUCTION

STEP 23

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 
x 4

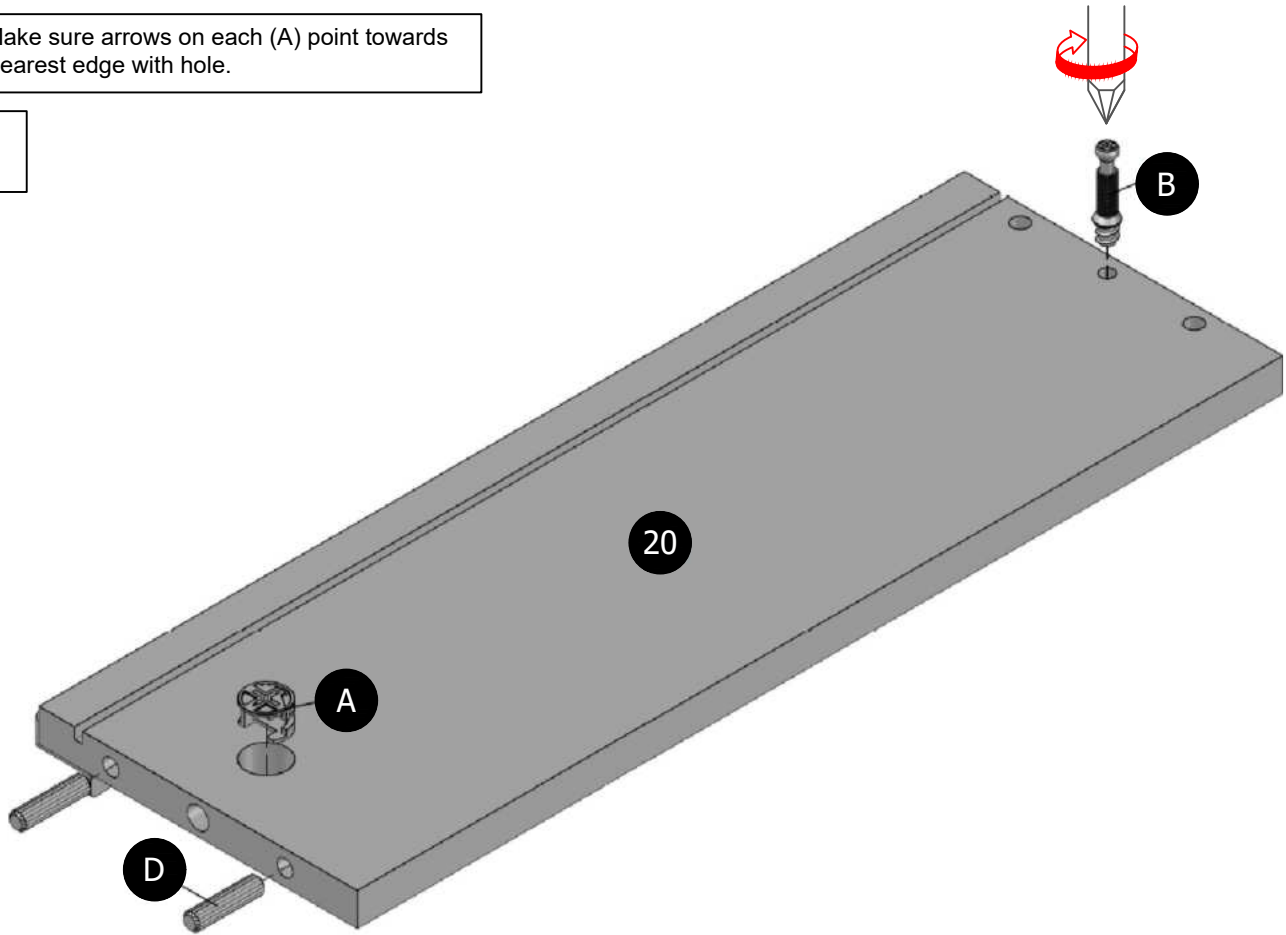

STEP 24

NOTE : - Make sure arrows on each (A) point towards nearest edge with hole.

 
x 4

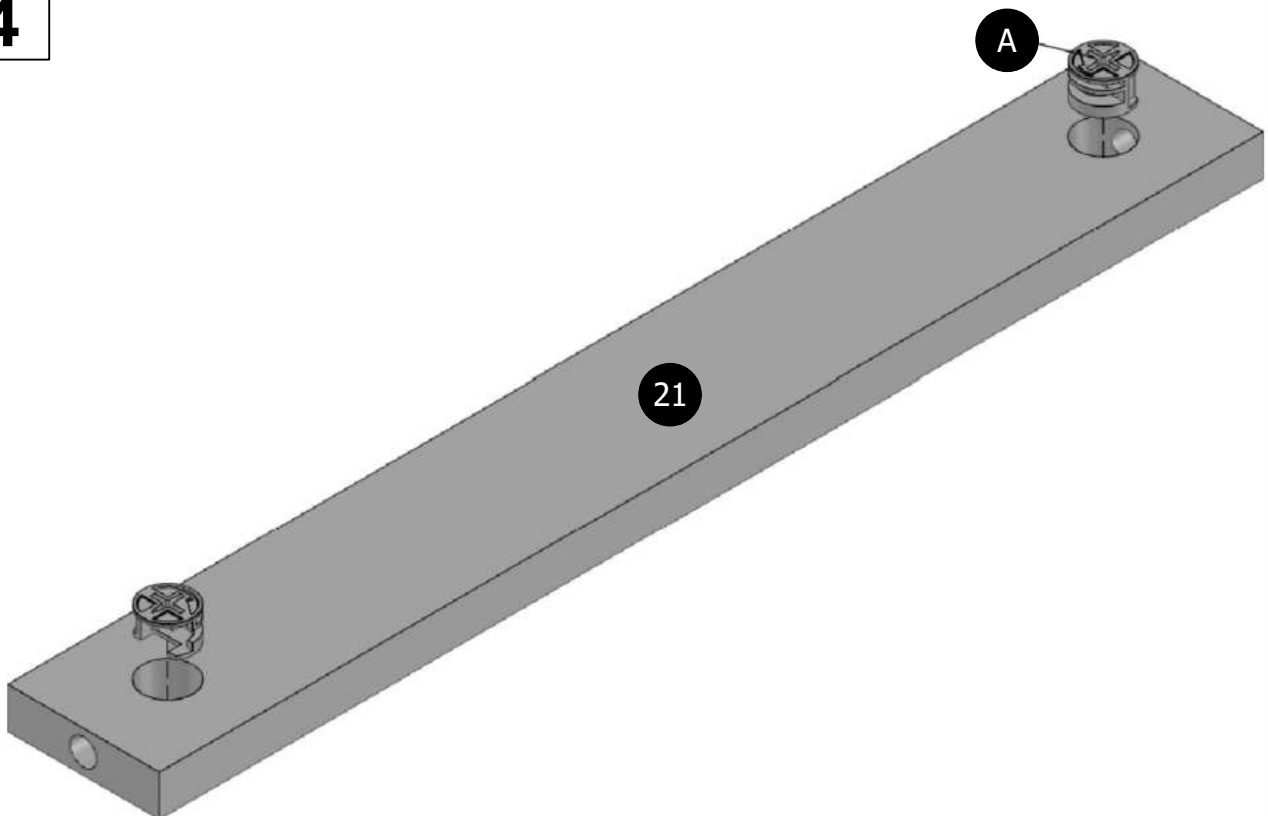

C90261CH ASSEMBLY INSTRUCTION


STEP 25

 x 4

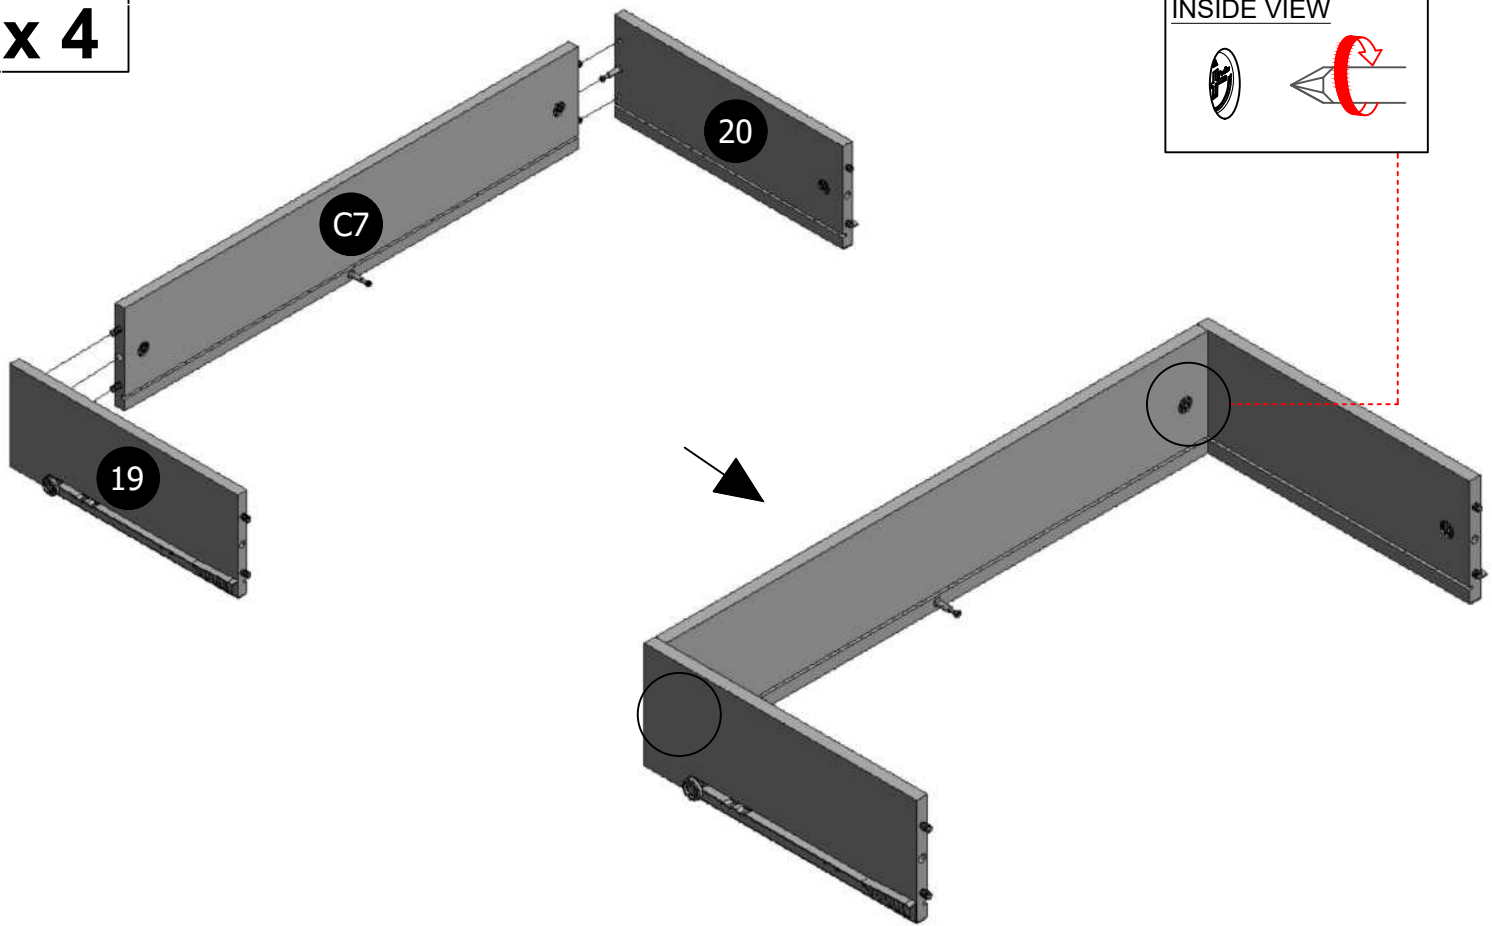

STEP 26



 
x 4

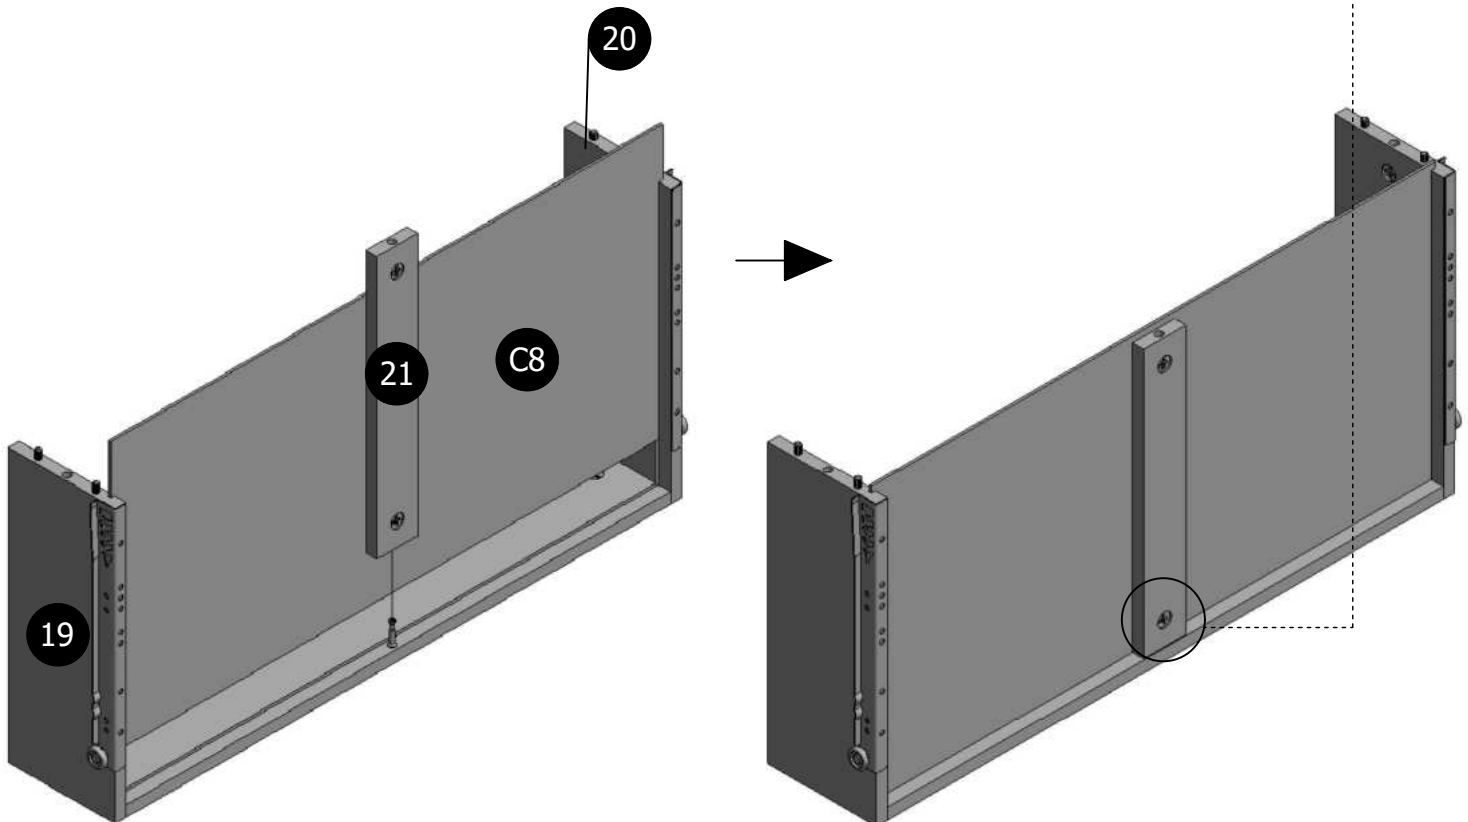

C90261CH ASSEMBLY INSTRUCTION



STEP 27

   x 4

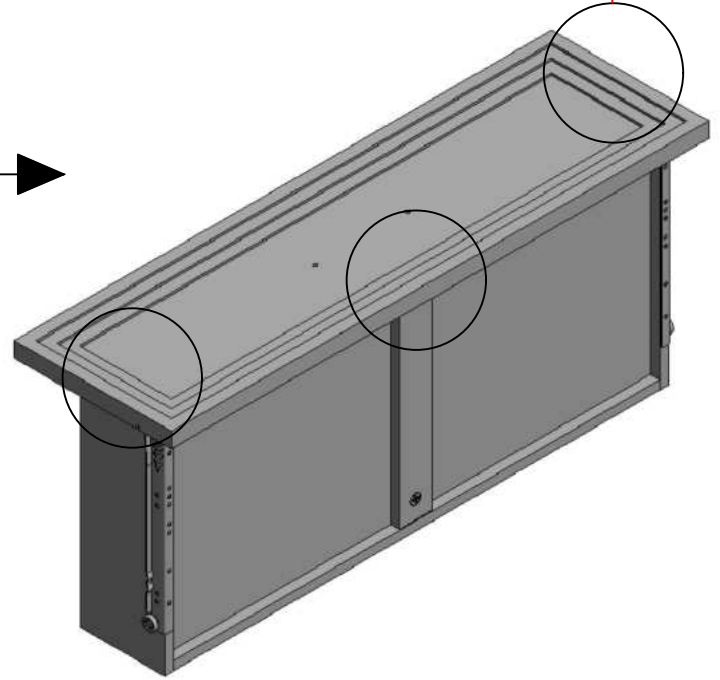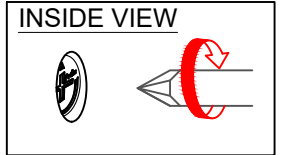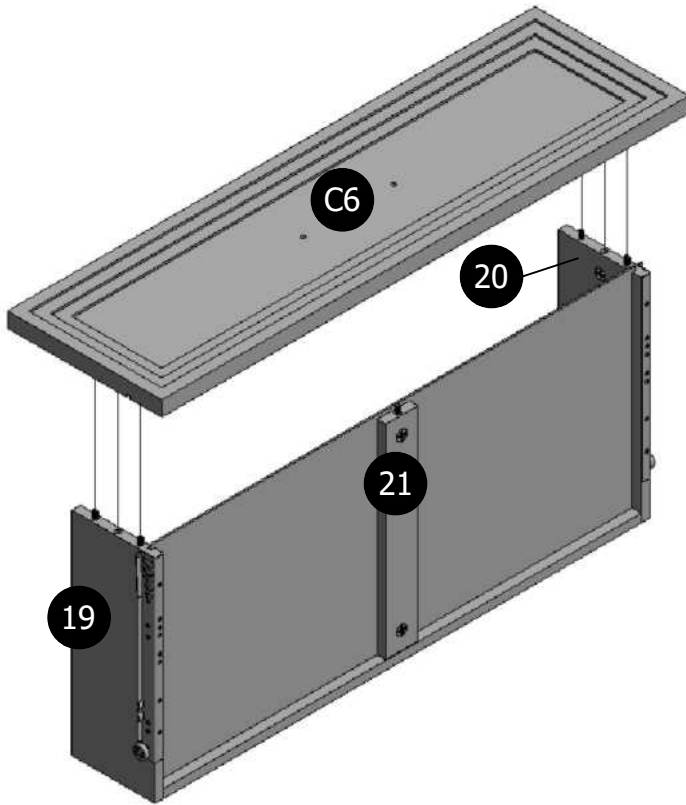


STEP 28

  x 4

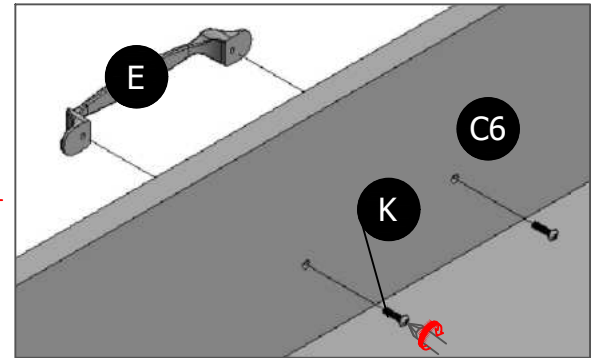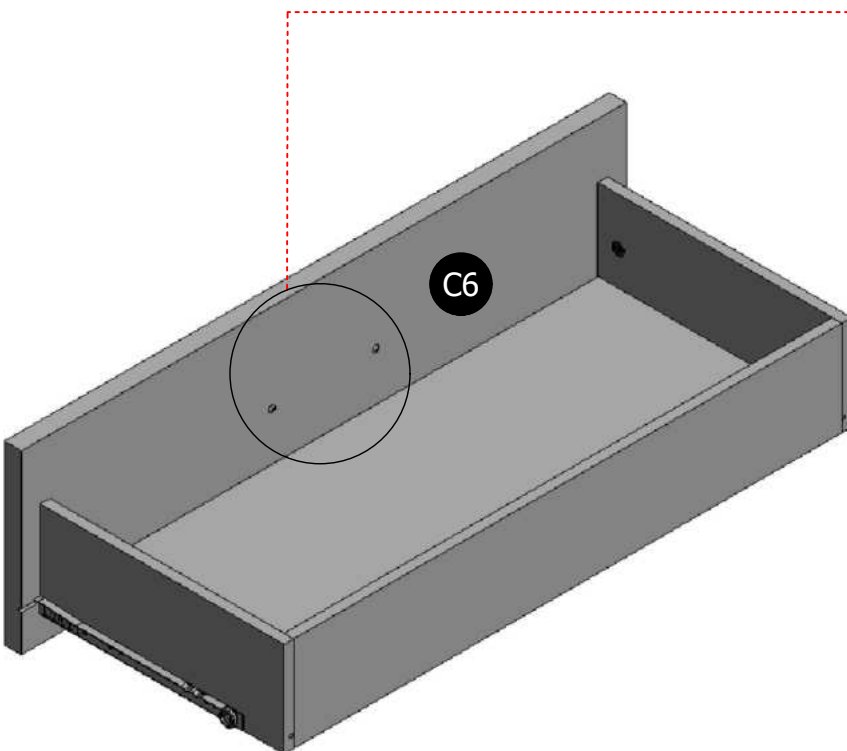

C90261CH ASSEMBLY INSTRUCTION

 STEP 29

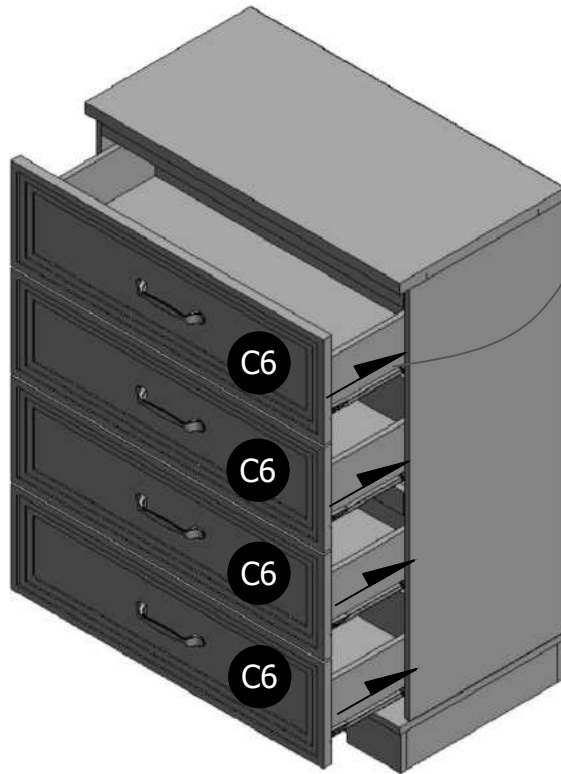


One of (20) with sticker
place it to the top of right side.

STEP 30



 WALLBOARD AND STUD

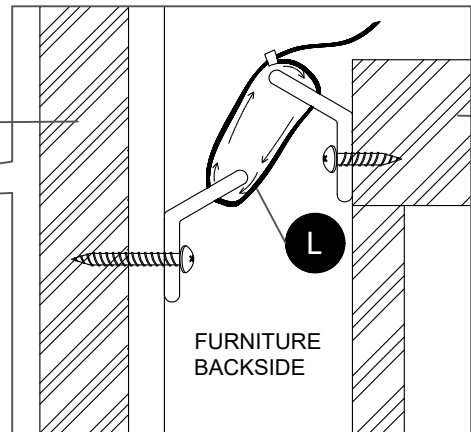

FURNITURE TOP

FURNITURE BACKSIDE

ASSEMBLY COMPLETED