
ASSEMBLY INSTRUCTIONS 30INCH BATH VANITY (COMBO)

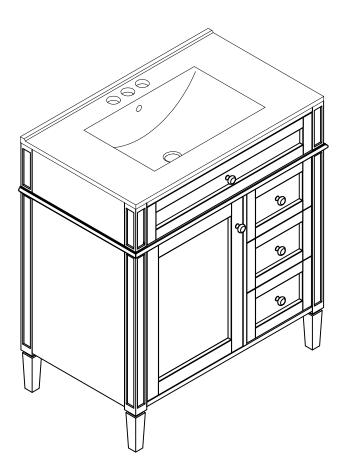

 
Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"













IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!!

We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.


Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

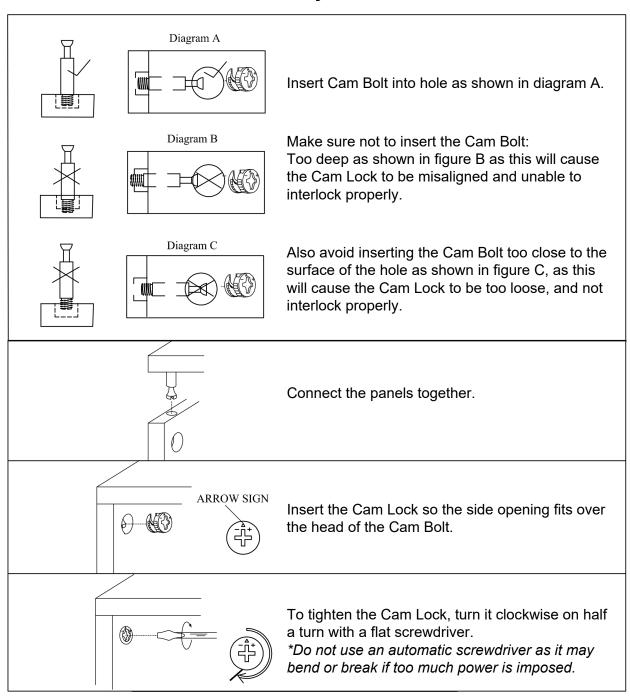

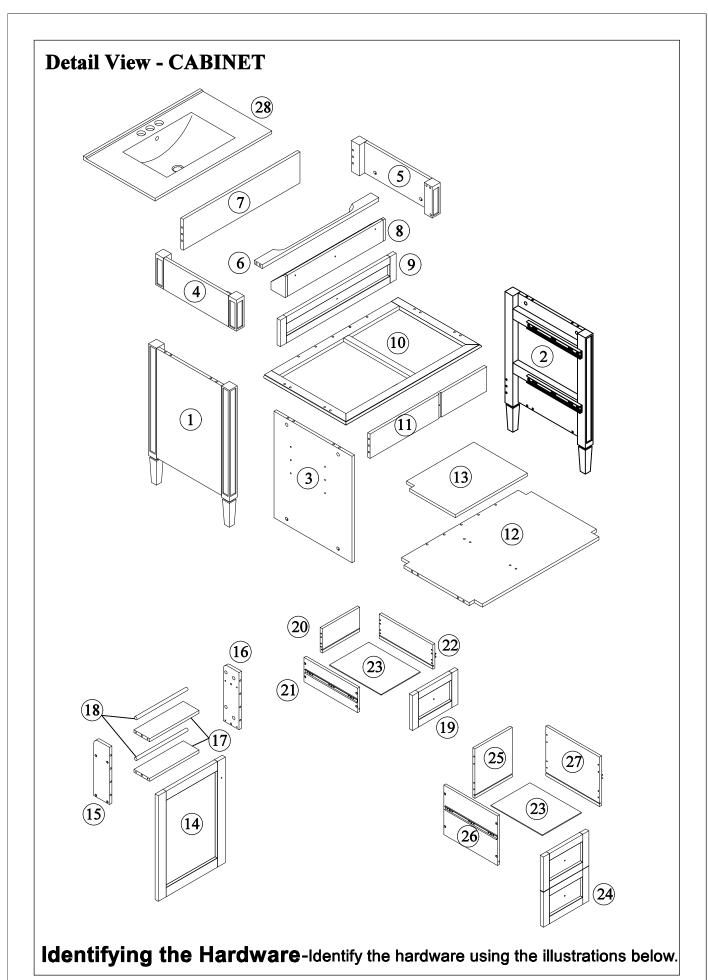



Part List - N710P250194 2 Side Panel (L) - 1pc Side Panel (R) - 1pc 3 4 Top Side Panel (L) - 1pc Mid Panel - 1pc 5 6 Top Side Panel (R) - 1pc Top Crossbar Front - 1pc 7 8 Flip Drawer - 1pc Top Panel Rear - 1pc 10 9 Mid Frame - 1pc Flip Drawer Face - 1pc 11 12 Bottom Panel Rear - 1pc Bottom Panel - 1pc 13 14 Cabinet Door - 1pc Adjustable Shelf - 1pc


Part List - N710P250194							
15		16					
	Left Panel of Door - 1pc		Right Panel of Door - 1pc				
17		18					
	Mid Panel of Door - 2pcs		Round Bar - 2pcs				
19		20					
	Top Drawer Front - 1pc		Top Drawer Rear - 1pc				
21		22					
	Top Drawer Side (L) - 1pc		Top Drawer Side (R) - 1pc				
23		24					
	Bottom Drawer Panel - 2pcs		Bottom Drawer Front - 1pc				
25	Rottom Drawer Pear 1no	26	Rottom Drawer Side (L) 122				
27	Bottom Drawer Rear - 1pc	20	Bottom Drawer Side (L) - 1pc				
27		28					
	Bottom Drawer Side (R) - 1pc		Sink - 1pc				


Hardware List - N710P250194


Α		В		С	
ø6x35mm		ø14.5x12mm		ø8xø4x25mm	
Three in one bolts(35pcs)		Three in one lock(35pcs)		Round head screw(3pcs)	
D		Е		F	
		<i>(</i>		(S)	
ø8xø4x32mm		90			
Round head screw(24pcs)		Handle(5pcs)		ø5/32"x20mm Handle screw(1pc)	
G		Н	(٥٩٥٥)	I	Tandio coron (1po)
	(S)				
ø5/32"x25mm		Duo Forte (1pc)		Rotary Hinge(2pcs)	
J	Handle screw(4pcs)	K		L	lotary rinige(zpos)
		<u>rx</u>	180	ட	(-
Emmino>				Ŭ	
ø6xø3x12mm			7		ø7xø3.5x15mm
Flat head screw(8pcs)		Damping hinge (2pcs)		Flat head screw(12pcs)	
M		N		0	
			OY////D		THE PARTY OF THE P
		ø8x30mm			
Laminate pad(4pcs)		Wood dowel(36pcs)		Anti fall hardware(1set)	
Р					
<i>SY////</i> D					
	ø6x30mm				
W	ood dowel(16pcs)				

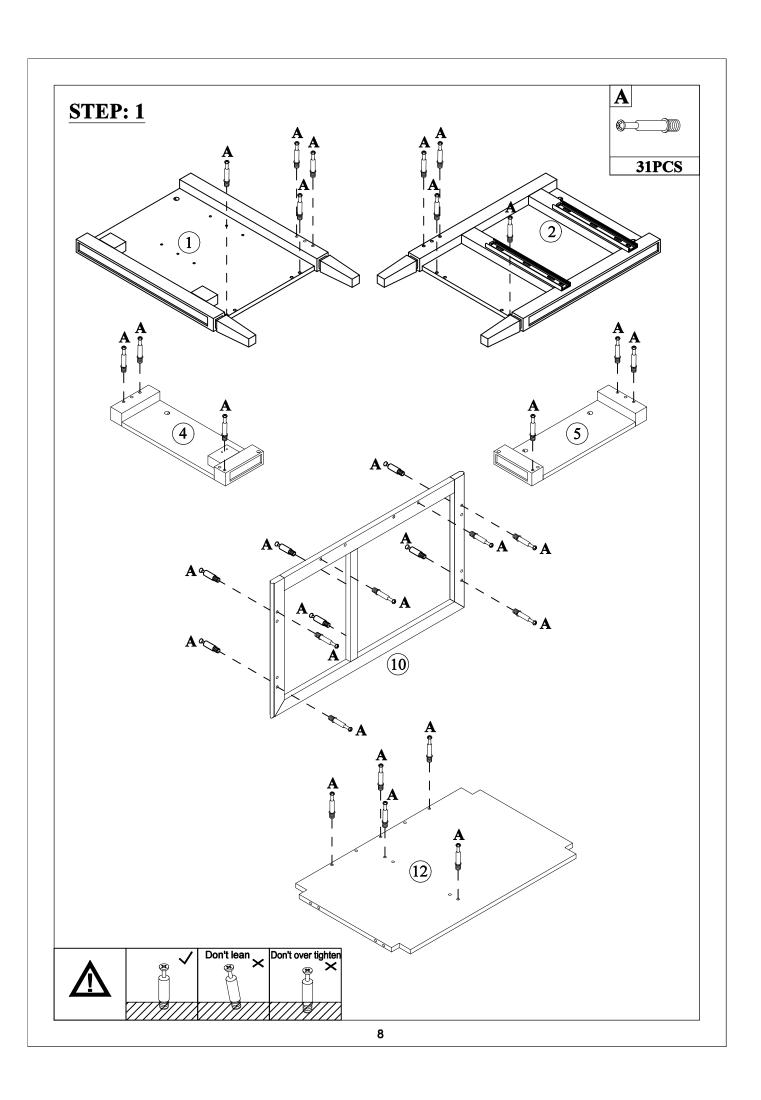


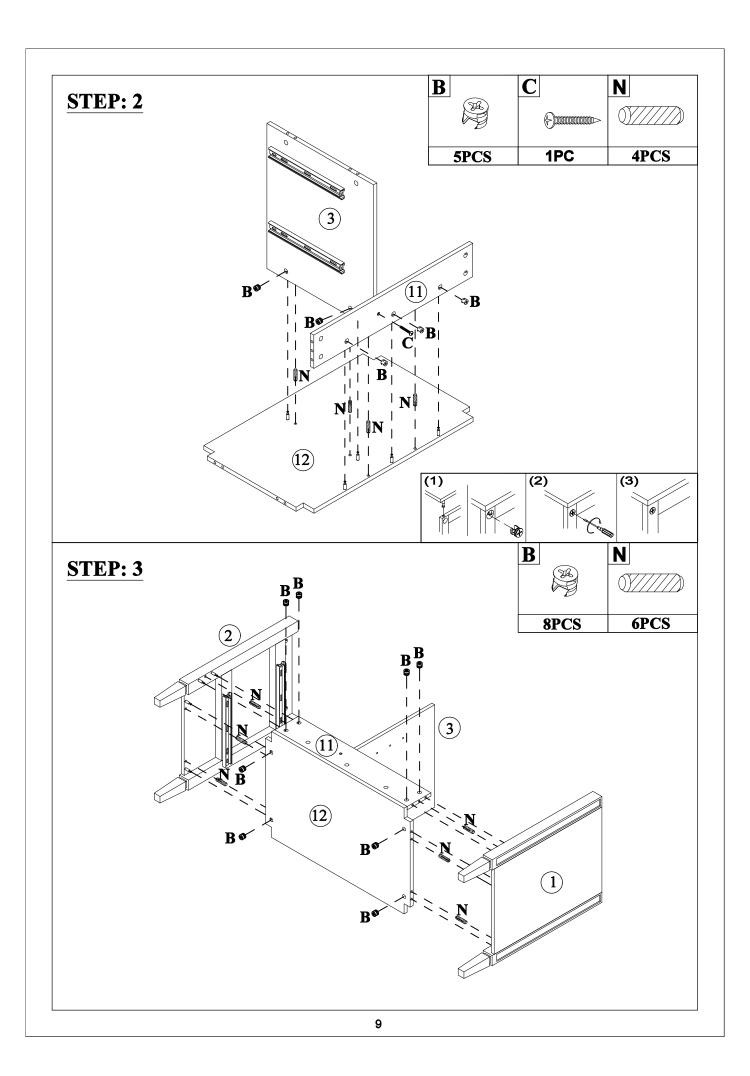


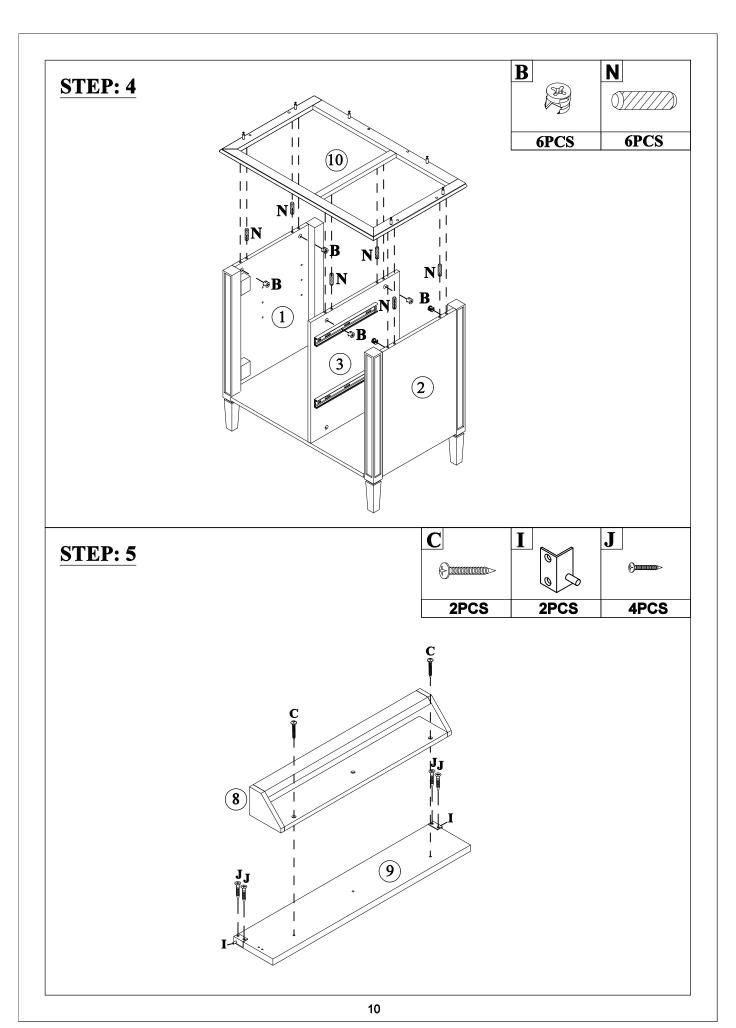


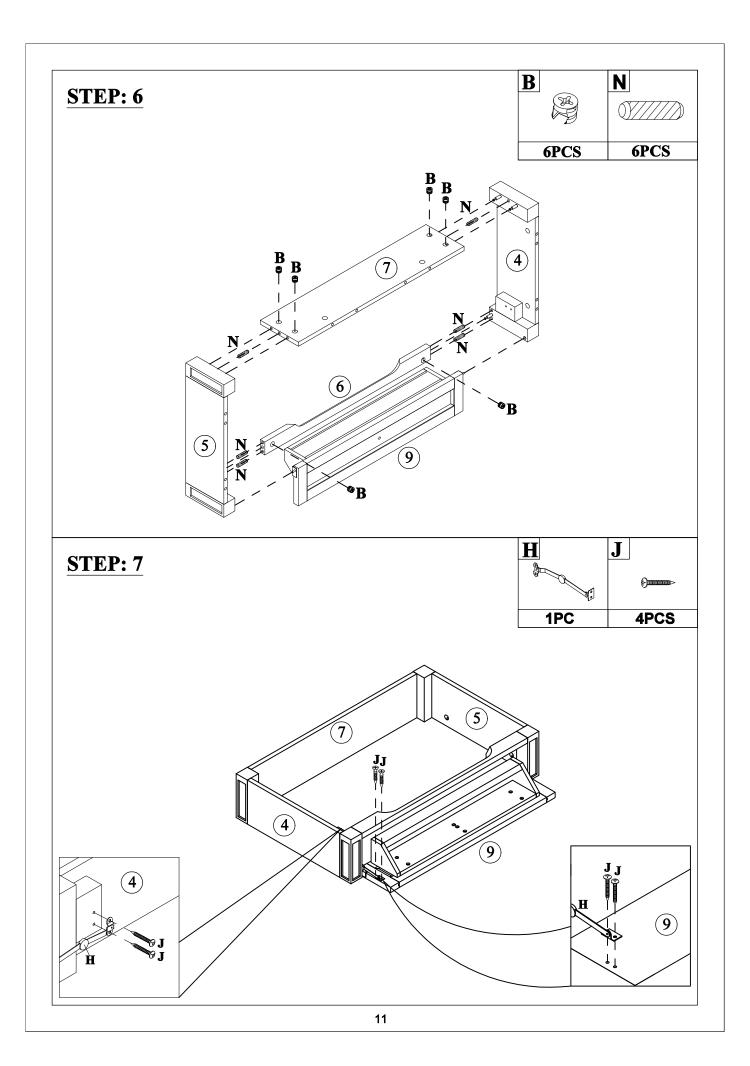


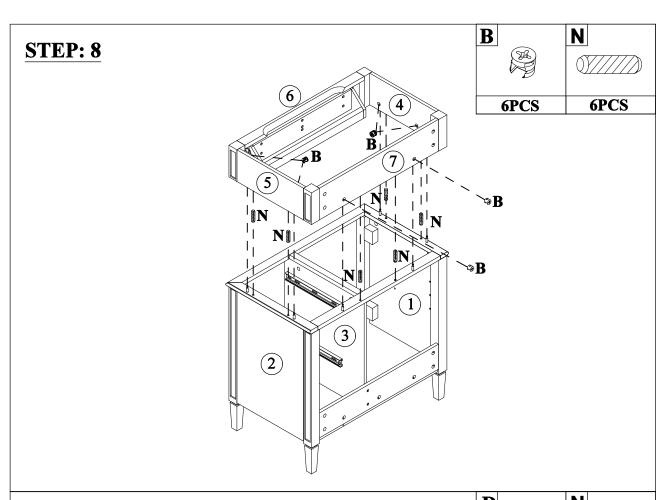


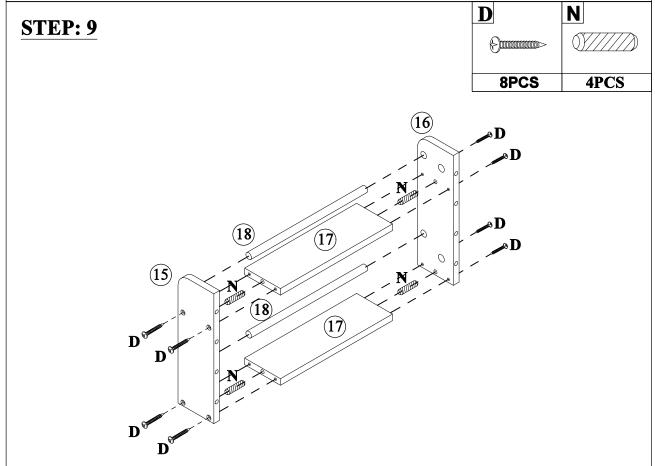


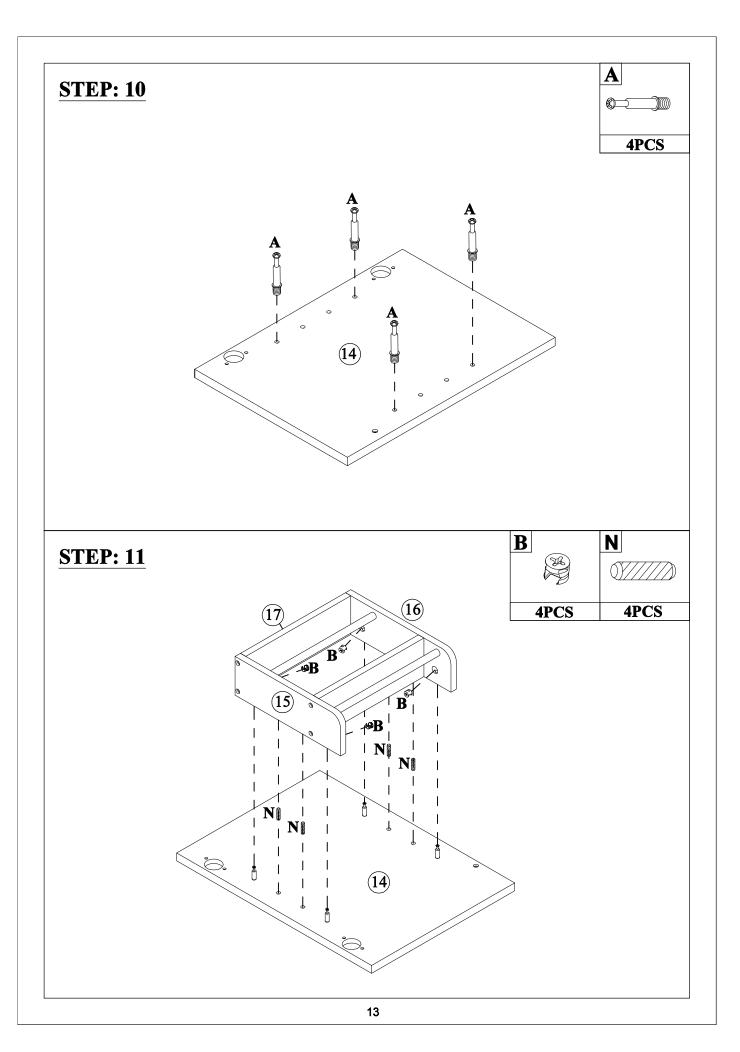

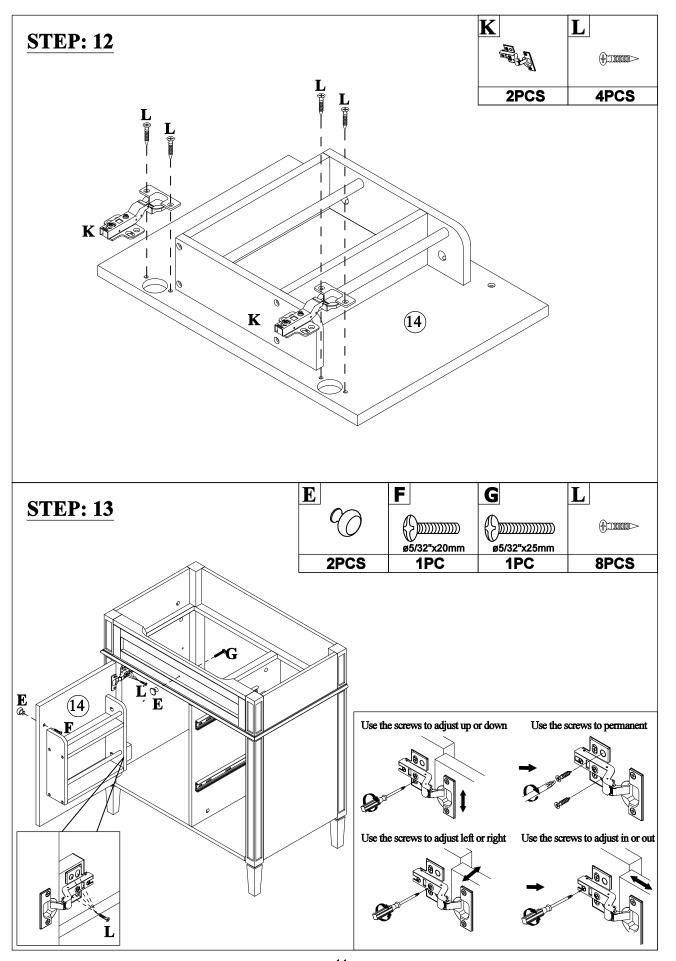


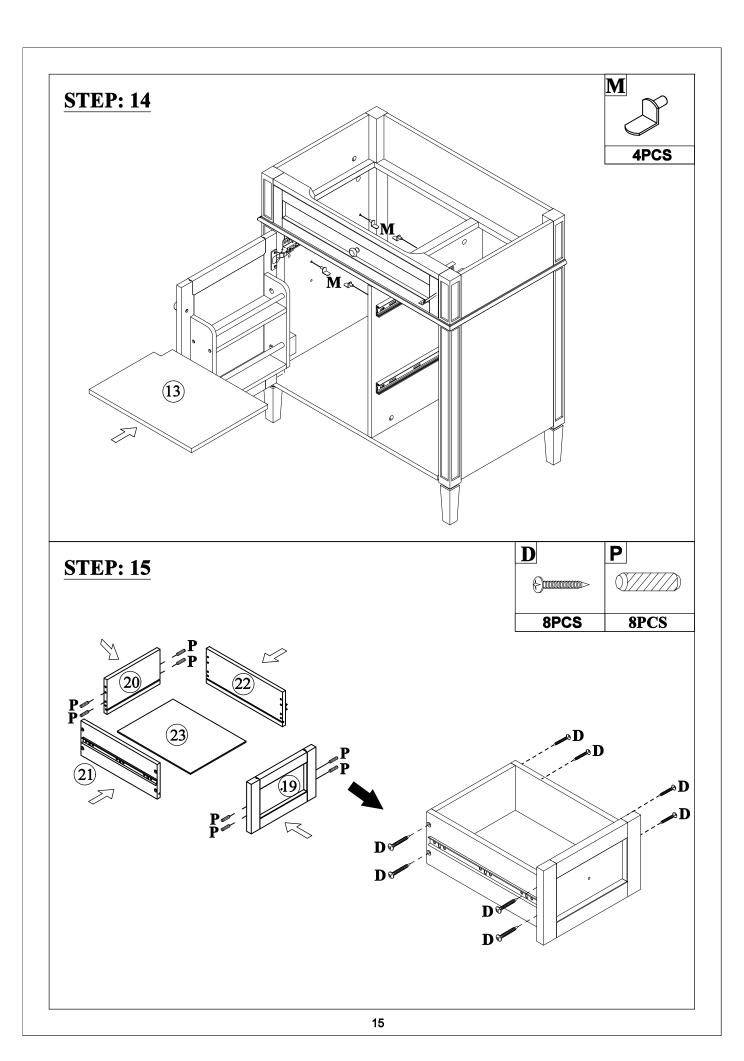


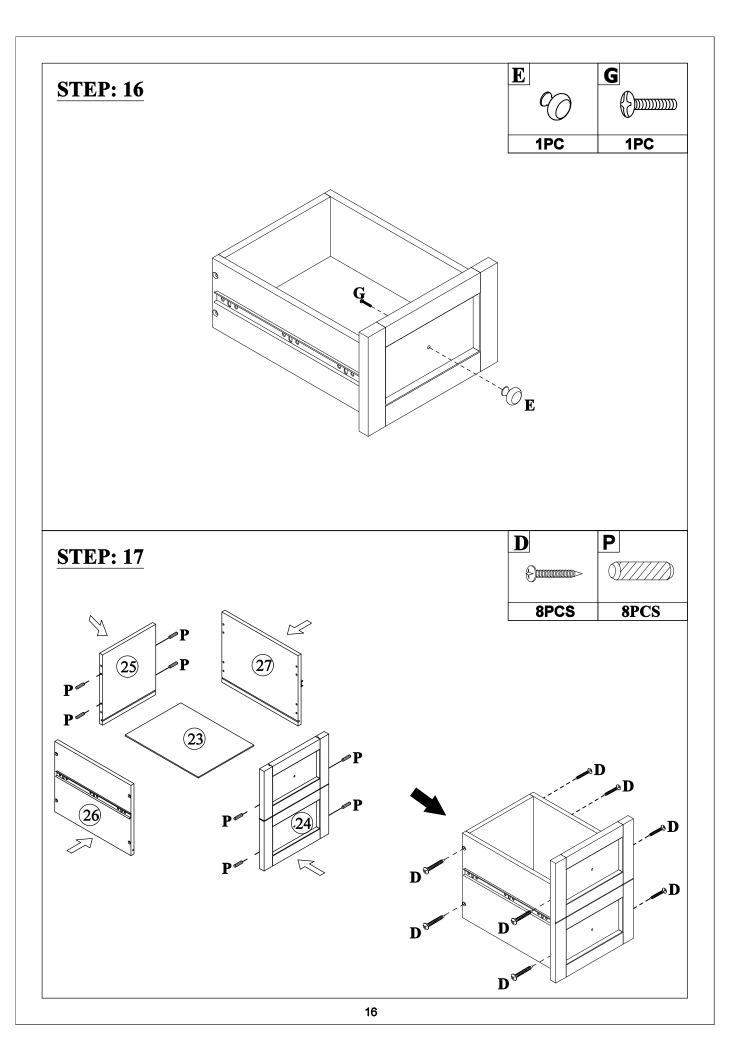

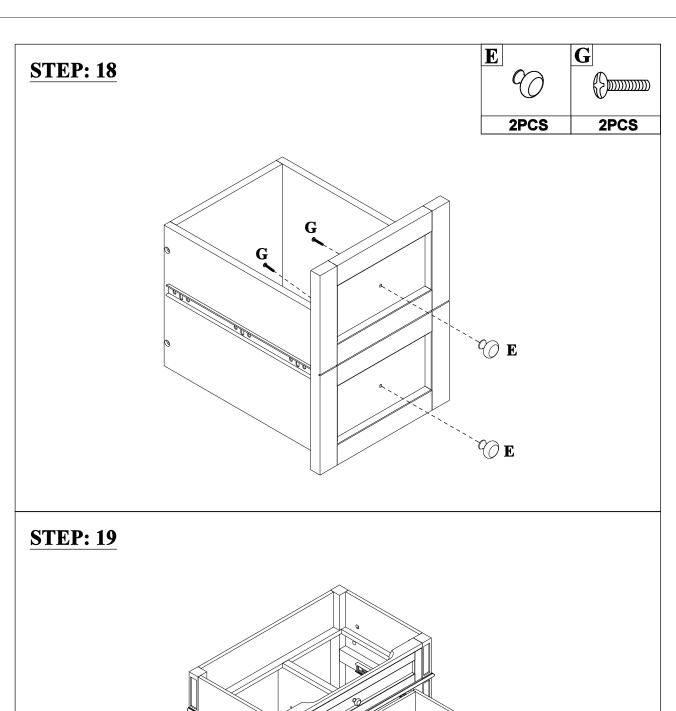


STEP: 20

 


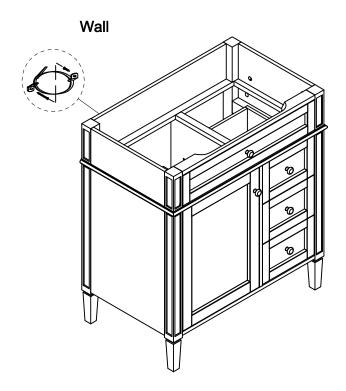

STEP: 21

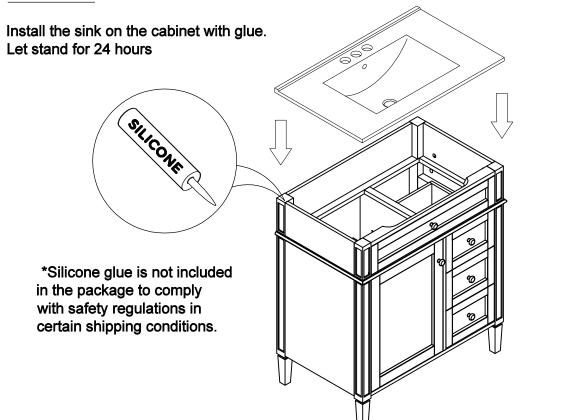


STEP: 22

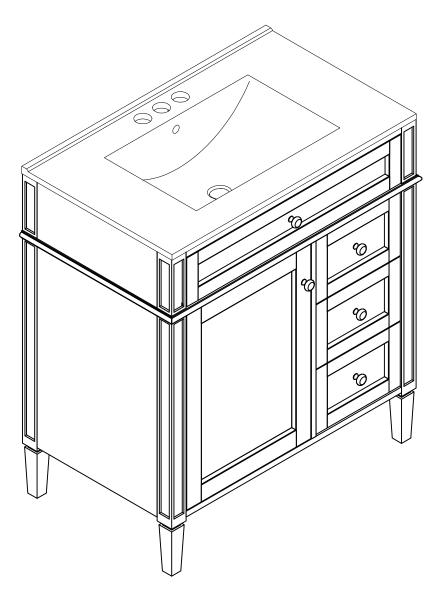




HINGE ADJUSTMENTS

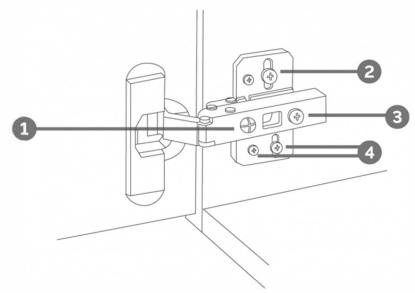

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

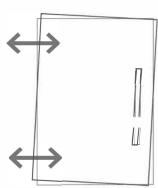

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

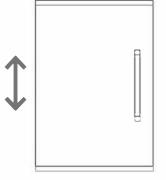

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

