


ASSEMBLY INSTRUCTIONS SKU CODE: (N710P182433B)

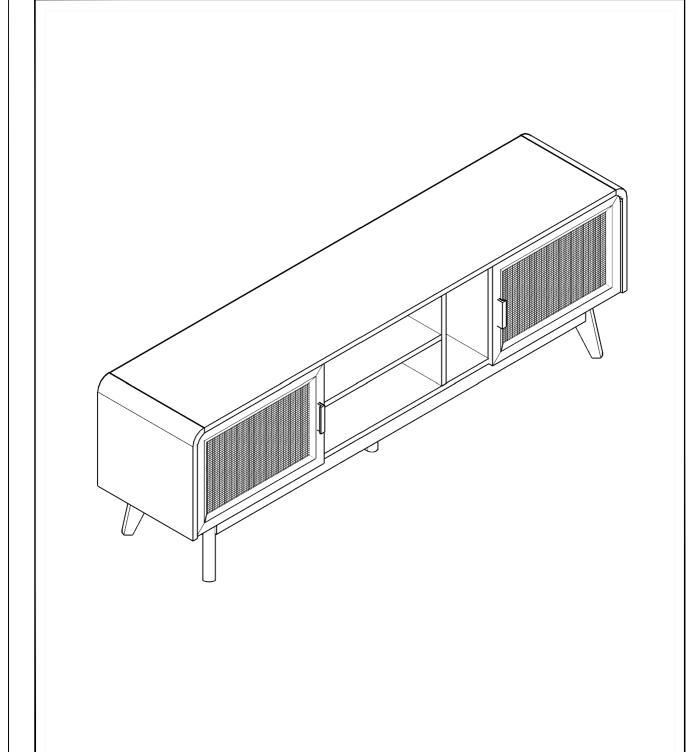



REV0, 25/11/2024

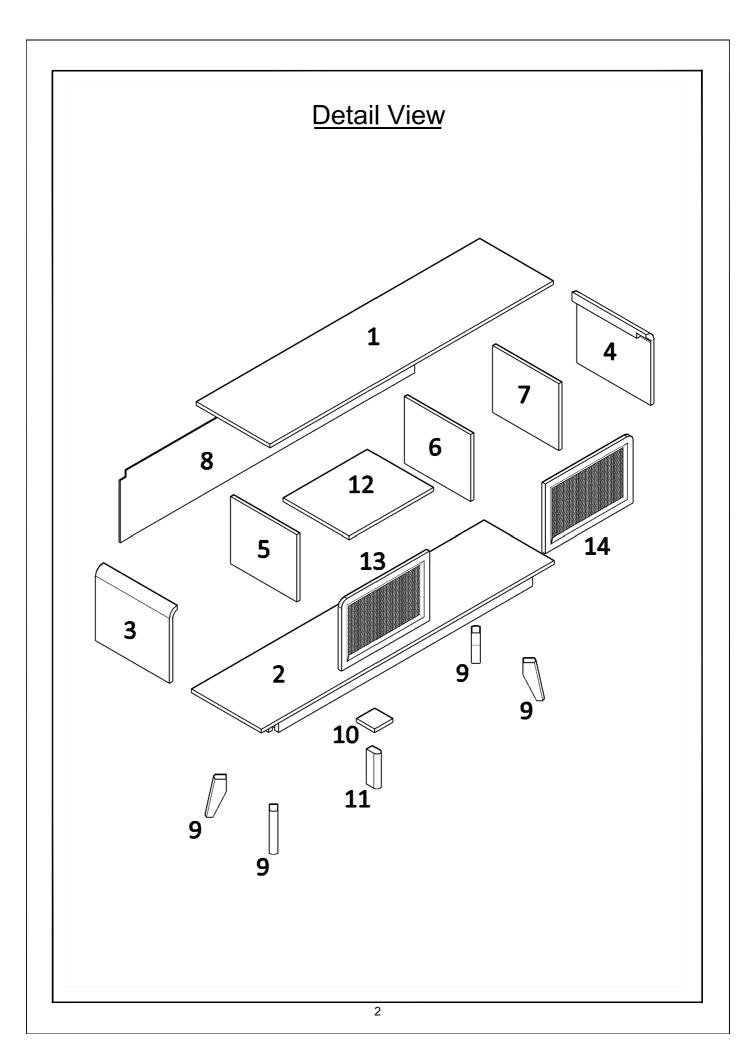


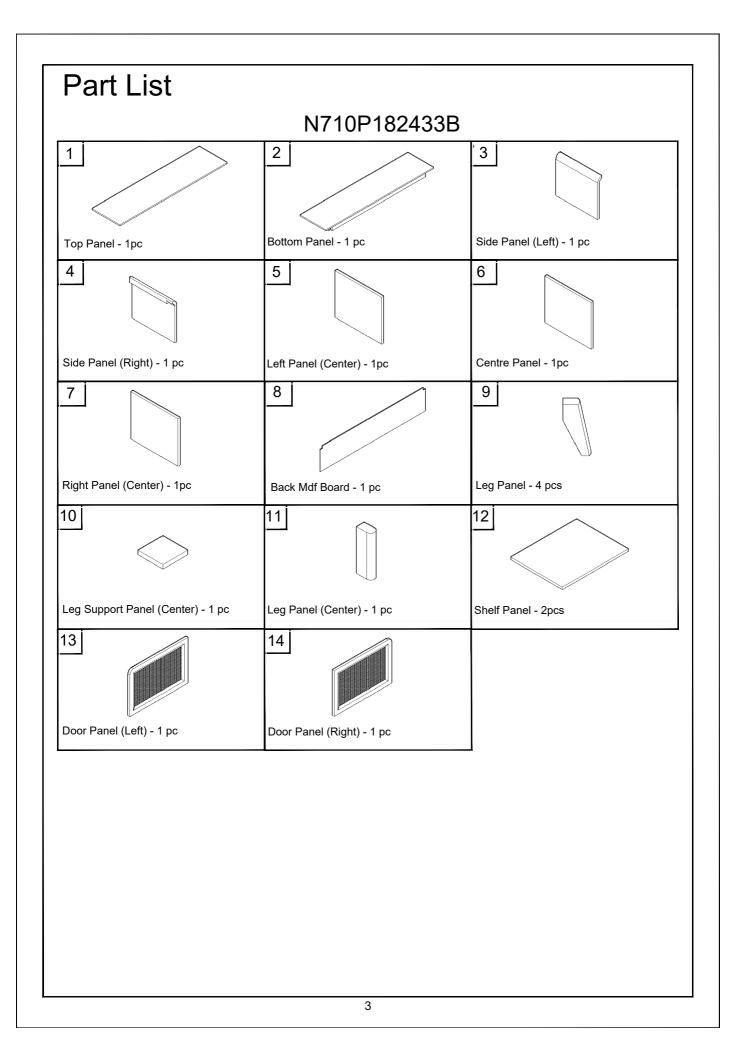


Hardware List N710P182433B


A	B	C
Cam Pin M5x24MM (11 pcs)	Cam Lock (11 pcs)	Wood Dowel M8X30MM(20 pcs)
D D		
Iron Shelf Support (4 pcs)	Screw M7x50MM (10 pcs)	Screw M6x50MM (3 pcs)
G Brandon	H	
Screw M4x28MM (8 pcs)	Pvc Handle (2 pcs)	Screw M3.5x16MM (28 pcs)
J	K	SH78
White Leg Pin (5 pcs)	Allen Key (1 pc)	Hydraulic Hinges 7/8" (4 pcs)

 
ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

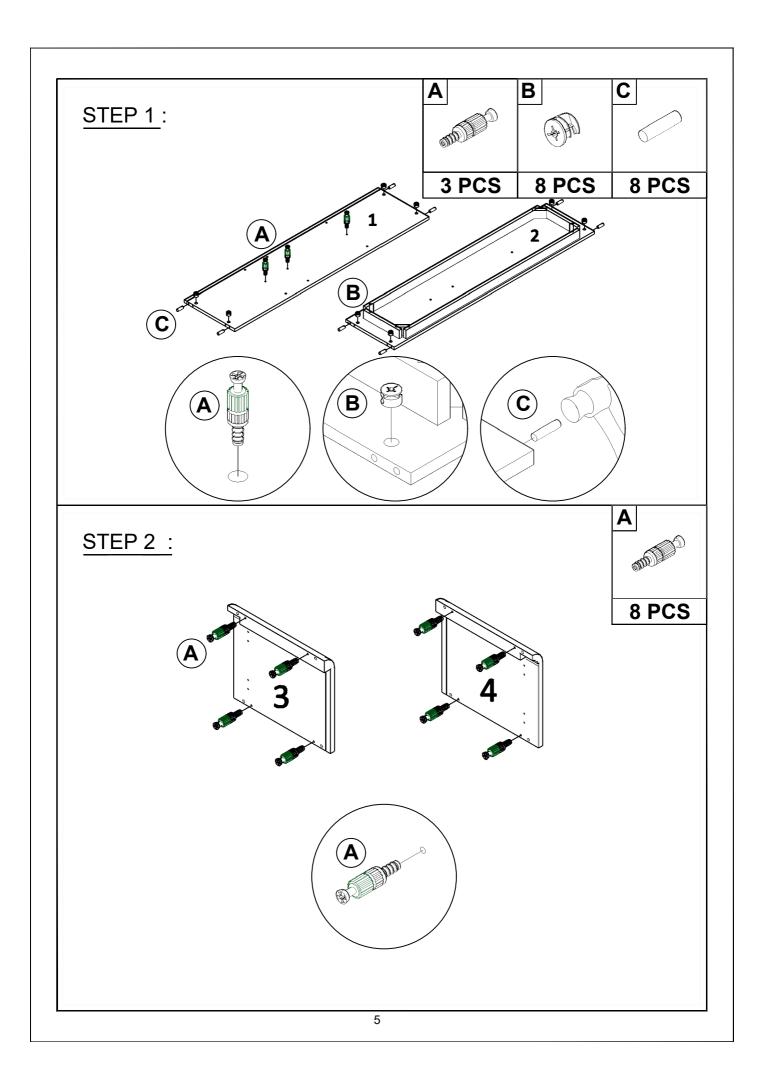


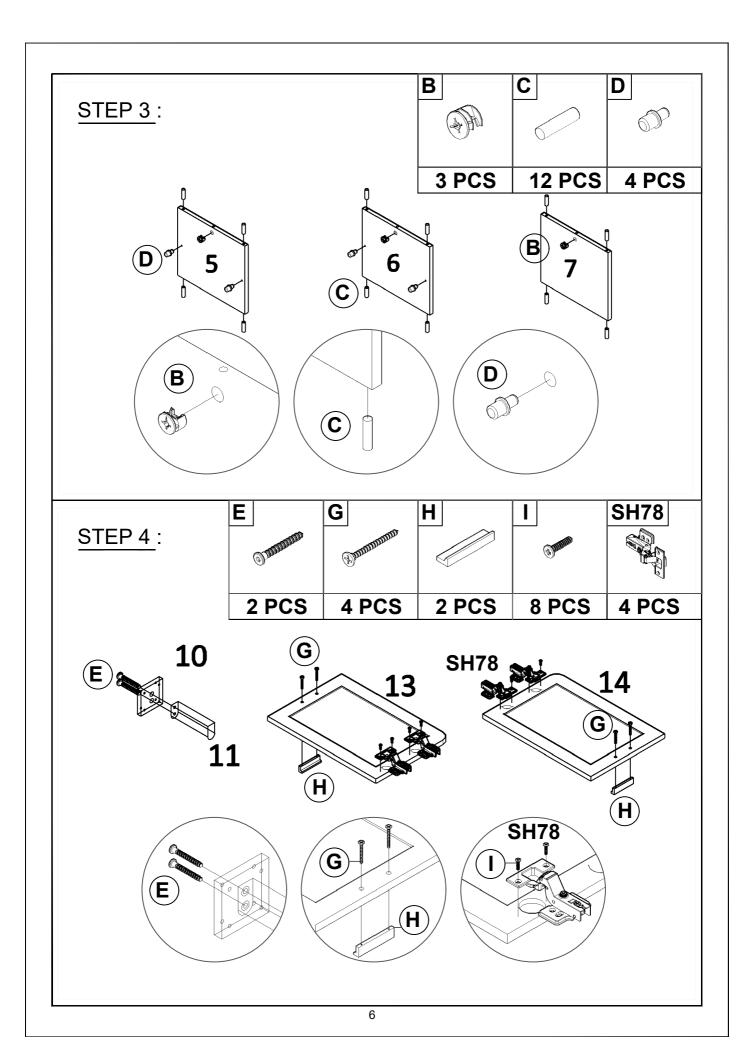


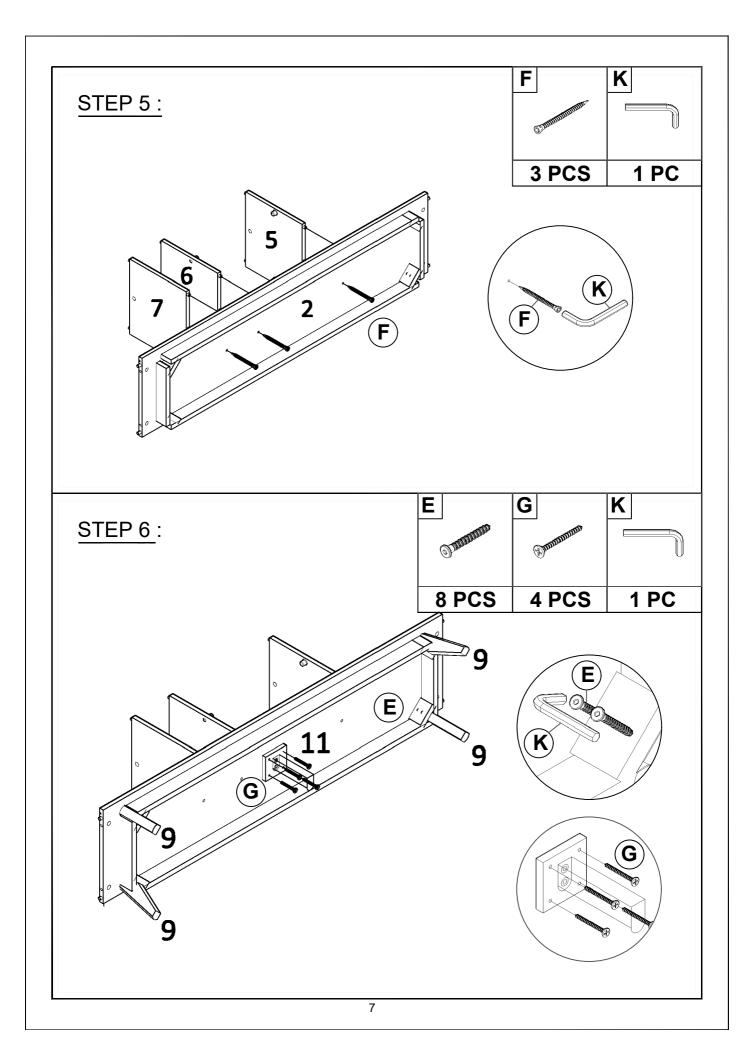


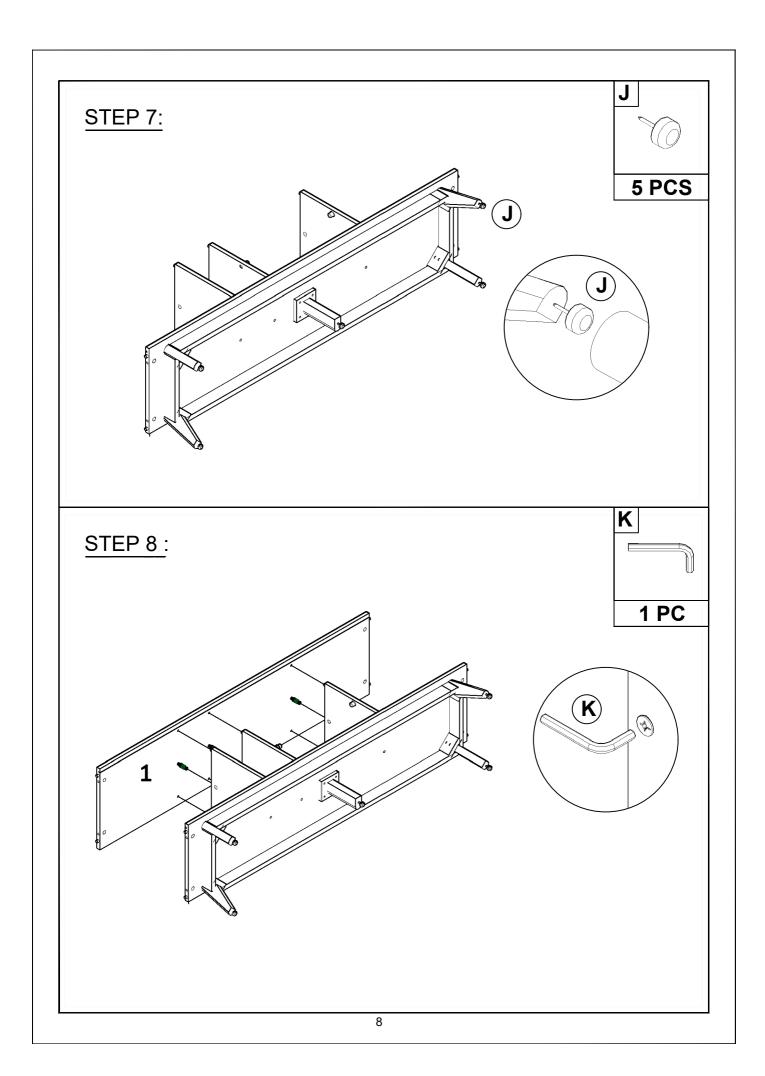

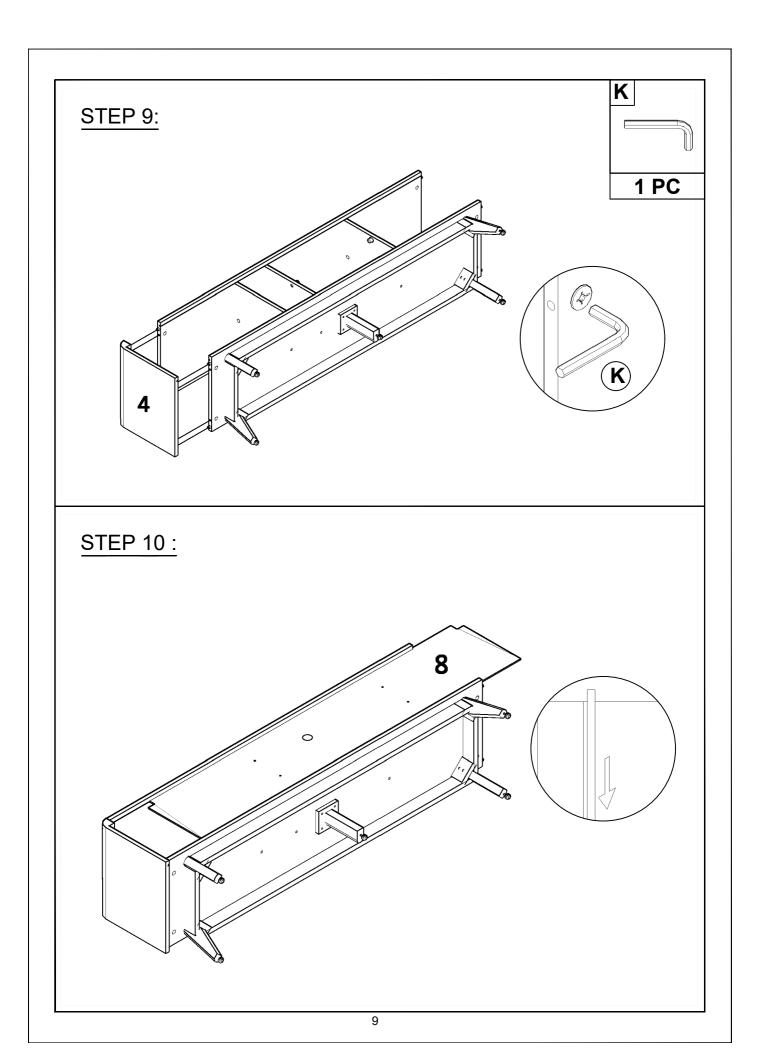

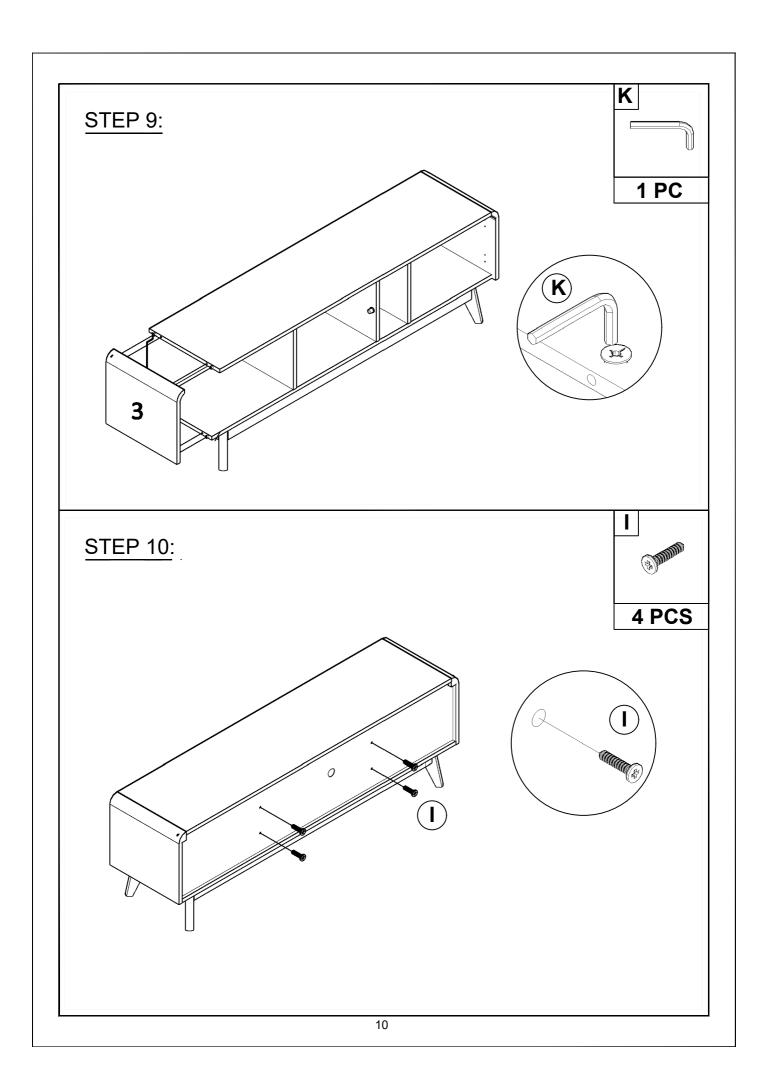

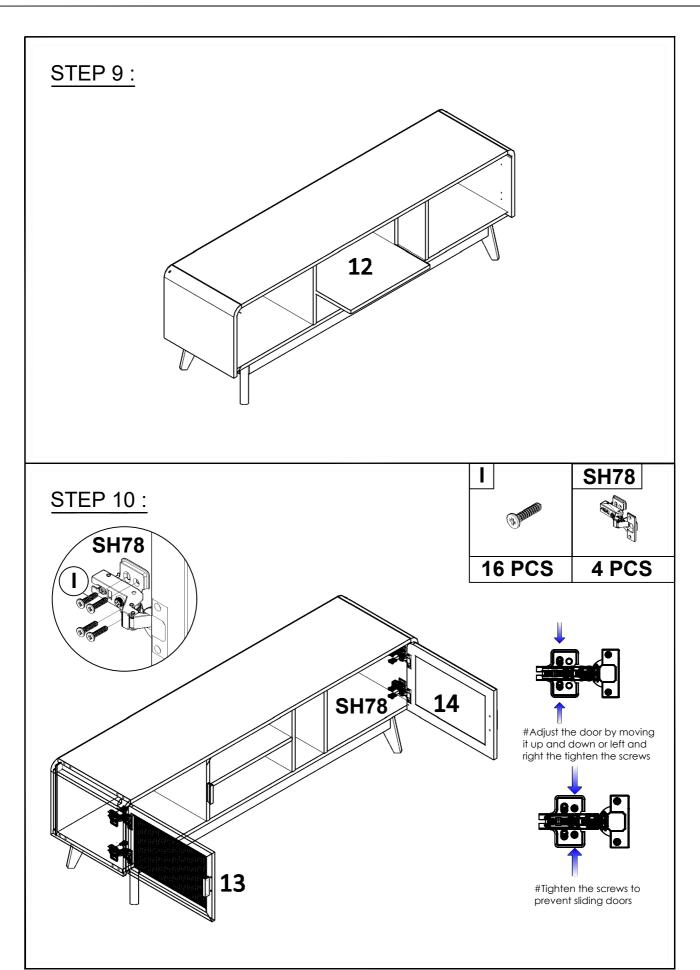

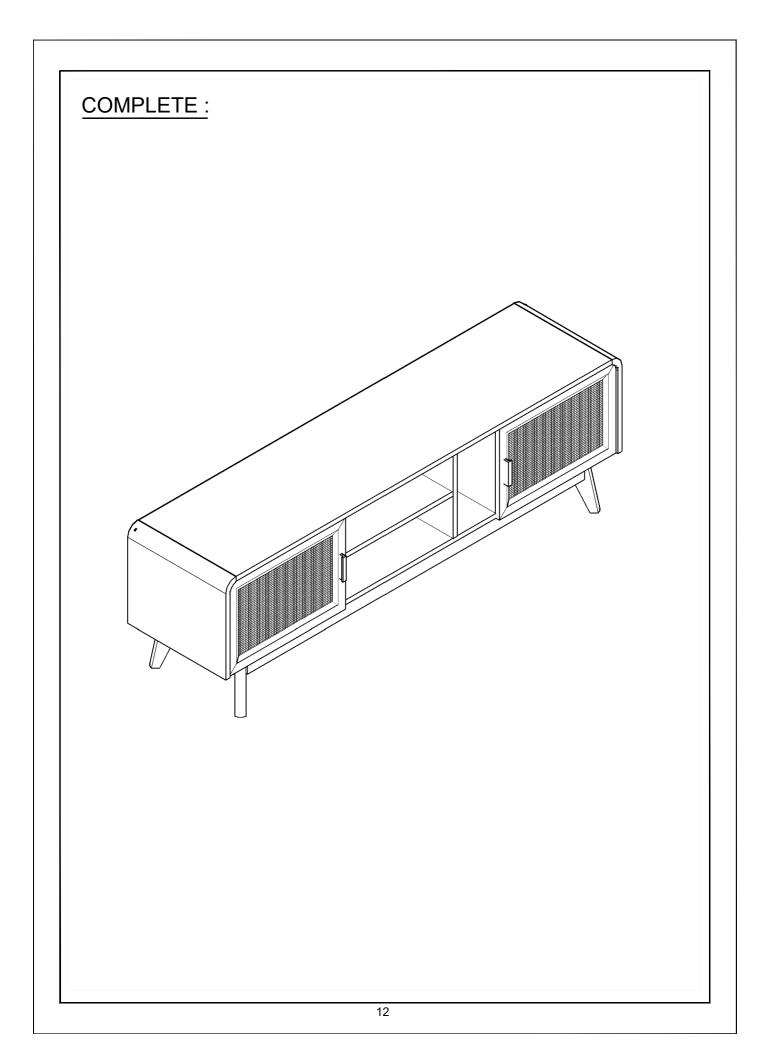




HOW TO ADJUST GLASS/DOORS

There is a gap between the door and the shelf with doors closed


Loosen the back adjustable screw which is one of the two screws looking from the front while supporting the doors, adjust the door by moving it back and forth, then tighten the back screw.

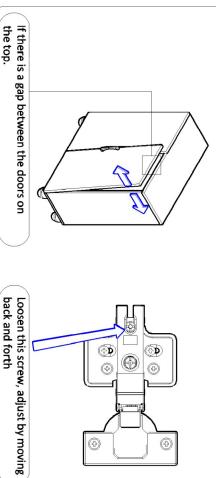

 There is a gap on the top of the door when doors are closed (Glass slide hinge does not require this step)
(4 screw hole hinge does not require ①)


Loosen the slide hinge screw while supporting the door, adjust the door by moving it up and down then tighten the screws.

(Please loosen the slide hinge screws of the door completely you are adjusting before moving it up and down.)

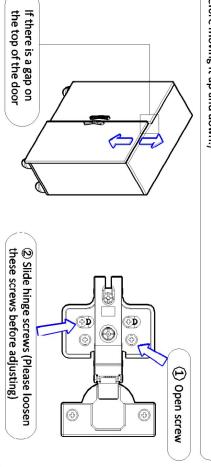

There is a gap in the middle with doors closed

Loosen the 1 back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the 2 screw clockwise, then adjust the middle gap. After adjusted, tighten the 1 screw.

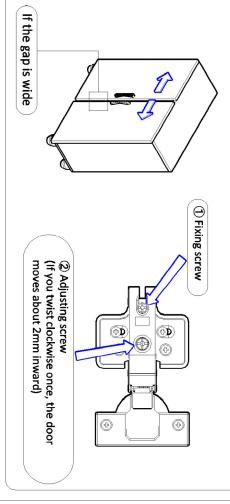

There is a V gap when doors are closed

Loosen the 1 back adjustable screw which is one of the two screws looking from the front while supporting the doors, tighten the 2 screw clockwise, then adjust the middle gap. After adjusted, tighten the 1 screw.

