
 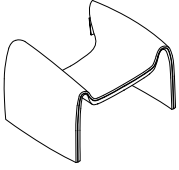




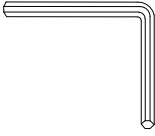
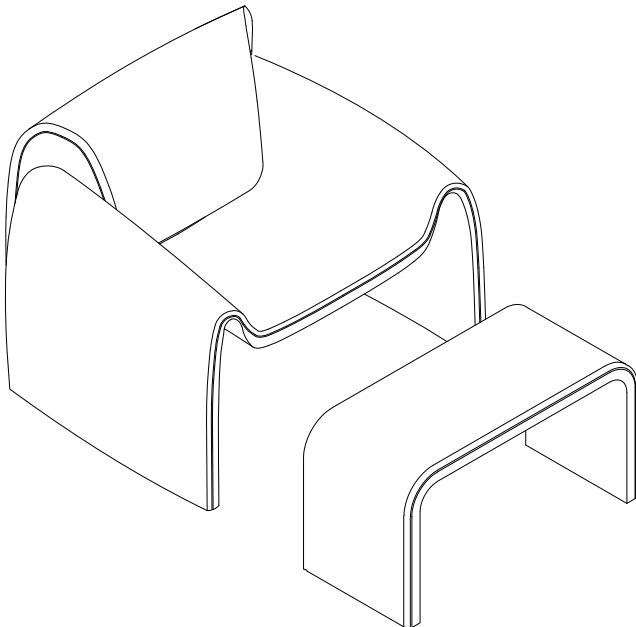


ASSEMBLY INSTRUCTIONS

ACCENT CHAIR OTTOMAN

A Seat  1 pc	B Backrest  1 pc	C Ottoman (Optional)  1 pc	D Allen Bolt Ø5/16" x 1 1/4" (Included 2pcs from Step 1)  4 pcs
E Spring Washer Ø5/16" x 15/32" (Included 2pcs from Step 1)  4 pcs	F Flat Washer Ø5/16" x 3/4" (Included 2pcs from Step 1)  4 pcs	G Allen Key M4 x 2-3/4" x 2-3/4"  1 pc	

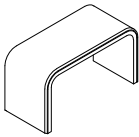


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

IMPORTANT NOTE:


1. Do not tighten all screws / bolts until all completely assembled.
2. Keep all hardware parts out of reach of children.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**

- 1** Remove the support bar from the back of the Seat (A) by loosening Allen Bolt (D), Spring Washer (E) and Flat Washer (F) with the Allen Key (G) and take out the Backrest (B). Keep the hardware for Step 2 use.

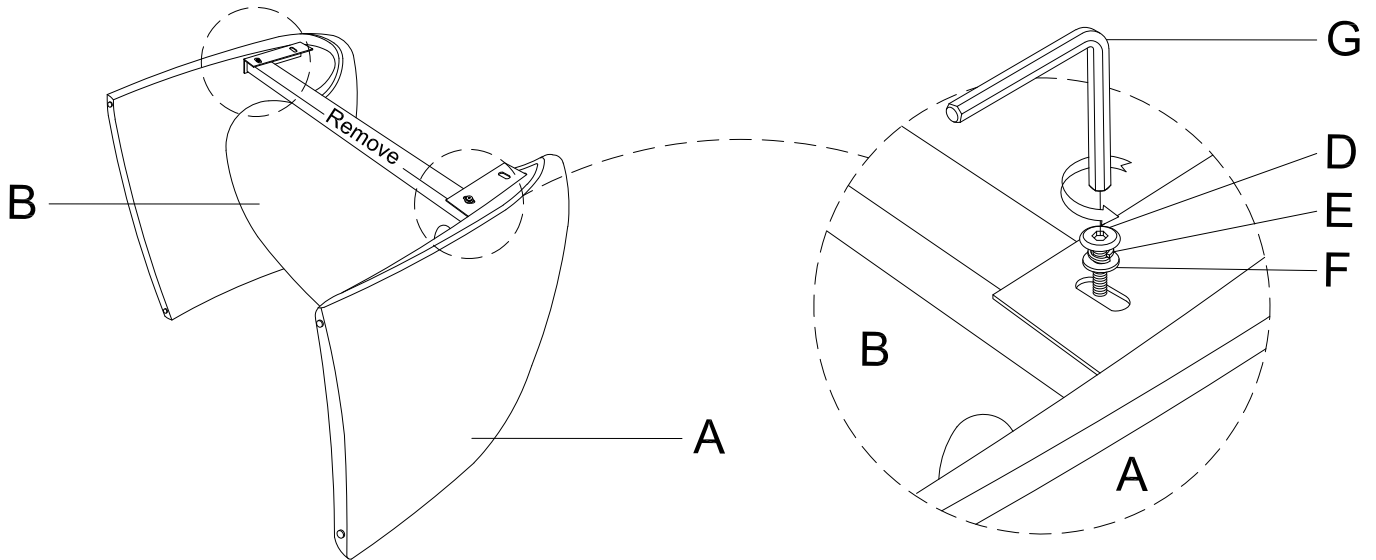

- 2** Attach the Backrest (B) to the Seat (A) using Allen Bolt (D), Spring Washer (E) and Flat Washer (F) with the Allen Key (G).

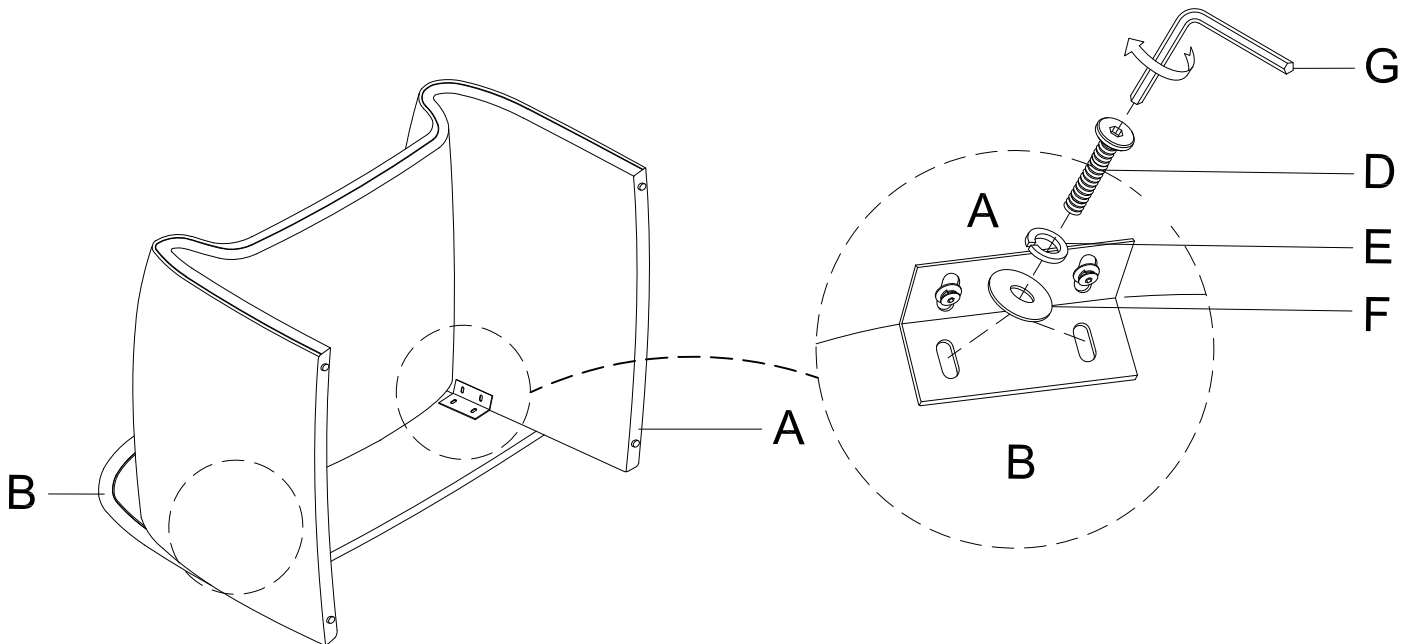

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.