

ASSEMBLY INSTRUCTIONS



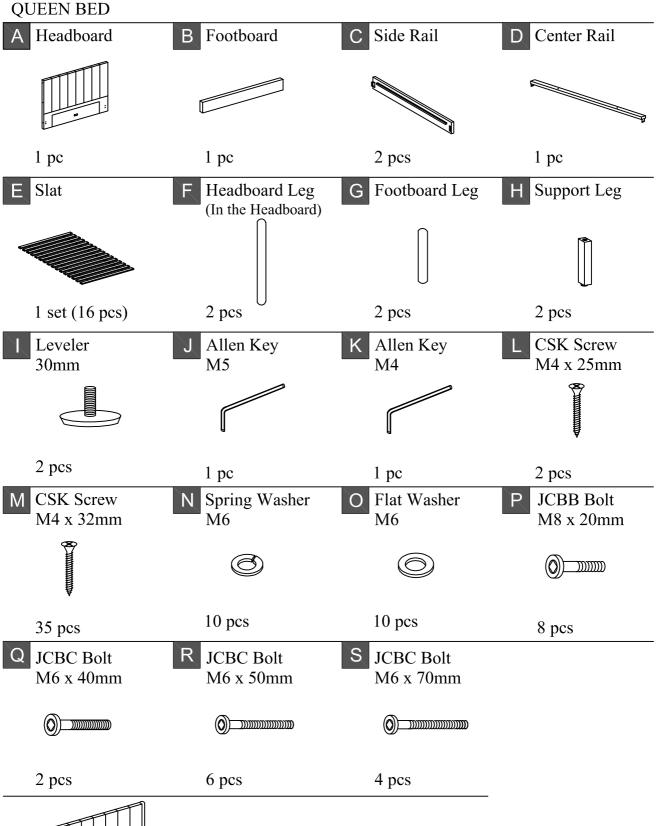


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


Unzip the black woven fabric on the back of the Headboard (A) at the middle to take out the Headboard Leg (F).

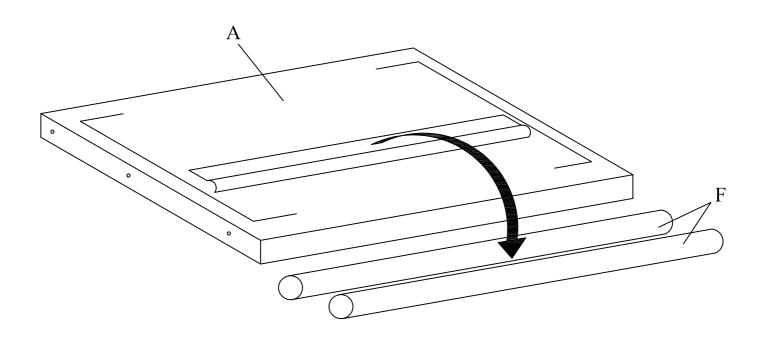


Unzip the black woven fabric on the back of the Headboard (A) at both sides. Attach the Headboard Leg (F) to the Headboard (A) using JCBC Bolt (R), Spring Washer (N) and Flat Washer (O) with the Allen Key (K). Then zip up the black woven fabric.

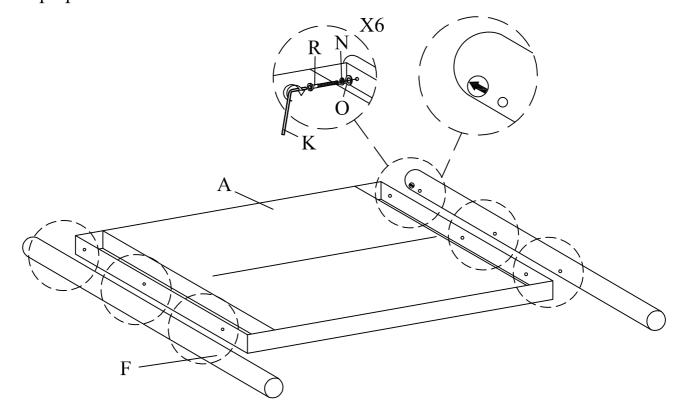


Unzip the black woven fabric on the back of the Footboard (B) at both sides. Attach the Footboard Leg (G) to the Footboard (B) using JCBC Bolt (S), Spring Washer (N) and Flat Washer (O) with the Allen Key (K). Then zip up the black woven fabric.

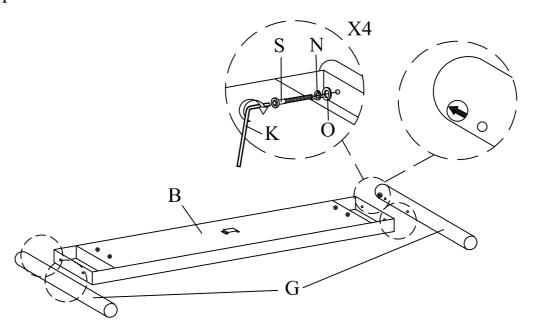


Attach the Side Rail (C) to the Headboard (A) and Footboard (B) using JCBB Bolt (P) with the Allen Key (J).

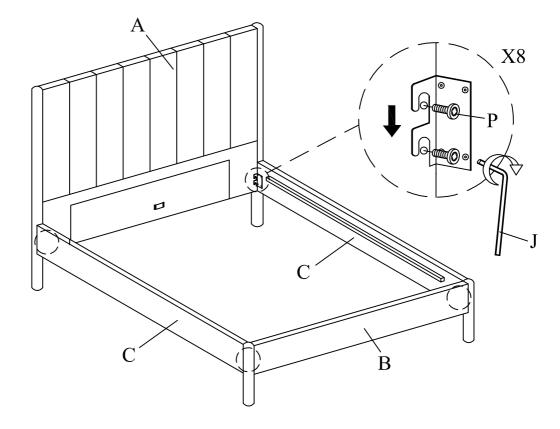

Screw the Leveler (I) into the Support Leg (H). Then attach the Support Leg (H) to the Center Rail (D) using JCBC Bolt (Q) with the Allen Key (K).

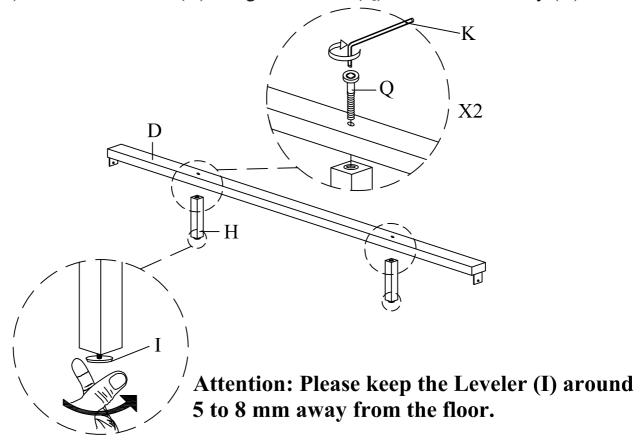


Hook the Center Rail (D) to the Headboard (A) and Footboard (B) using CSK Screw (L) with a screwdriver (not provided).

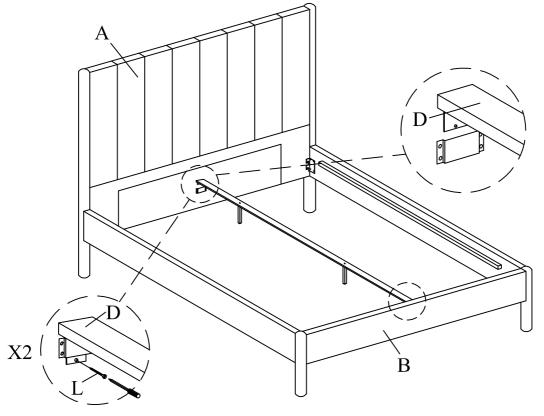

Attention: Please ensure that CSK Screw (L) is attached as shown to avoid the base from collapsing.

7 Attach the Slat (E) to the Side Rail (C) and the Center Rail (D) using CSK Screw (M) with a screwdriver (not provided).

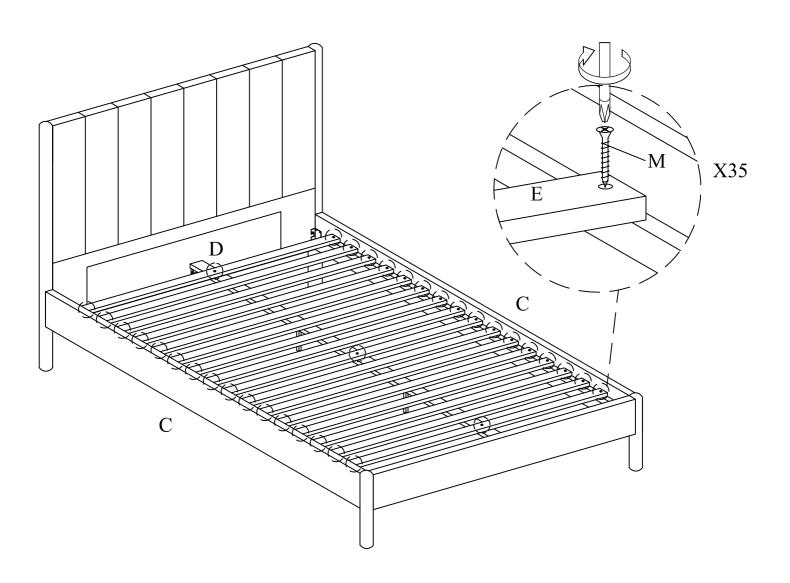

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.