

ASSEMBLY INSTRUCTIONS

ACCENT CHAIR


A LSF Arm	B RSF Arm	C Front Base	D Back Rest (in the LSF Arm)
------------------	------------------	---------------------	--




1 pc



1 pc

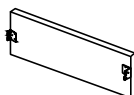


1 pc

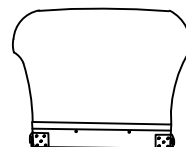

1 pc


E Seat Cushion Frame	F Back Cushion (in the RSF Arm)	G Plastic Leg	H L Bracket 20mm x 20mm
--------------------------------	---	----------------------	-----------------------------------

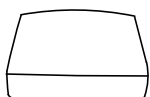

1 pc



1 pc

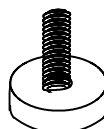


4 pcs



2 pcs


I L Bracket 30mm x 30mm	J Screw M8 x 20mm	K Bolt 5/16" x 35mm	L Spring Washer 5/16"
-----------------------------------	-----------------------------	-------------------------------	---------------------------------

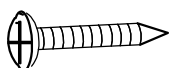


M Flat Washer 5/16" x 22mm	N Allen Key 5mm		
--------------------------------------	---------------------------	--	--



12 pcs

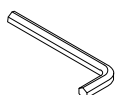


1 pc

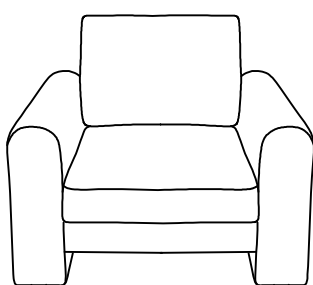


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Take out Back Rest (D) and Back Cushion (F) from LSF & RSF Arm (A & B). Attach Plastic Leg (G) to the bottom of LSF & RSF Arm (A & B).

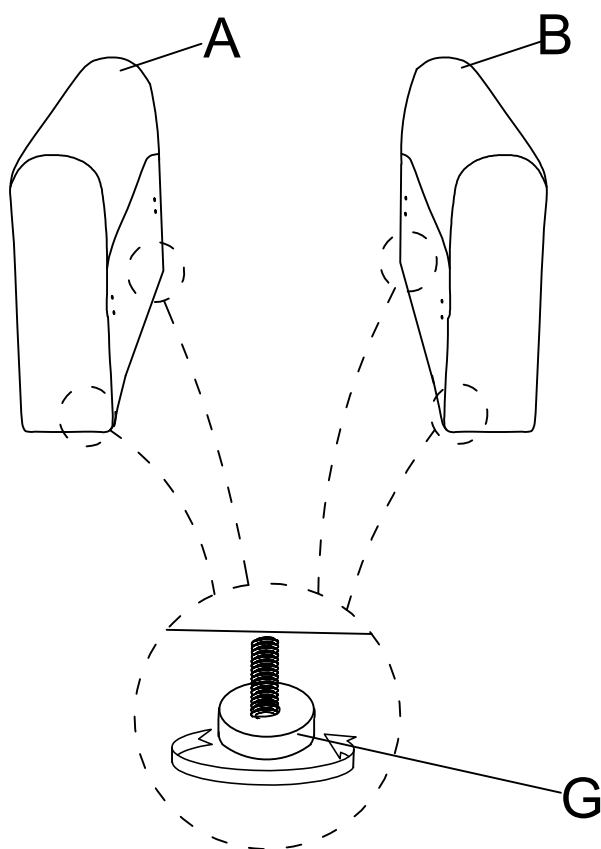


- 2** Attach Front Base (C) to LSF & RSF Arm (A & B) using Bolt (K), Spring Washer (L) and Flat Washer (M) with Allen Key (N).

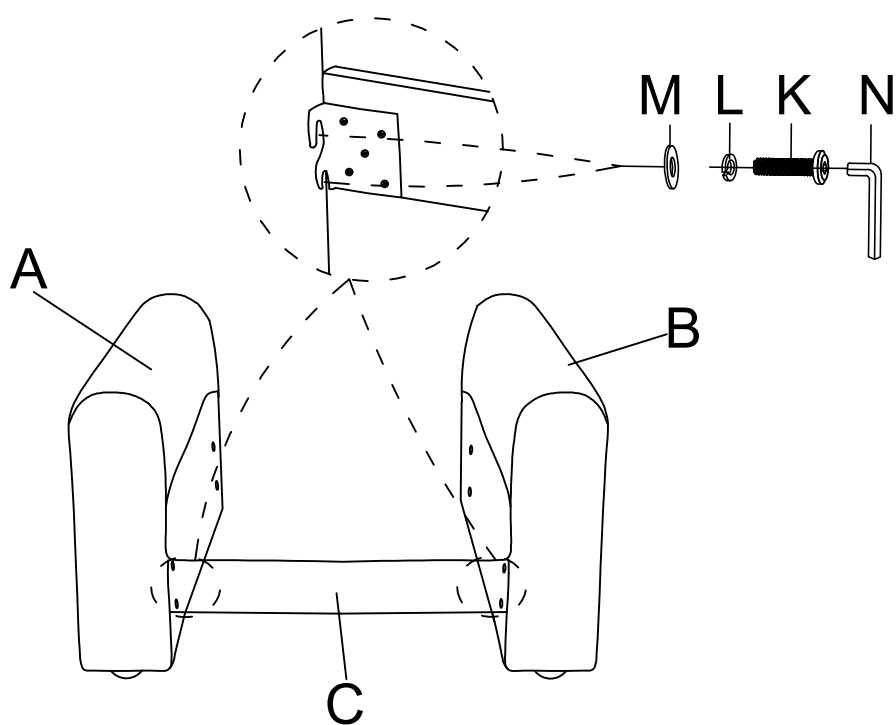


- 3** Attach Back Rest (D) to LSF & RSF Arm (A & B) using Bolt (K), Spring Washer (L) and Flat Washer (M) with Allen Key (N).

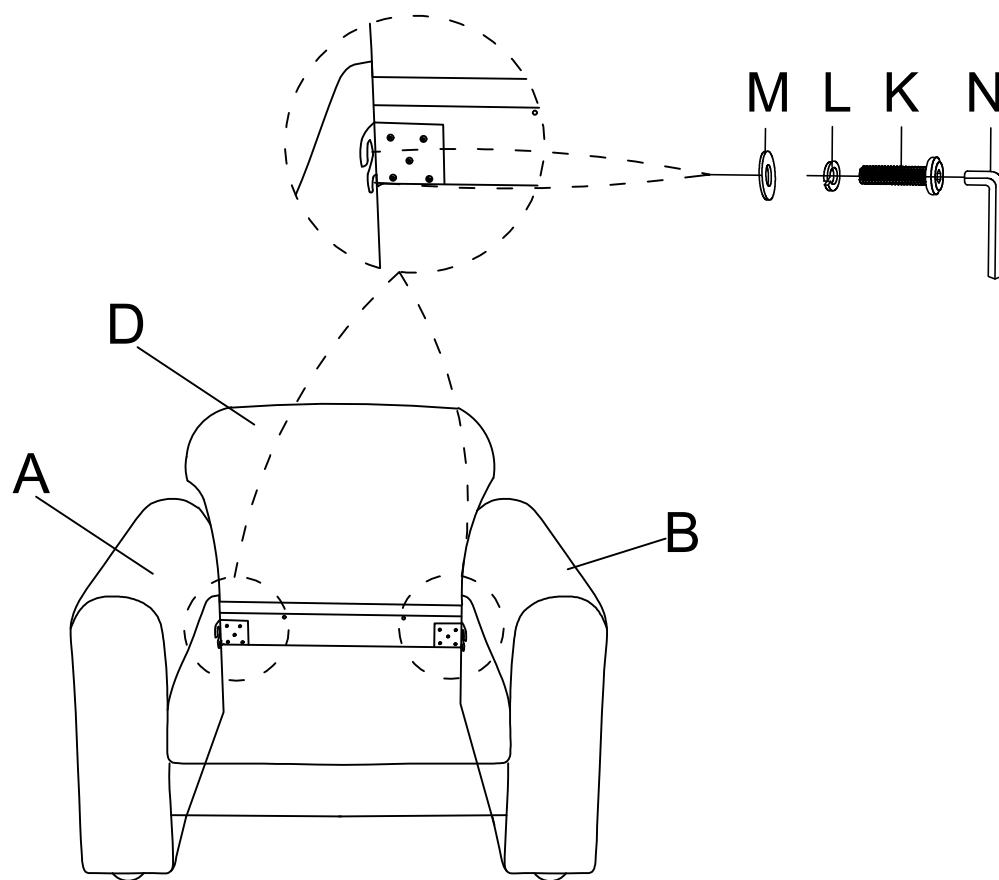


- 4** Flip the Chair to the bottom. Attach Seat Cushion Frame (E) to Back Rest (D) by L Bracket (I) using Bolt (K), Spring Washer (L) and Flat Washer (M) with Allen Key (N).

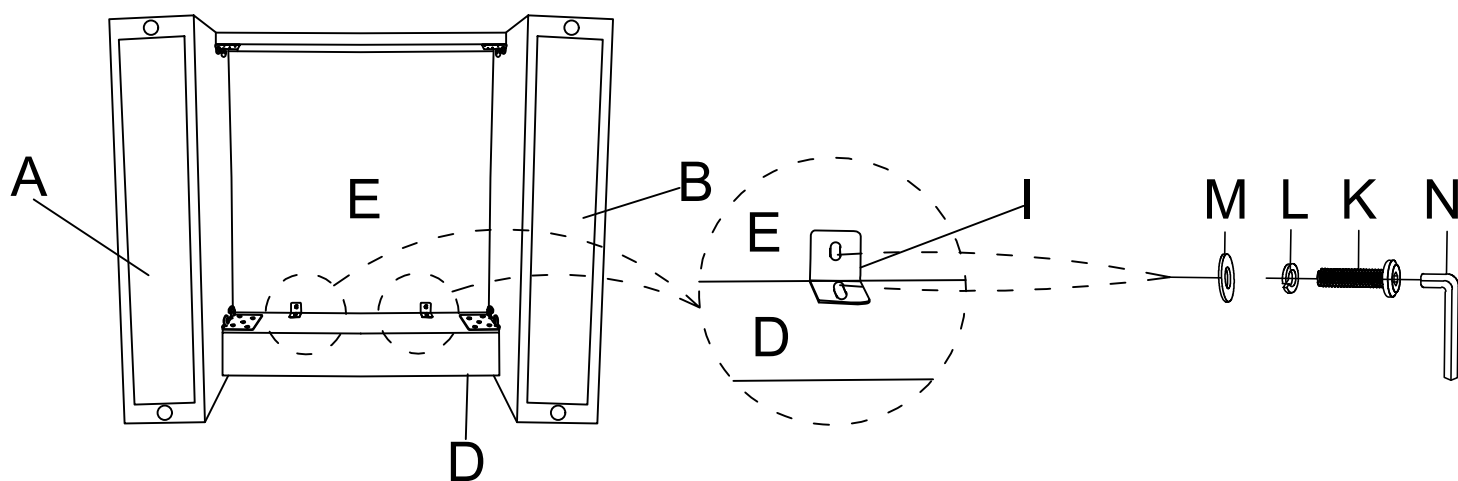

- 5** Attach Front Base (C) to Seat Cushion Frame (E) by L Bracket (H) using Screw (J) with a screwdriver (not provided).

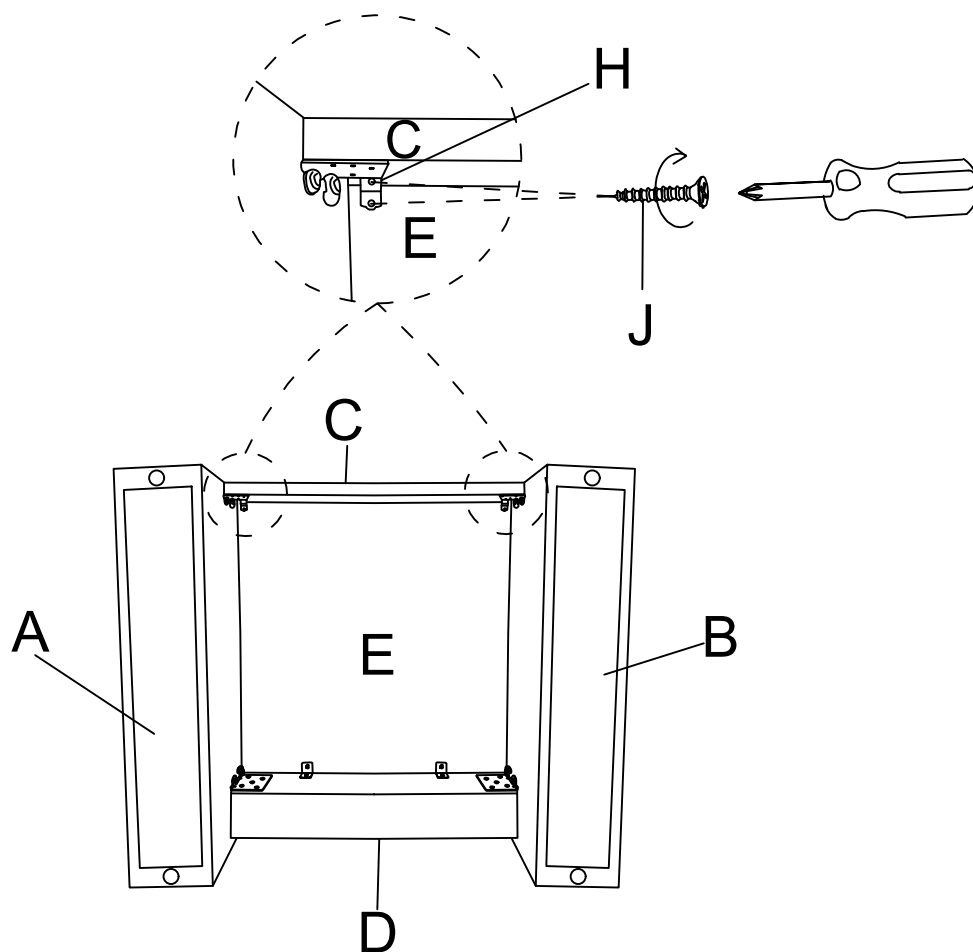

- 6** Stand the Chair upright. Place Back Cushion (F) on the Chair.

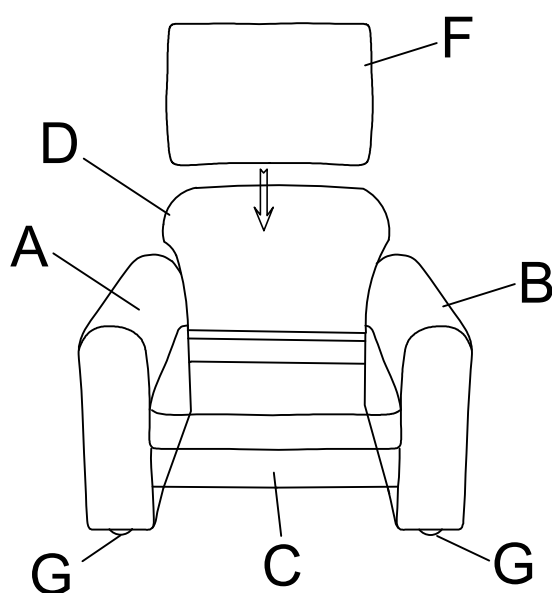

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.