


# ASSEMBLY INSTRUCTIONS


## DINING CHAIR WITH CASTERS

**A** Back Frame

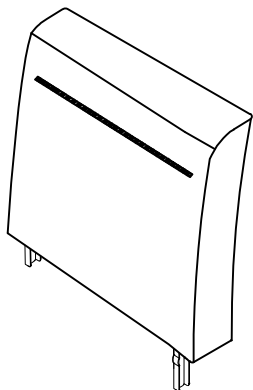


1 pc

**B** Seat Frame

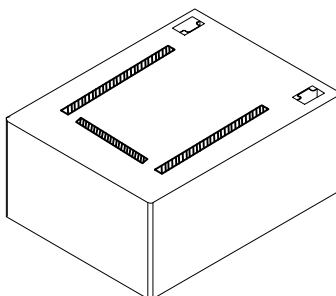


1 pc

**C** Seat Cushion

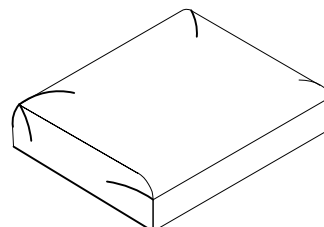


1 pc

**D** Back Cushion  
(Under the Seat Frame)

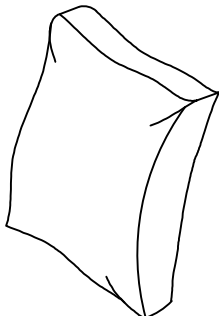

1 pc

**E** Caster

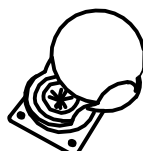


4 pcs

**F** Wood Screw  
8mm x 25mm




16 pcs

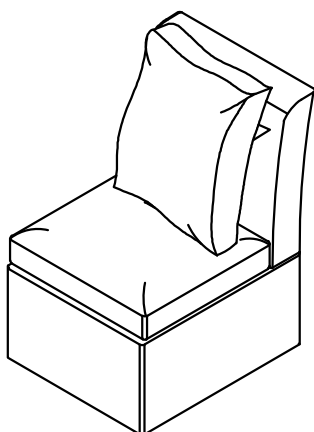


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 
- 1** Take out the Back Cushion (D) from the Seat Frame (B). Attach the Caster (E) to the bottom of the Seat Frame (B) using Wood Screw (F) with a screwdriver (not provided).

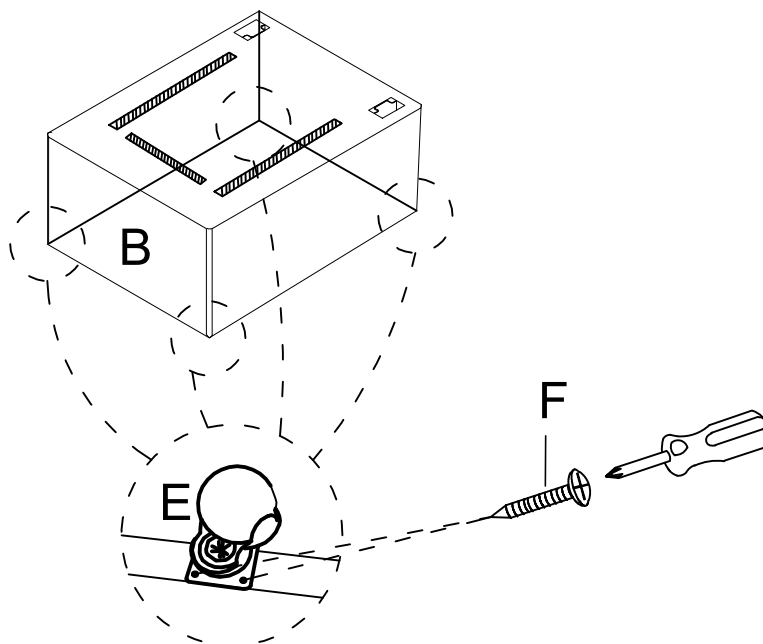


- 
- 2** Attach the Back Cushion (D) to the Back Frame (A) using zipper.

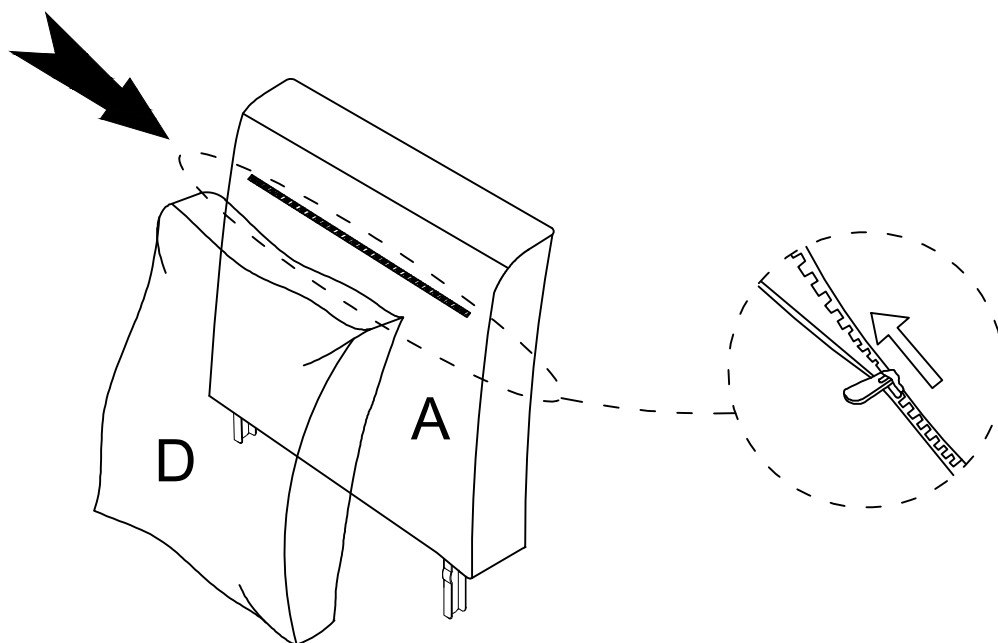

- 
- 3** Attach the Seat Cushion (C) to the Seat Frame (B) using velcro.

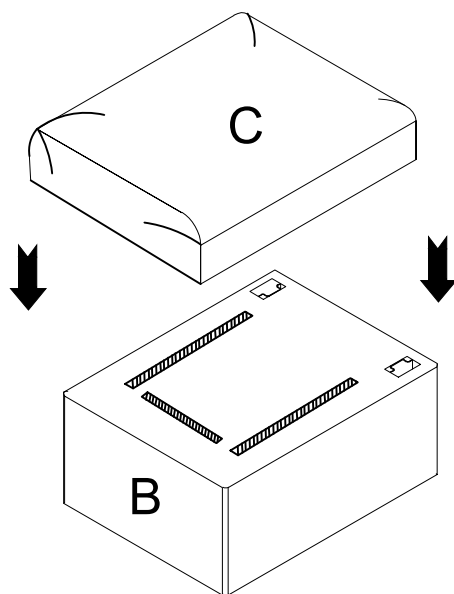

- 
- 4** Attach the Back Frame (A) to the Seat Frame (B).

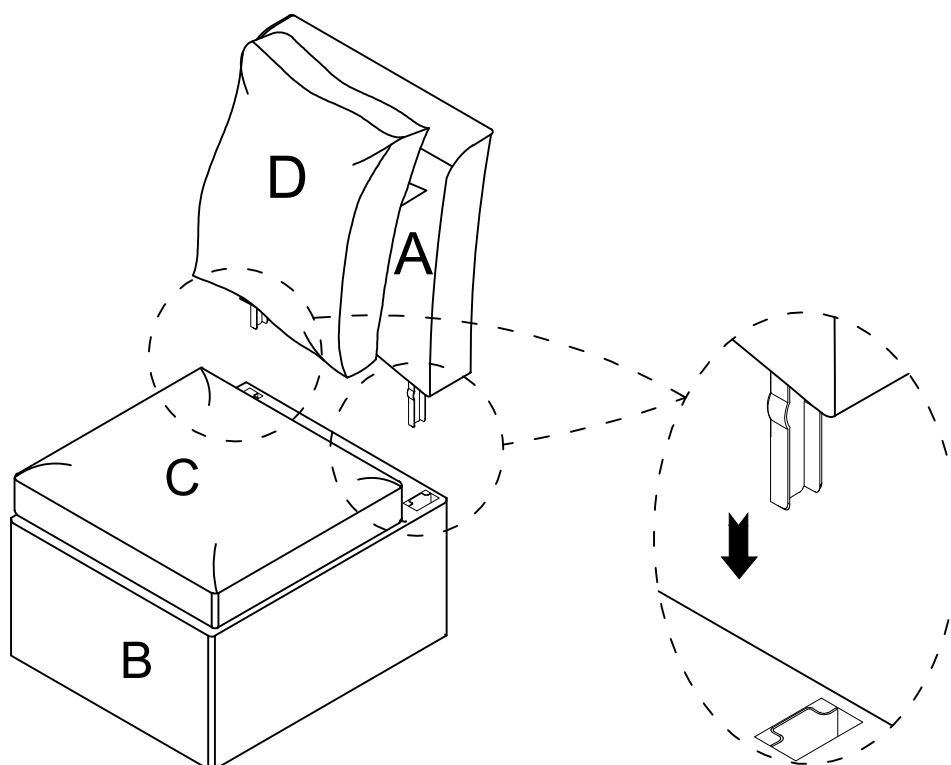

---

### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.