 


Notice:

 
- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.



Recommended installers:2



Put a carpet on the floor before unpacking




Estimate installation time: 30minutes


PART LIST


Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
A		X1	G	Se i	X1
B		X1	H		X2
C		X1			X1
D		X1	J		X1
E		X1	K		X1
F		X2			


HARDWARE LIST


Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
1	Ø8*30mm	X20+2	5		X4
2		X26+2	6		X4
3		X26+2	7	Ø3*15mm	X4
4	Ø3*12mm	X24+2	8		X2

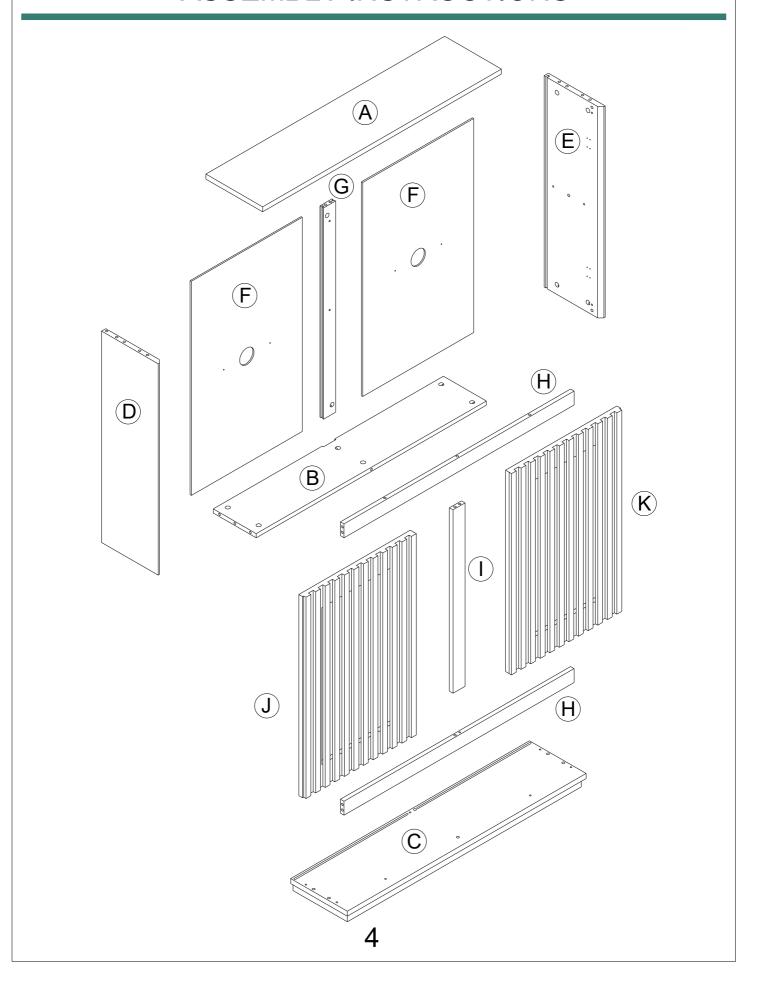


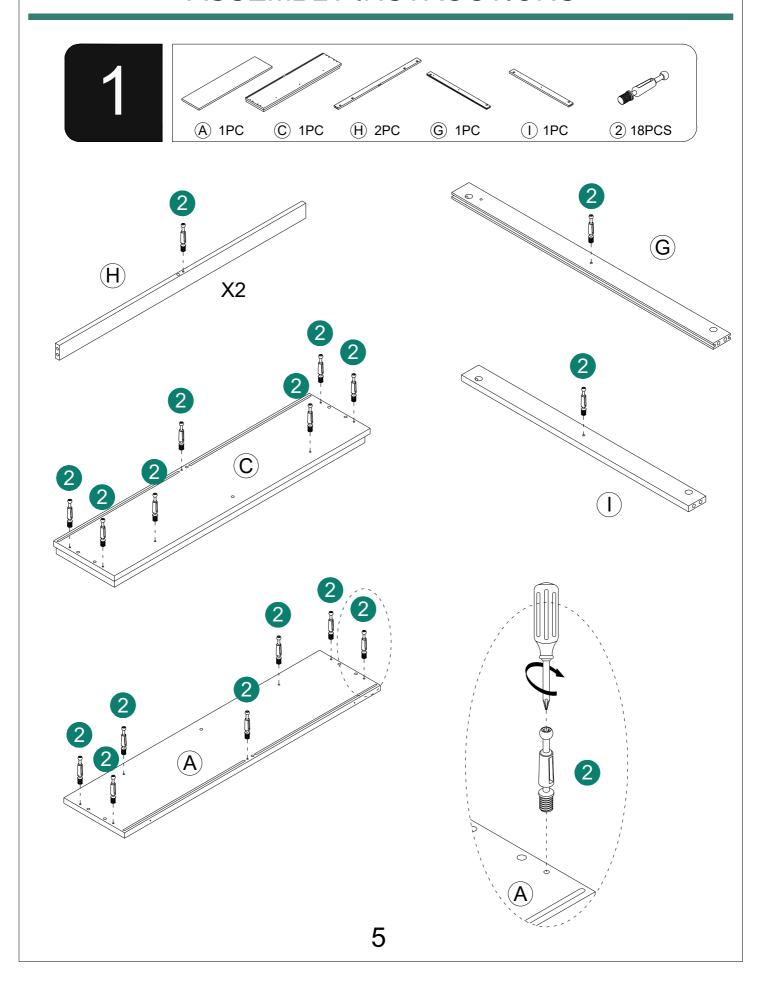


 


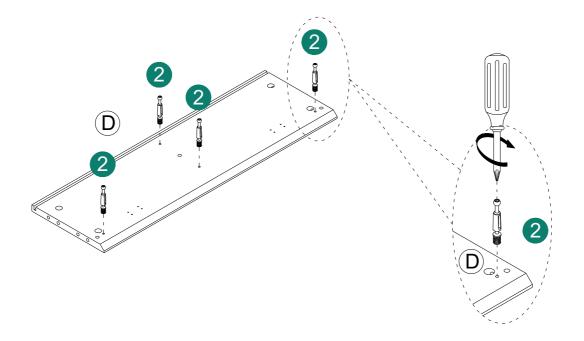


 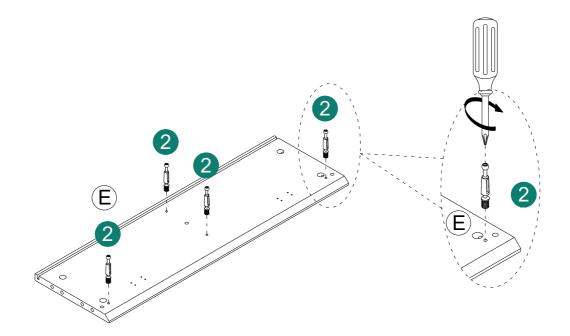


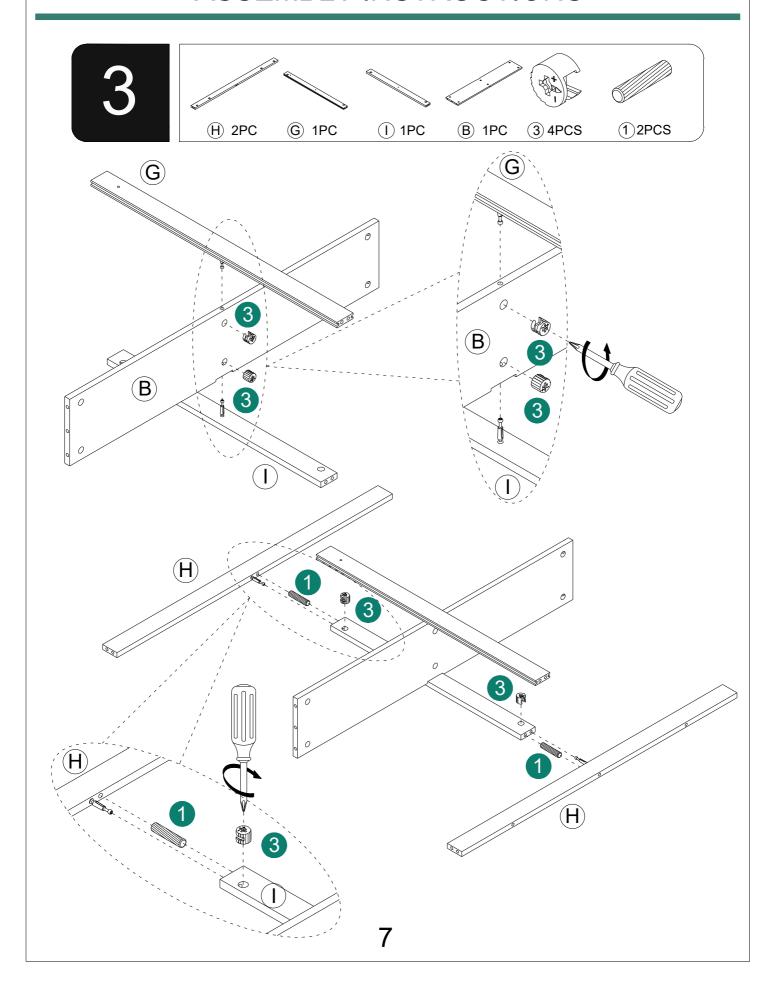


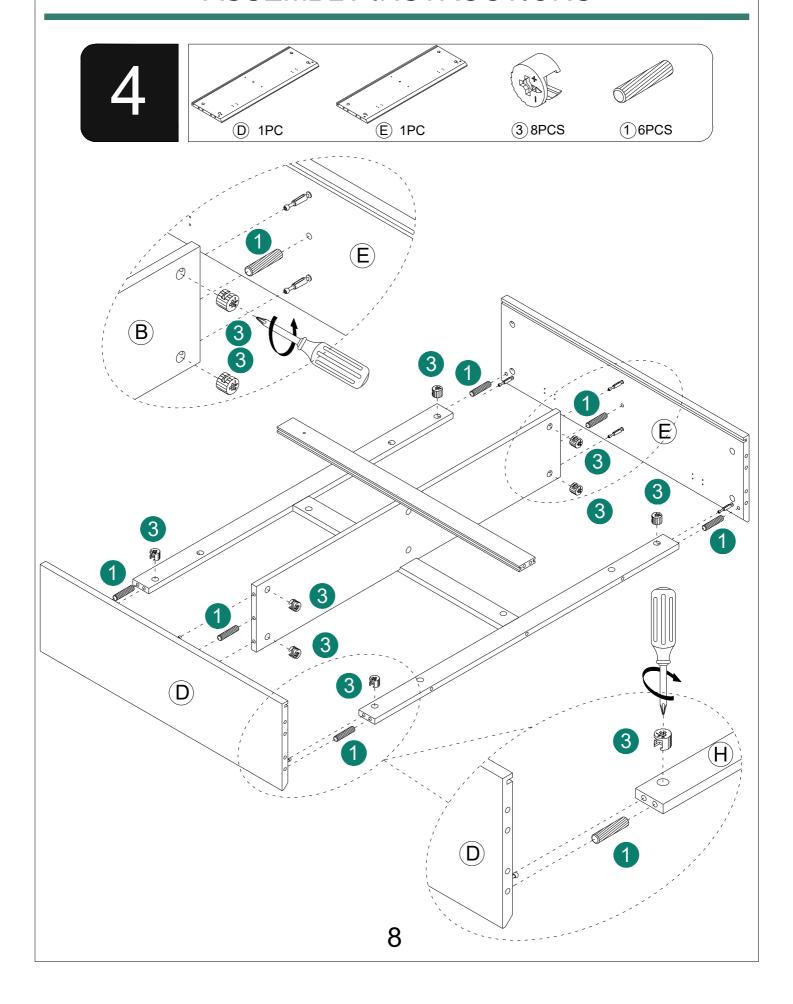


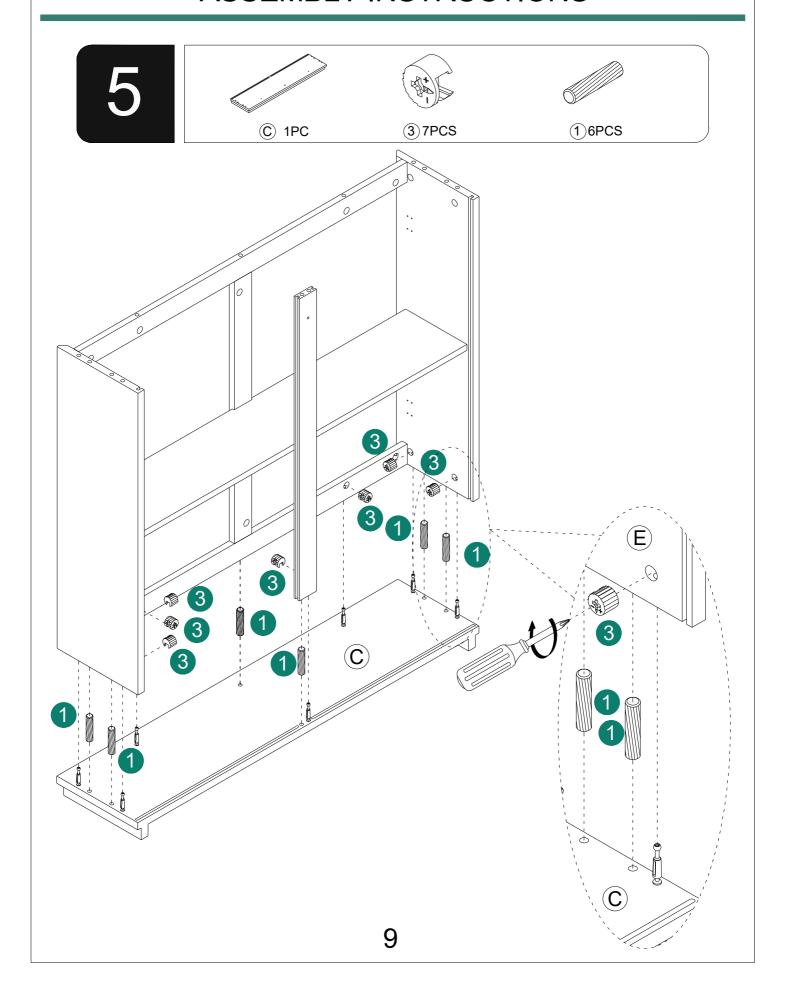




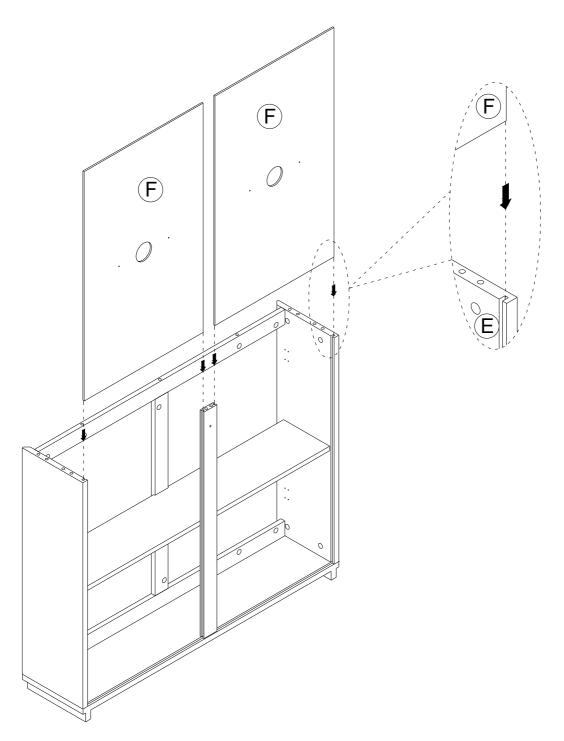

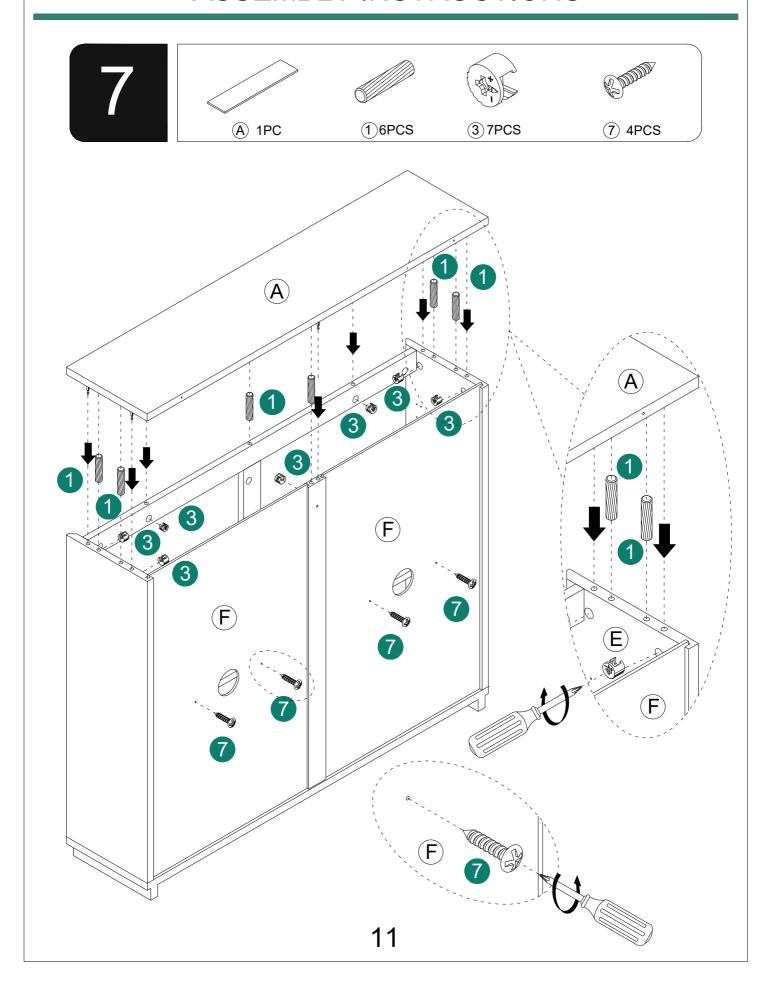


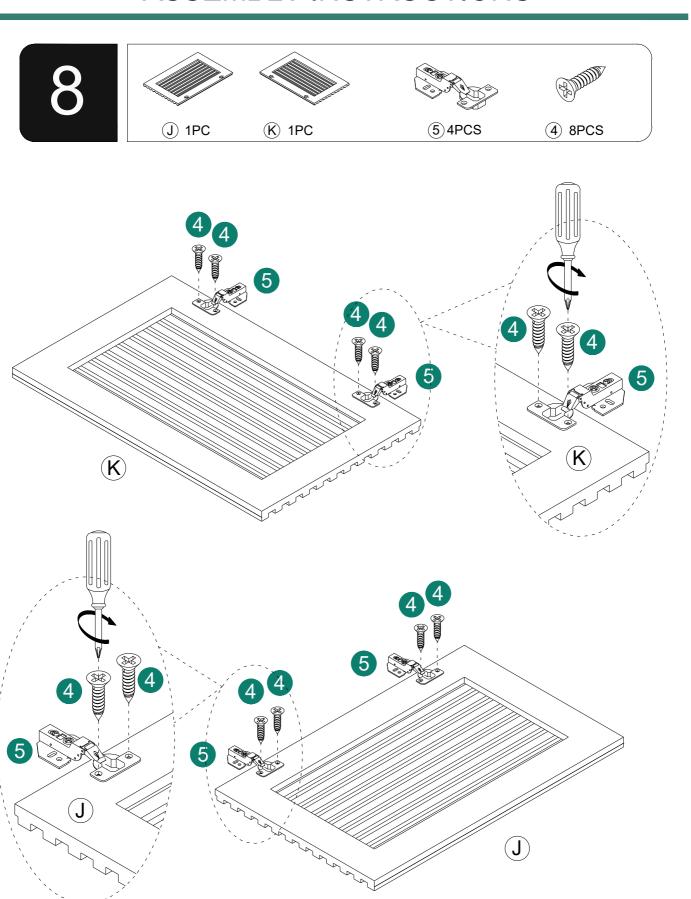





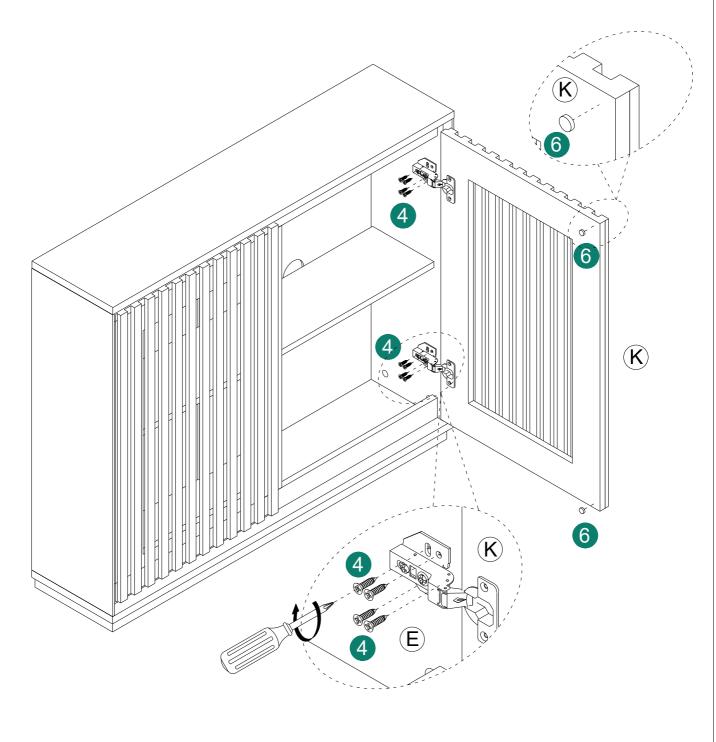

10

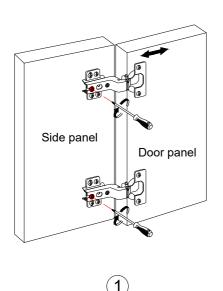

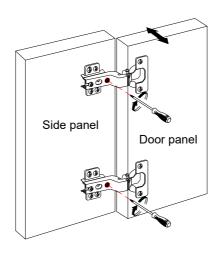

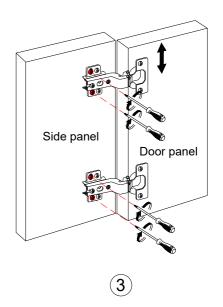

Front-to-Back Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved front-back.

Adjustment range: 4mm

Left-Right Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved left-right.

Adjustment range: 3mm


Up-Down Direction Adjustment:

Rotate the screws on the door hinges shown in the image. The door panel can be moved up-down.


Adjustment range: 4mm



Common Door Panel Issues:

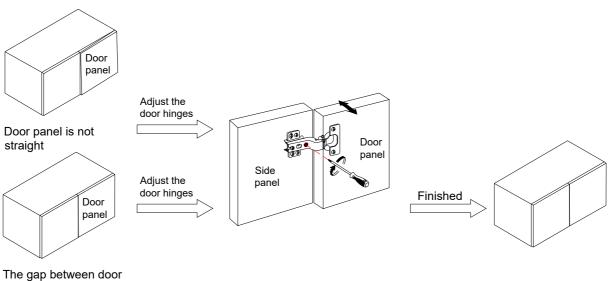

The gap between door panels is too large

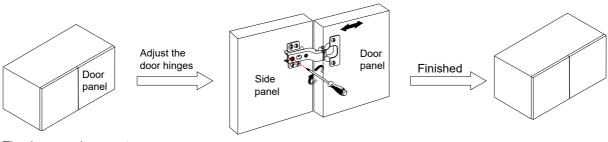

The door panels are not coplanar

