 

 
 
 
 
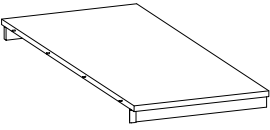 
 
 
 












# ASSEMBLY INSTRUCTIONS


## ROUND/OVAL DINING TABLE 42"-60" WITH LEAF
    
<b>A</b> Table Top  1 PC	<b>B</b> Mounting Plate (Unloosen in Step 1)  1 PC	<b>C</b> Frame  1 PC	<b>D</b> Leg  4 PCS
<b>E</b> Upper Crossbar  1 PC	<b>F</b> Lower Crossbar  1 PC	<b>G</b> Leaf  1 PC	<b>H</b> JCBC Bolt M6 x 50mm (Included 4 pcs in Step 1)  11 PCS
<b>I</b> JCBC Bolt M6 x 120mm  8 PCS	<b>J</b> JCBB Bolt M8 x 70mm  8 PCS	<b>K</b> Lock Washer M6 (Included 4 pcs in Step 1)  19 PCS	<b>L</b> Lock Washer M8  8 PCS
<b>M</b> Flat Washer M6 (Included 4 pcs in Step 1)  10 PCS	<b>N</b> Flat Washer M8  8 PCS	<b>O</b> PVC Dowel M8 x 30mm  4 PCS	<b>P</b> Block  4 PCS
<b>Q</b> Leveler  4 PCS	<b>R</b> Allen Wrench M4 x 100mm  1 PC	<b>S</b> Allen Wrench M5 x 60mm  1 PC	




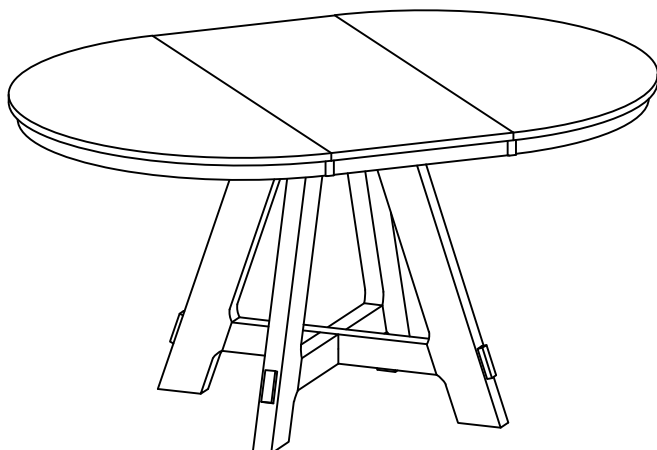This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
- 
- 1** Unloosen the Mounting Plate (B) and gather 4 sets of JCBC Bolt (H), Lock Washer (K) and Flat Washer (M) with the Allen Wrench (R). Keep the hardware for Step 8.

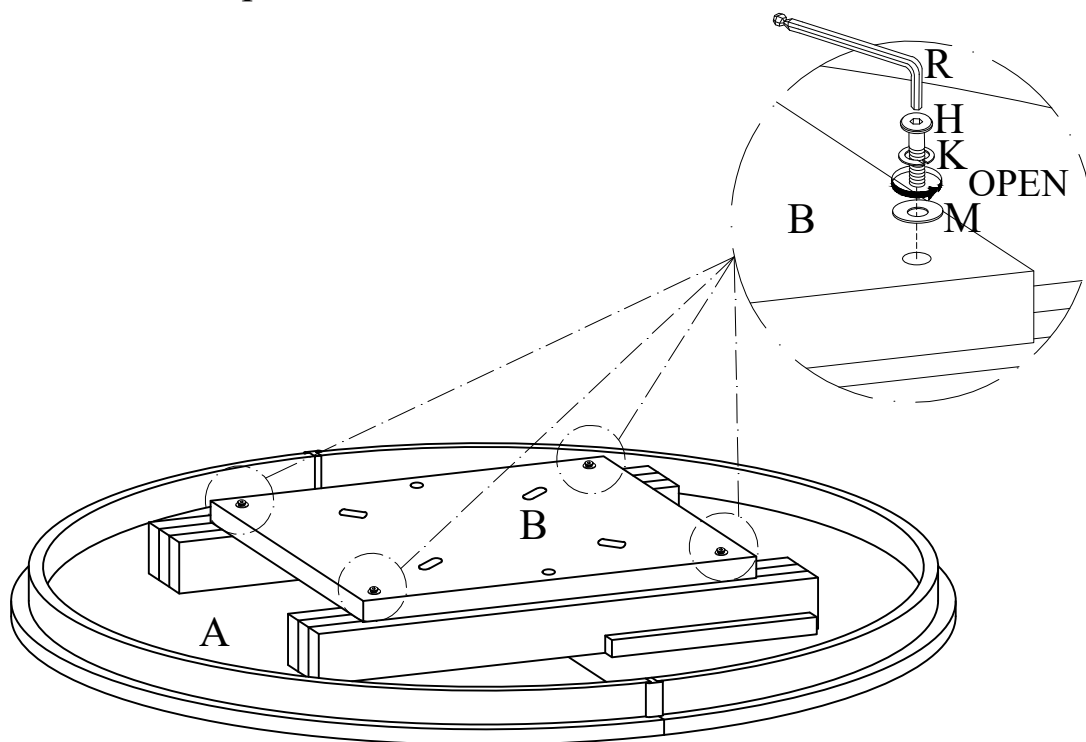

 
- 
- 2** Insert PVC Dowel (O) into the pre-drilled holes of the Upper Crossbar (E) and the Lower Crossbar (F).

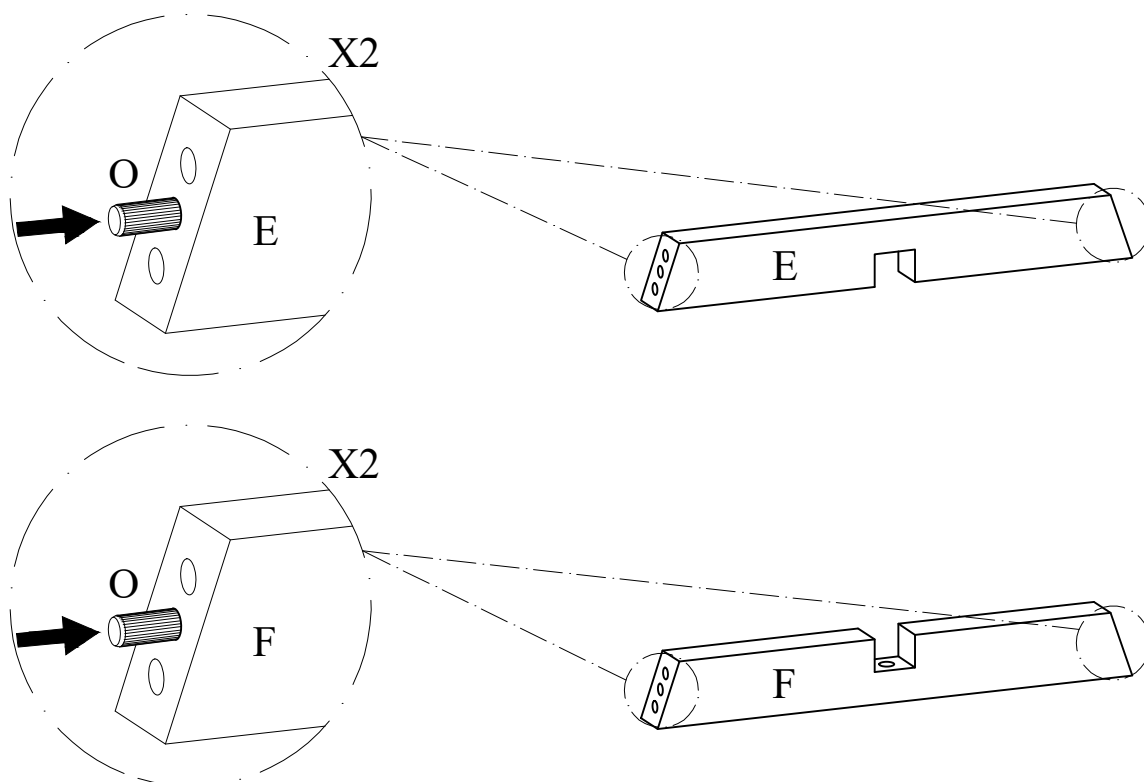

 
- 
- 3** (i) Place the Frame (C) on an even surface. Attach the Leg (D) to the Frame (C) using JCBB Bolt (J), Lock Washer (L) and Flat Washer (N) with the Allen Wrench (S).
- (ii) Use PVC Dowel (O) as guide to align and attach the Upper Crossbar (E) to the Leg (D) using JCBC Bolt (I) and Lock Washer (K) with the Allen Wrench (R).

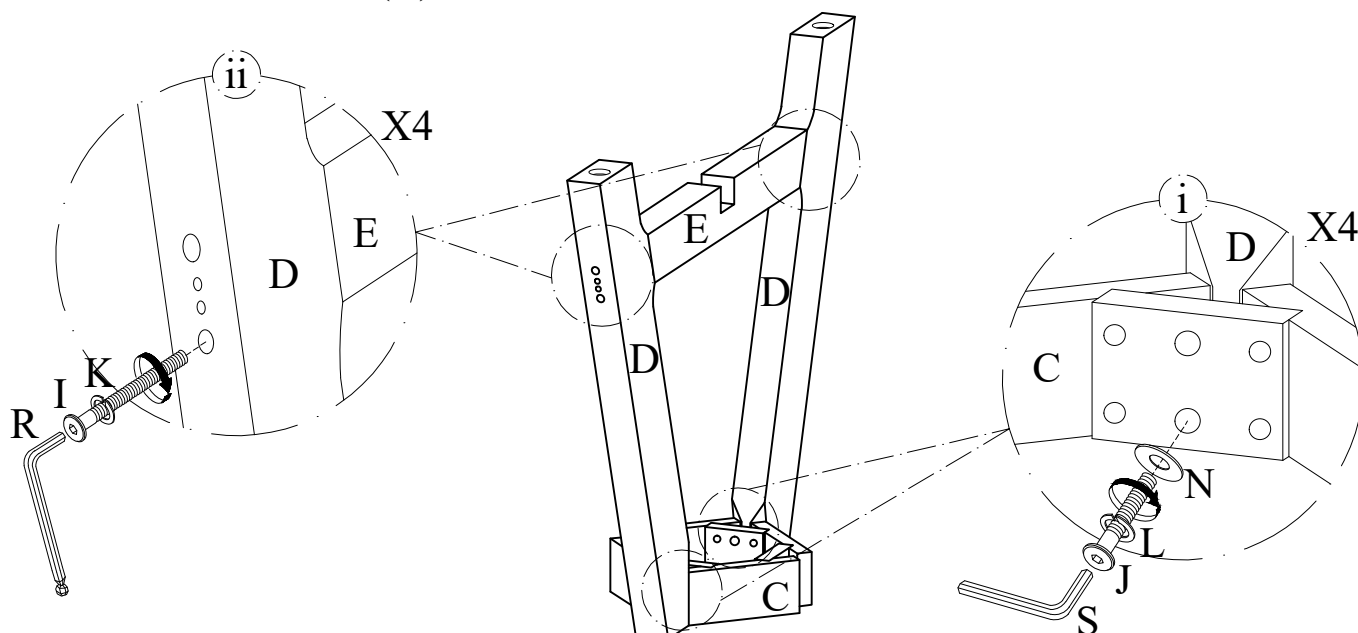

 
- 
- 4** Slot the Lower Crossbar (F) into the Upper Crossbar (E).

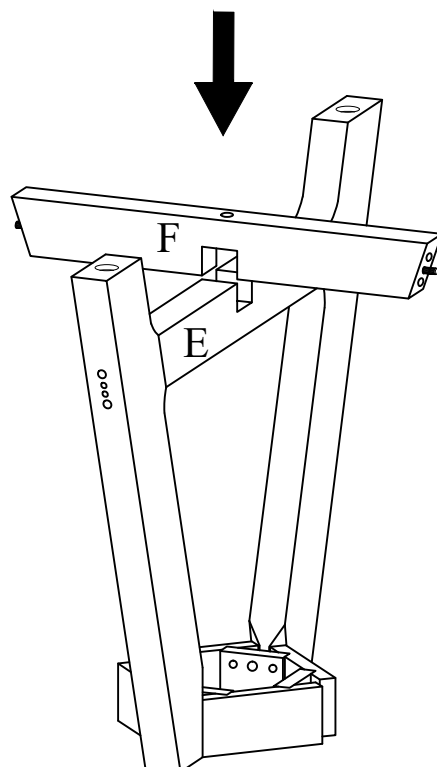

- 5** (i) Use PVC Dowel (O) as guide to align and attach the Leg (D) to the Frame (C) and the Lower Crossbar (F).  
(ii) Secure the Leg (D) to the Frame (C) using JCBB Bolt (J), Lock Washer (L) and Flat Washer (N) with the Allen Wrench (S).  
(iii) Secure the Leg (D) to the Lower Crossbar (F) using JCBC Bolt (I) and Lock Washer (K) with the Allen Wrench (R).  
**\*\* Do not fully tighten the bolts until all bolts are attached.**

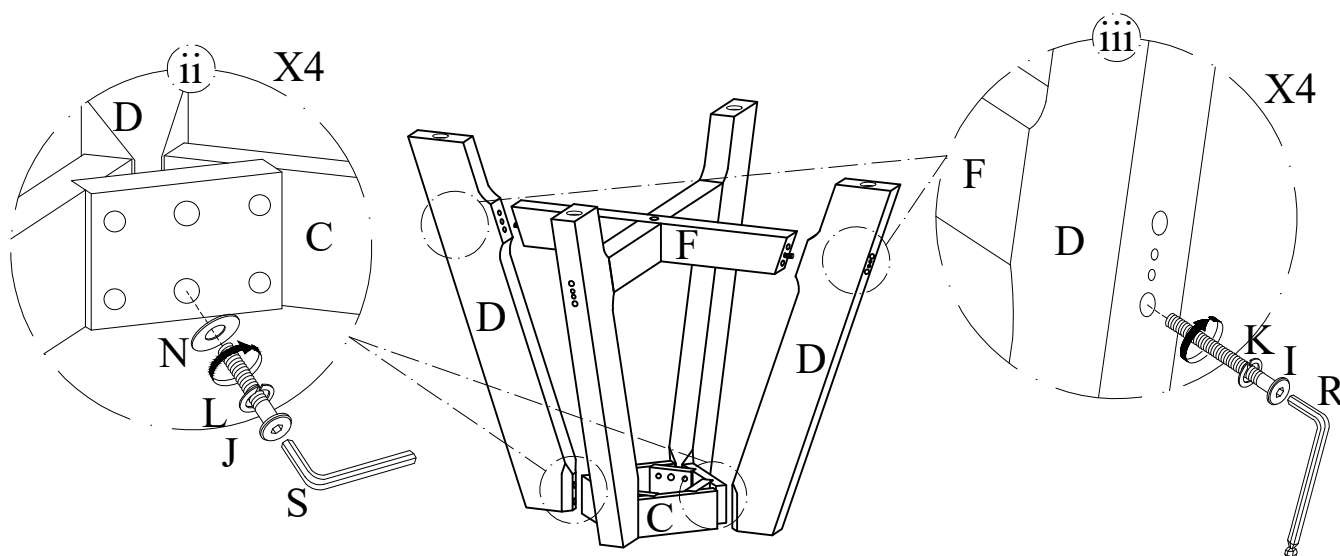 


 - 6** Secure the Lower Crossbar (F) to the Upper Crossbar (E) using JCBC Bolt (H) and Lock Washer (K) with the Allen Wrench (R).

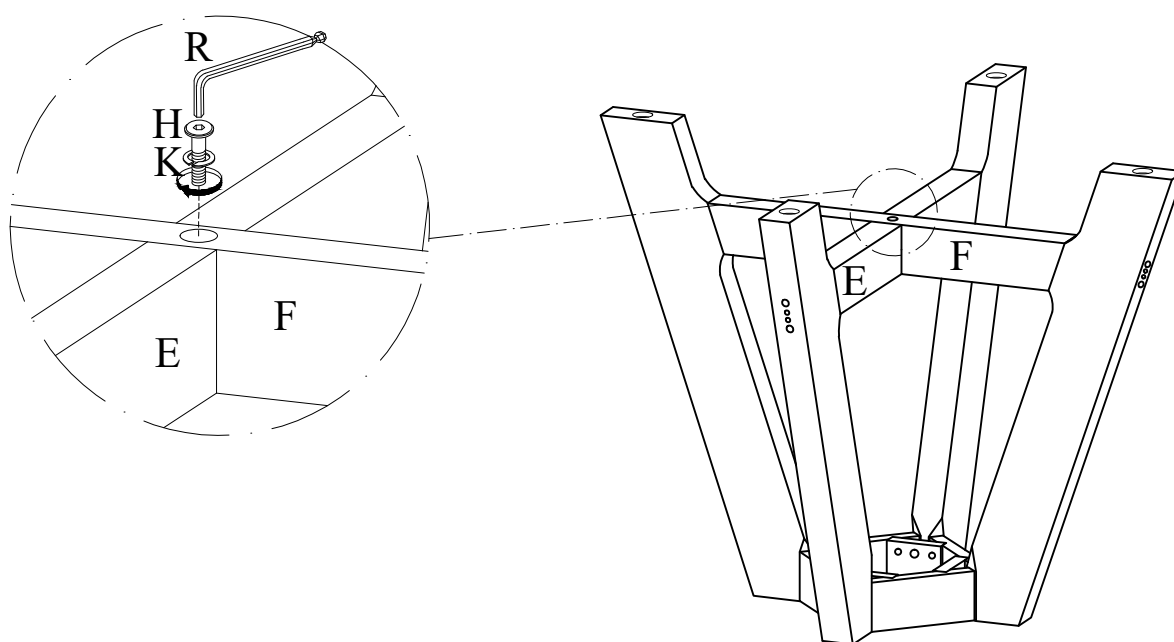


- 7** Ensure the holes of the Mounting Plate (B) aligning with the holes of the Leg (D). Then secure using JCBC Bolt (H), Lock Washer (K) and Flat Washer (M) with the Allen Wrench (R).

**\*\* Do not fully tighten the bolts until all bolts are attached.**

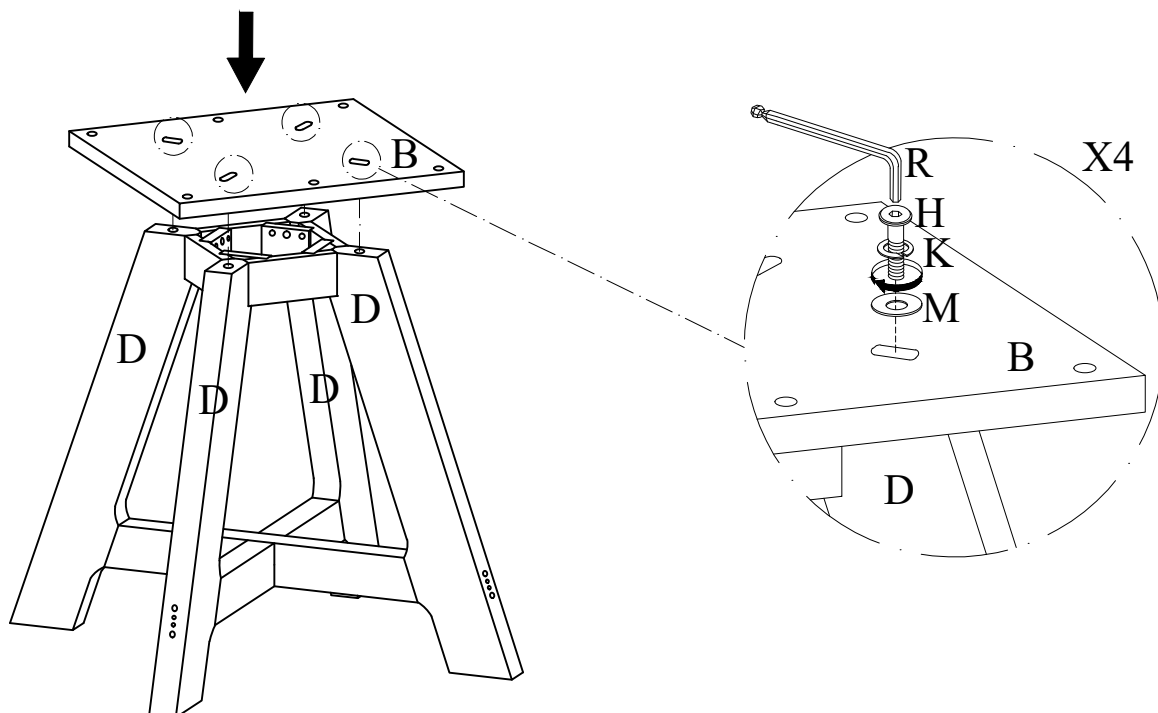 


- 8** Place the Table Top (A) upside down on an even surface. Align and attach the Mounting Plate (B) to the slider of the Table Top (A) using JCBC Bolt (H), Lock Washer (K) and Flat Washer (M) with the Allen Wrench (R).


**\*\* Do not fully tighten the bolts until all bolts are attached.**

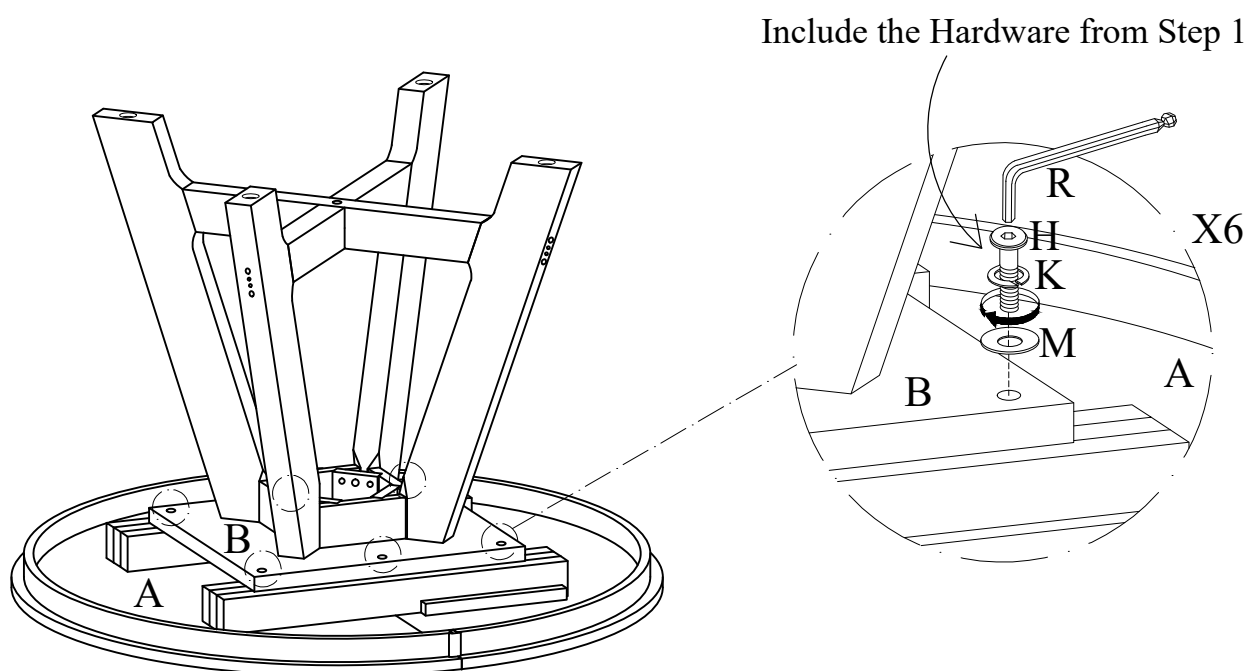 

 
**9** Screw the Leveler (Q) into the bottom of each Leg (D).

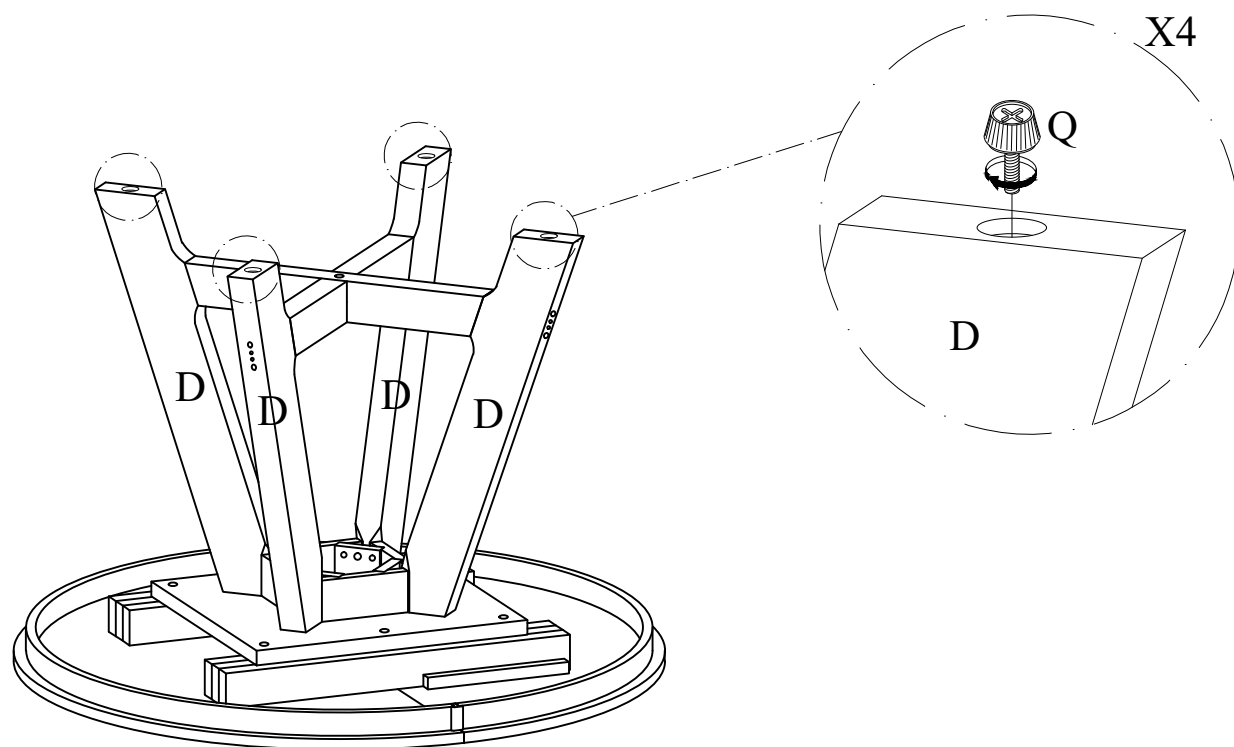

 
**10** Stand the table up. Unlock the latches underneath the Table Top (A). Pull apart the Table Top (A) at both ends and place the Leaf (G) into place.

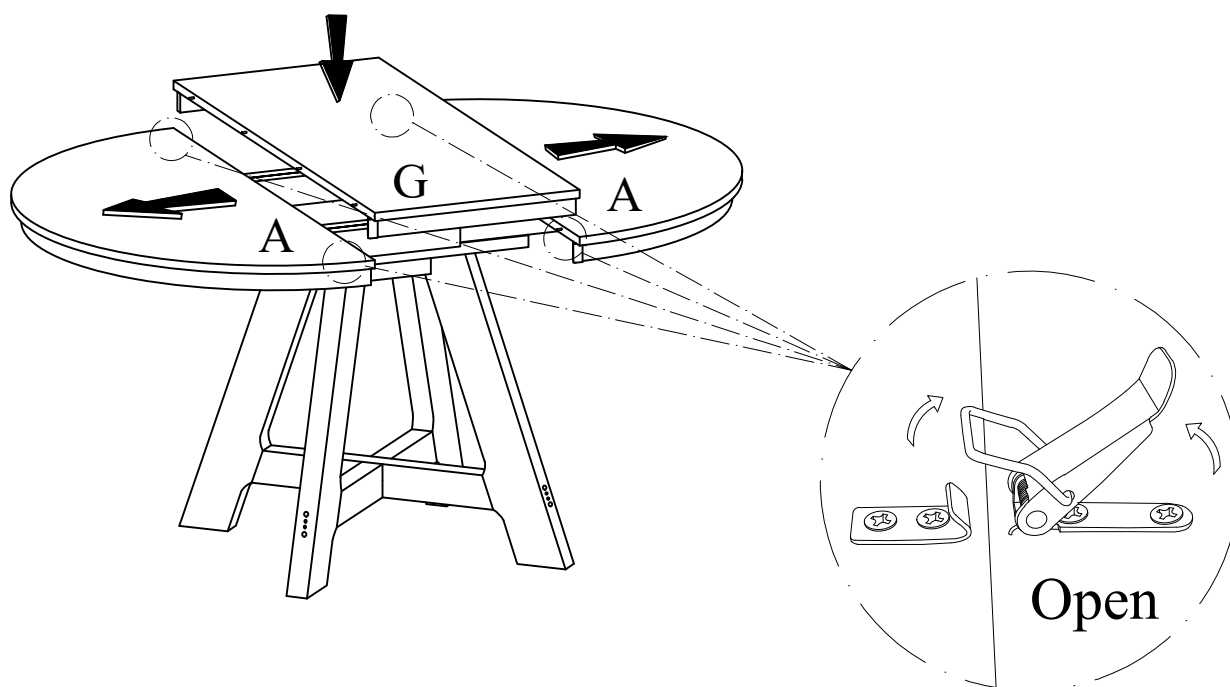

 
- 11** Push both ends of the Table Top (A) to close. Ensure the pins are lined up. Lock all the latches underneath the Table Top (A).

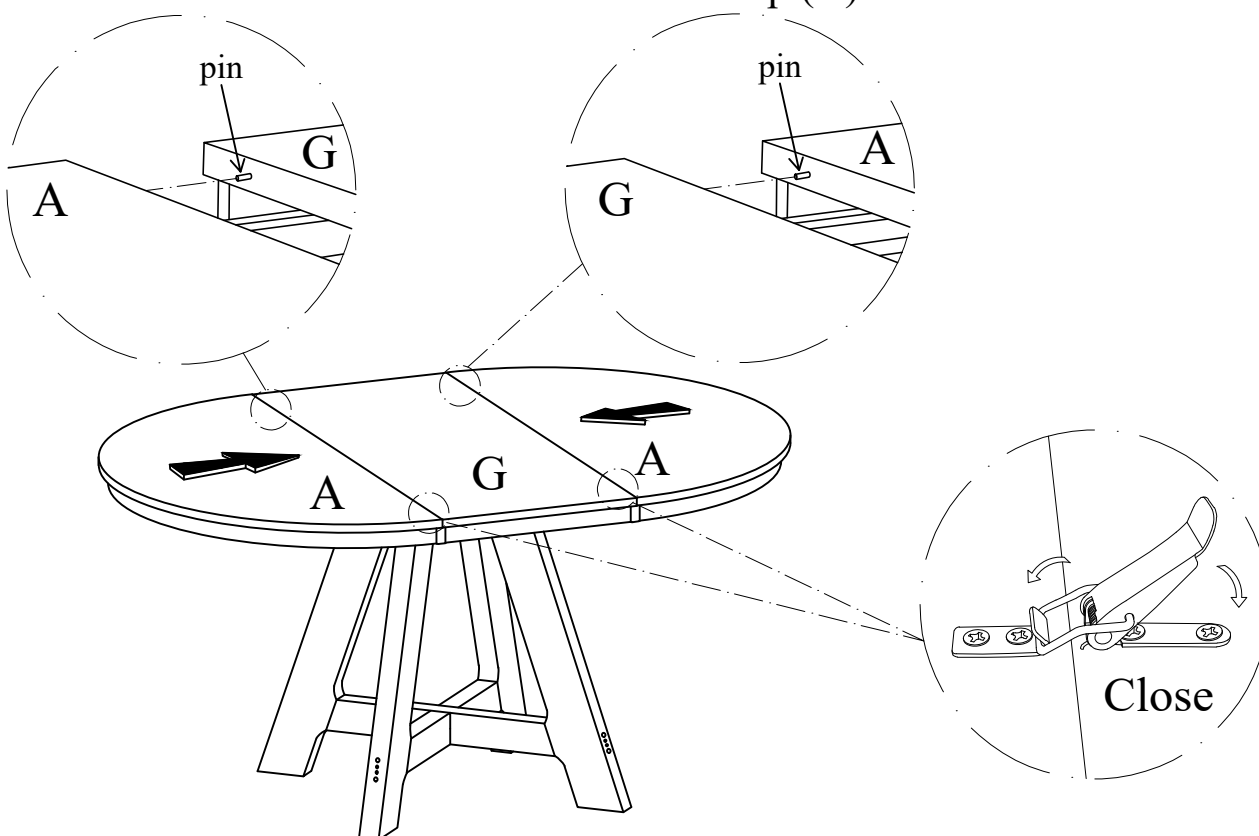

 - 12** Attach the Block (P) to each Leg (D).

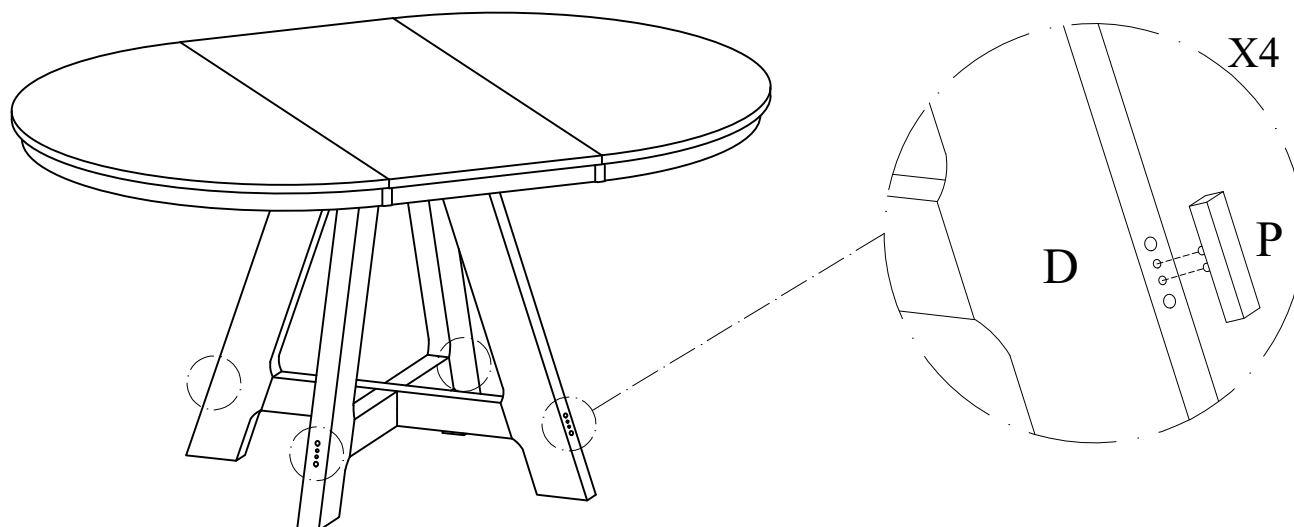

 - 
- 13** Stand the table on an even surface and check for balance. If the table wobbles slightly, please adjust the Leveler (Q).

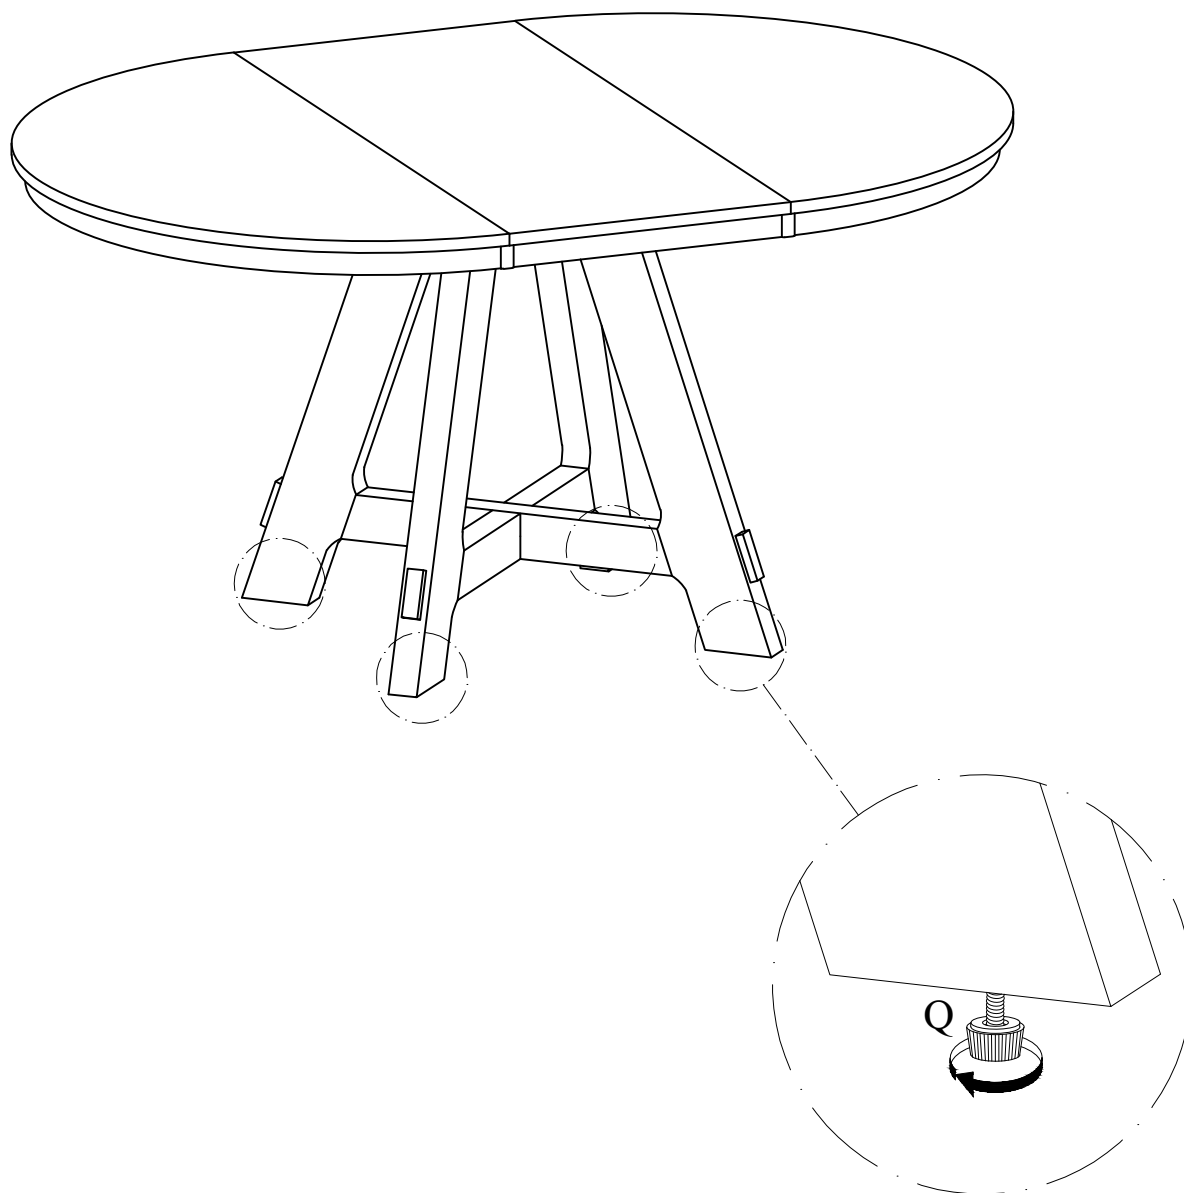

---

 
 
 

 
 
 




### Cleaning & Care

 
Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

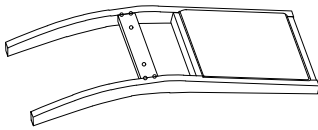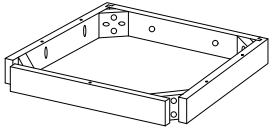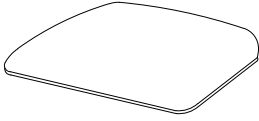

# ASSEMBLY INSTRUCTIONS


## DINING CHAIR

<b>A</b> Chair Back	<b>B</b> Seat Frame	<b>C</b> Seat Cushion	<b>D</b> Front Leg
			
1 PC	1 PC	1 PC	2 PCS
<b>E</b> JCBC Bolt	<b>F</b> JCBC Bolt	<b>G</b> JCBC Bolt	<b>H</b> Lock Washer
M6 x 40mm	M6 x 60mm	M6 x 70mm	M6
			
2 PCS	4 PCS	4 PCS	10 PCS
<b>I</b> Flat Washer	<b>J</b> CSK Screw	<b>K</b> Allen Wrench	
M6	M4 x 25mm	M4 x 100mm	
			
10 PCS	5 PCS	1 PC	

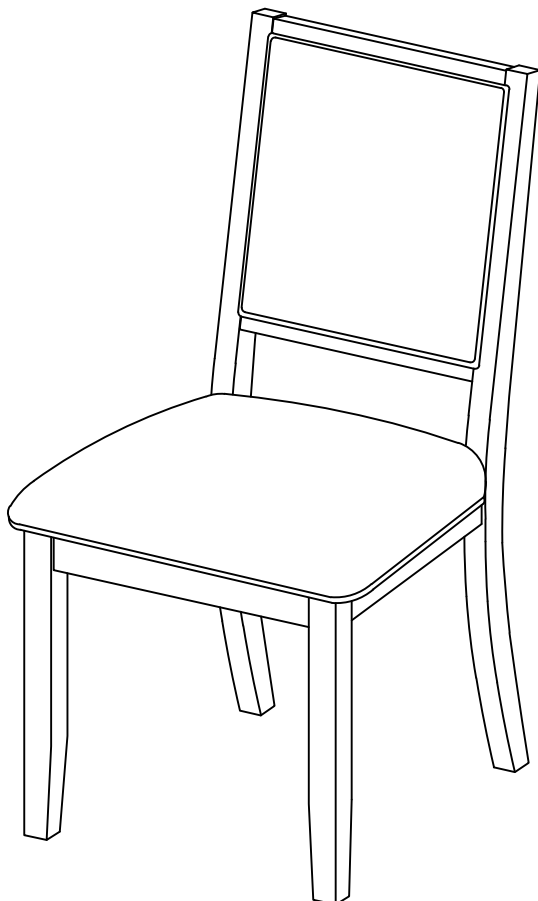


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 - 
- 1** Place the Chair Back (A) on a soft surface and attach Seat Frame (B).
- (i) Insert JCBC Bolt (G), Lock Washer (H) and Flat Washer (I) into the corner holes and tighten with the Allen Wrench (K).
  - (ii) Then, insert JCBC Bolt (E), Lock Washer (H) and Flat Washer (I) into the middle holes and tighten with the Allen Wrench (K).

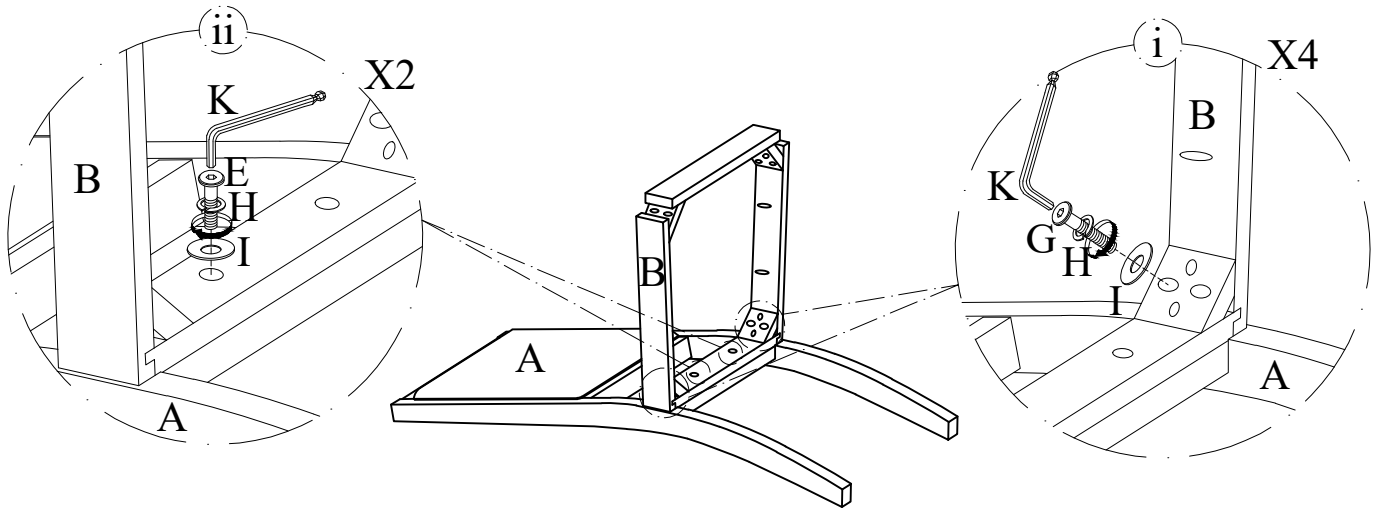


Take the Allen Wrench, and turn the bolts until the legs are secured.  
**DO NOT TIGHTEN COMPLETELY.**  
Stop when you feel you are adding force to tighten the bolt.

 - 
- 2** Attach the Front Leg (D) to the front corners of the Seat Frame (B) using JCBC Bolt (F), Lock Washer (H) and Flat Washer (I) with the Allen Wrench (K).

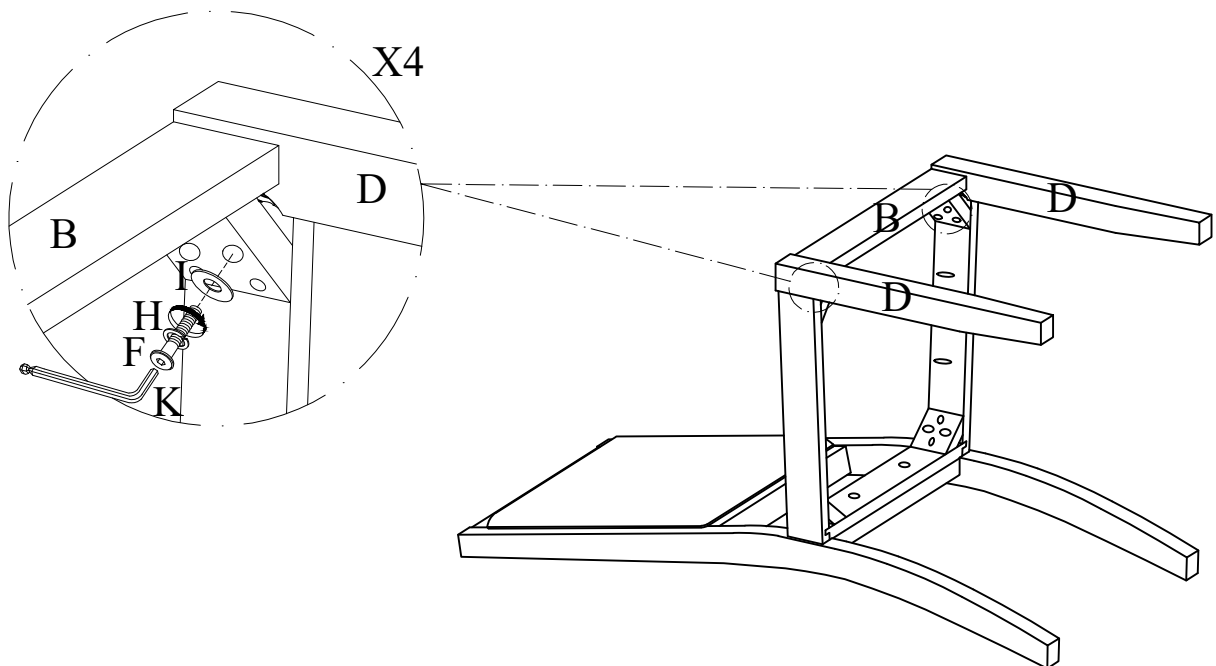


Take the Allen Wrench, and turn the bolts until the legs are secured.  
**DO NOT TIGHTEN COMPLETELY.**  
Stop when you feel you are adding force to tighten the bolt.

 - 
- 3** Attach the Seat Cushion (C) to the Seat Frame (B) using CSK Screw (J) with a screwdriver (not provided).

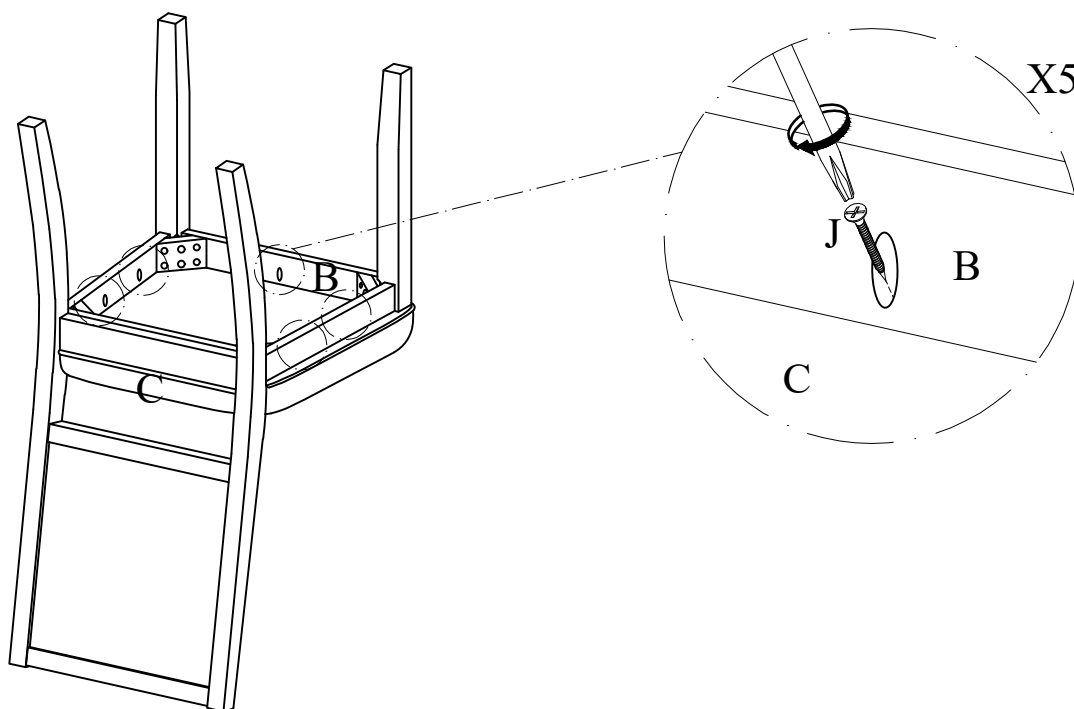

 - 
- 4** Stand the chair on an even surface and check for balance. If the chair wobbles slightly, apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the chair is balanced, apply downward pressure evenly in the center of the chair and tighten all bolts, being careful not to over-tighten beyond the hole depth.

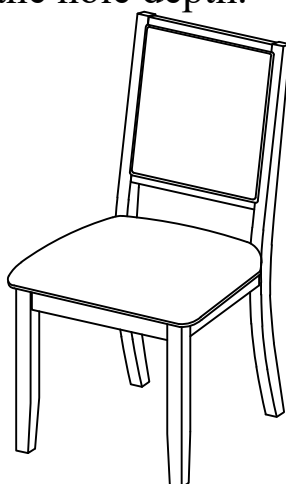

*Helpful Tip: While tightening the bolts from underneath, have someone sit in the chair.*

---

### Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.