# **Assembly Instructions**

Caution: You must read this before you proceed

### **Care & Maintenance**



Not for commercial use. For residential use only.



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside . For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs. Sets often ship in multiple boxes and may arrive a day or two apart.

# **DINING CHAIR**




# Parts List QTY Label Description Picture Α Chair Back 1 Left Leg 1 В Right Leg С 1 D **Connection Rod** 1 Connection Rod 1 Ε F **Seat Cushion** 1

<u>Hardware</u>			
Label	Picture	Description	QTY
0	Cum	Bolt (M6x6mm)	5
0	<b>J</b>	Bolt (M6x18mm)	13
3	0	Washer(M6x18x1.5mm)	5
4		Allen Wrench (3mm)	1
(5)		Allen Wrench (5mm)	1
6	<b>"</b>	Adjustable Foot	1

# **Assembly Preparation**

Before Beginning Assembly:

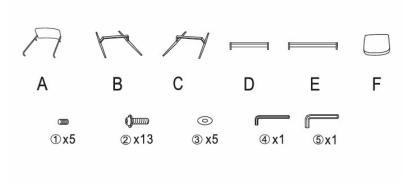



Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


# Assembly Steps

#### Overview

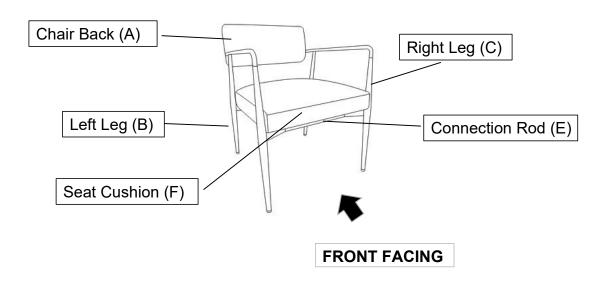


This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

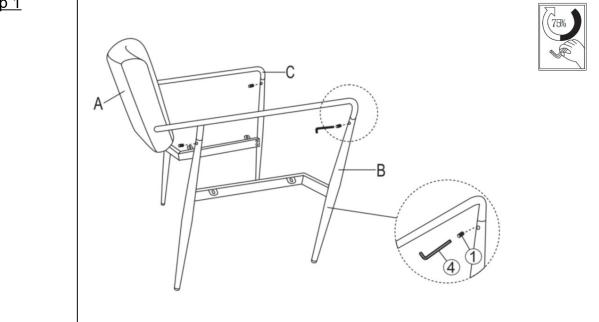


Attach the Chair Back(A) to the Left Leg (B) and Right Leg (C) ,using the bolt(1) with Allen Wrench (4) as shown above.

Do not fully tighten the Bolts.

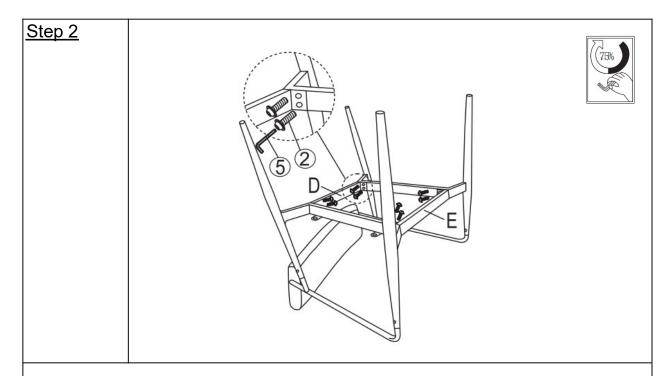


Attach the Connection Rod (D) and (E) to assembled Leg Frame using the Bolt (②) with Allen Wrench (⑤) as shown above.

# Do not fully tighten the Bolts.

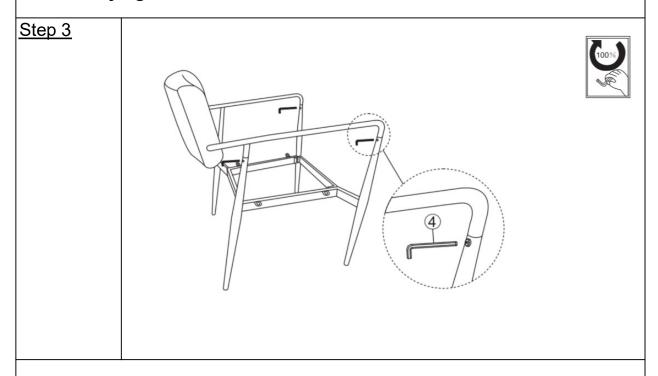

Stand the Chair up and fully tighten the Bolts.


## Step 4

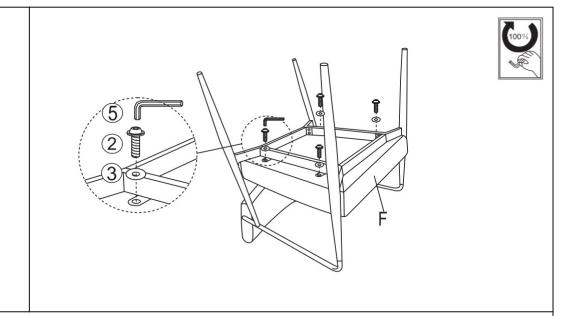

Attach the Seat Cushion (F) to assmbled frame using the Washer (③), Bolt (②) with Allen Wrench (⑤) as shown above.


Inspect and make sure all parts are adequately connected. Fully Tighten all the Bolts.

### Step 5

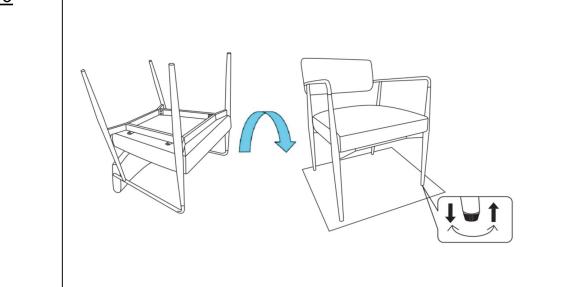

Stand the Chair up.

Place the Chair on a LEVEL SURFACE to check for wobbles. Adjust the levelers to ensure Chair stability.

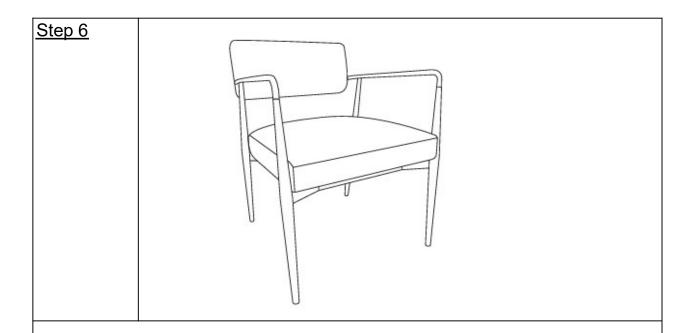

Your Dining Chair is ready for use. The Dining Chair can only be used on a flat, level surface.