ASSEMBLY INSTRUCTIONS 24" Bathroom Vanity

N710P228364



PLEASE DO NOT RETURN TO STORE




Please do not return this product to the retailer!!


We are able to assist you in ANY way


If you find that you have any trouble with assembly or missing or damaged parts please contact the seller. Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- •We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- •Keep children and animal away from the work area, small parts could choke if swallowed. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

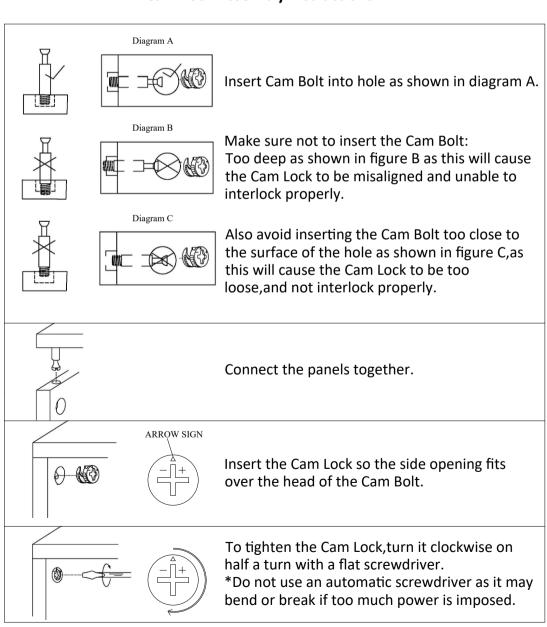


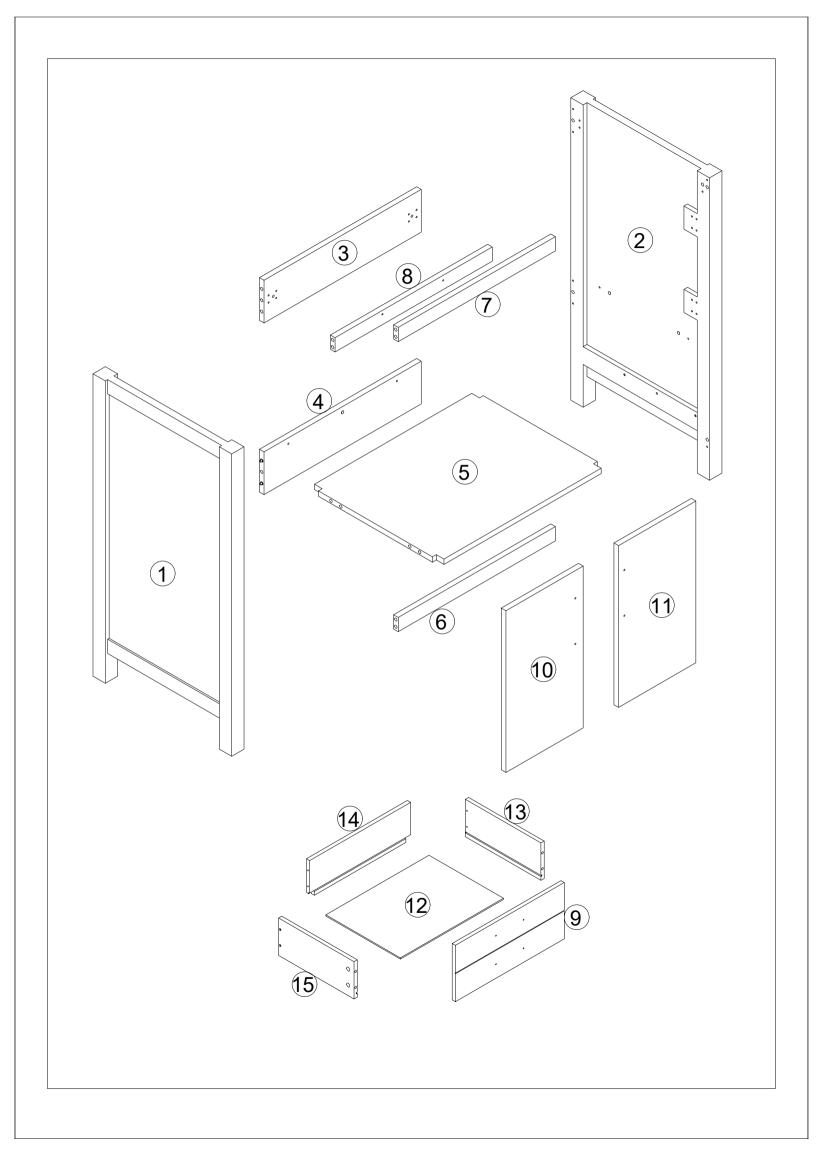

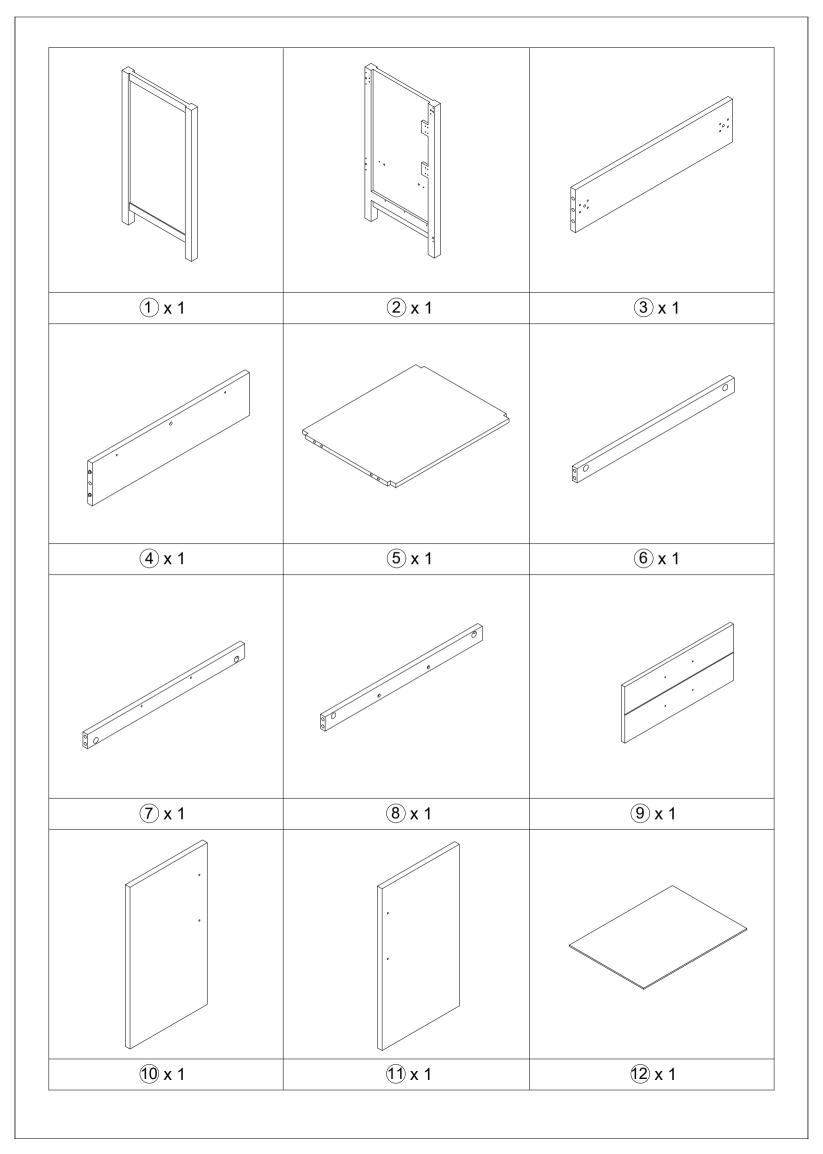


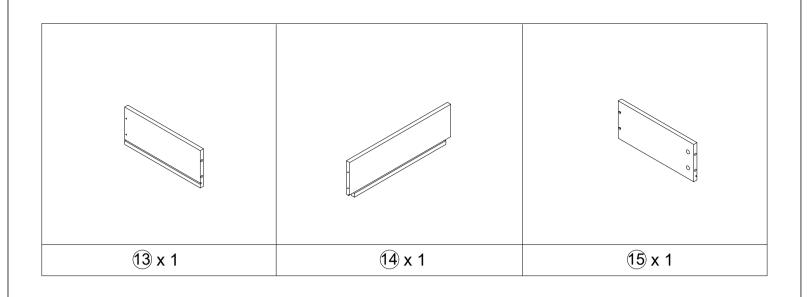


Ø6x35mm	Ø15x12mm	Ø8x30mm	M4x25mm		
A x 24+2	B x 24+2	C x 15+1	Dx2	E x 4	Fx2
TUG		<u> </u>		ACCOUNTS OF THE PARTY OF THE PA	
M4x14mm	M4x18mm	M4x14mm	M4x35mm	M6x60mm	Ø8x40mm
G x 12+1	H x 8	I x 30+2	Jx4	Kx2	Lx2
M x 4	N x 4	O x 1	Px1		-

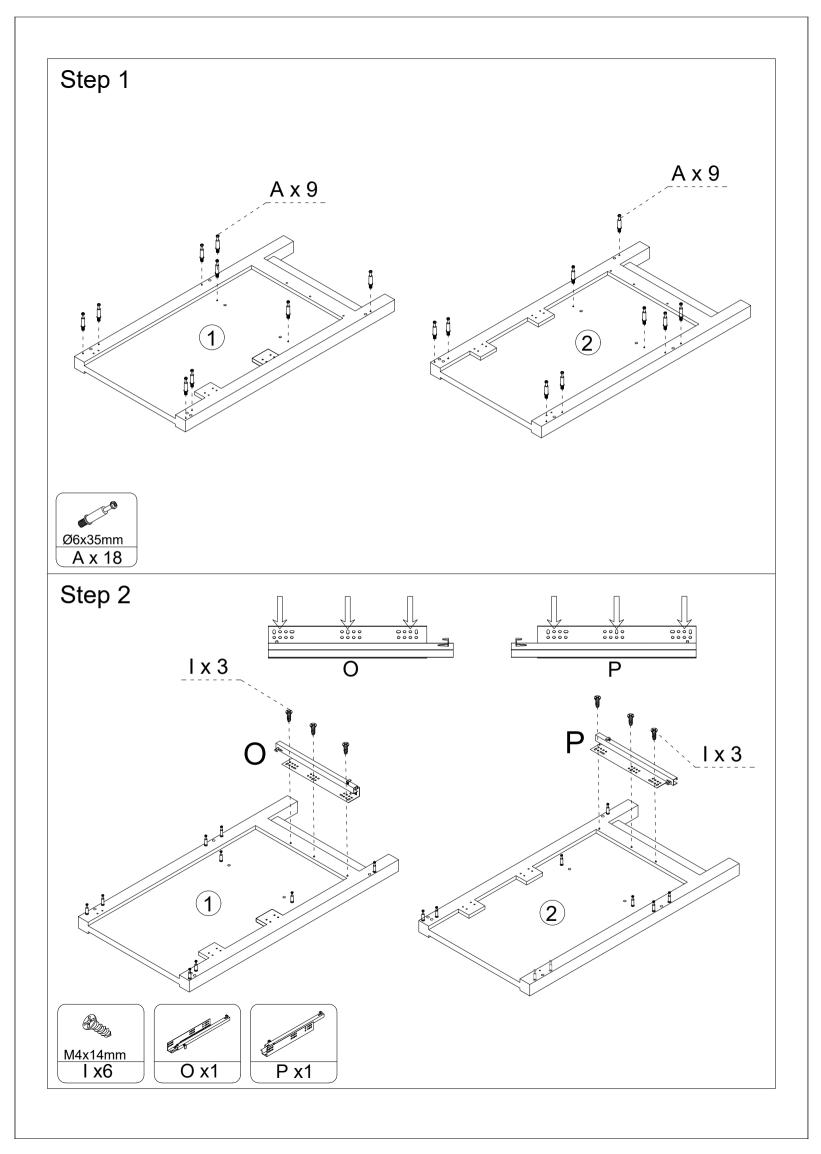

Step 3

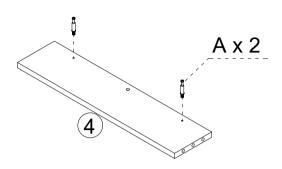

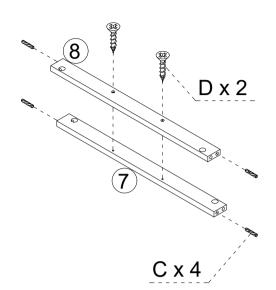









Step 4

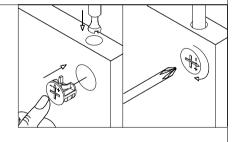


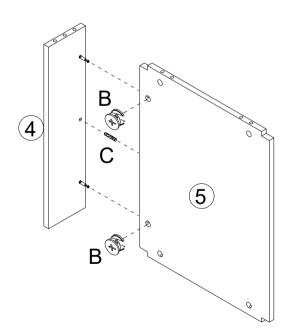






Step 5 8 3 B x 5 6 Ø15x12mm B x 5 Ø8x30mm C x 4 Step 6 C x 6 **(5**) 2 B x 4 Ø15x12mm B x 4 Ø8x30mm C x6

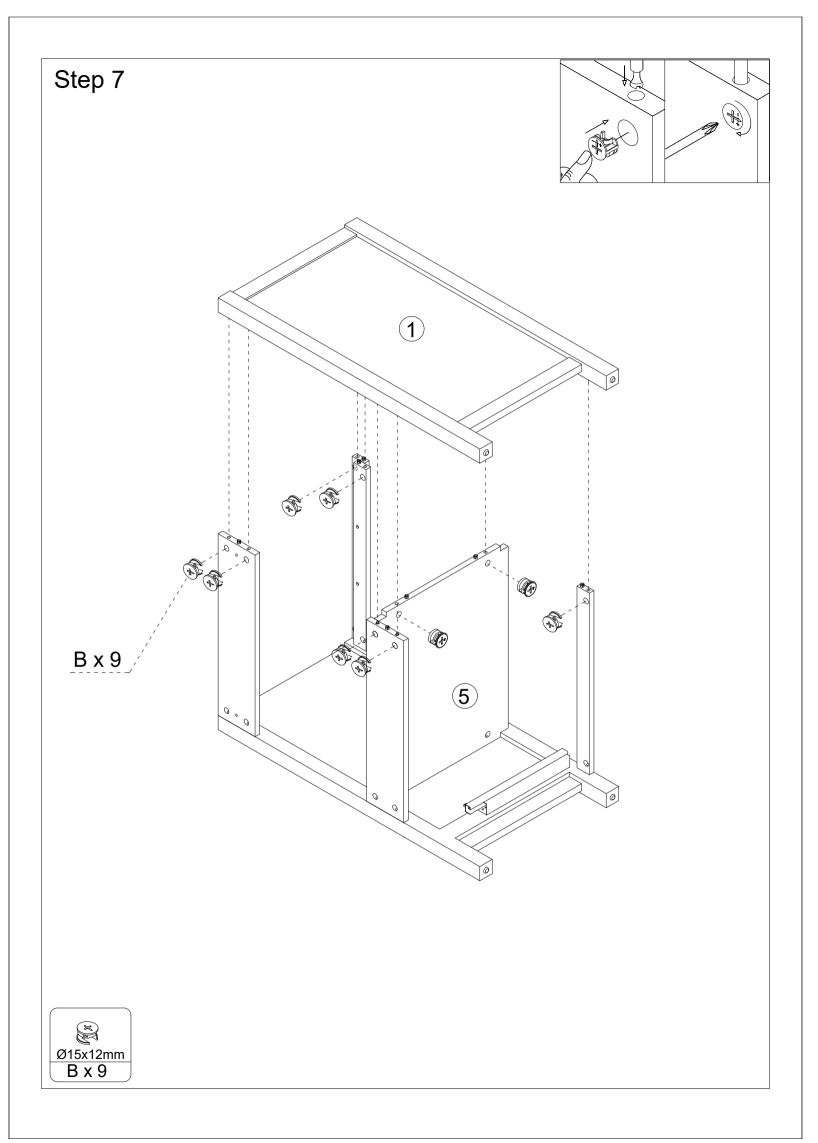

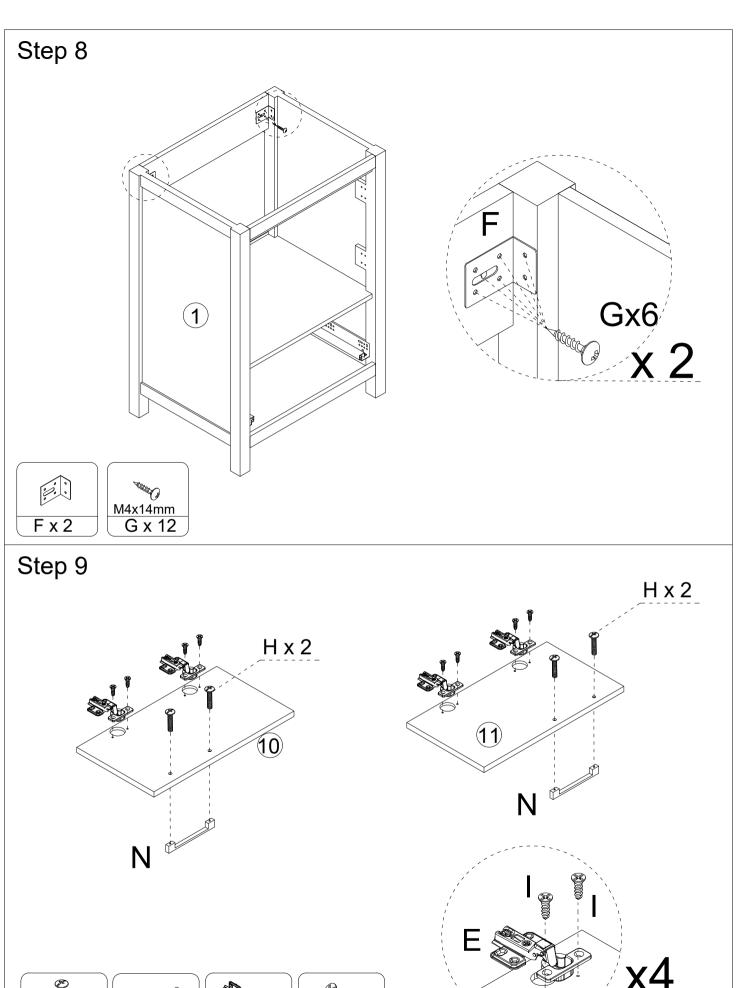













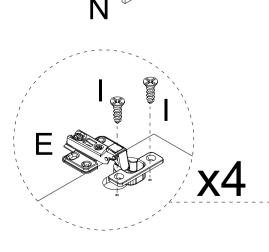


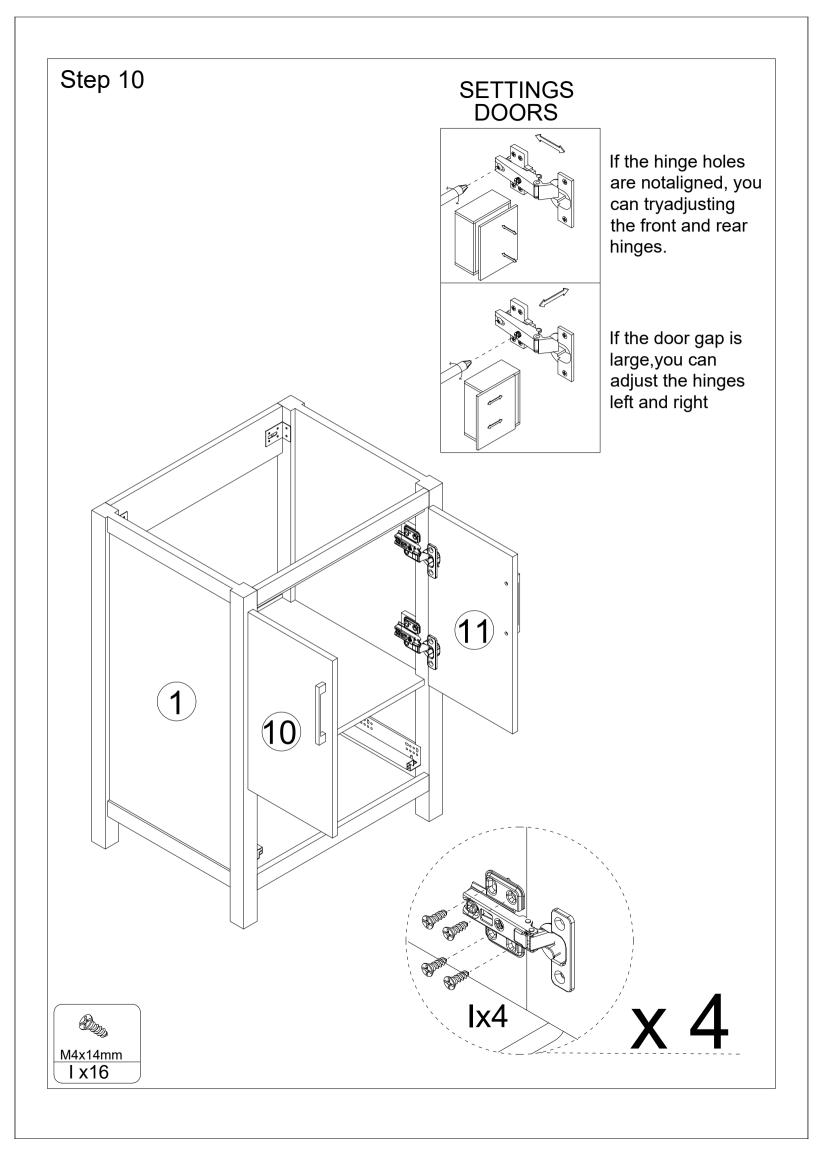


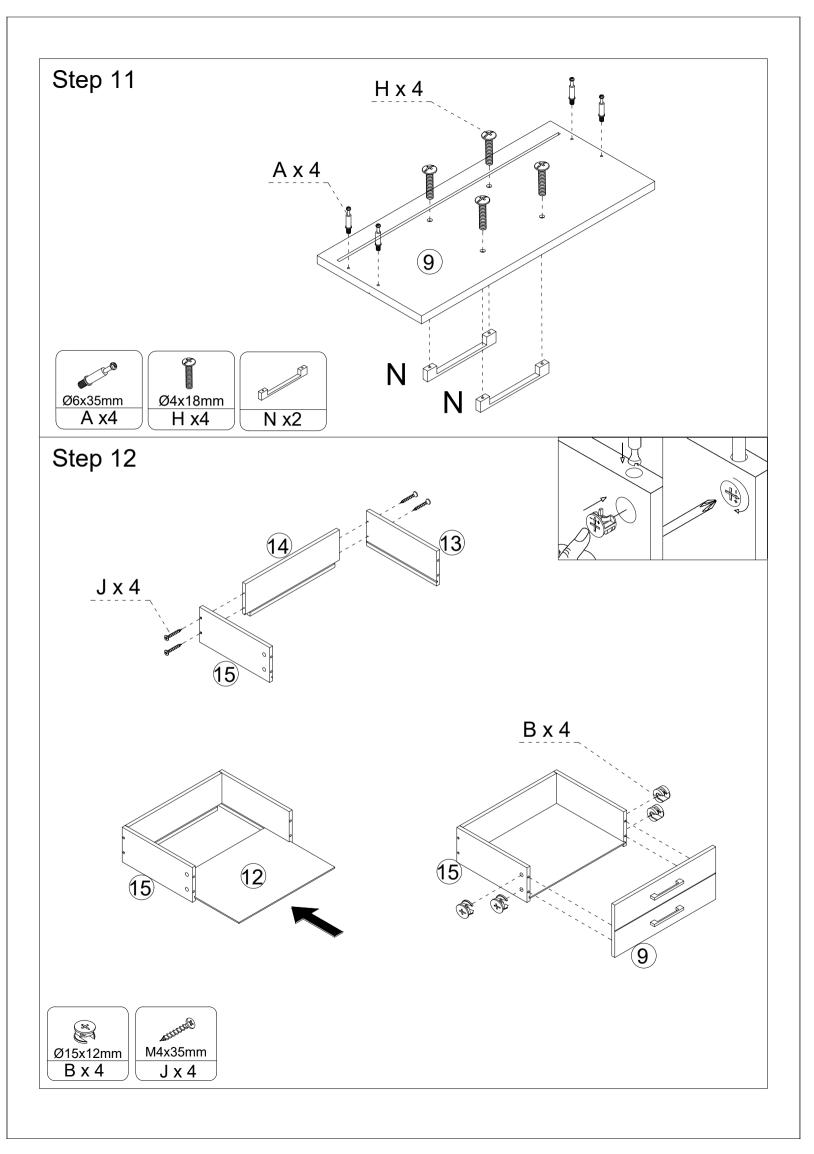


Step 13

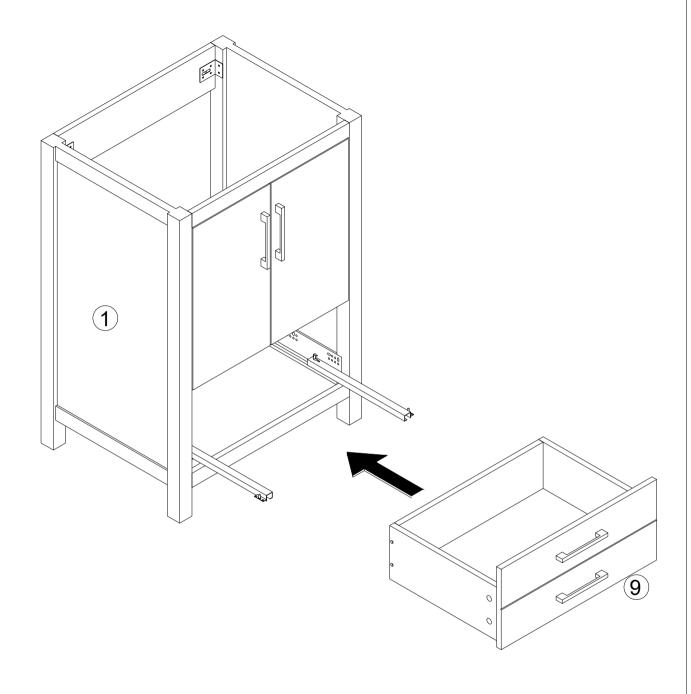

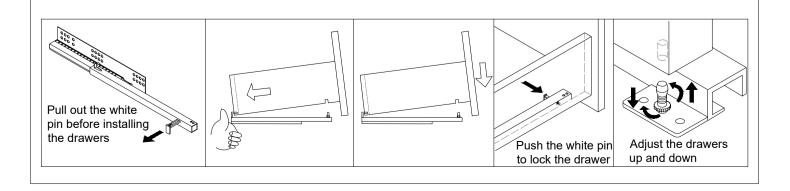


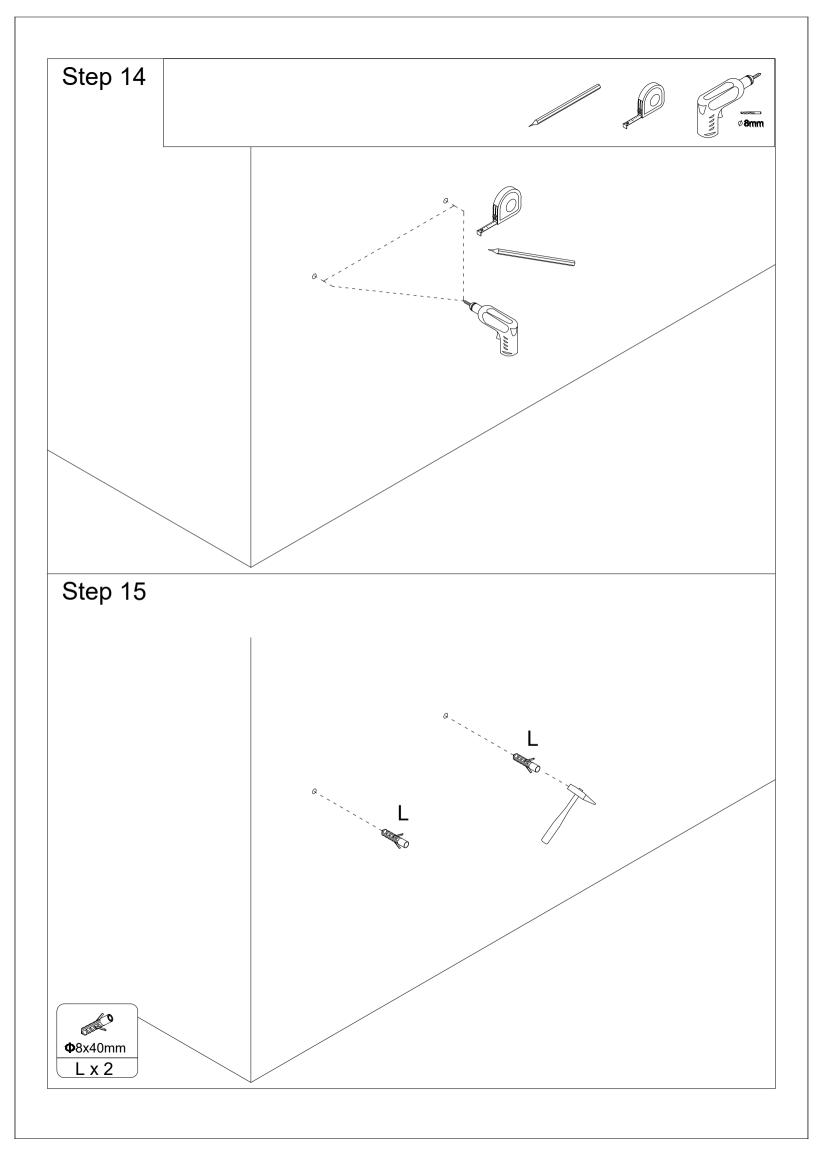

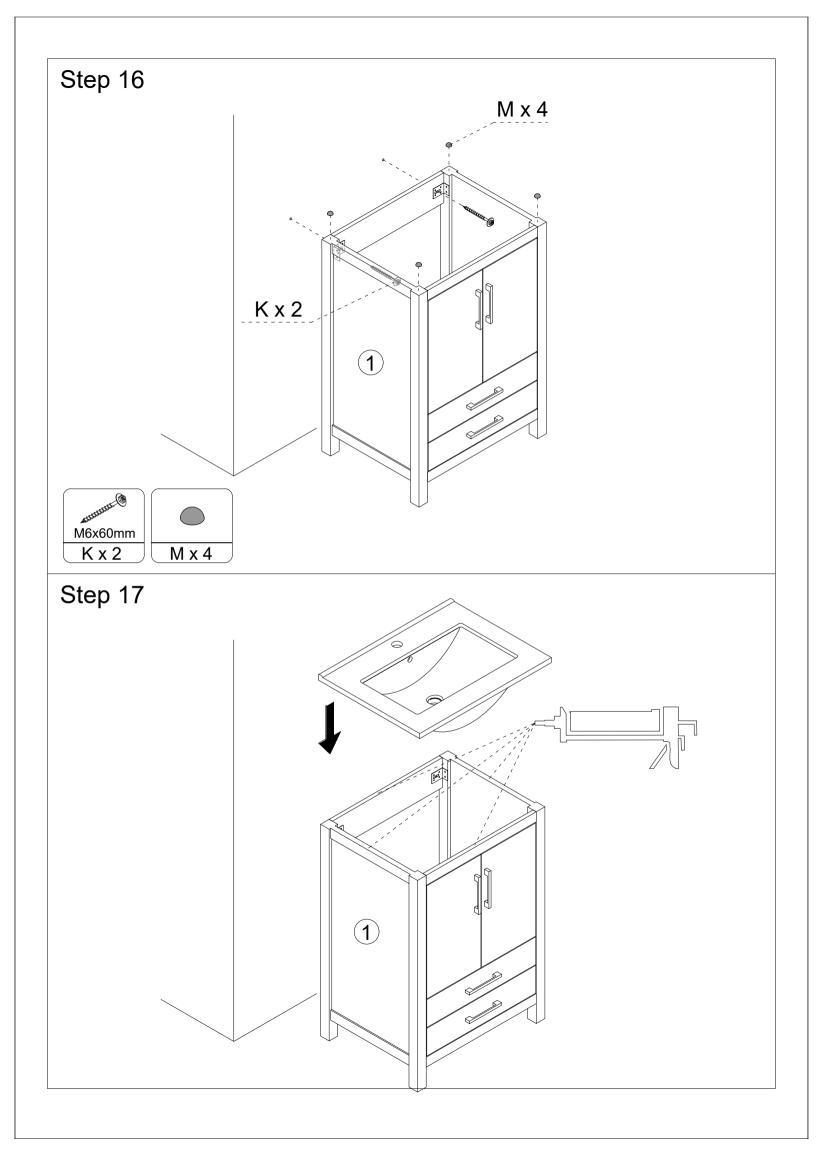


Step 18

HINGE ADJUSTMENTS

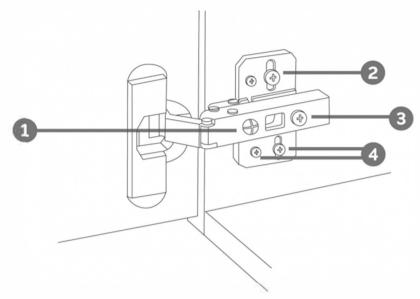

1 Sideways / Tilt adjustment


Turn the screw clockwise to move the door further away from the side of the cabinet anticlockwise to move the door closer to the side of the cabinet

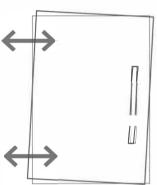

2 4 Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up anticlockwise to move the door down

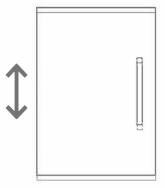

3 Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

