Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



Not for commercial use. For residential use only.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



• Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside . For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.




Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in the corner in the carton for hardware packs. Sets often ship in multiple boxes and may arrive a day or two apart.

DINING TABLE

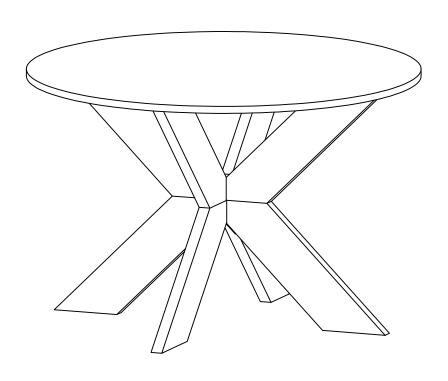

Parts List						
Label	Picture	Description	QTY			


	•	
Α	Table Top	1
В	Leg B	1
С	Leg C	1

Hardware					
Label	Picture	Description	QTY		
1		Long Bolt (1/4"x40mm)	5		
2		Short Bolt (1/4"x20mm)	3		
3		Lock Washer (Ø8xØ13mm)	7		
4	,	Flat Washer (Ø8xØ19mm)	7		
(5)		Allen Key	2		
6		Wooden dowel	5		
7		U Metal	1		

Assembly Preparation

Before Beginning

Assembly

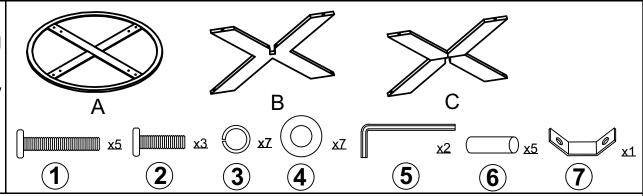



- · Read instructions, cover to cover-
- **1**2X
- Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


Assembly Steps

Overview

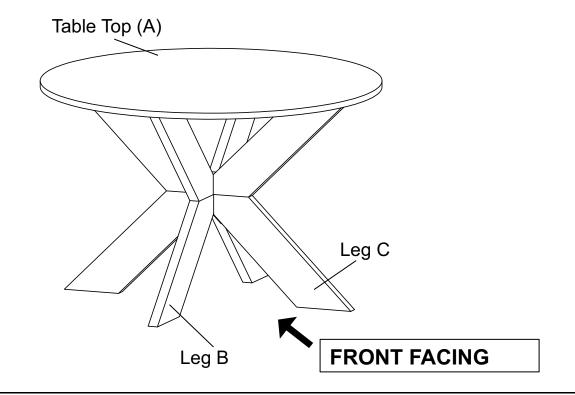


This Dining Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions here below to familiarise the parts and steps before assembly.

Step 1

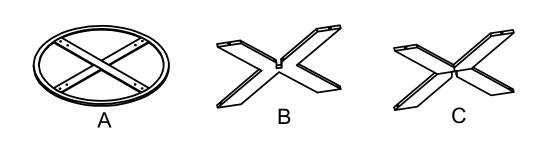

Unpack and place all parts on a clean, non-marring surface.

Step 2

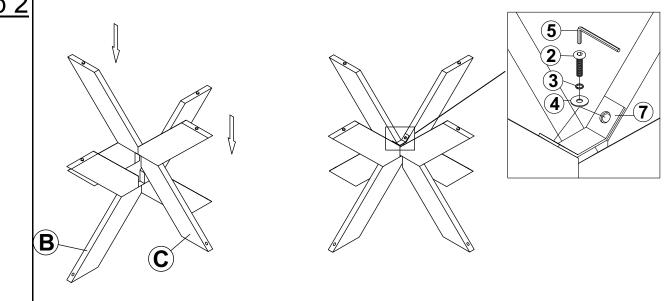


Align and insert the Leg with U Metal and Bolt of the Leg (B) to the Leg (B).

Using U Metal (7), Short bolt (2), Lock washer (3) Flat washer (4) and Allen Key (5).

DO NOT FULLY TIGHTEN BOLTS.


Step 3

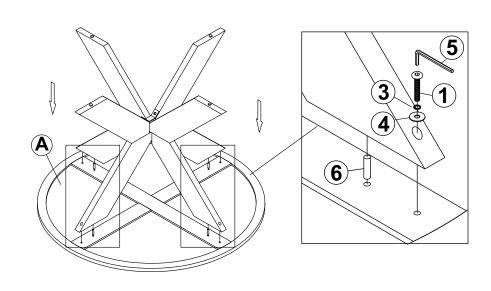

Then continue position Leg (B)+ (C) as shown in picture above. Align the wooden dowel (6) into the positions in the Table Top. Then, affix Leg (B) + (C) with Table Top (A) by using Long Bolt (1), Lock washer (3), Flat washer (4) and Allen Key (5)

FULLY TIGHTEN BOLTS.

Step 4

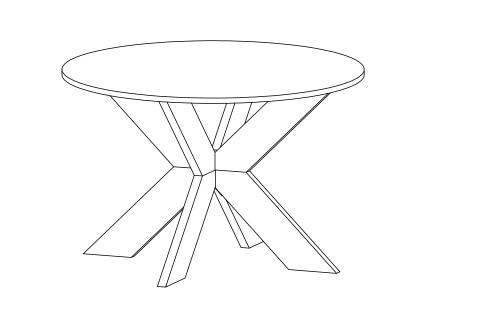

The Dining Table now is ready to be used.

Caution: This Dining Table can only be used on a flat, level surface.