 


# TV STAND

## ***USER MANUAL***

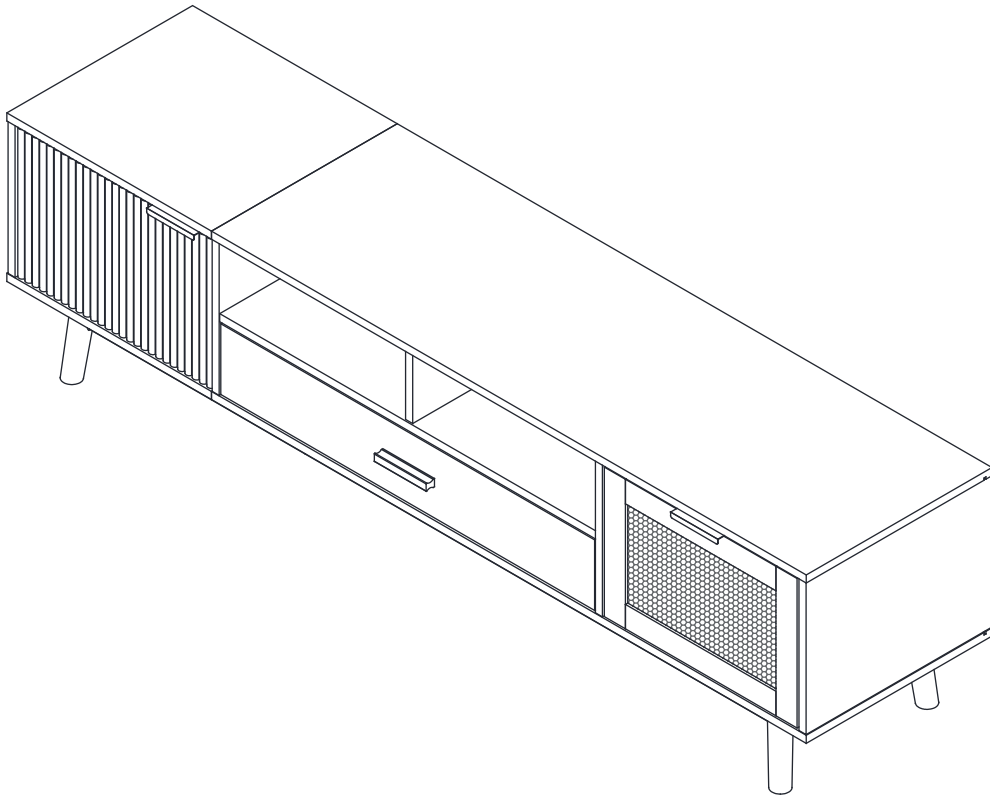

***SAVE THESE INSTRUCTIONS FOR FUTURE USE***

**PLEASE DO NOT RETURN TO STORE**



**Please do not return this product to the retailer!!  
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

 
 
 
 
 
 
# Before Installation


**Important – Please read these instructions fully before starting assembly**

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## Cam Lock Assembly Instructions
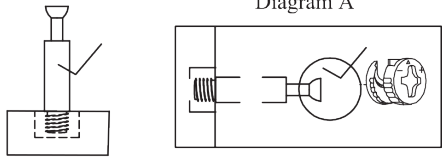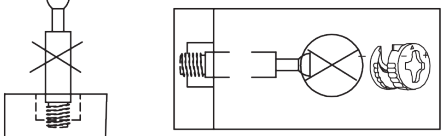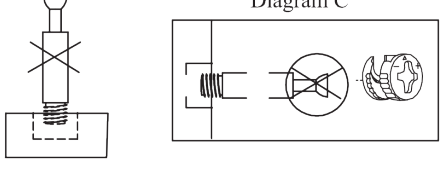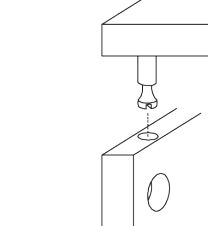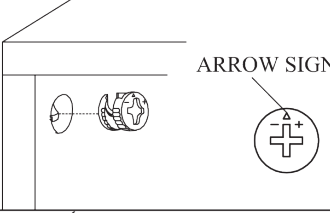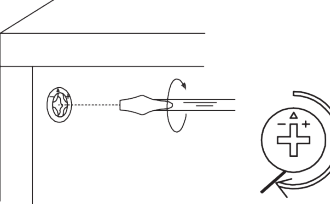
|                                                                                                                         |                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                        | <p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p>                                                                                                                          |
|                                      | <p>Diagram B</p> <p>Make sure not to insert the Cam Bolt:<br/>Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>                |
|                                      | <p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p> |
|  <p>Connect the panels together.</p> |                                                                                                                                                                                                   |
|                                      | <p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>                                                                                                                |
|                                      | <p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.<br/><i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>   |

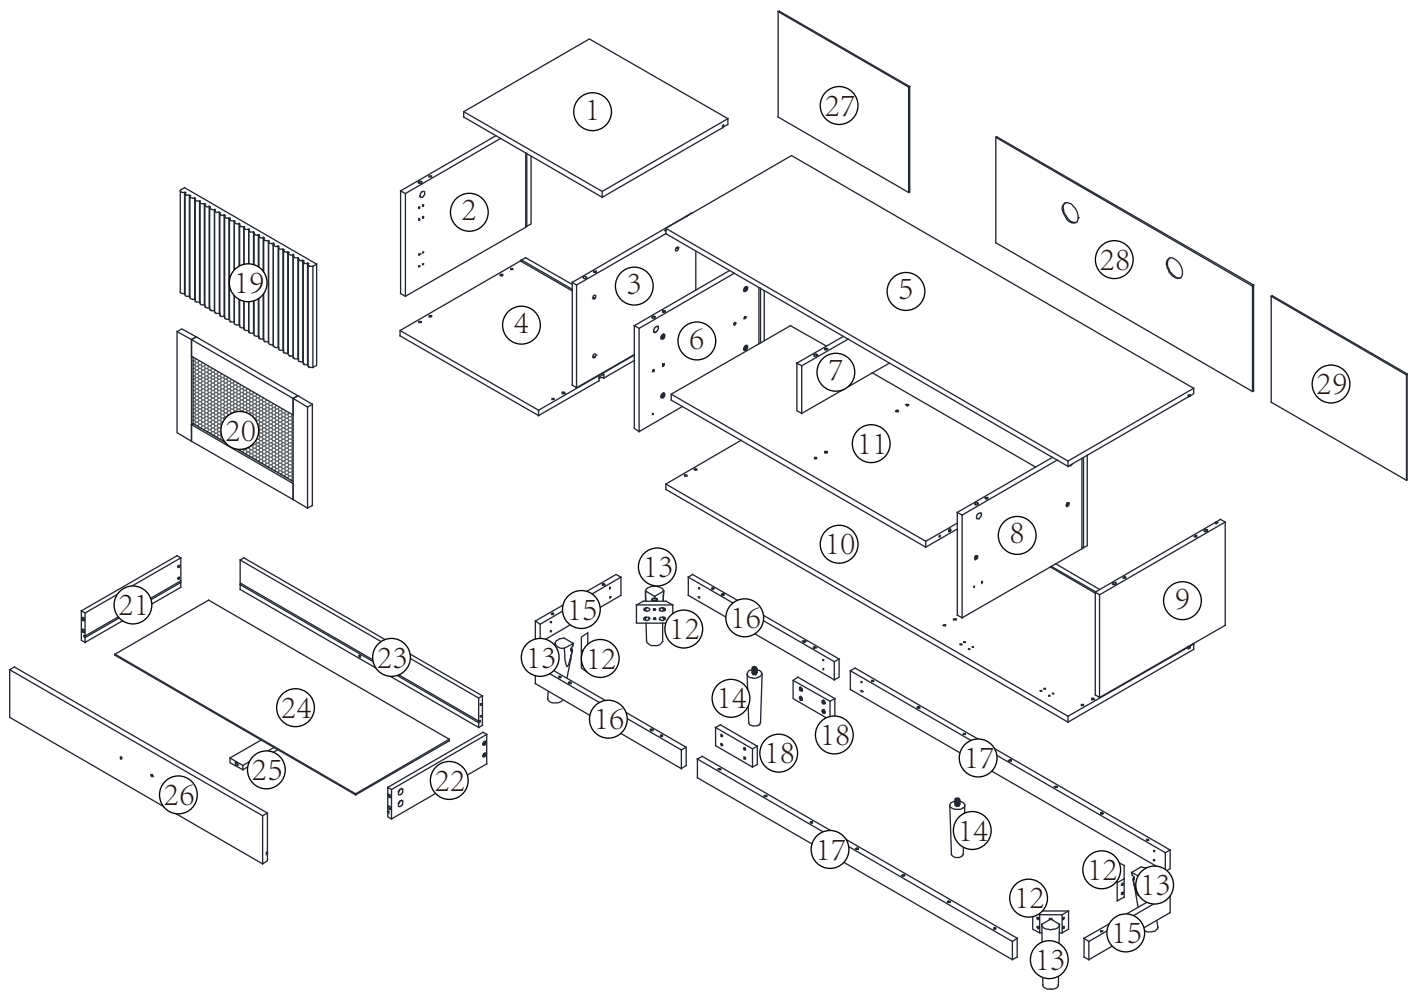 

Ax 17



Bx 17



Cx 38



M6x30

Dx 16



M4x40

Ex 5




M4x30

Fx 12



M3x12

 Gx 10



M4x12

Hx 12




M3x14

Ix 2



M4x18

 Jx 1



Kx 24



M4x35

Lx 16



M4x40

Mx 4



Nx 8



M6x60

Ox 2



Px 2



Qx 2



R x 1



S x 2




T x 24



M4x25

 Ux 2



Vx 2




26MM

Wx 1



M3x12

 X x 2



Z x 2



 
35MM

Y x 28



M4x14

Y1x 1



M3x14

Y2x 12



Y3 x 4



M6x15

CRx1



300mm

CLx1



300mm

DRx1




300mm

DLx1




300mm

 
STEP 1

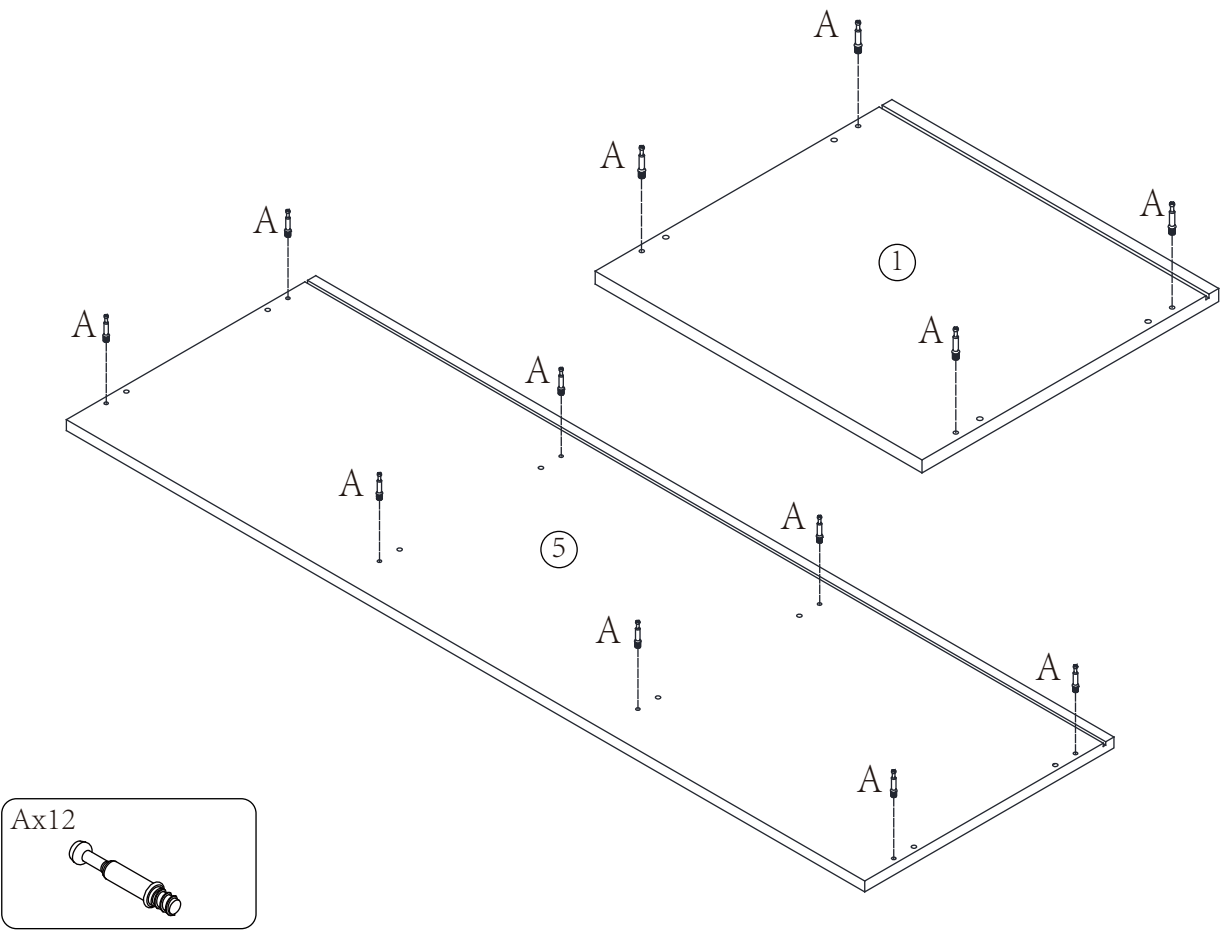

 
STEP 2

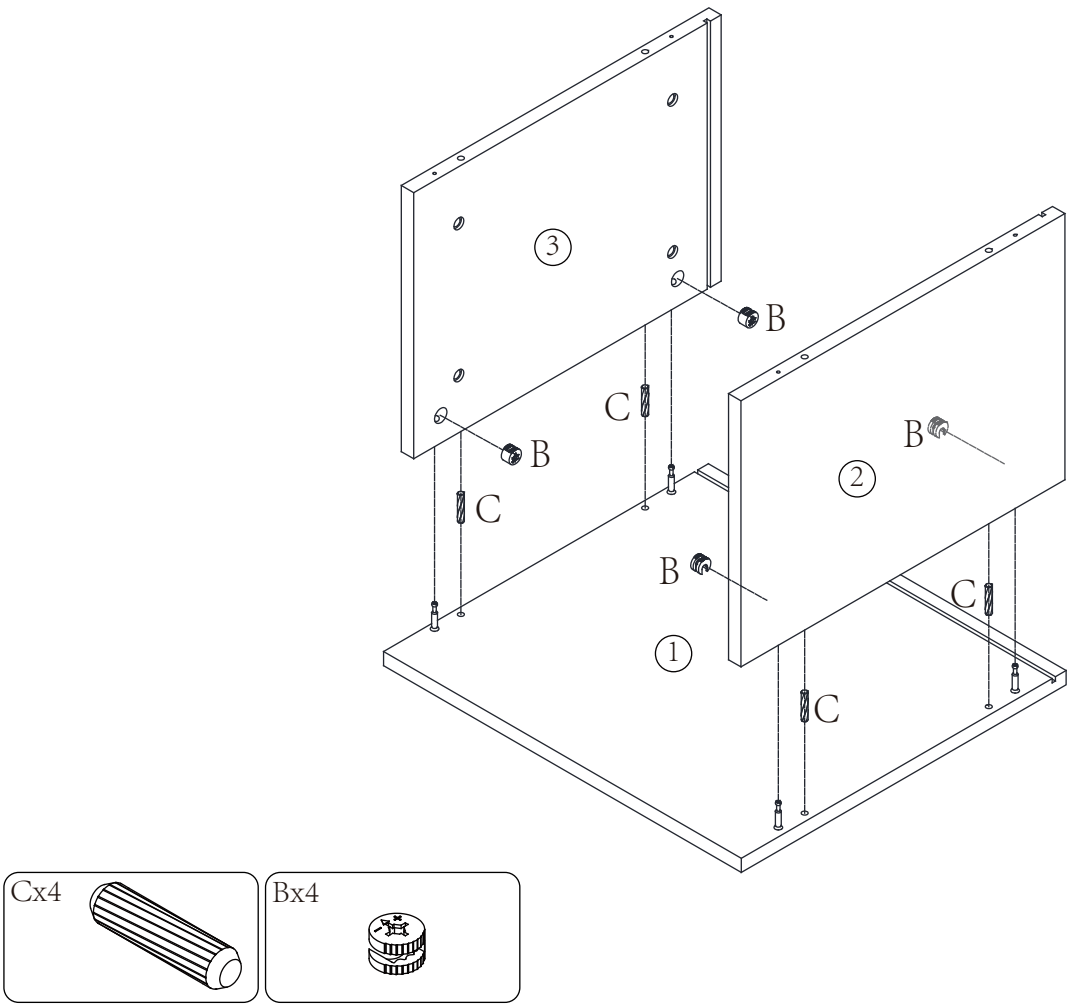

## STEP 3

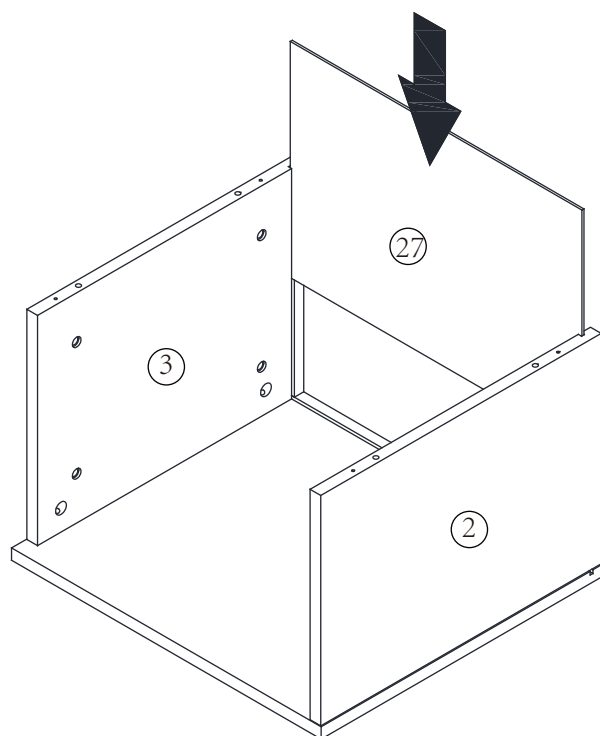 


## STEP 4

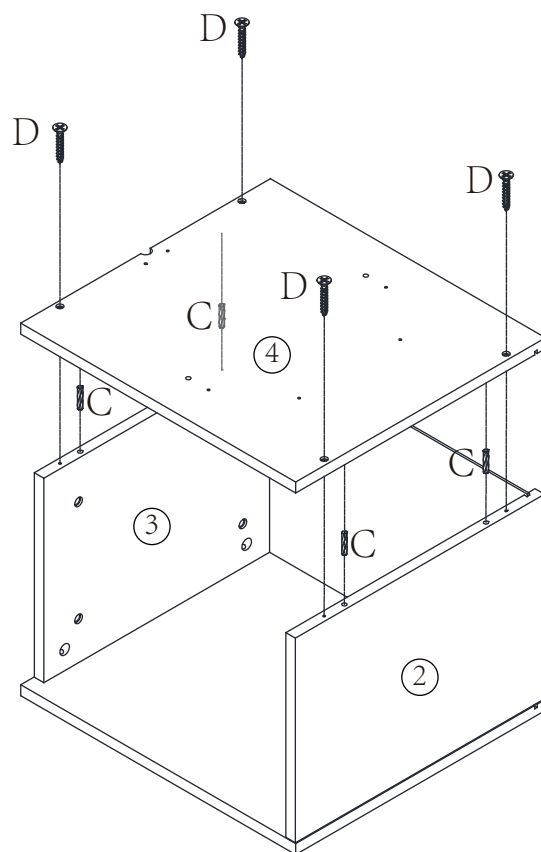 


Dx4



 Cx4



## STEP 5

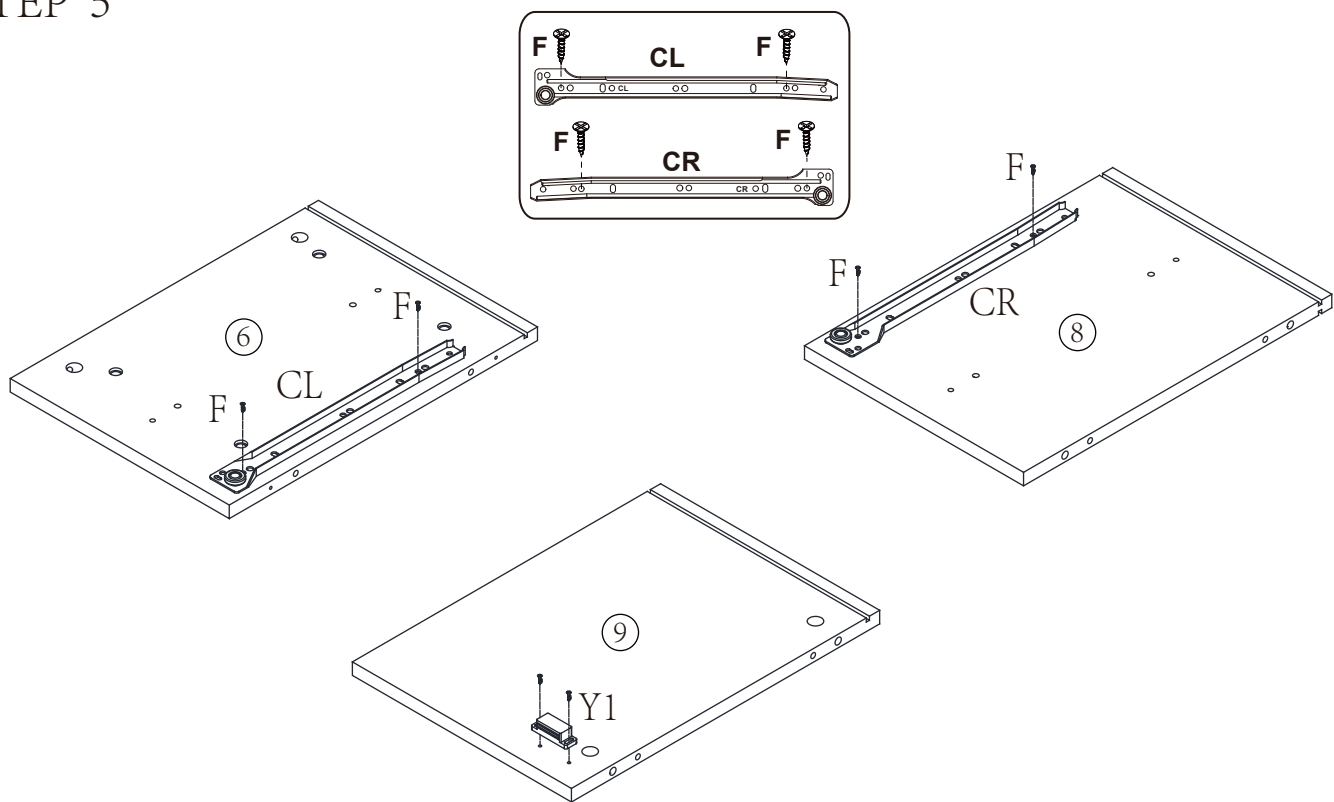 

Fx4




CRx1




CLx1



 Y1x1




## STEP 6

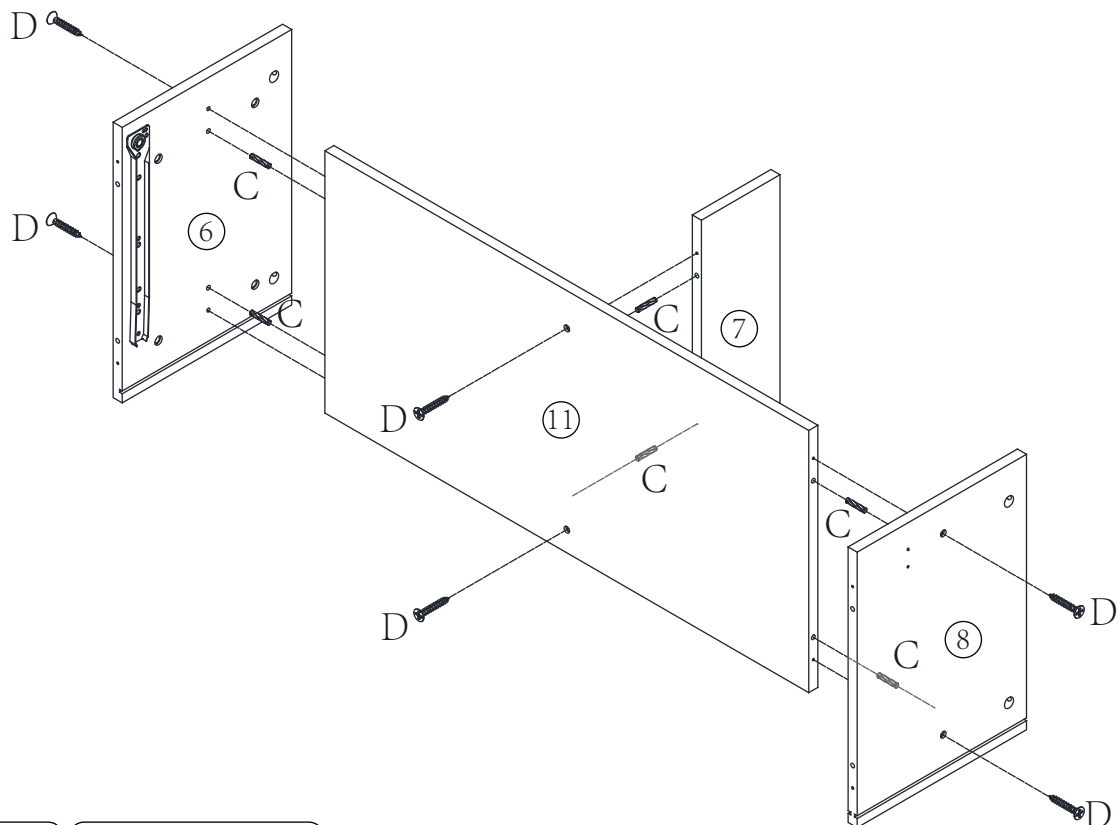 





Dx6



 
Cx6



  
 
 
STEP 7

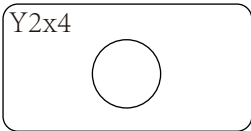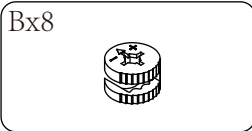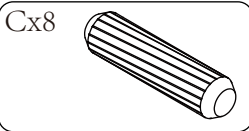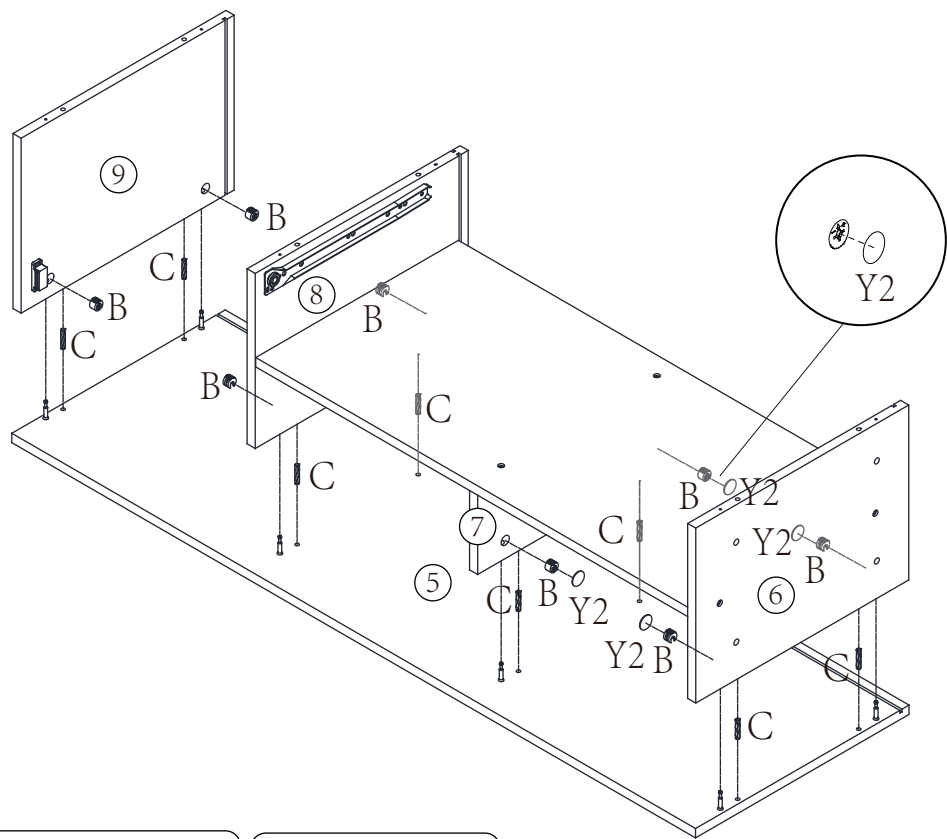






 
STEP 8

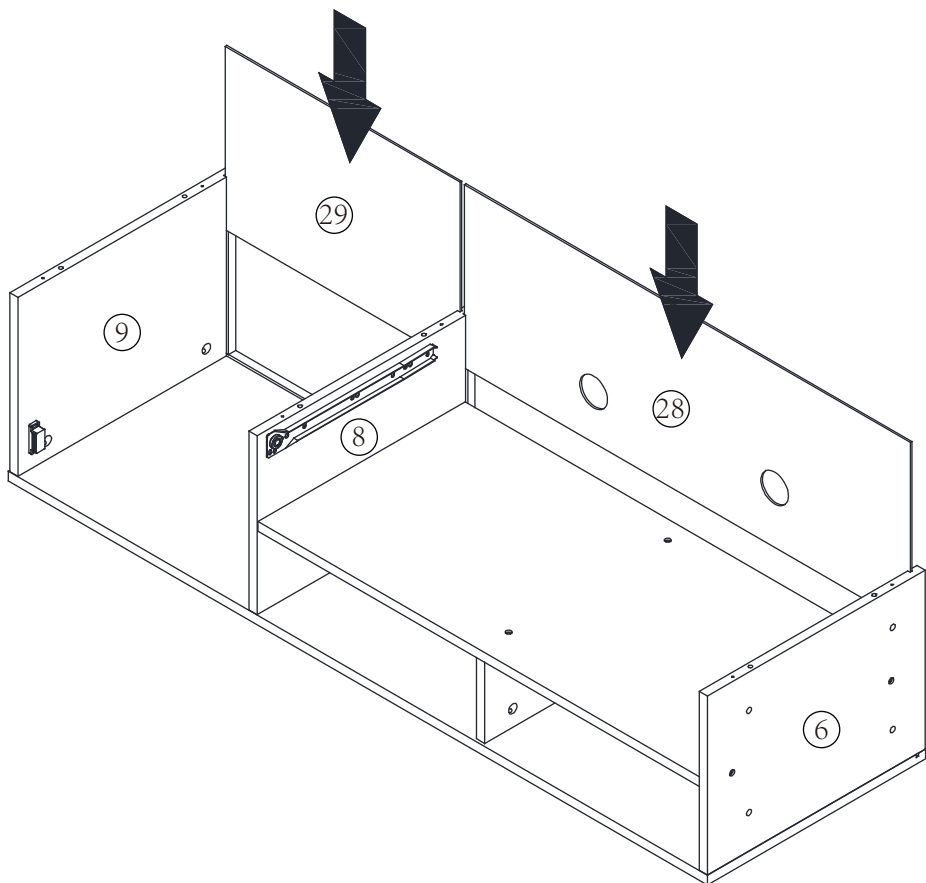

   
STEP 9

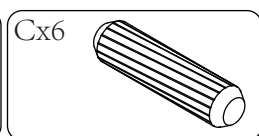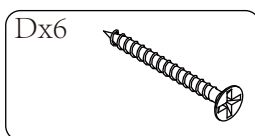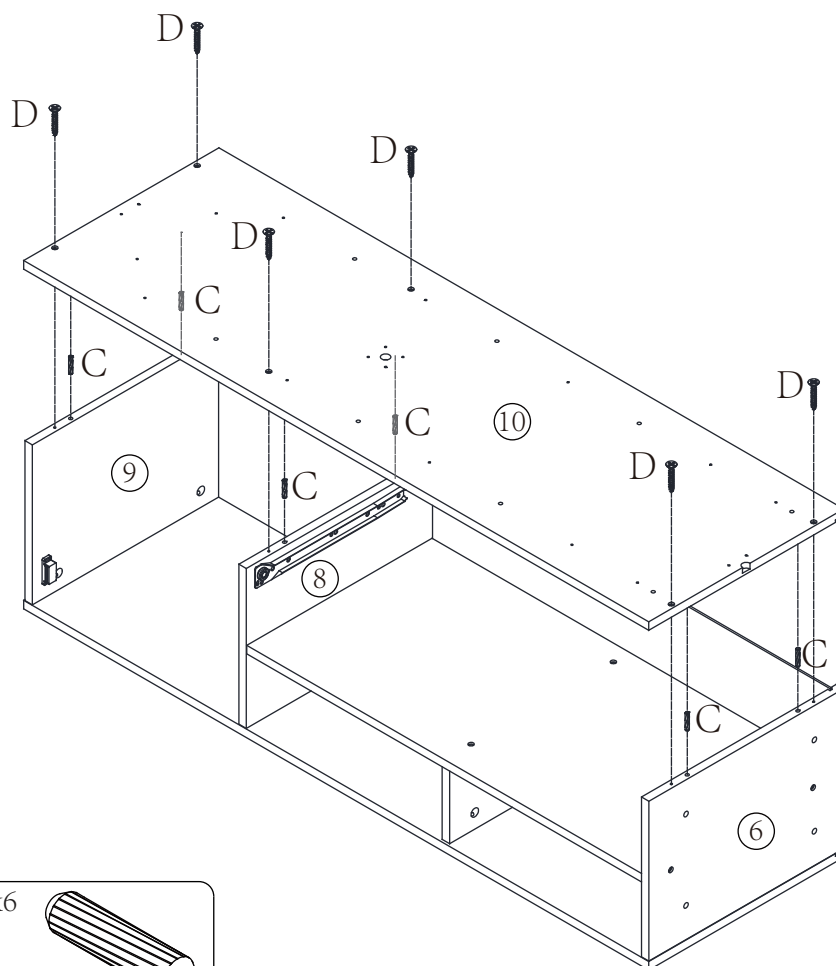

      
STEP 10

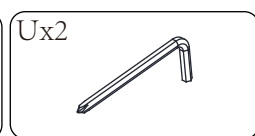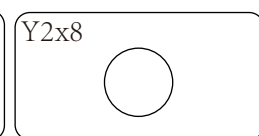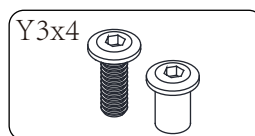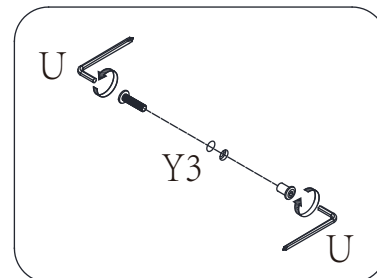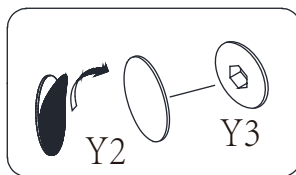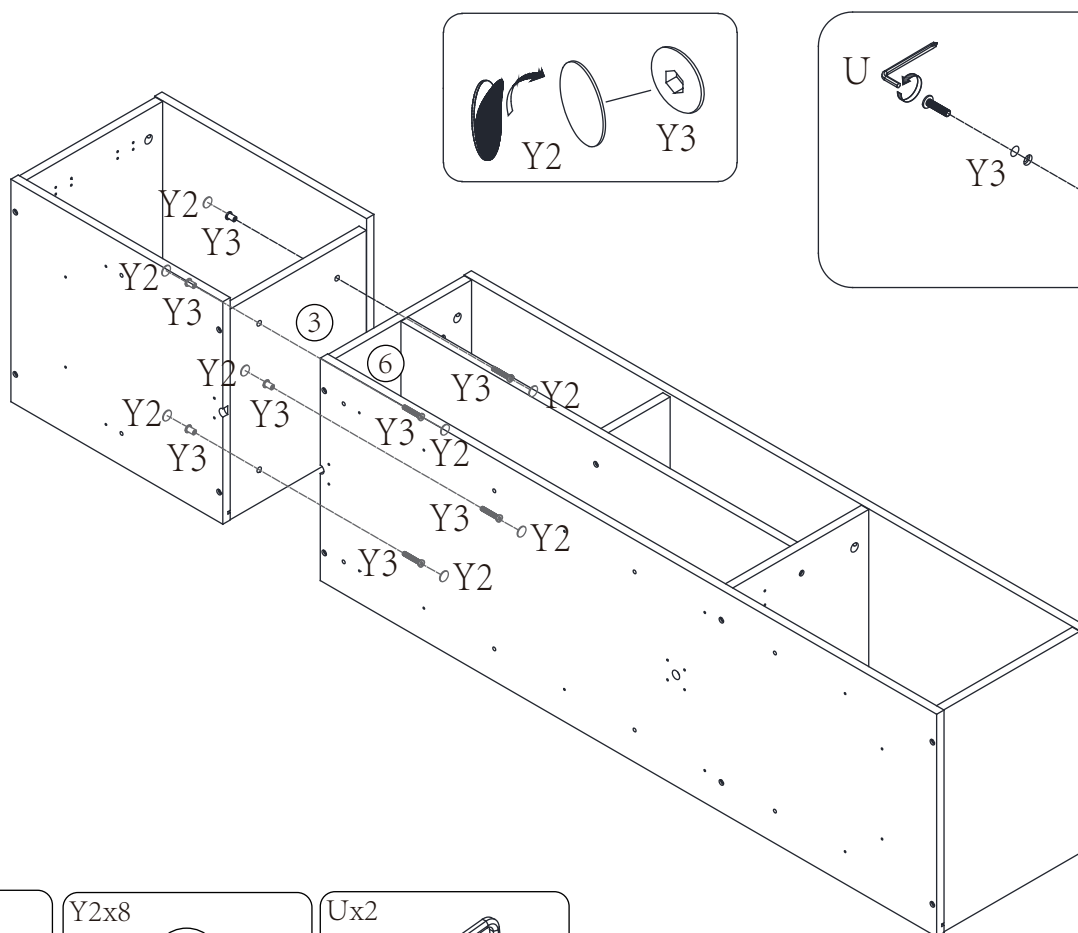


 
STEP 11

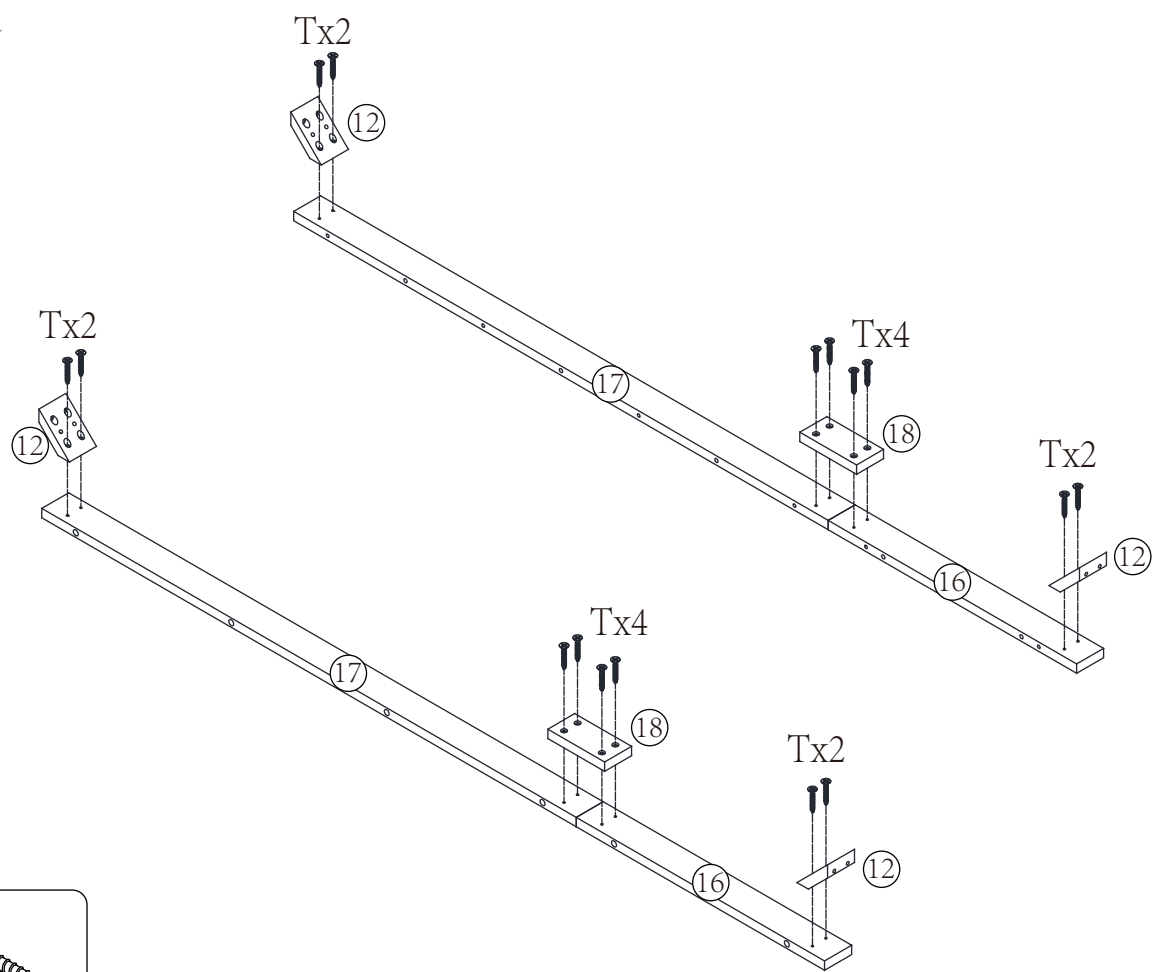


 
STEP 12

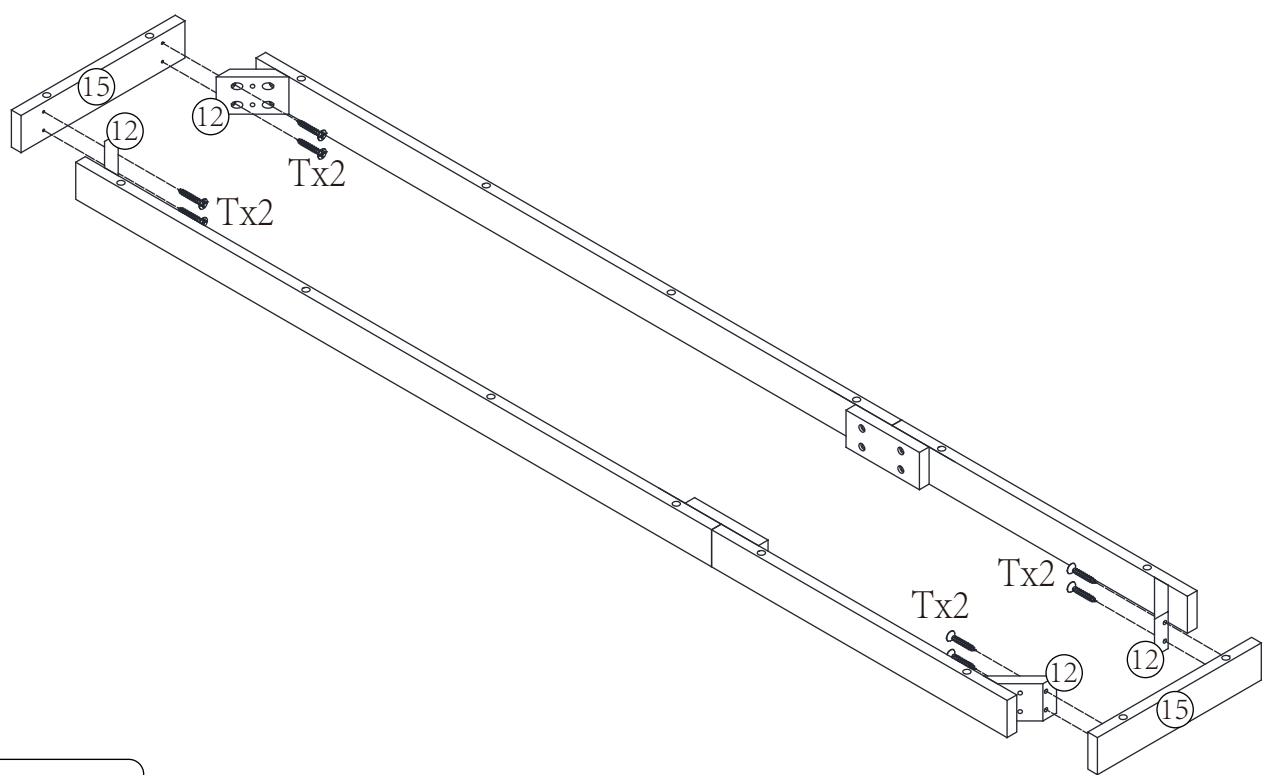




 
 
STEP 13

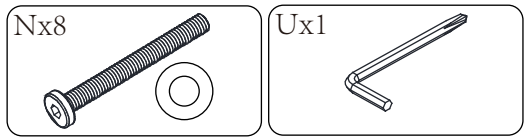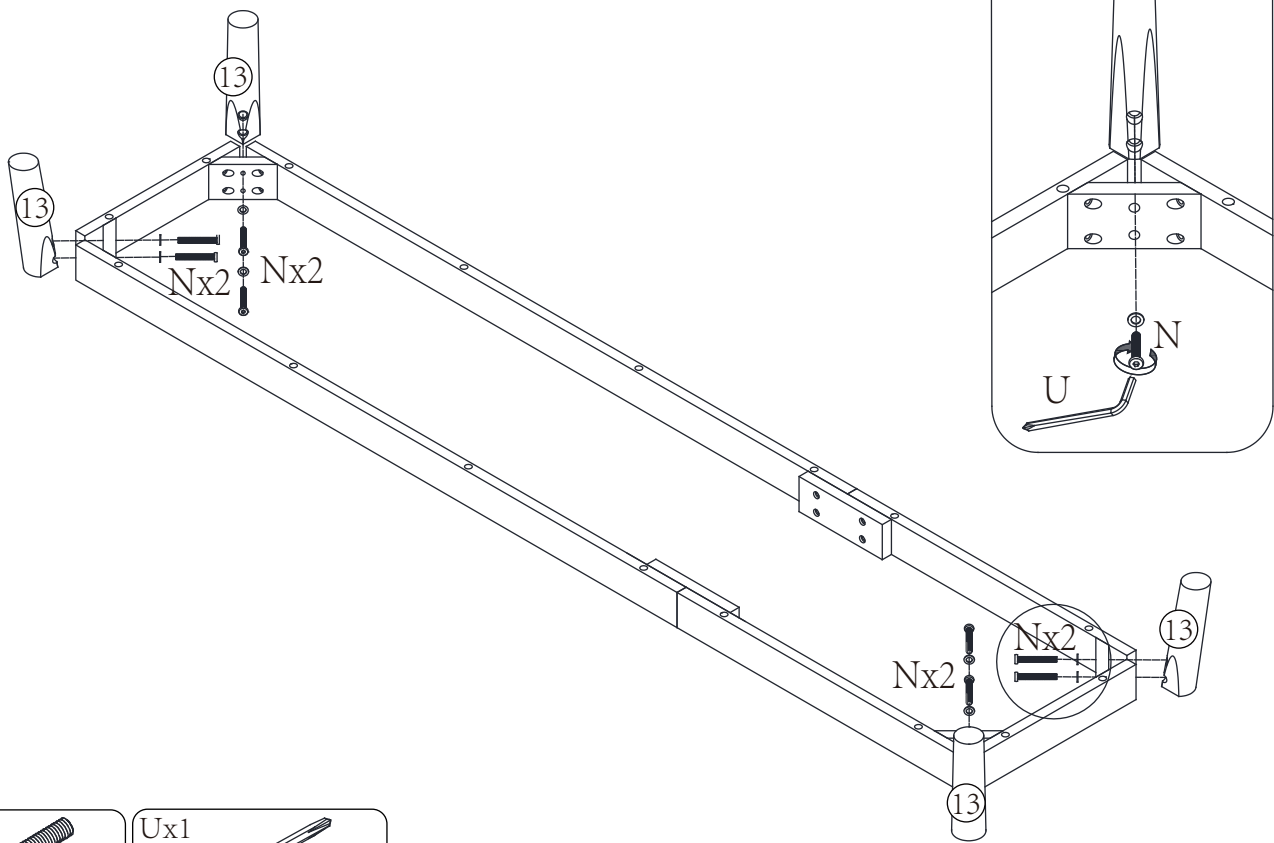







 
 
STEP 14

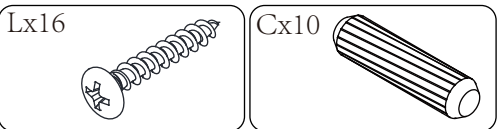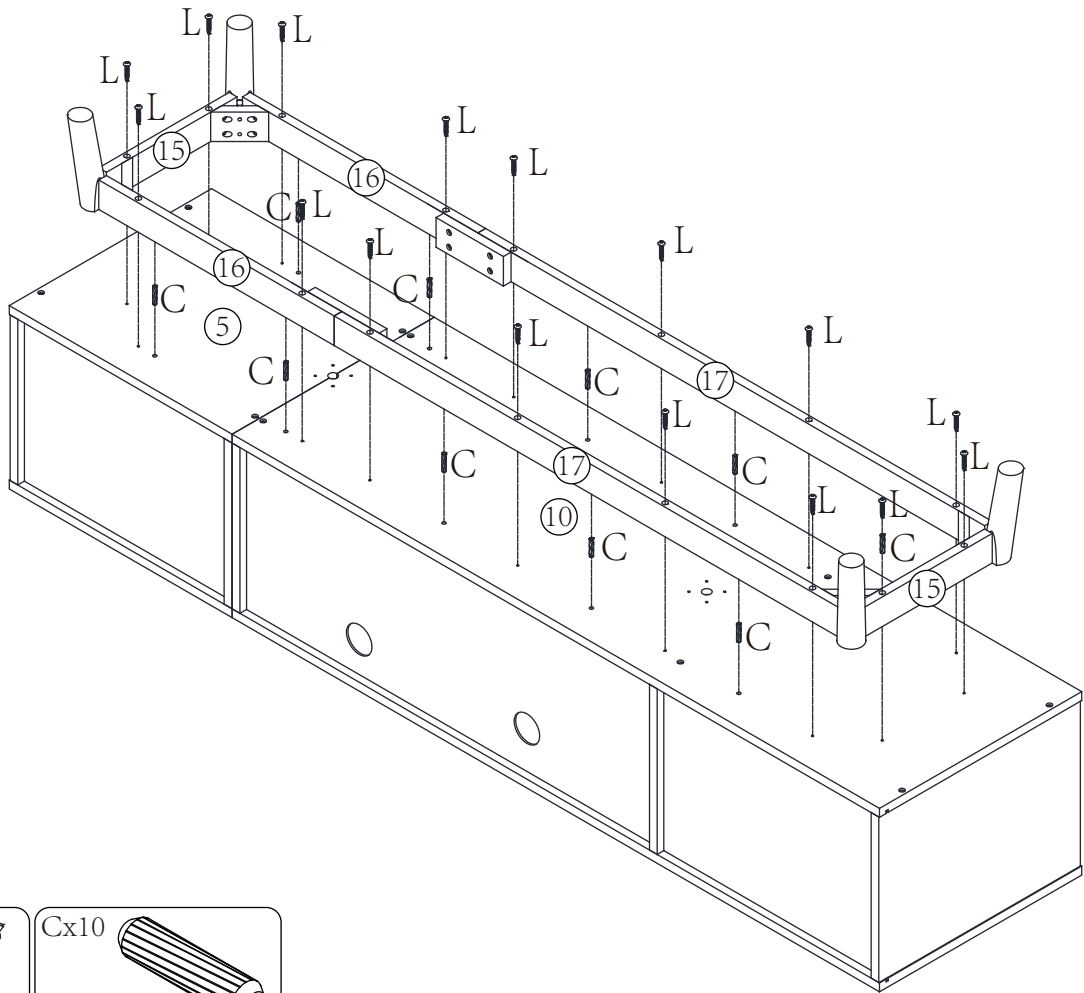

     
STEP 15

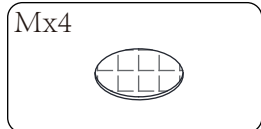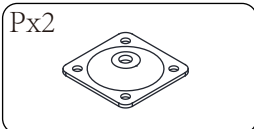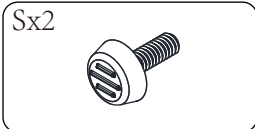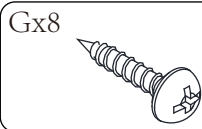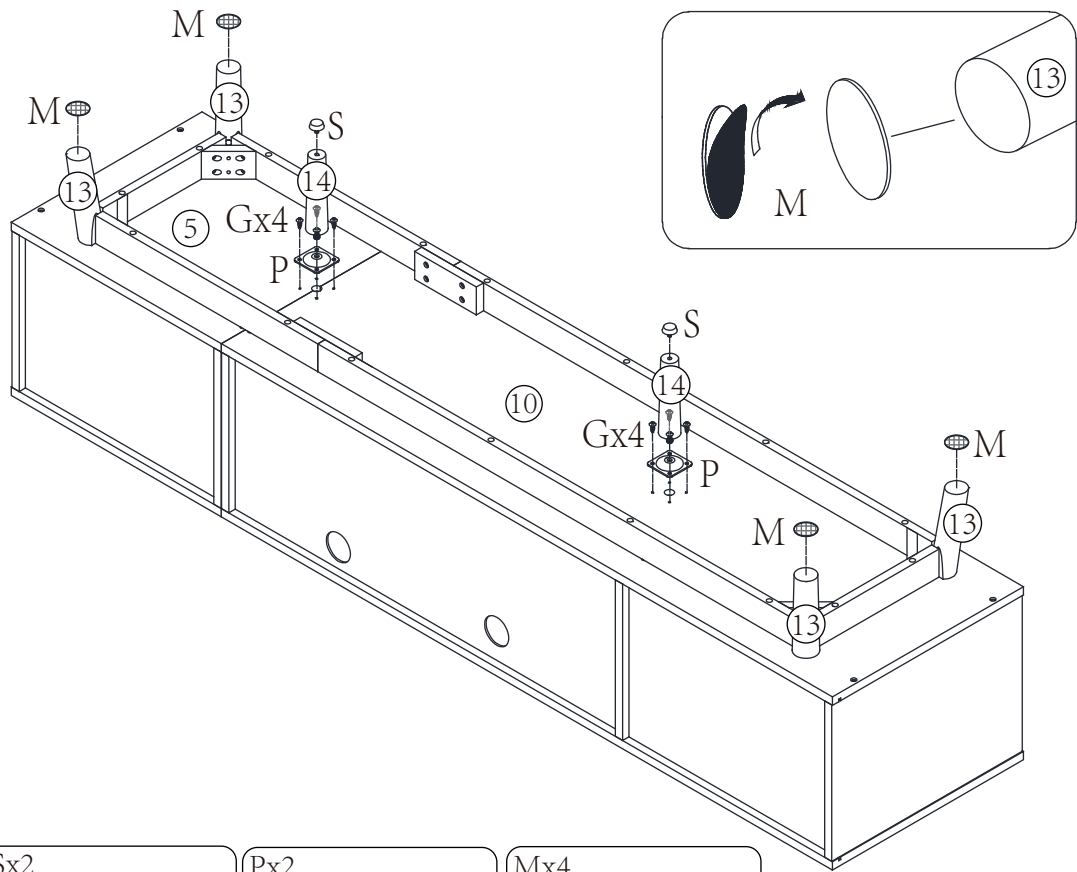

        STEP 16

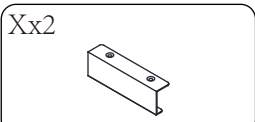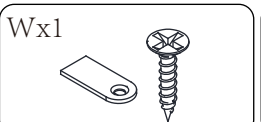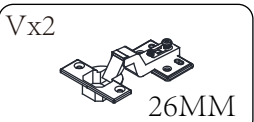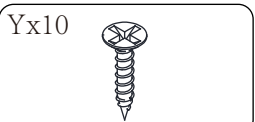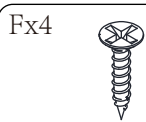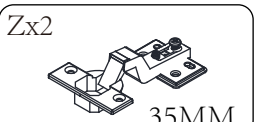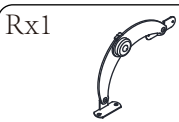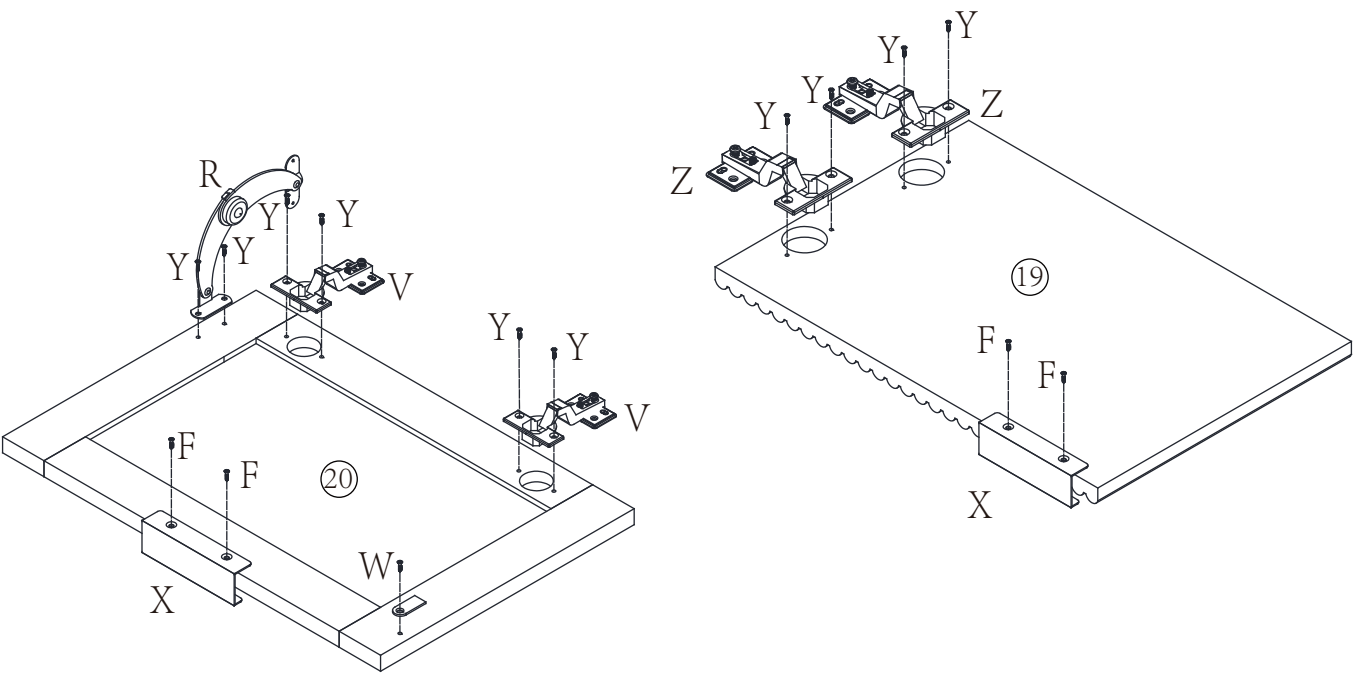

 
STEP 17

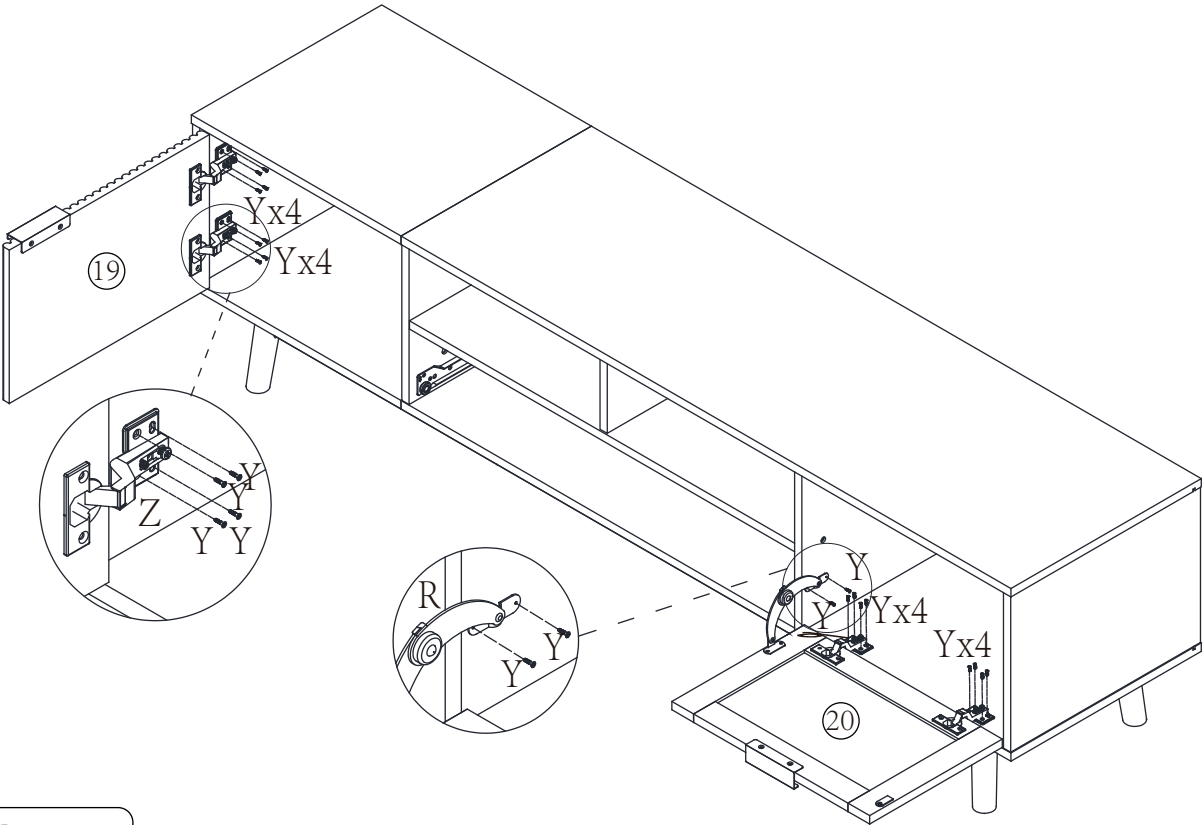


Yx18



 
STEP 18

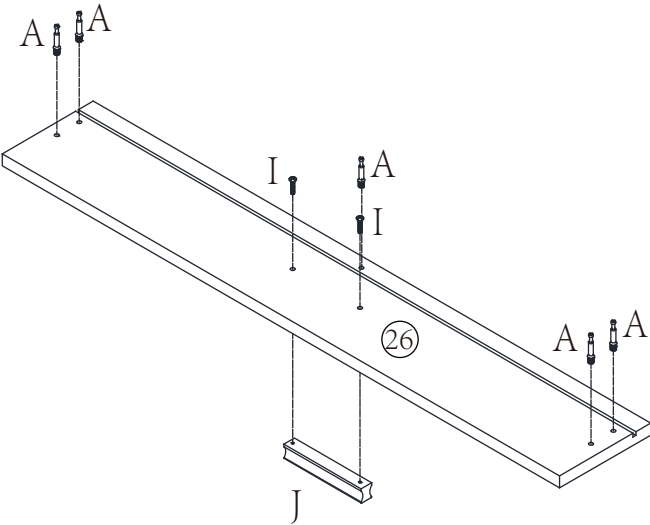


Ax5

 


Ix2

 


Jx1

 





 
STEP 19

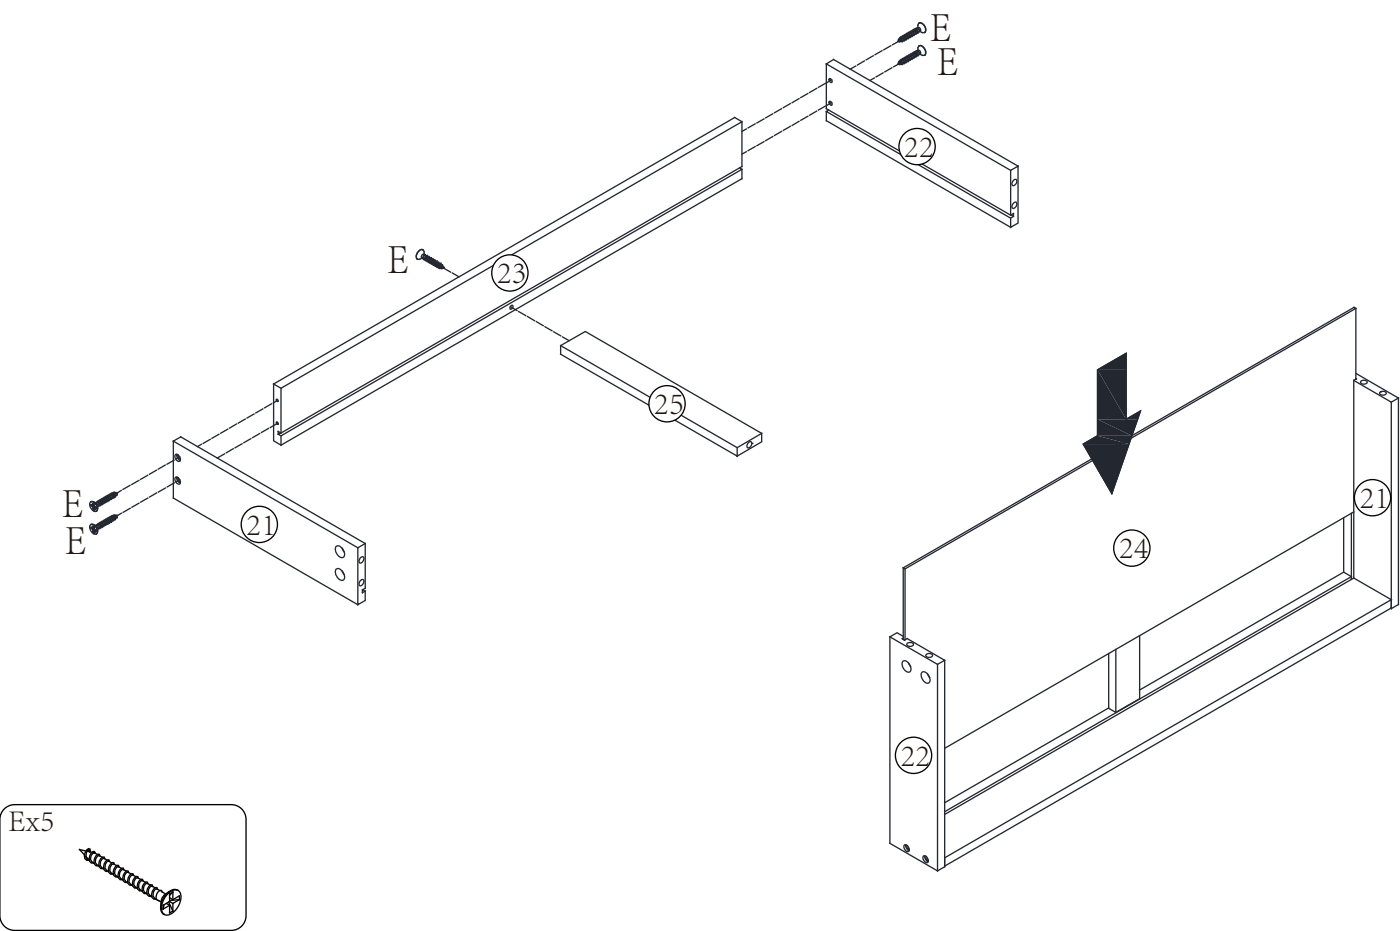

 
STEP 20

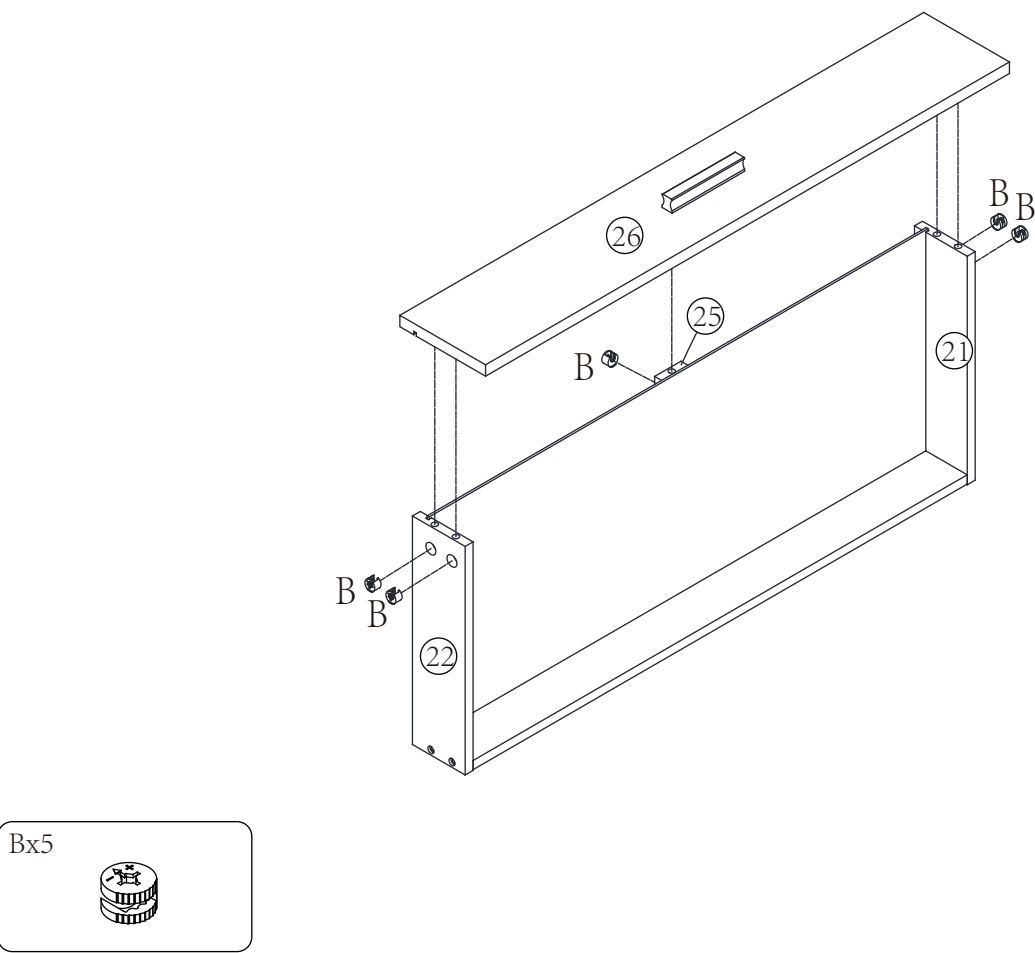

  
 
 
 
STEP 21

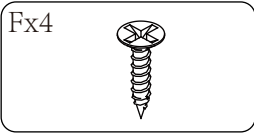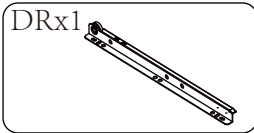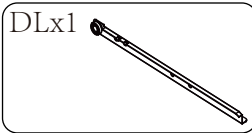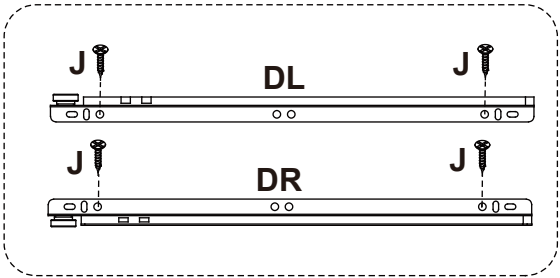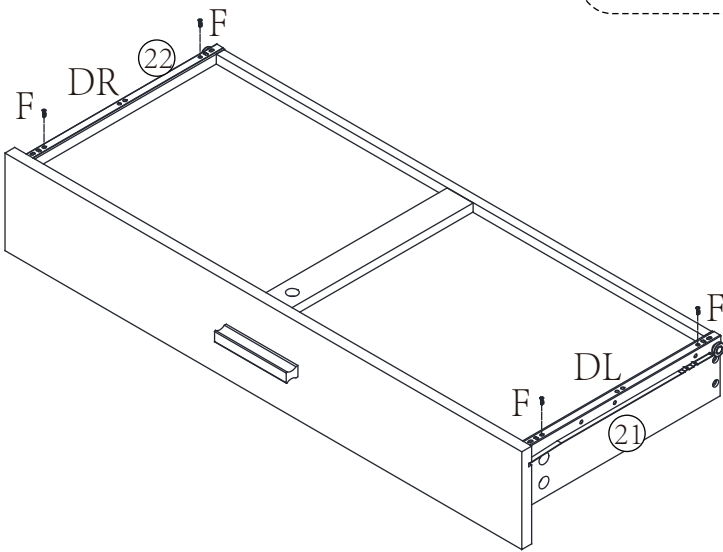



 
STEP 22

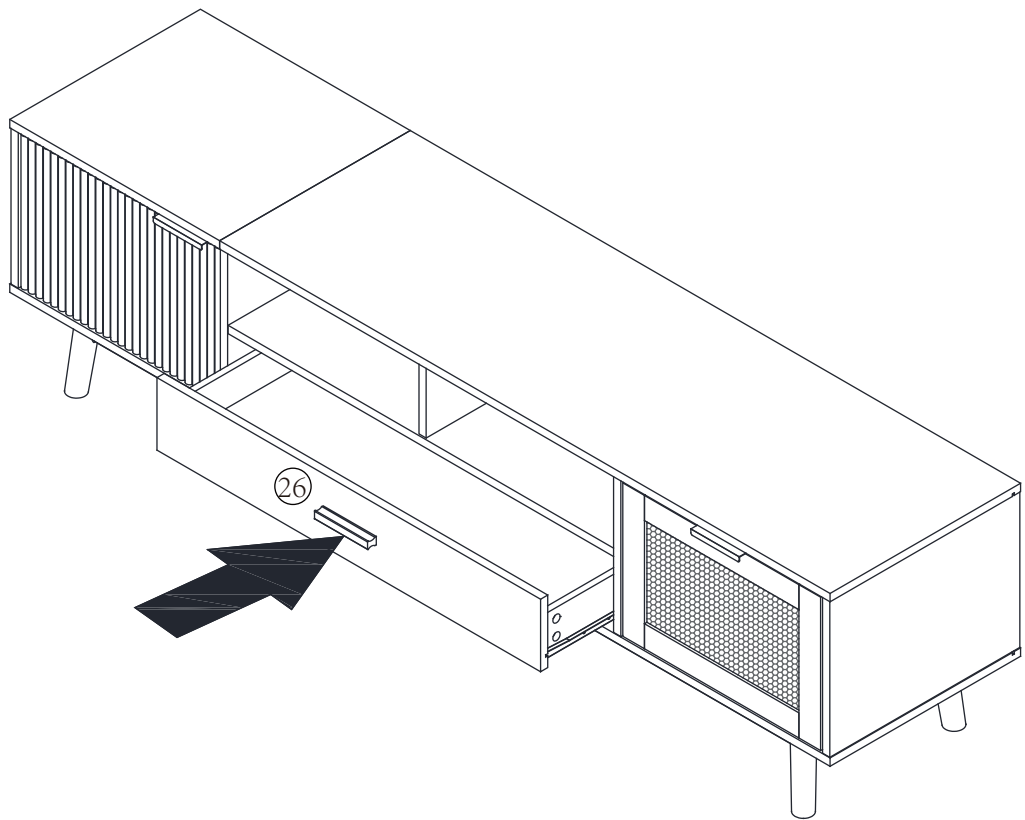

    
STEP 23

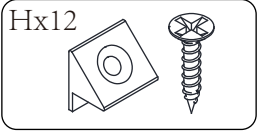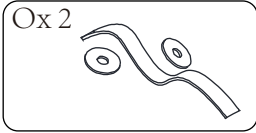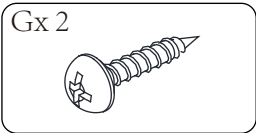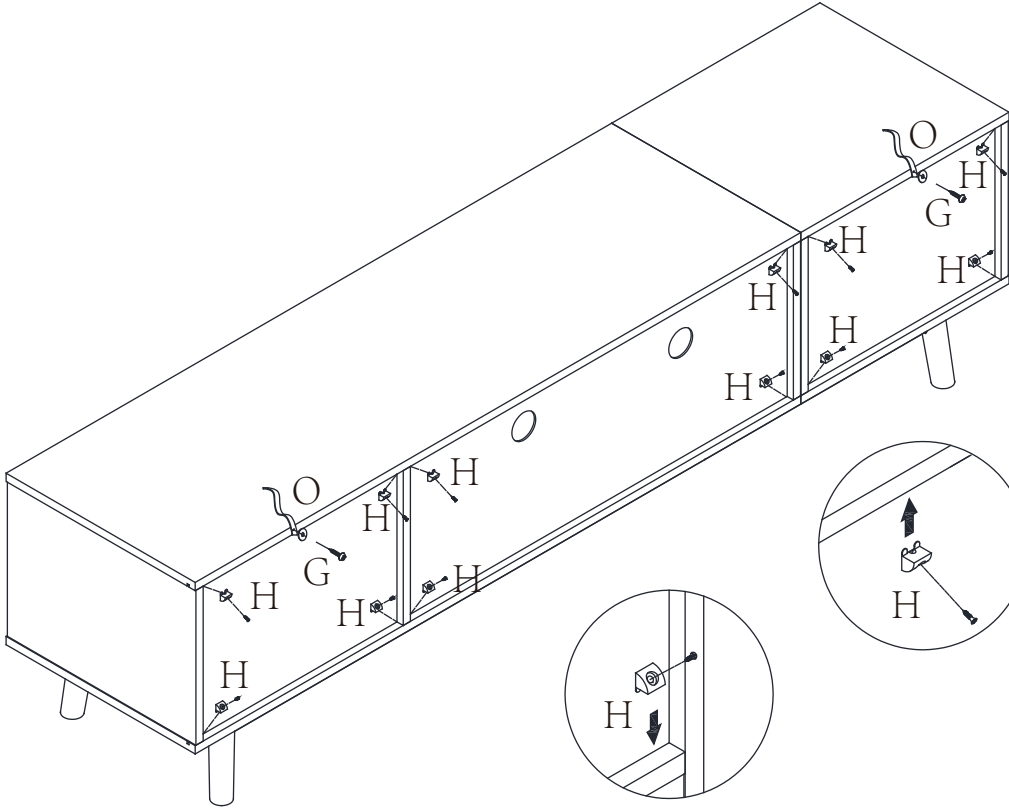

   STEP 24

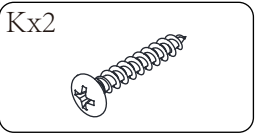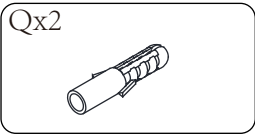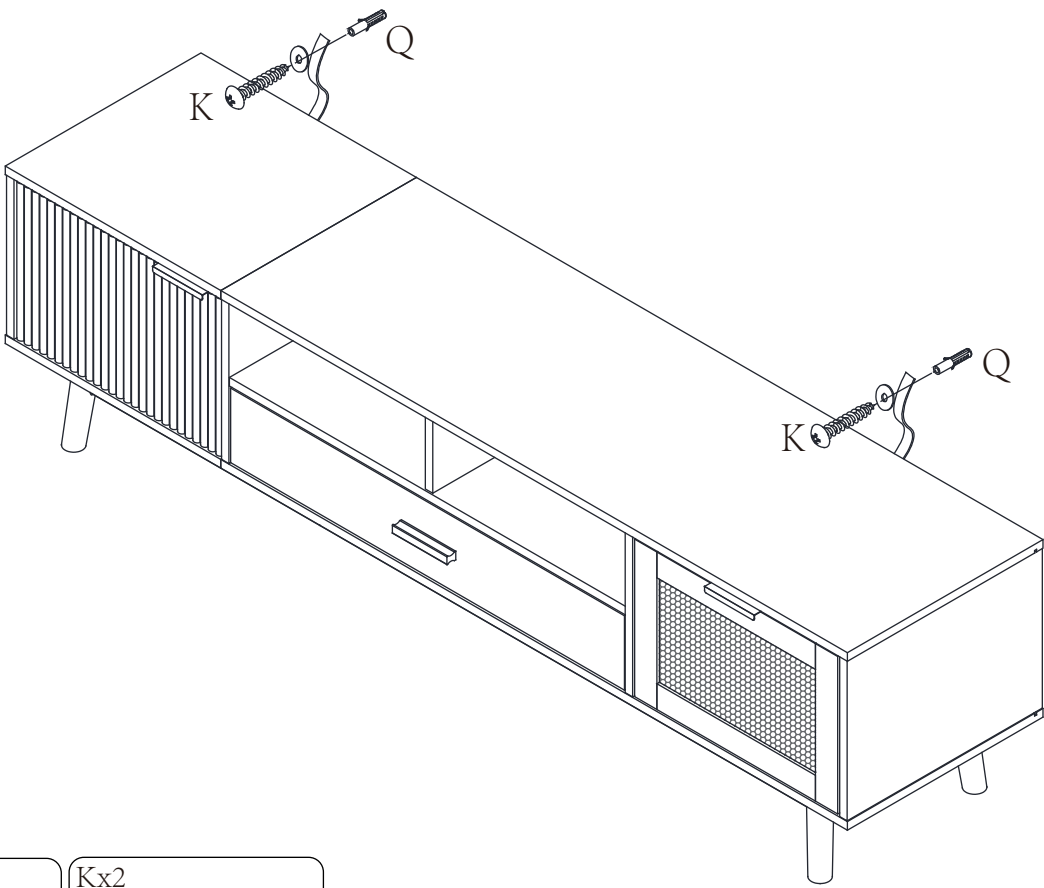

# HINGE ADJUSTMENTS

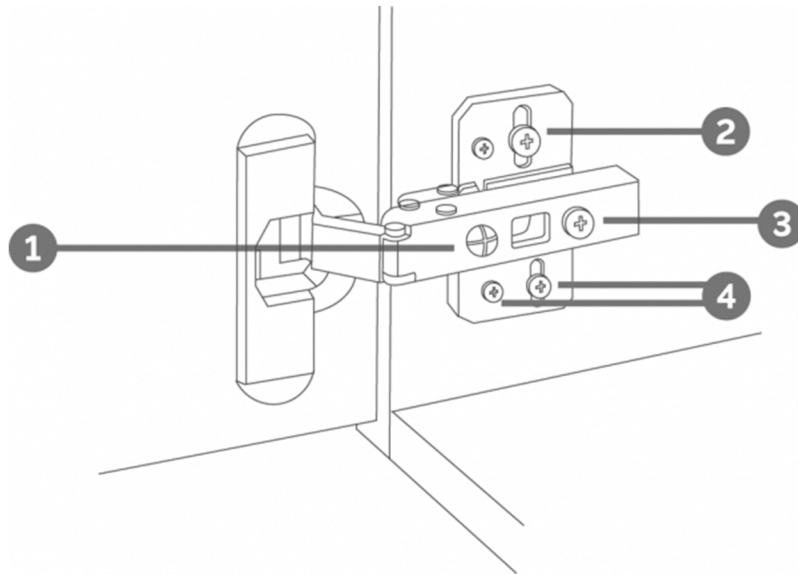 


## ① Sideways / Tilt adjustment

Turn the screw

**clockwise** to move the door further away from the side of the cabinet

 **anticlockwise** to move the door closer to the side of the cabinet

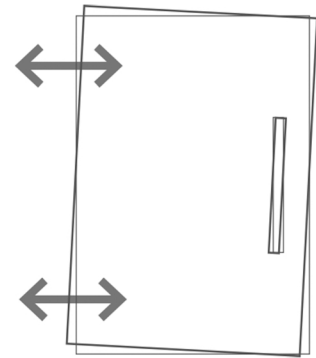


## ② ④ Height adjustment

While supporting the weight of the door, turn the screws

**clockwise** to move the door up

 **anticlockwise** to move the door down

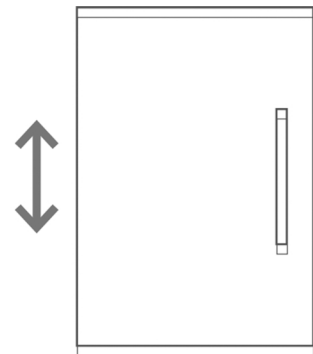

## ③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

**clockwise** to decrease the gap between the door and the cabinet

**anticlockwise** to increase the gap between the door and the cabinet

