


TV STAND

USER MANUAL

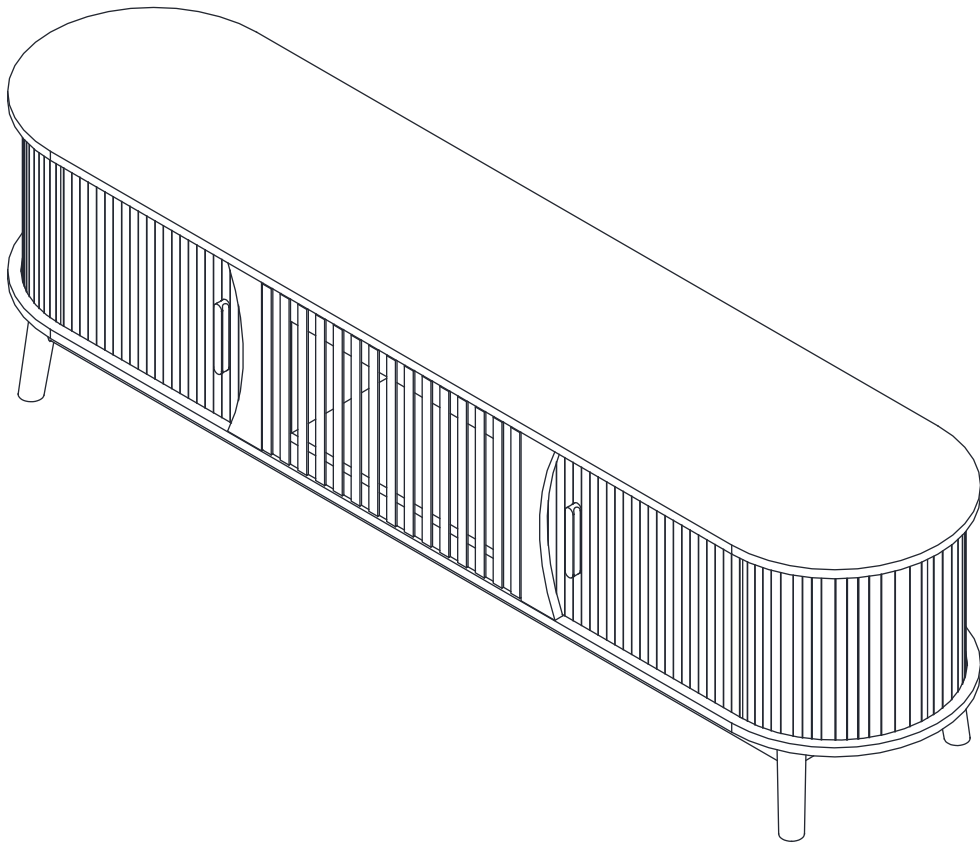

SAVE THESE INSTRUCTIONS FOR FUTURE USE

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation


Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

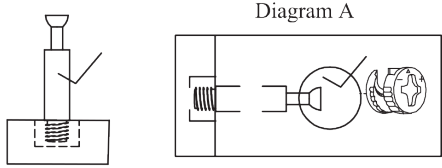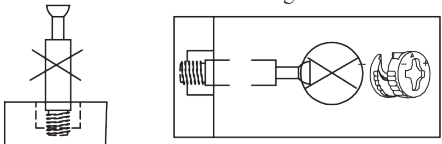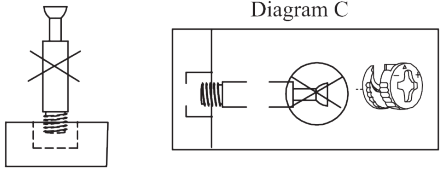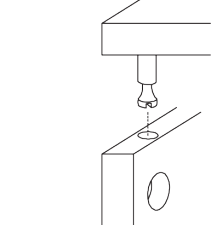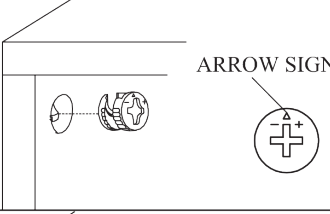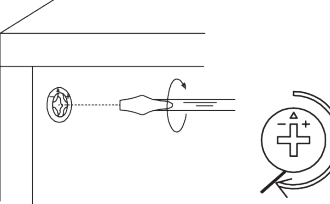	<p>Diagram A</p> <p>Insert Cam Bolt into hole as shown in diagram A.</p>
	<p>Diagram B</p> <p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p> <p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
 <p>Connect the panels together.</p>	
 <p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>	
 <p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>	

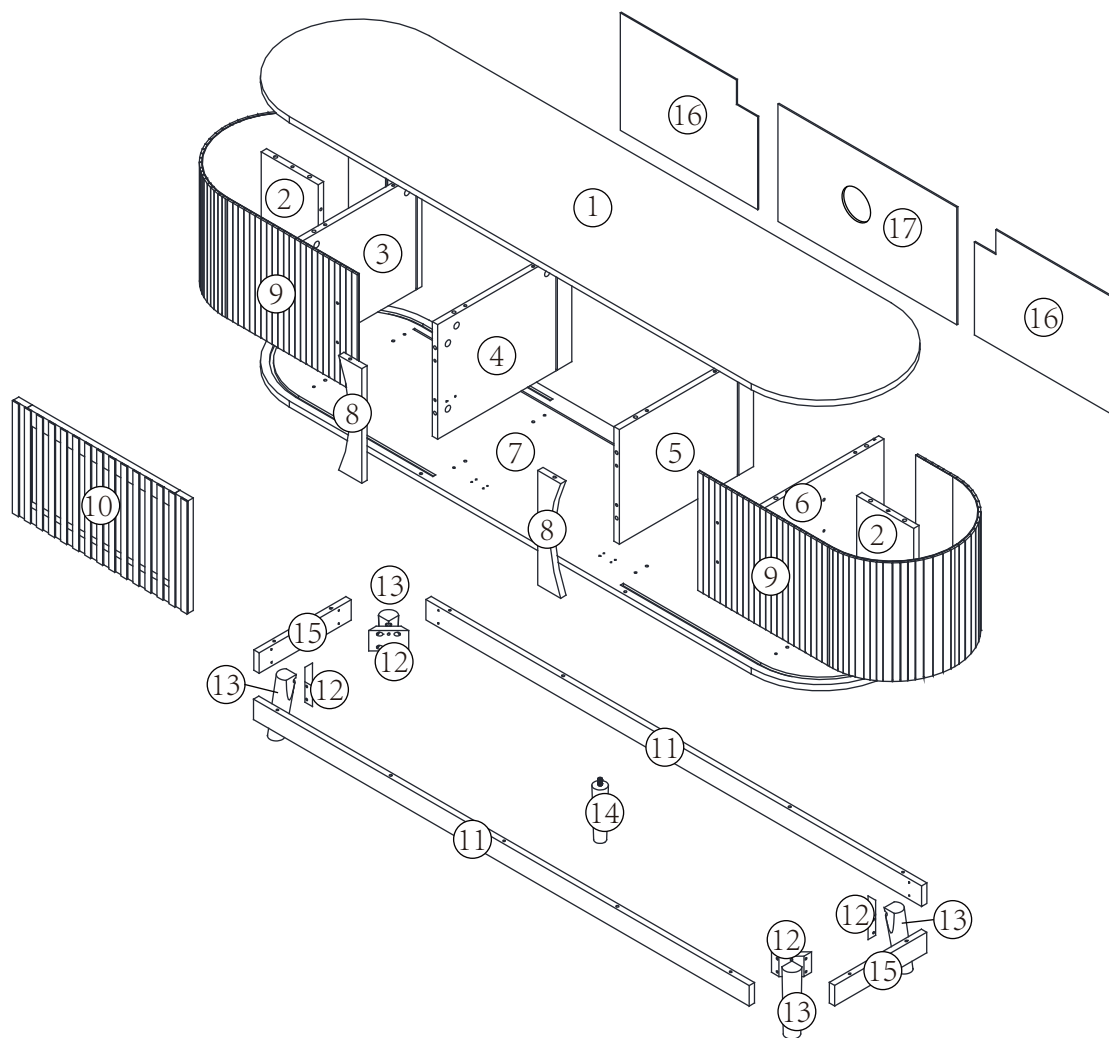

Ax 16

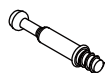

Bx 16



Cx 32




M6x30

Dx 12



M4x40

Ex 1

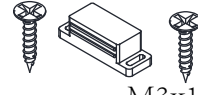


M3x14

Fx 16



M4x14

Gx 6

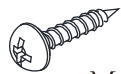

M4x12

Hx 12




M3x14

Ix 4



M4x16

Jx 2

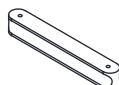

Kx 2



M4x35

Lx 10




M4x40

Mx 4



Nx 8

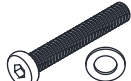

M6x60

Ox 2



Px 1



Qx 2



R x 1



S x 1




T x 16



M4x25


U x 1

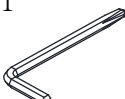

V x 2




W x 1

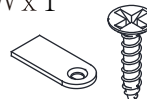


M3x12



STEP 1

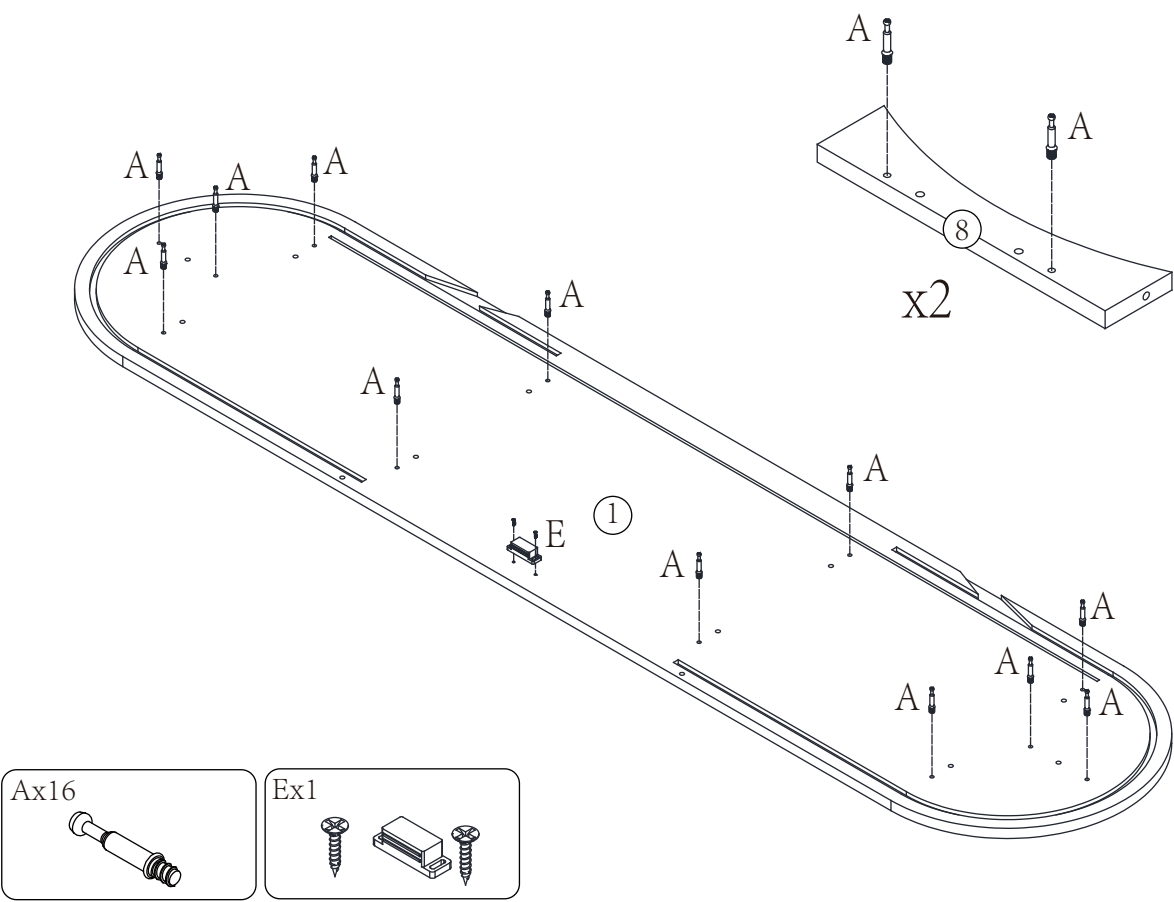


STEP 2

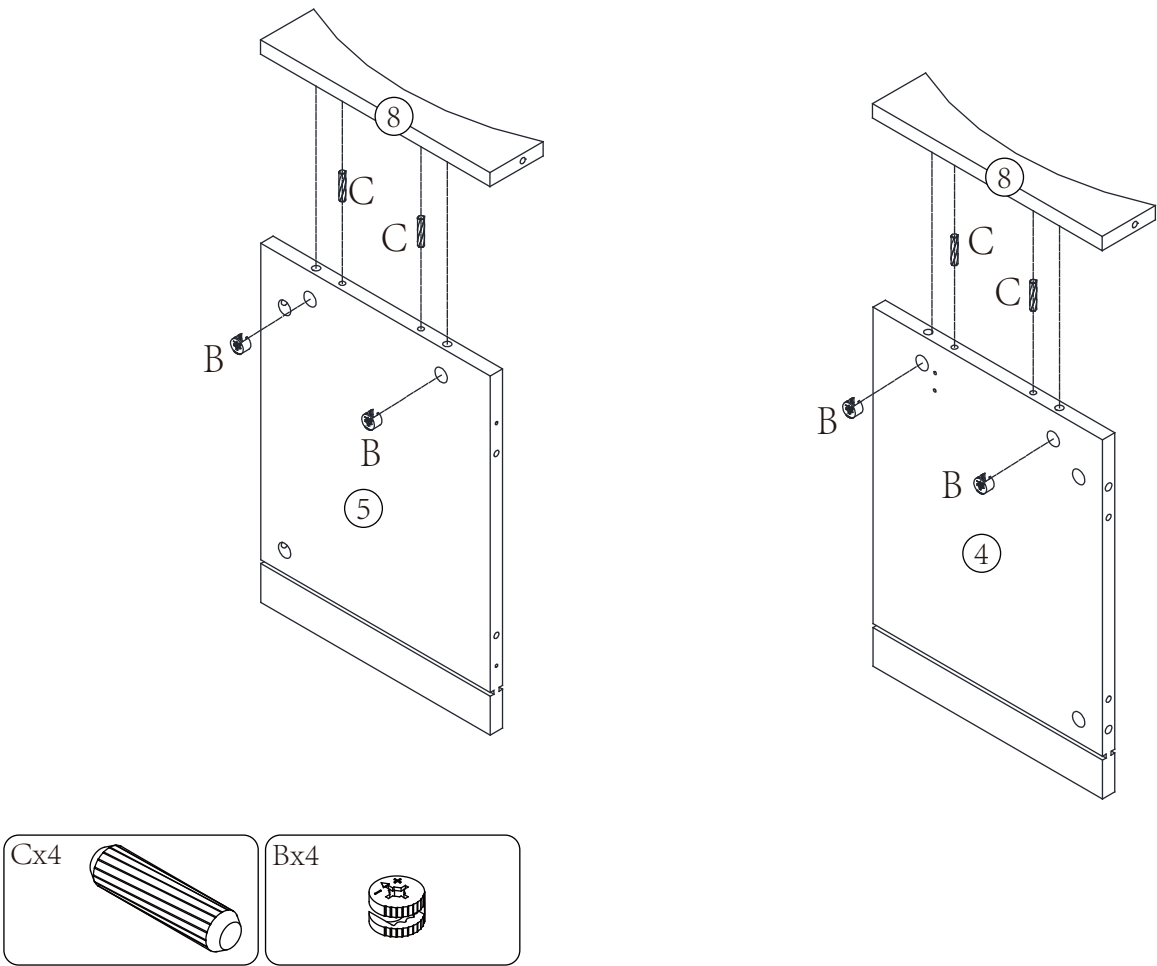




STEP 3

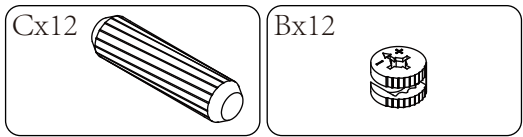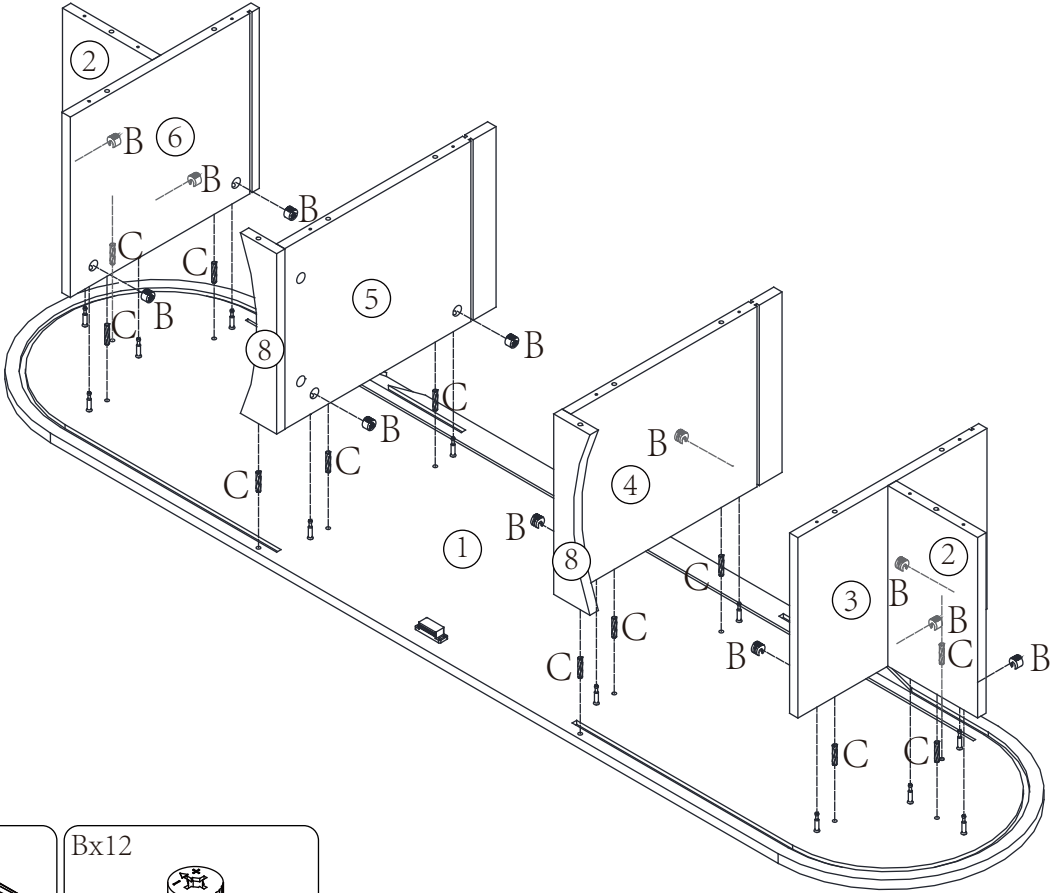



STEP 4

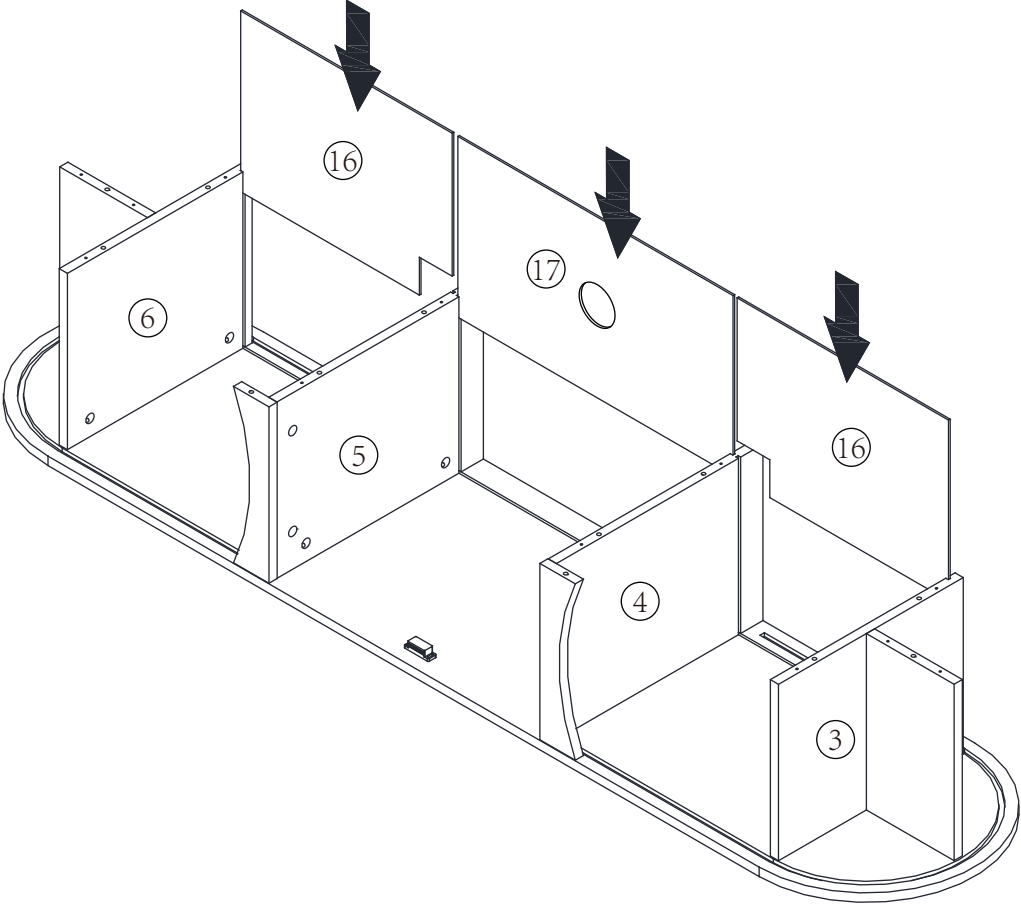



STEP 5

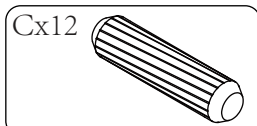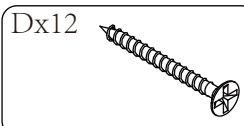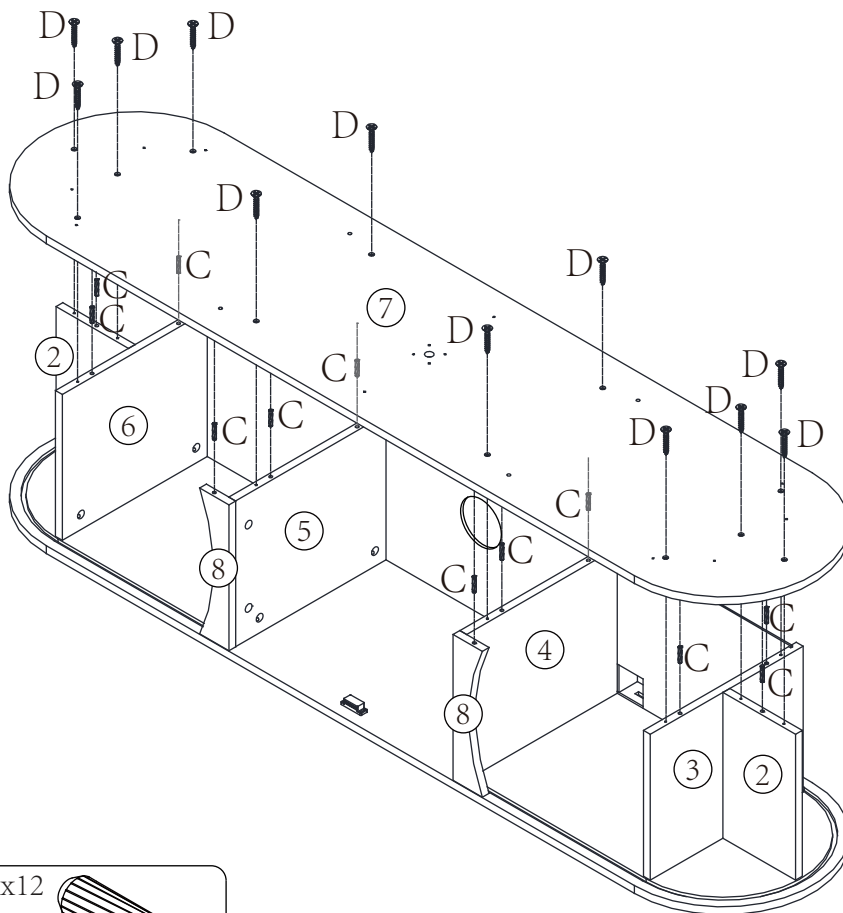




STEP 6

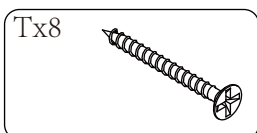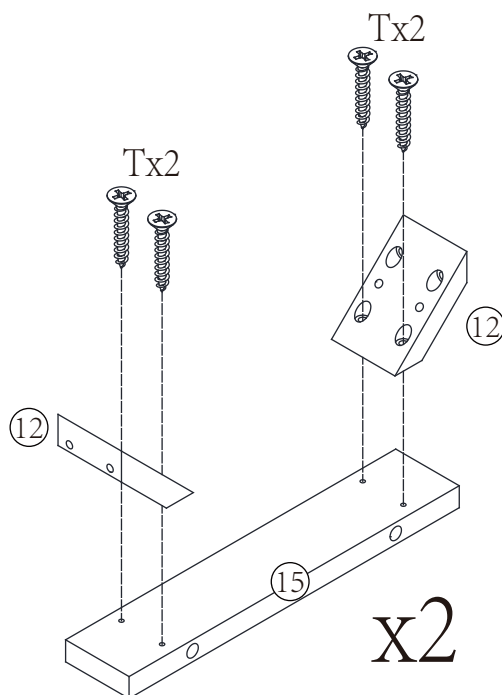




STEP 7

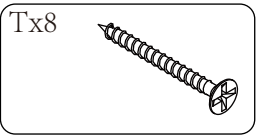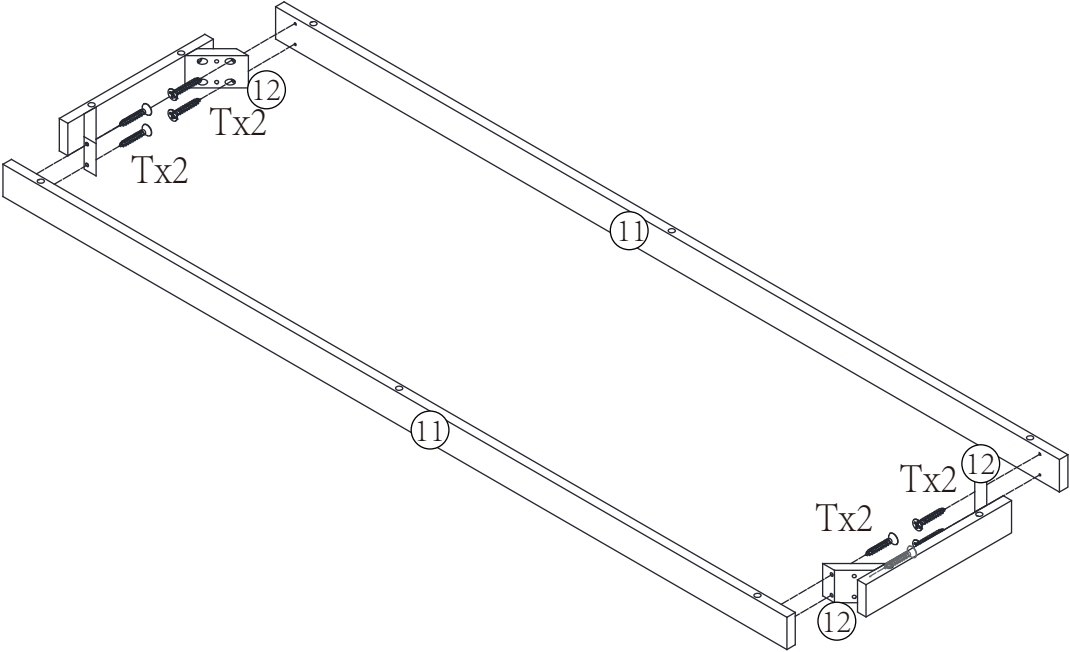







STEP 8

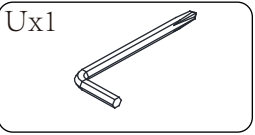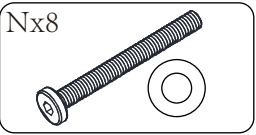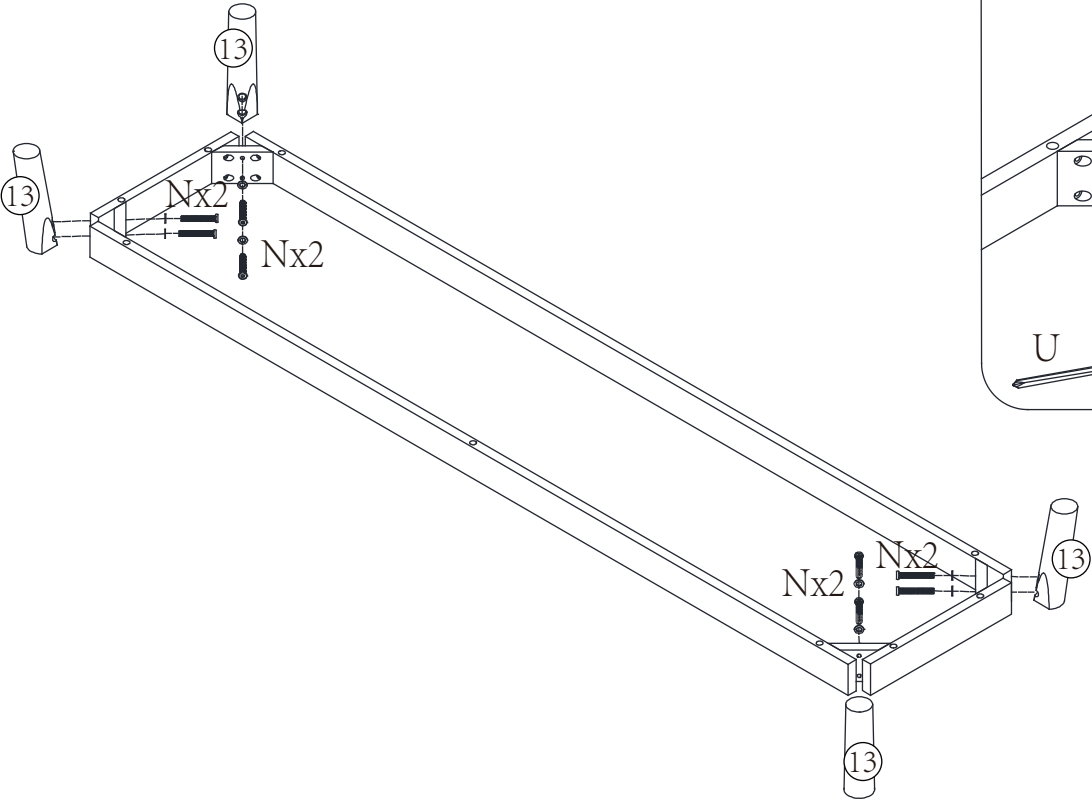


STEP 9

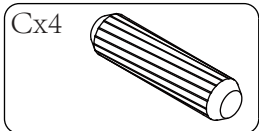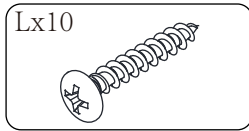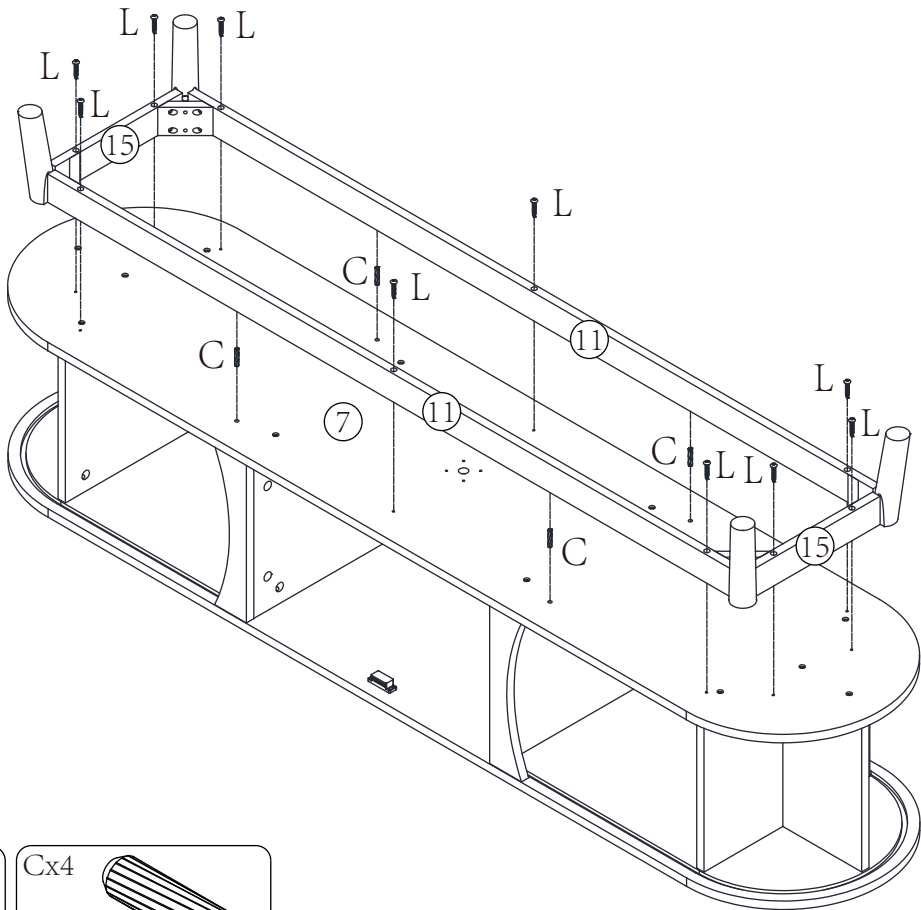


STEP 10

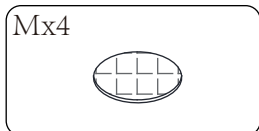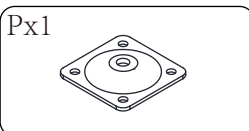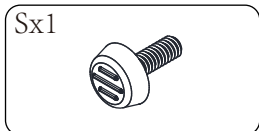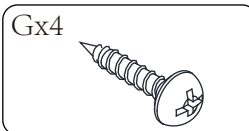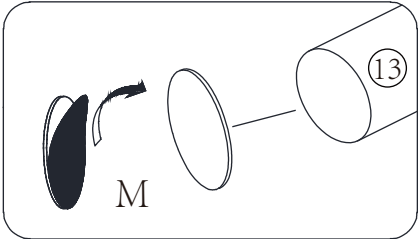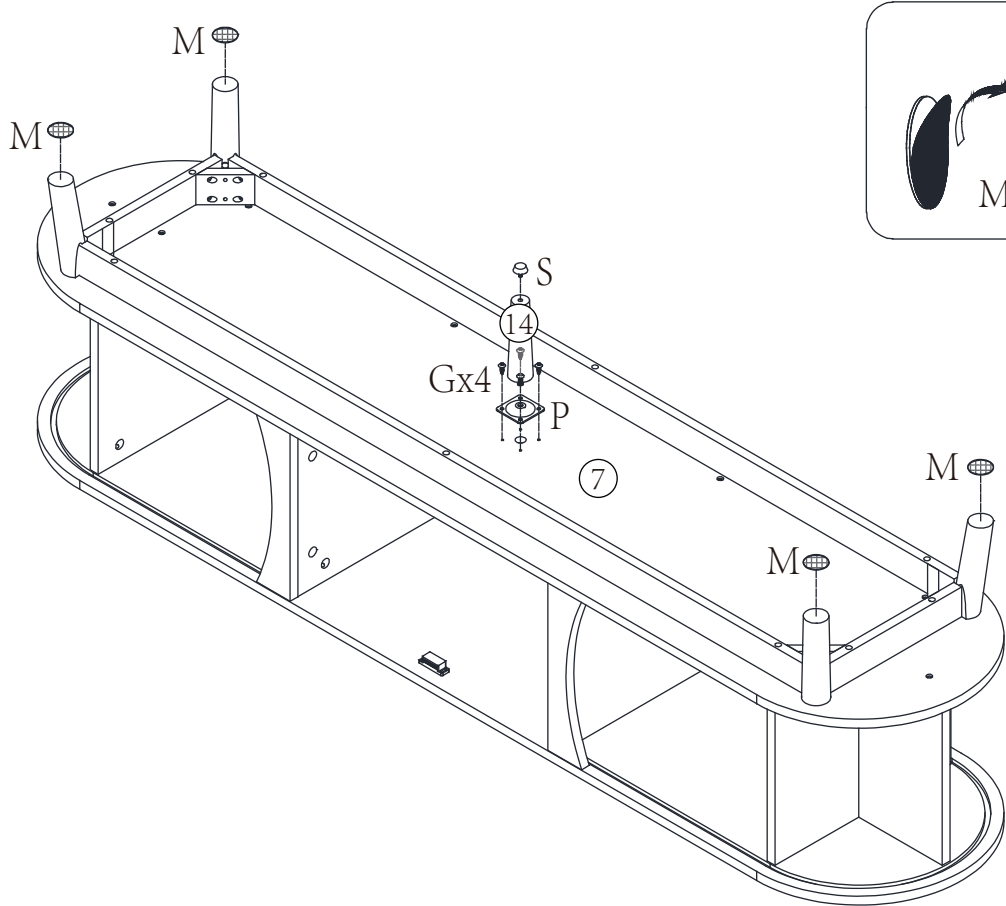

STEP 11

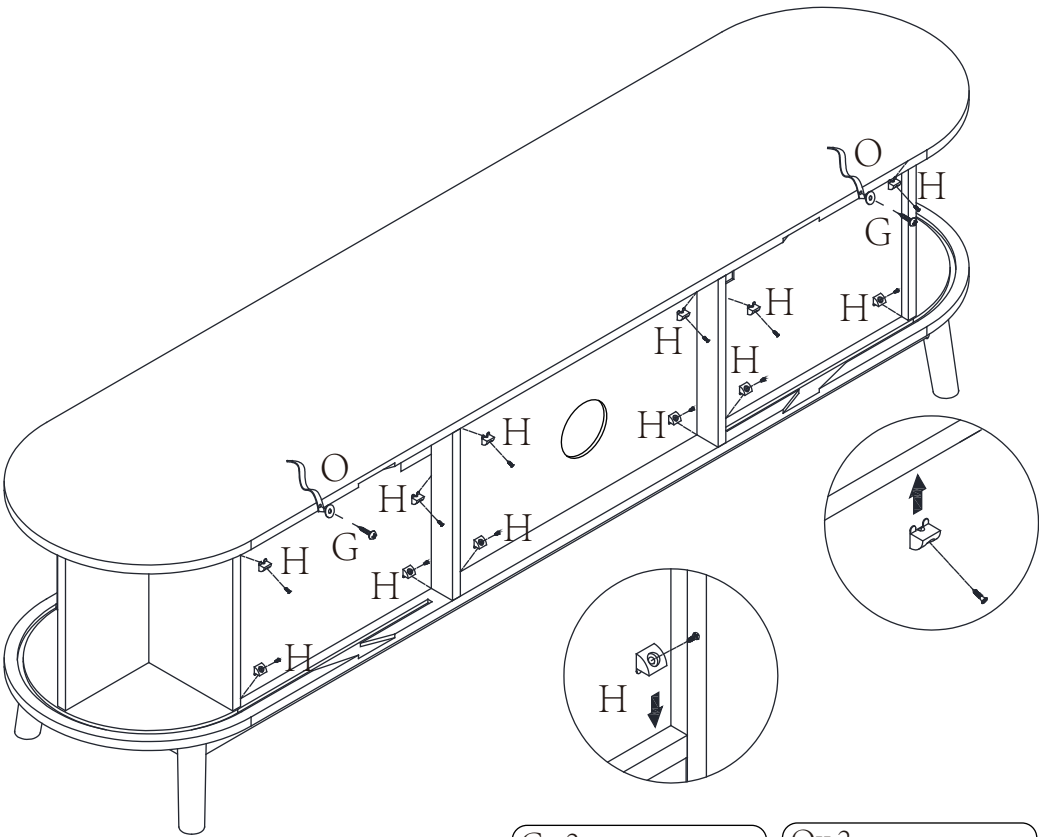

Gx 2

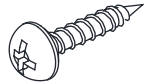


Ox 2




Hx12




STEP 12

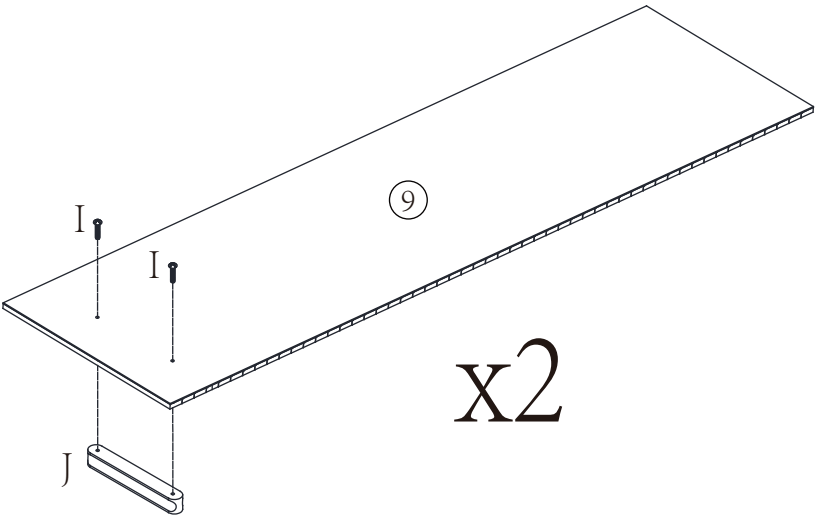


Jx2

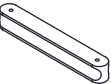


Ix4

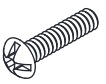


STEP 13

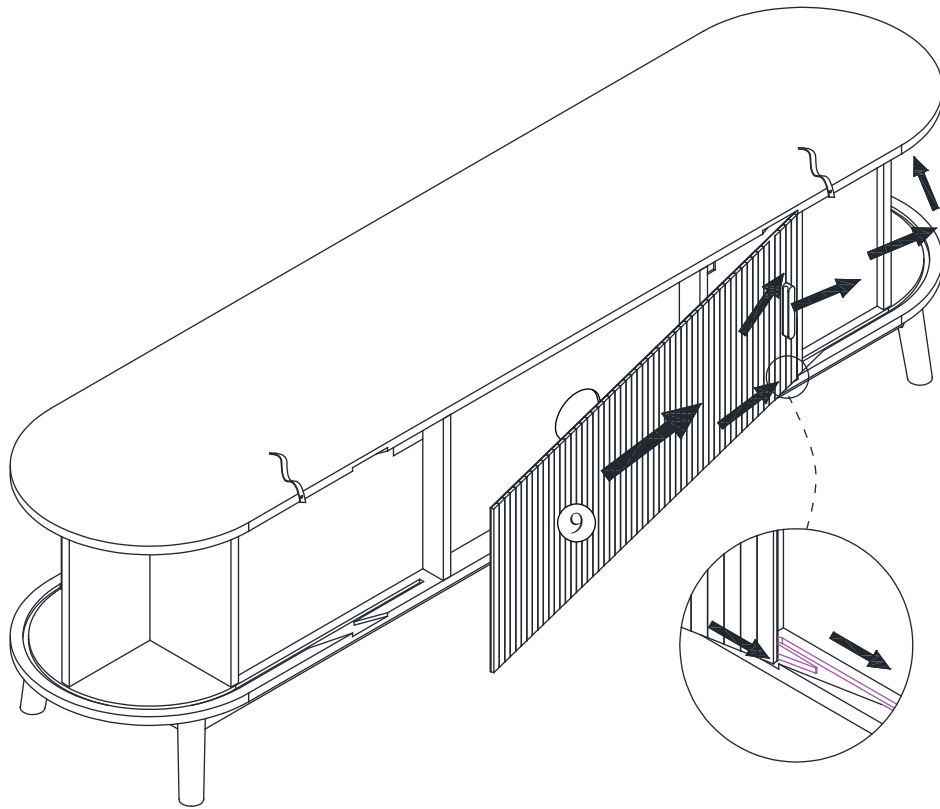

STEP 14

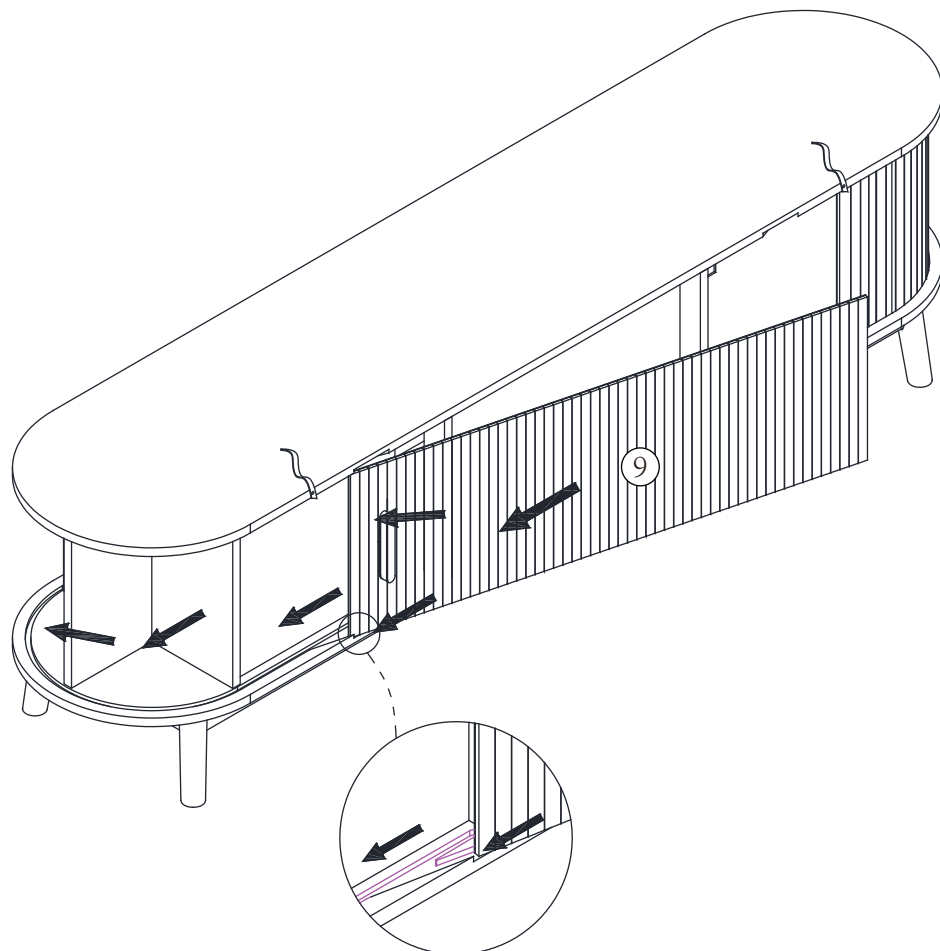


STEP 15

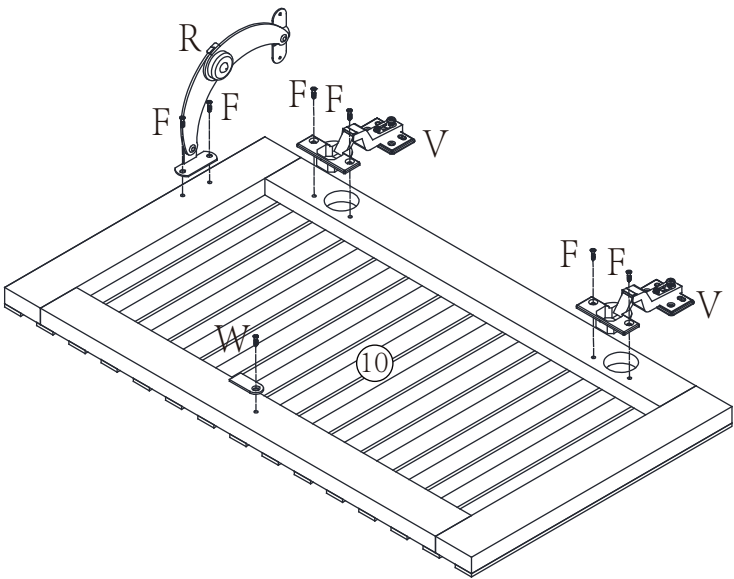


Fx6



Vx2

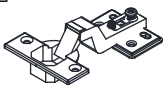


Wx1

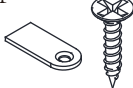

Rx1






STEP 16

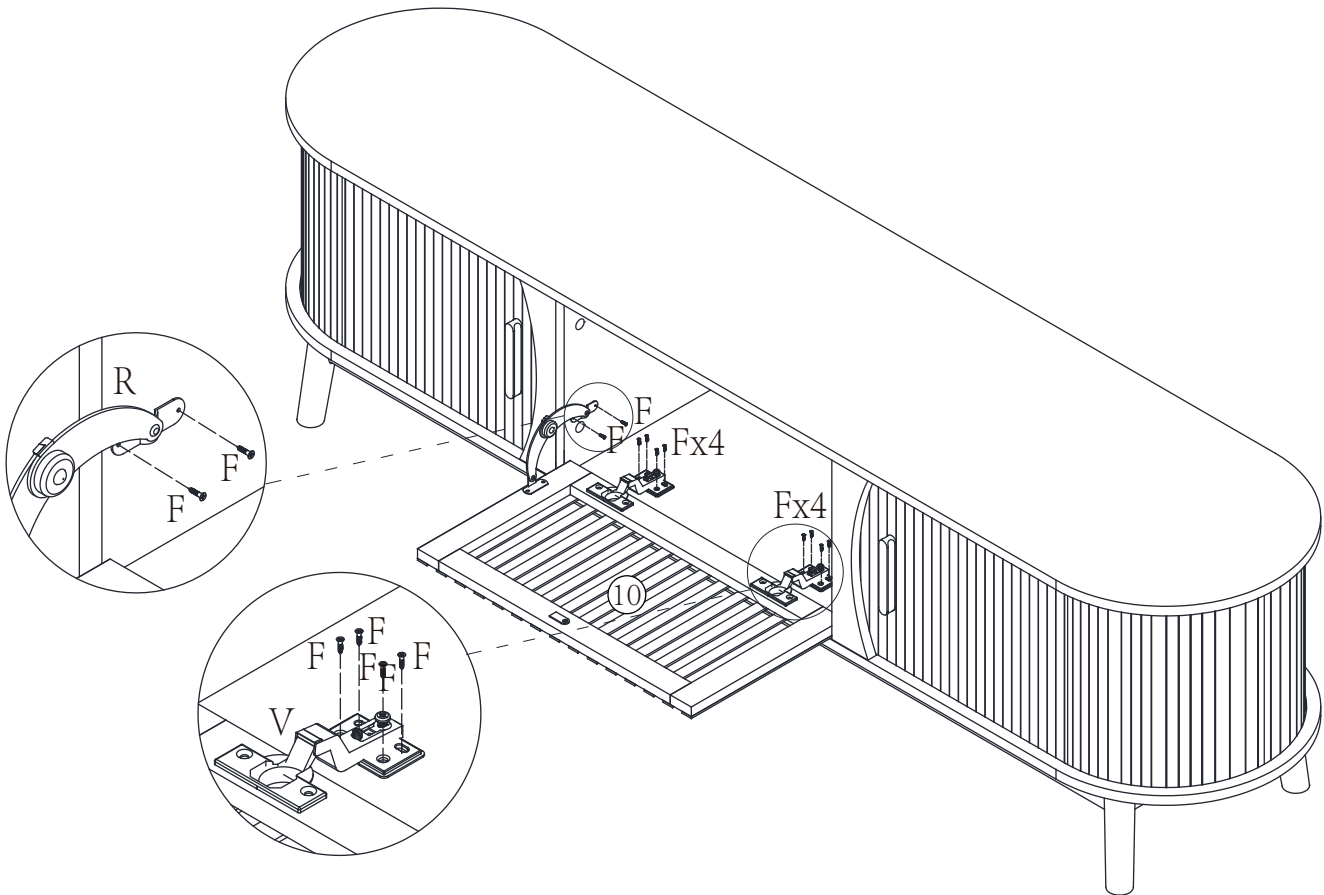


Fx10




STEP 17

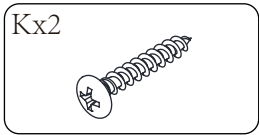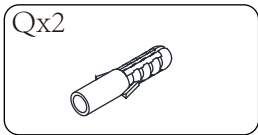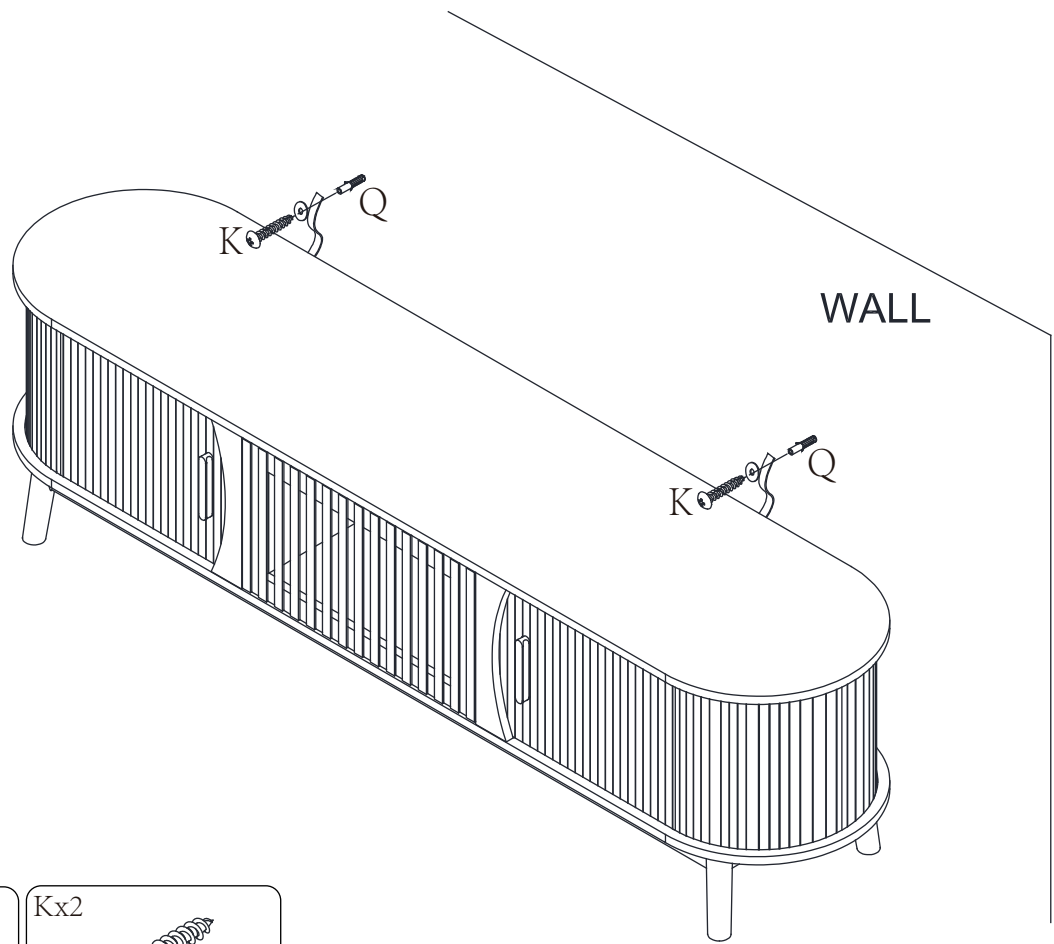

STEP 18

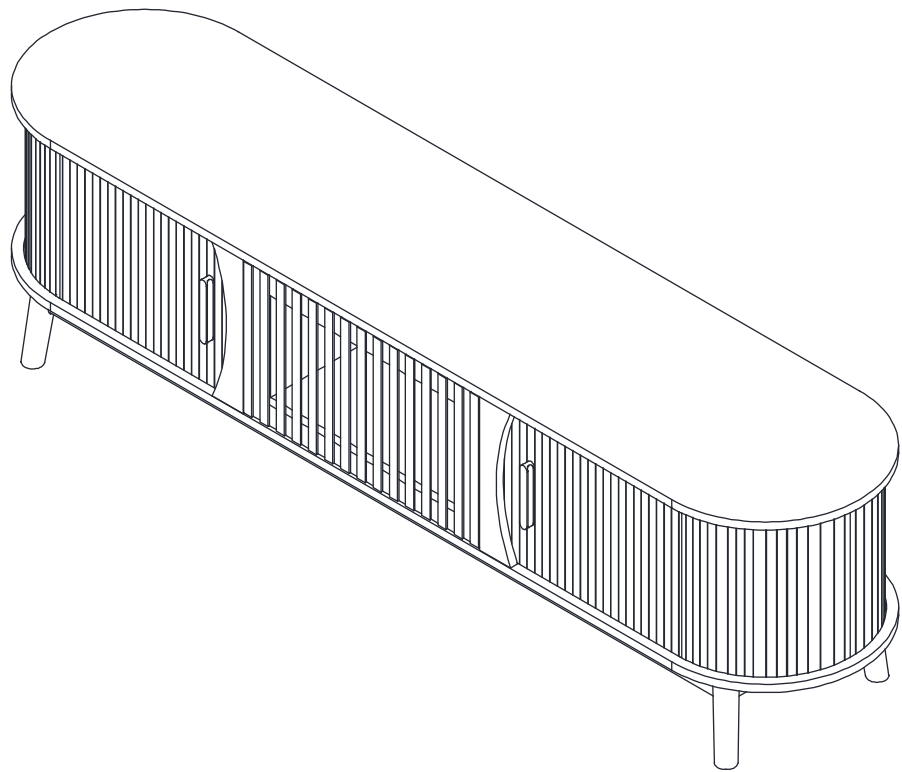


HINGE ADJUSTMENTS

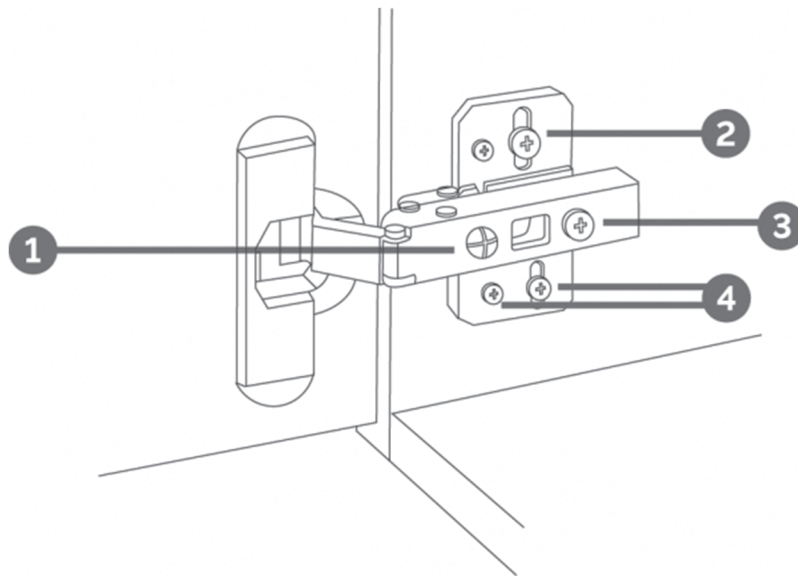


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

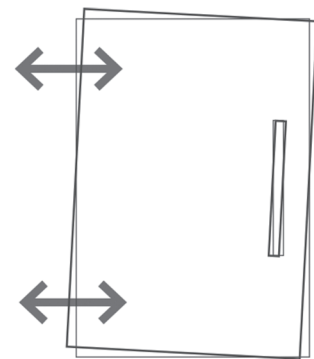

② ④ Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

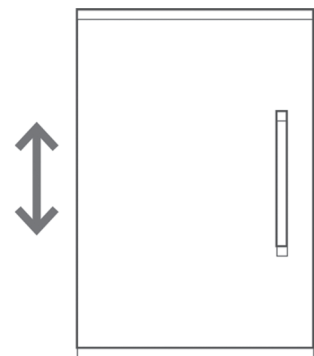

③ Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

