

ASSEMBLY INSTRUCTION

61.75"H Lighted Halloween 2D Haunted House Outdoor Décor with 210 warm White LED Lights



Please carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface. If you require assistance with assembly or parts, please call 888-357-7263.



 


 

 
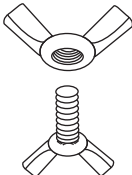
Get social with us and discover more about our products, tips and exclusive discounts!



BEFORE ASSEMBLING

1. Please check and make sure all the parts have been received.
2. Tools are not required for assembly.
3. The length of extension cord is 98 inch, please set up the product in the suitable place away from the power socket.


PART LIST

<p>Roof Section (A)</p>  <p>QTY: 1</p>	<p>Medium Section (B)</p>  <p>QTY: 1</p>	<p>Bottom Section (C)</p>  <p>QTY: 1</p>
<p>Ghost (D)</p>  <p>QTY: 1</p>	<p>Ghost (E)</p>  <p>QTY: 1</p>	<p>Metal frame (F)</p>  <p>QTY: 1</p>
<p>Ground Stakes (G)</p>  <p>QTY: 2</p>	<p>Transformer (H)</p>  <p>QTY: 1</p>	<p>Screws (I)</p>  <p>QTY: 5</p>


STEP-BY-STEP ASSEMBLY

PLEASE CAREFULLY UNPACK AND IDENTIFY EACH COMPONENT BEFORE BEGINNING ASSEMBLY. BEFORE YOU BEGIN, PLEASE REFER TO PARTS LIST TO MAKE SURE THAT YOU HAVE ALL PARTS.

- STEP 1** Assemble the three parts of the house (Roof Section A, Medium Section B, Bottom Section C), insert the pipes into the holes respectively, and then tighten the screws and nuts (screws and nuts included) to make them firm, as shown in the picture. Assemble the 2 ghosts (Ghost E, Ghost D) by insert the tubes into holes on the Roof Section A and Medium Section B

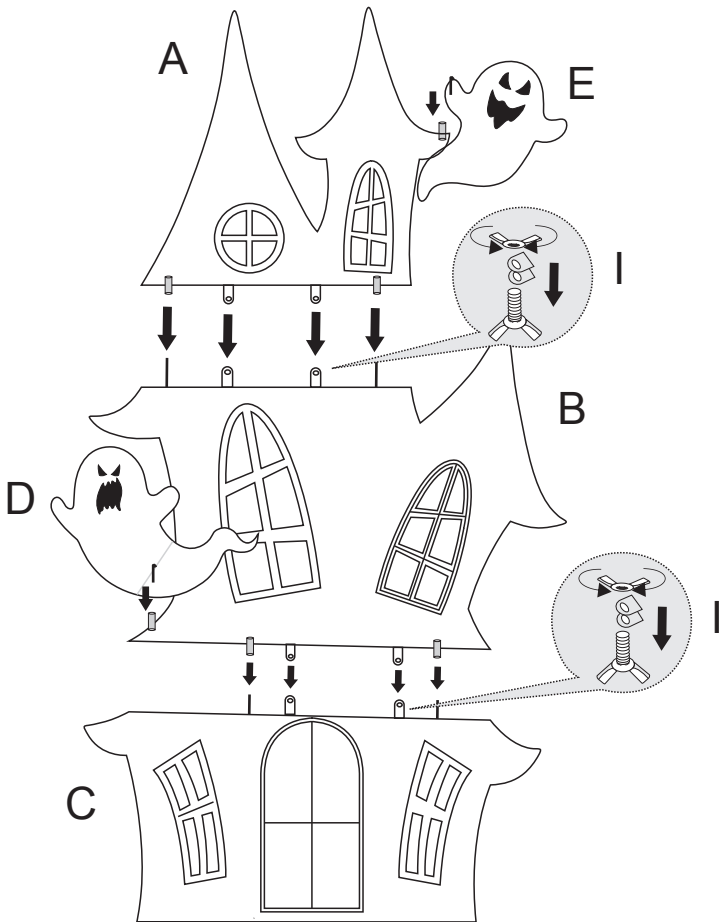


STEP 2 Assemble metal frame support on the back side to help House steady as picture shown.

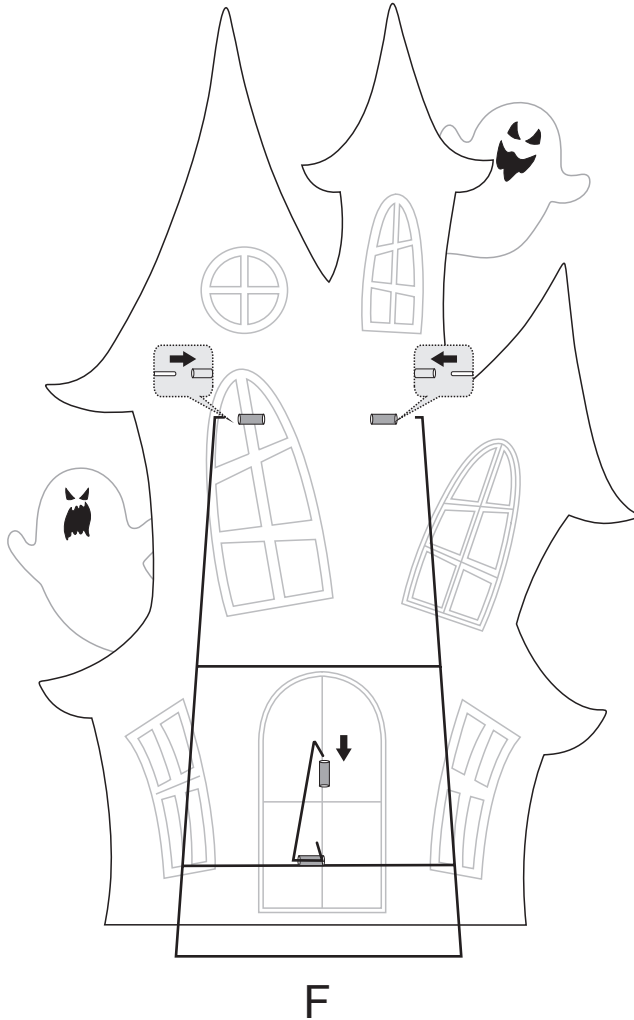

STEP 3 Finish the assembly and check all end plugs whether connect properly as instructed to make sure item can light up, then plug into transformer for display.

If using outdoors on a lawn, secure the Ghost House more stably by inserting lawn pegs through the edge of the frame and into the lawn.

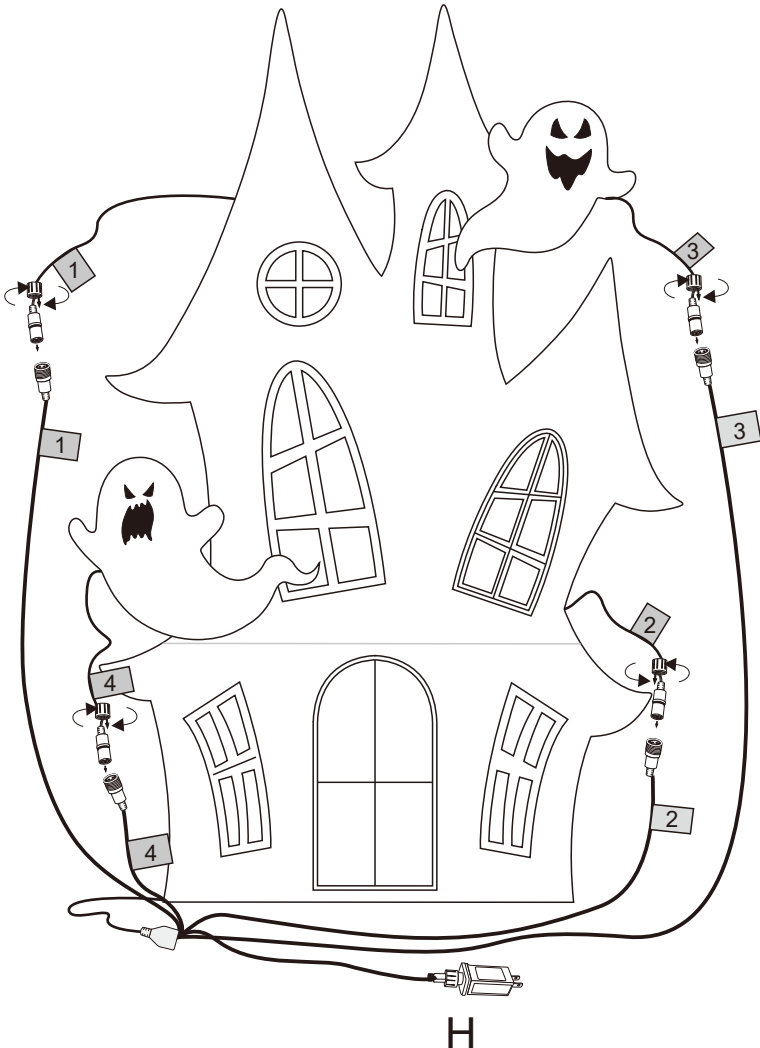

DISASSEMBLY AND STORAGE

1. Remove all decorations.
2. Disassemble the product in reverse order of assembly.
3. Suggest to store it in its original carton box or in storage bag and keep in a cool dry place.

CAUTION

1. To be assembled by or under the supervision of an adult.
2. Keep plastic bags out of reach of children.
3. Keep away from fire or hot temperatures.
4. Do not light a candle on or near the product.
5. Do not leave lighted electric cords unattended.
6. When assembling, do not let children play around the working area.
7. Place the product on an even surface to ensure stability.
8. Keep this information for future reference.
9. Please periodically check all fittings and re-tighten as necessary.

Made in China

glitzhom[®]

Glitzhom[®], LLC.

Toll free 888-357-7263
customerservice@glitzhom.com