


ASSEMBLY INSTRUCTION

Set of 3 Lighted Halloween 2.5D Witches with Cauldron Outdoor Décor with 340 warm White LED Lights

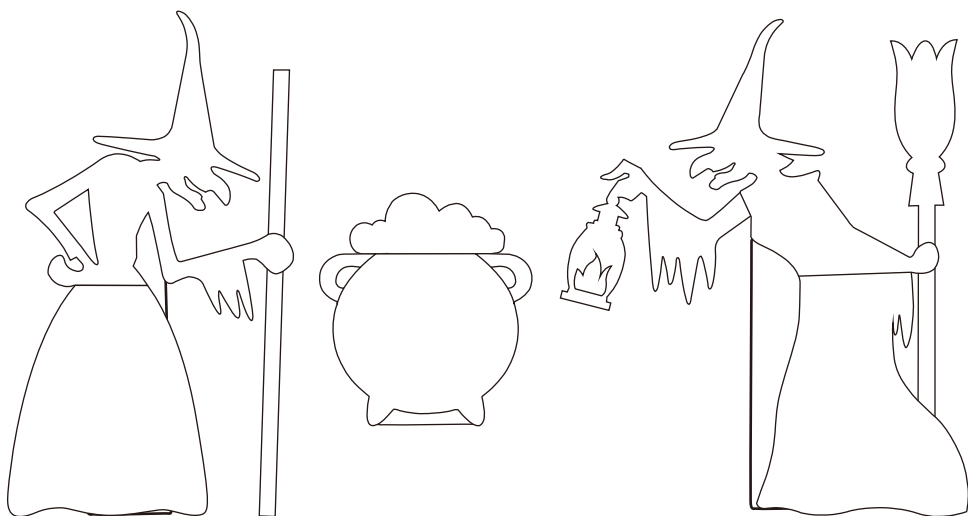

Please carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface. If you require assistance with assembly or parts, please call 888-357-7263.


 








 
 

 


Get social with us and discover more about our products, tips and exclusive discounts!



BEFORE ASSEMBLING

1. Please check and make sure all the parts have been received.
2. Tools are not required for assembly.
3. The length of extension cord is 98 inch, please set up the product in the suitable place away from the power socket.




PART LIST

Top Body (A)  QTY: 1	Bottom Body (B)  QTY: 1	Hand (C)  QTY: 1	Top Body (D)  QTY: 1
Bottom Body (E)  QTY: 1	Stick (F)  QTY: 1	Stick (G)  QTY: 1	Broom (H)  QTY: 1
Broom (I)  QTY: 1	Cauldron (J)  QTY: 1	Metal Frame (K)  QTY: 1	Metal Frame (L)  QTY: 2
Zip Ties (M)  QTY: 8	Transformer (N)  QTY: 1	Ground Stakes (O)  QTY: 6	 QTY: 1


STEP-BY-STEP ASSEMBLY

PLEASE CAREFULLY UNPACK AND IDENTIFY EACH COMPONENT BEFORE BEGINNING ASSEMBLY. BEFORE YOU BEGIN, PLEASE REFER TO PARTS LIST TO MAKE SURE THAT YOU HAVE ALL PARTS.

STEP 1 Assemble the Witch Top and bottom body's by insert the tubes into the holes. Fasten with provided zip ties to make connection be steady and firmly.

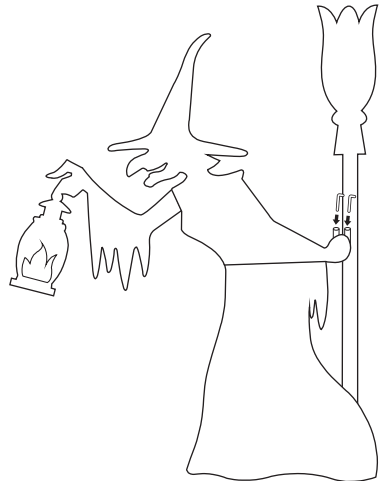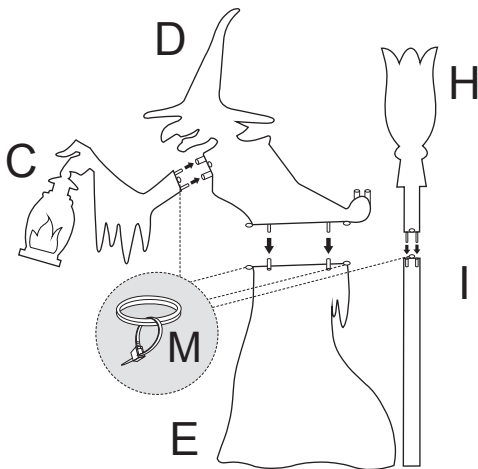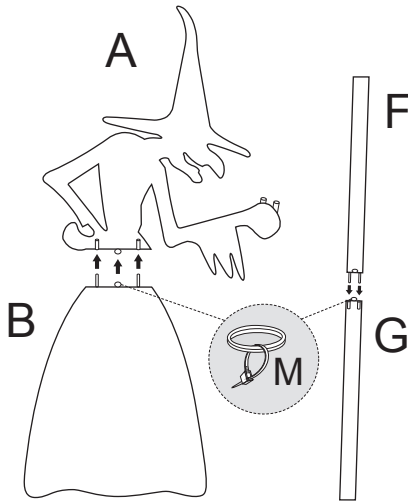


STEP 2 Assemble the metal frame support on the back side to help the witch and cauldron stand up for display as shown in the picture.

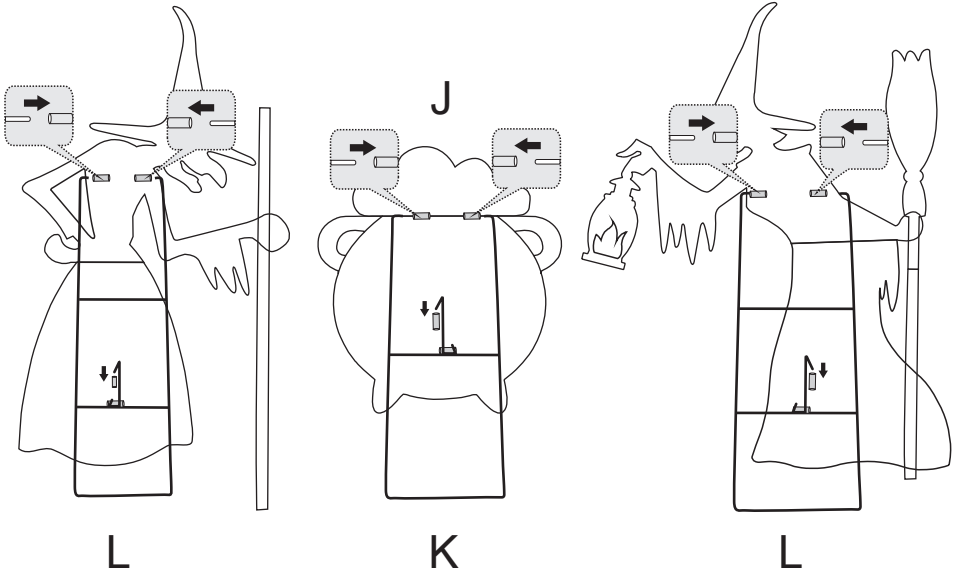

STEP 3 Assembly is complete now and check all end plugs whether connect properly as instructed to make sure item can light up, then plug into transformer for display.

If using outdoors on a lawn, secure the witch more stably by inserting lawn pegs through the edge of the frame and into the lawn.

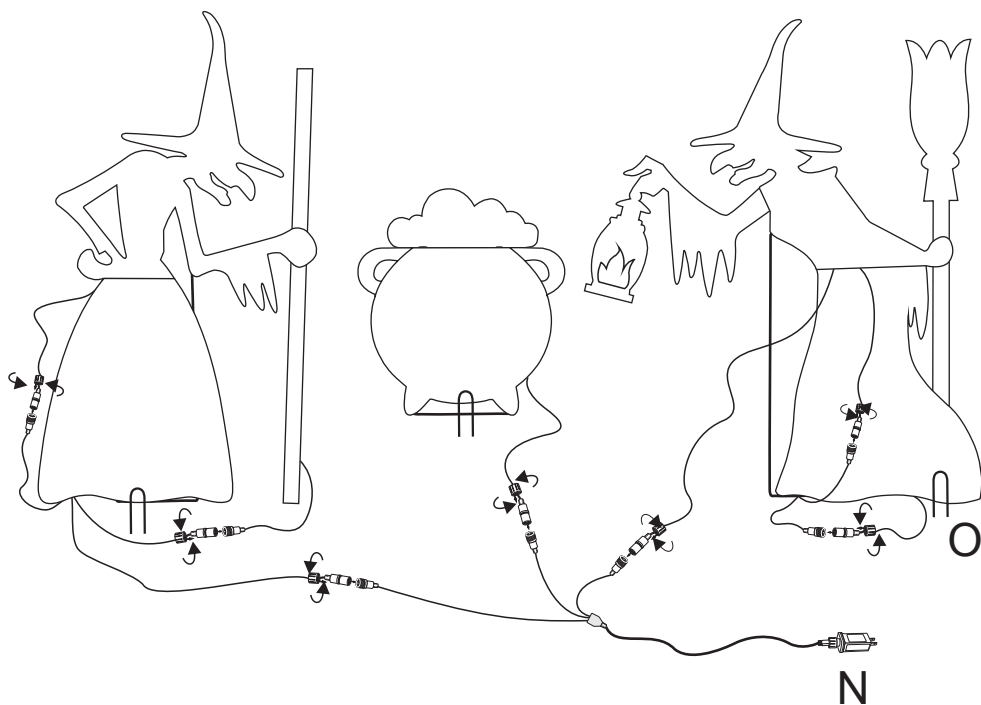

DISASSEMBLY AND STORAGE

1. Remove all decorations.
2. Disassemble the product in reverse order of assembly.
3. Suggest to store it in its original carton box or in storage bag and keep in a cool dry place.

CAUTION

1. To be assembled by or under the supervision of an adult.
2. Keep plastic bags out of reach of children.
3. Keep away from fire or hot temperatures.
4. Do not light a candle on or near the product.
5. Do not leave lighted electric cords unattended.
6. When assembling, do not let children play around the working area.
7. Place the product on an even surface to ensure stability.
8. Keep this information for future reference.
9. Please periodically check all fittings and re-tighten as necessary.

Made in China

glitzhom[®]

Glitzhom[®], LLC.

Toll free 888-357-7263
customerservice@glitzhom.com