# Assembly Instructions

**CAUTION:** You must read these Assembly Instructions before you proceed.

### Care & Maintenance



• Not for commercial use. For residential use only.



• Do not put hot items directly on furniture surface.



• Do not clean furniture with harsh cleansers or polish.



 To obtain the longest lifespan of your outdoor product minimizing exposure to direct sunlight is recommended.



• Children should not climb or jump on the furniture.



• Do not write on furniture without a padded barrier to protect the surface.



 To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine.
Whenever possible cover the product and /or place under patio or awnings.




• Stains may be removed with mild soap solution and damp cloth.



• Dust and pick-up spills using a clean, non-colored, lint- free cloth.

#### Please look in the Seat Panel for hardware packs.

# **CLUB CHAIR**

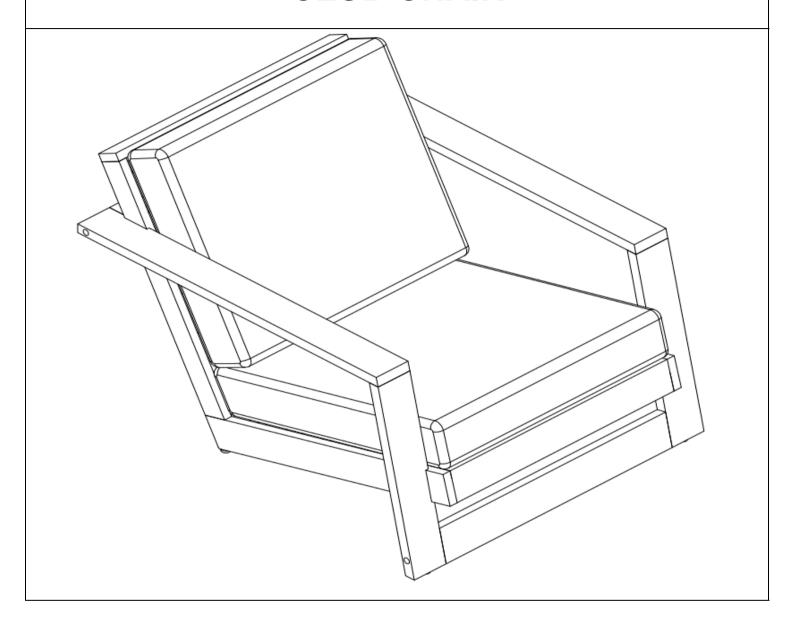


Part List:				
Label	Picture	Description	Qty	
A		Left Arm Panel	1	
В		Right Arm Panel	1	
С		Seat Panel	1	
D		Backrest Panel	1	
E		Front Support Bar	1	
F		Back Support Bar	1	
G		Seat Cushion	1	
Н		Back Cushion	1	

<u>Hardware</u>				
No.	Picture	Description	Qty	
1		Screw (M7 x 50mm)	3	
2		Screw (M7 x 120mm)	7	
3		Allen Wrench	2	

# **Assembly Preparation**

 **Before Beginning Assembly:** 





Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-




Assemble on a clean non-marring surface (packing foam)-




Save all packaging until finished-


# **Assembly Steps**

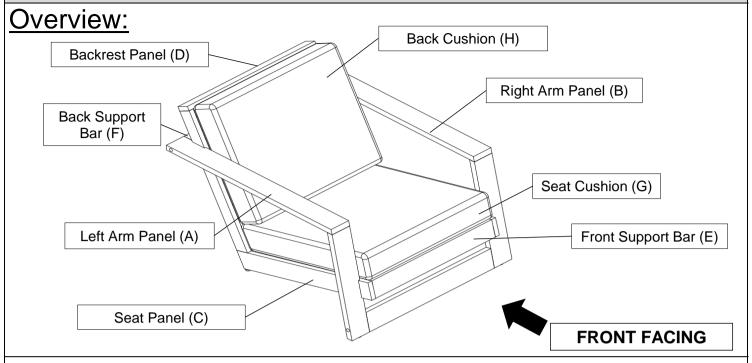

 This Club Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Club Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.




Unpack and place all parts on a clean, non-marring surface.

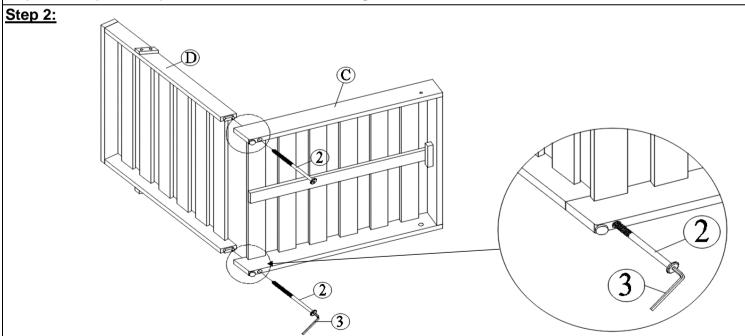

With the help of your adult partner, place the Seat Panel (C) and Backrest Panel (D) lean as shown in above picture onto a clean, soft surface to avoid any scratches or damages to the product.

Then align the tenons of Backrest Panel (D) into the mortises of the Seat Panel (C) and affix by using Screws ((2)) and Allen Wrench ((3)).


Do not fully tighten the Screws.

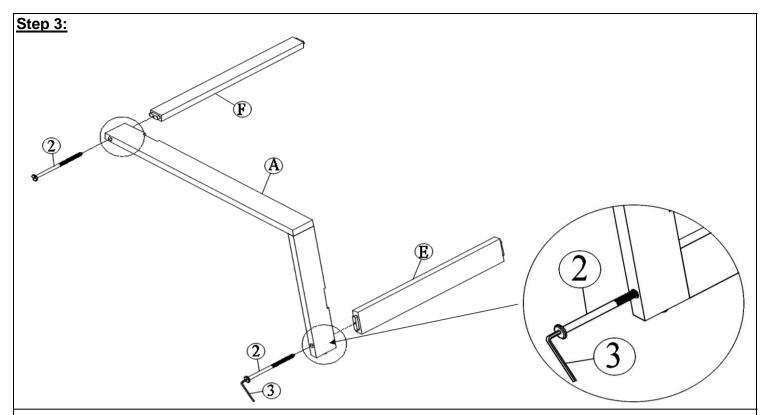

With the help of your adult partner, place Left Arm Panel (A), Front Support Bar (E) and Back Support Bar (F) the stand up as shown in picture onto a clean, soft surface to avoid any scratches or damages to the product.


Then align the tenons of Front Support Bar (E) and Back Support Bar (F) into the mortises of the Left Arm Panel (A) and affix by using Screws ((2)) and Allen Wrench ((3)).

Do not fully tighten the Screws.

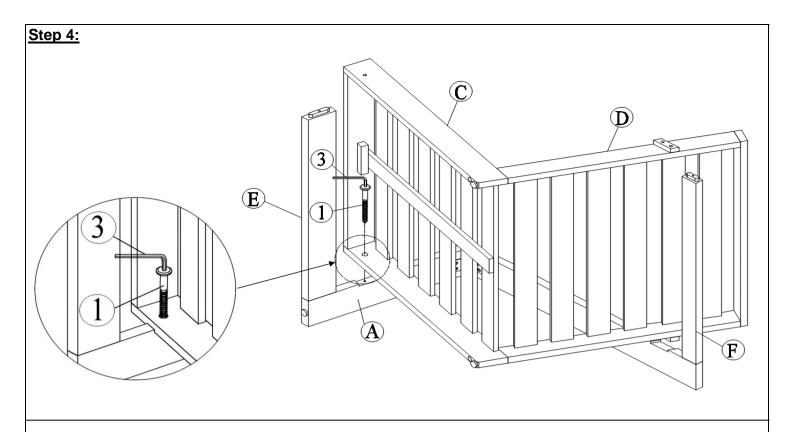


With the help of your adult partner, attach the assembled part in Step 2 to the assembled part in Step 3 and then secure by using Screws (1) and Allen Wrench (3) as shown above.

Do not fully tighten the Screws.

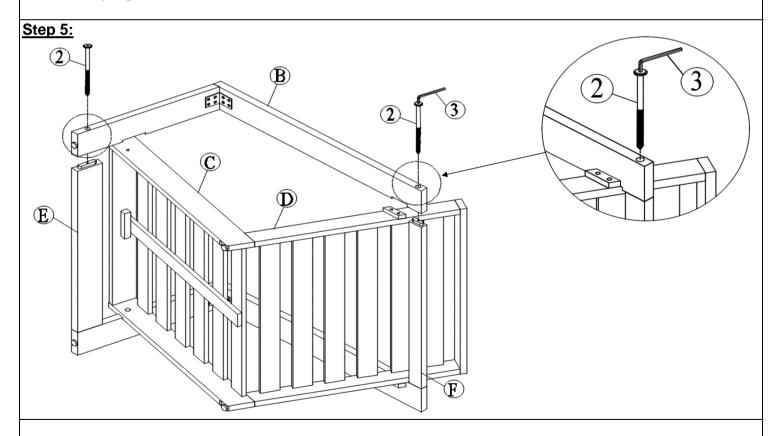


With the help of your adult partner, attach the Right Arm Panel (B) to the assembled part in Step 4 and then secure by using Screws (2) and Allen Wrench (3).

Do not fully tighten the Screws.

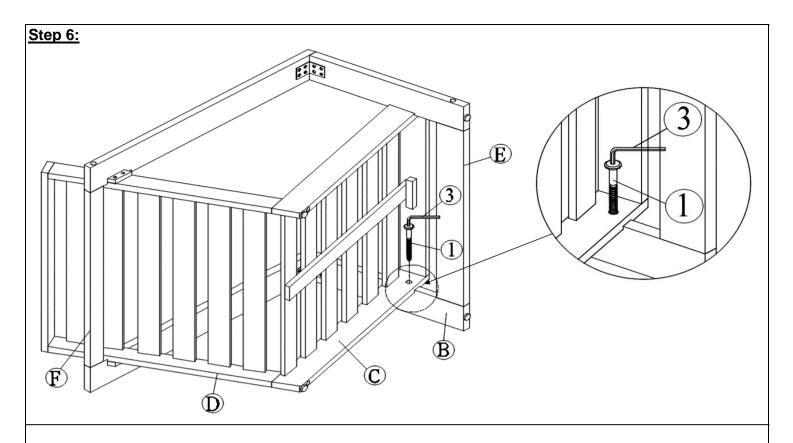

With the help of your adult partner, turn the assembled part in Step 5 to the opposite side and then secure the Right Arm Panel (B) to the Seat Panel (C) by using Screws (1), and Allen Wrench (3). **Do not fully tighten the Screws.** 

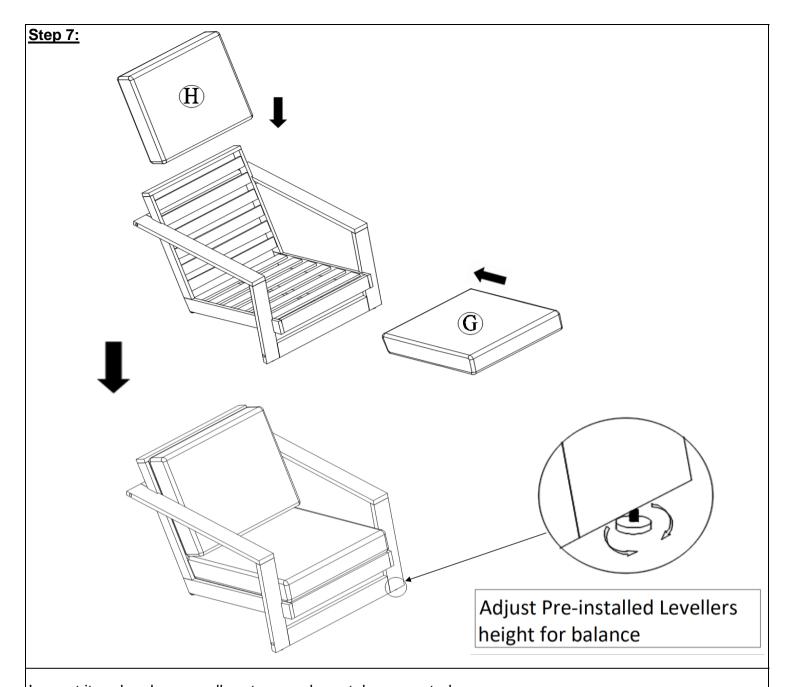

Inspect it and make sure all parts are adequately connected.

Turn the Club Chair right side up.

Gently and gracefully, sit onto the Club Chair.

This will help to align all the parts at all joint areas.

Then get off the Club Chair and in a sequential manner, gradually tighten all Screws at all joints until evenly connected.

If there are still wobbles, loosen the Screws and execute this same process.

Place the Seat Cushion (G) and then place the Back Cushion (H) as shown above.

Adjust Pre-installed Leveler height for balance as shown above.

WARNING!! IF CLUB CHAIR IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT. Your Club Chair is ready for use.

This Club Chair can only be used on a flat, level surface.