 


CBN122BK

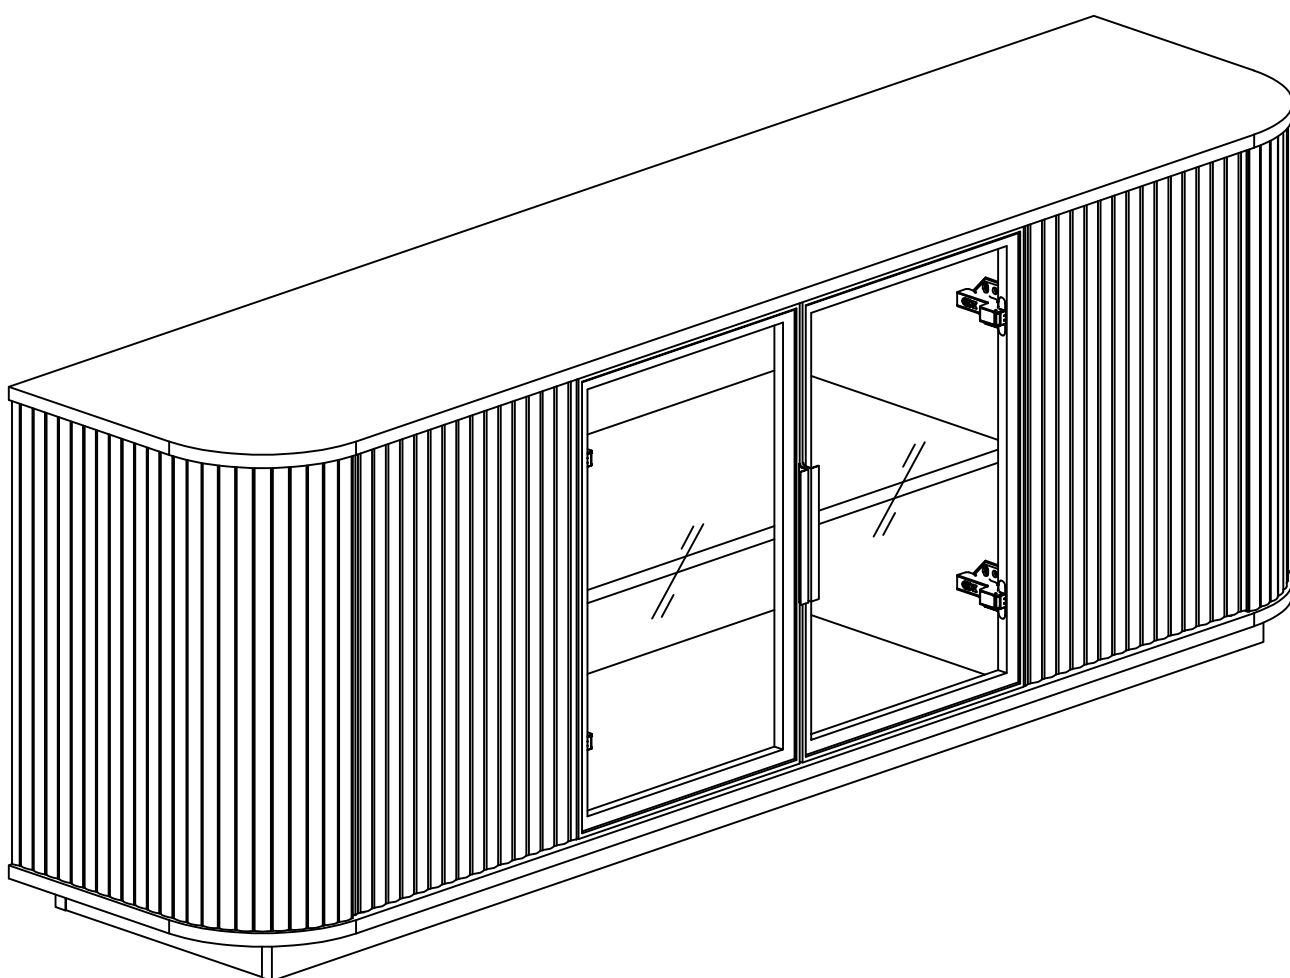

General Guidelines

- Please read the following instruction carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.

 
Notes

- The product is intended for indoor use only. The product must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to product may occur if products are used outside of their intended purposes and/or if products have been changed/modified from their original design. The seller does not assume any responsibility or liability with respect to any injury/damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface and do not place the unwrapped product directly on the ground to avoid product damage.
- Please do not stand or sit on the wooden boards.
- Please wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Please match the corresponding part and fitting based on the part number in the manual.
- If the part does not match with the fitting, please check the piece as specified in this manual.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Periodically inspect screw tightness while the product is in use. If necessary, retighten to ensure structural integrity.
- If you accidentally spill water or another liquid on the surface, immediately wipe clean with a dry towel.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- Please place this item on level, solid ground during use.

Warnings


- During assembly, keep all small parts out of the reach of children. it may be fatal if swallowed or inhaled.
- Children should not climb or play on the product in order to avoid tipping over the furniture and causing serious injury.
- To avoid the potential dangers of suffocation, please keep all parts and packaging (film, plastic bags, foam, etc.) away from babies and children.
- Keep sharp objects and corrosive items away from the product to avoid any damage or injury.
- Do not shake or move violently during use to avoid tipping over the product.

Parts List

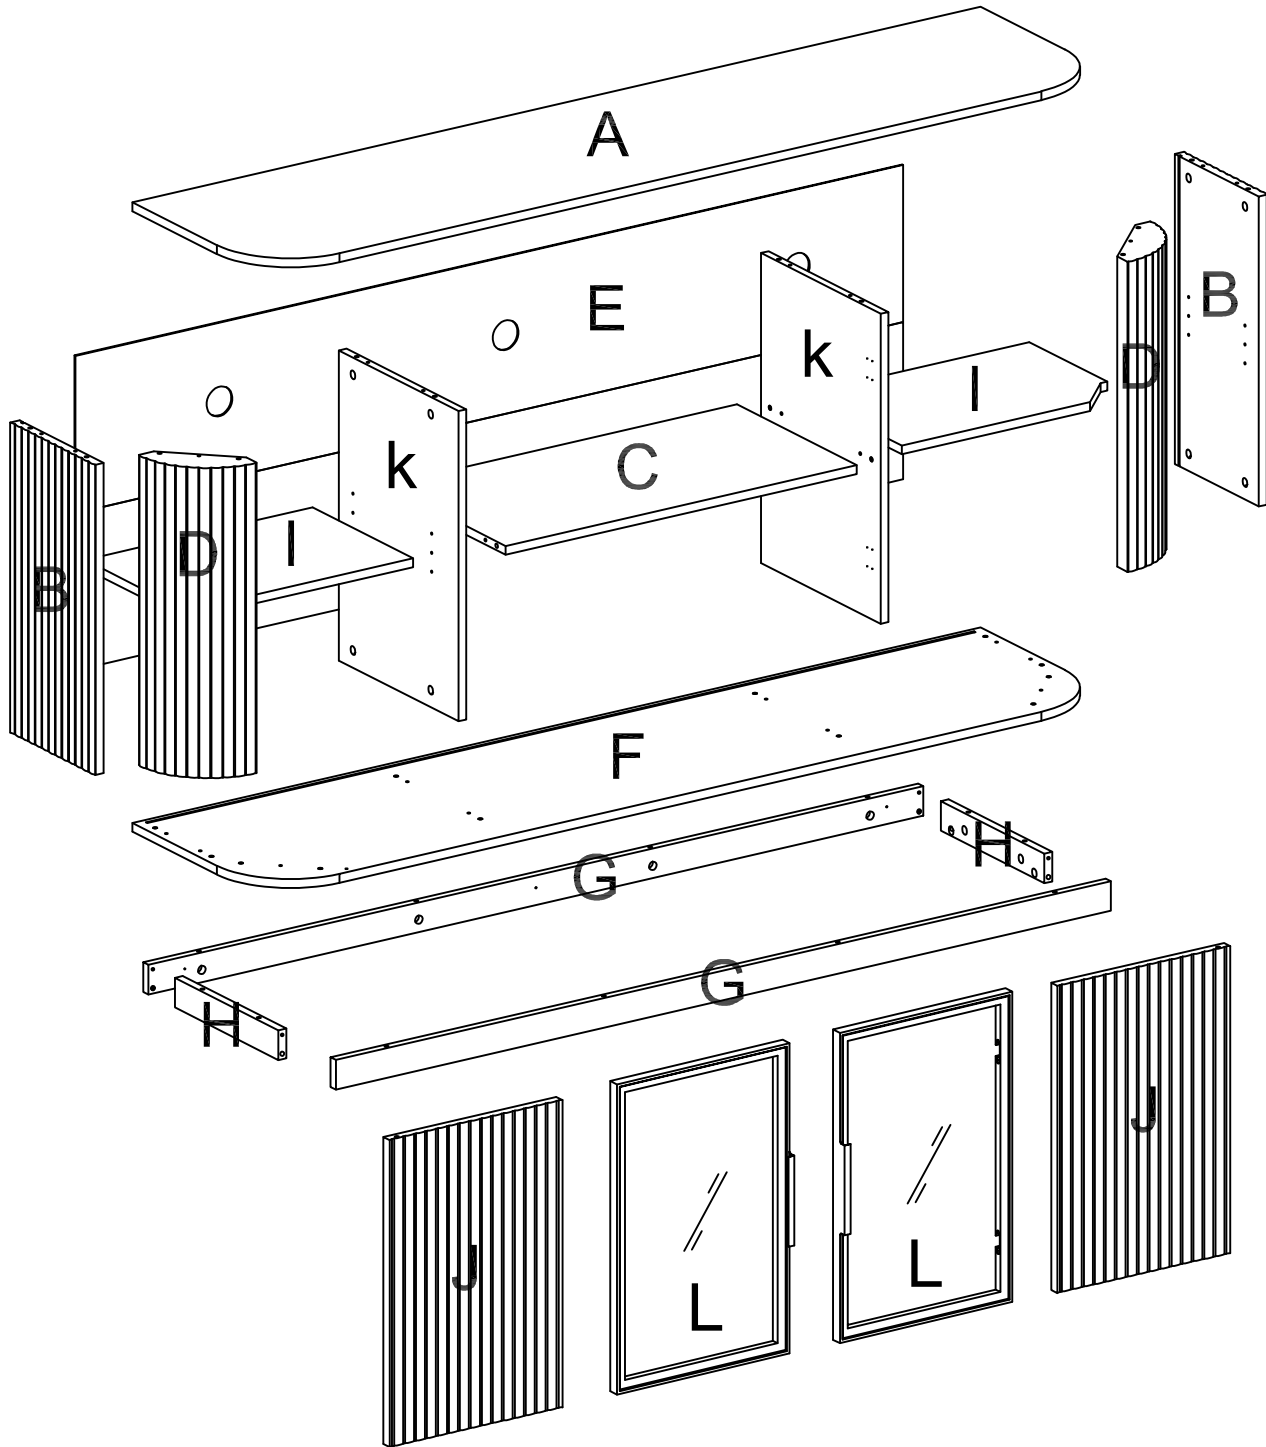


Parts List

 A

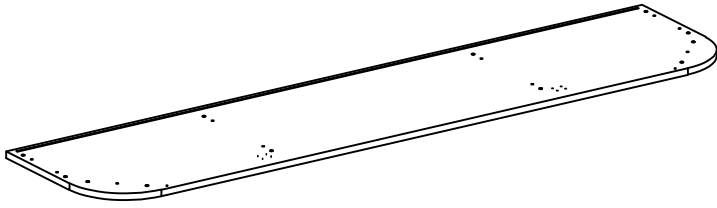


X1

 B

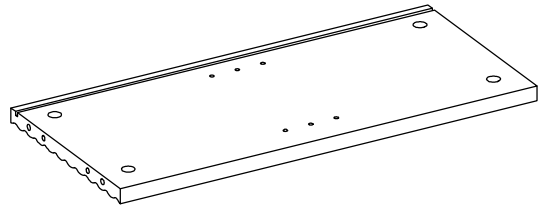


X2

 C

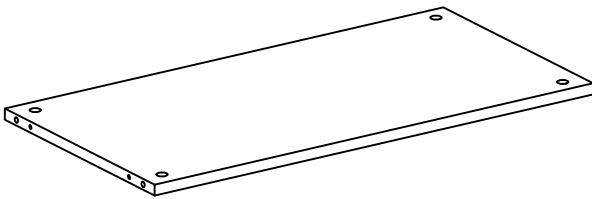


X1

 D

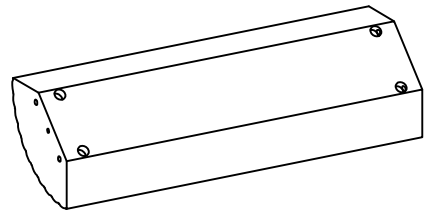


X2

 E

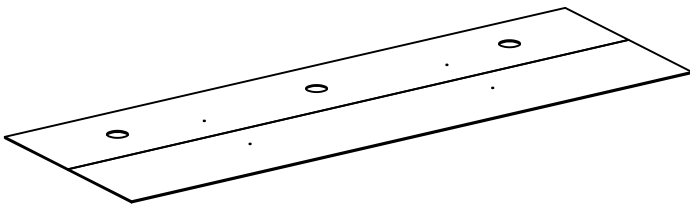


X1

 F

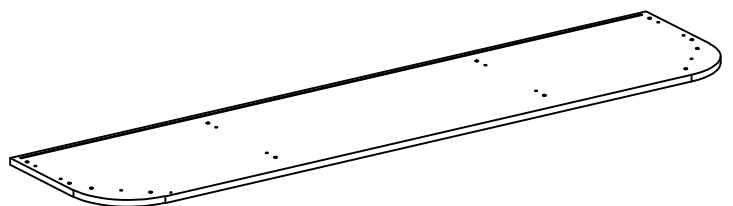


X1

 G

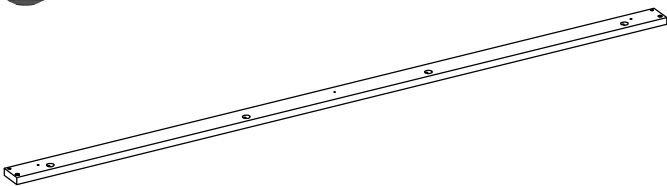


X2

 H

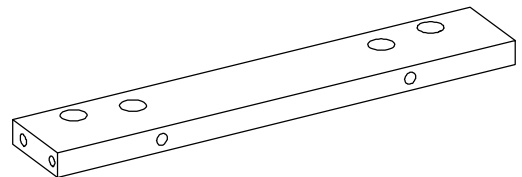


X2

 I

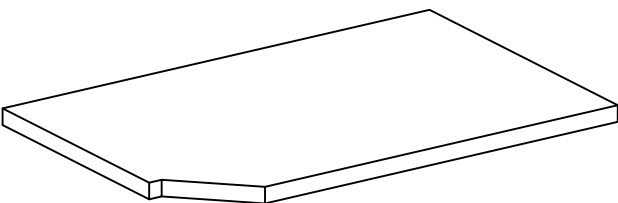



X2

 J




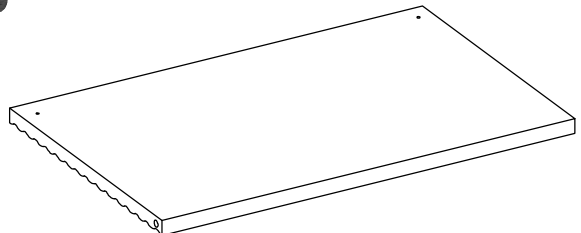


X2

  
Parts List
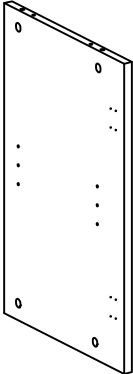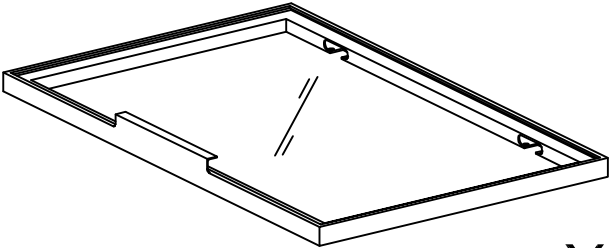
<div data-bbox="81 185 121 248">k</div> <div data-bbox="381 172 513 544"></div> <div data-bbox="687 472 767 533">X2</div>	<div data-bbox="839 185 879 248">L</div> <div data-bbox="880 237 1492 483"></div> <div data-bbox="1445 472 1525 533">X2</div>
--	---

    Hardware List

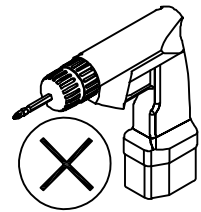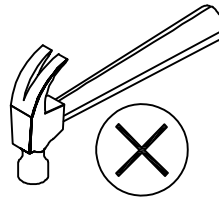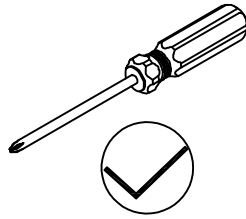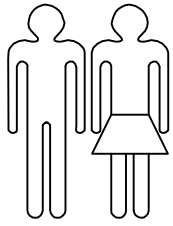


1

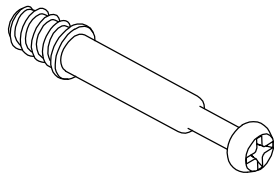 


44PCS

 2




44PCS

 3

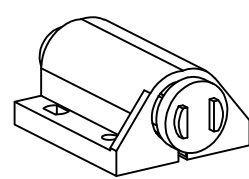


2SET

 4




28PCS

 5

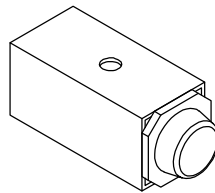

6PCS

 6

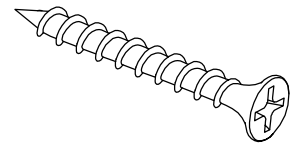

ST4.2*35

6PCS


7



ST3.5*14



4PCS

 8




14SET

  9

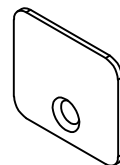


2SET

 10



8 PCS

 11

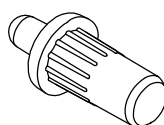





4PCS

12




28PCS

    Hardware List

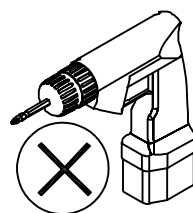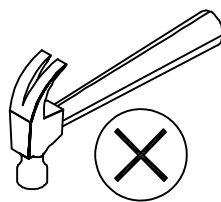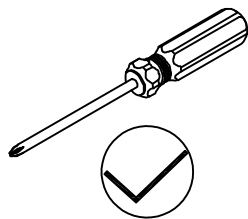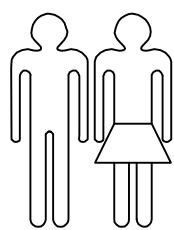


13

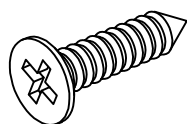 

ST3.5*12


16SET

 14

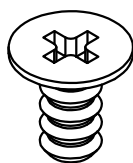


8 PCS

 15

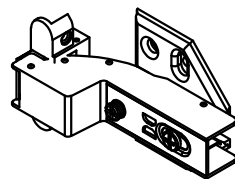

4PCS

 16

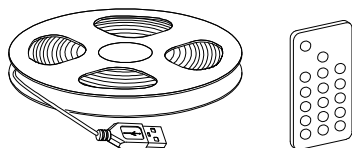


1SET

INSTALLING THE CAM LOCKS

1




 Do not over tighten!

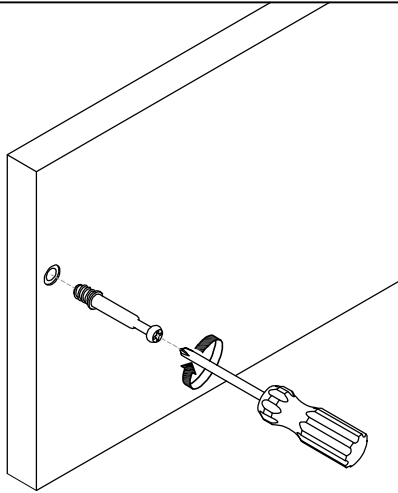


The base of the Cam Screw should be flush with the panel

 2

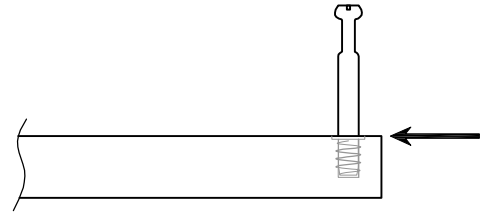


Screw the Cam Screw into the prethreaded hole. Tighten with a screwdriver until snug.

 3

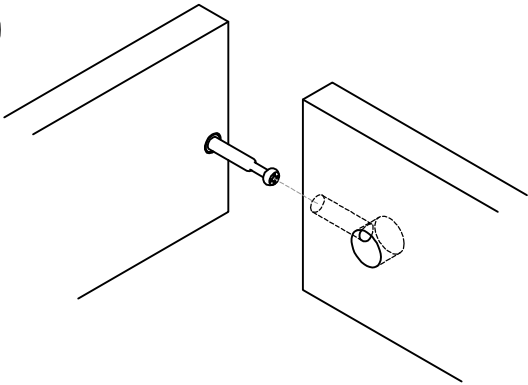


Connect the panels. Insert the Cam Screw into the small hole in the adjoining panel.

 4

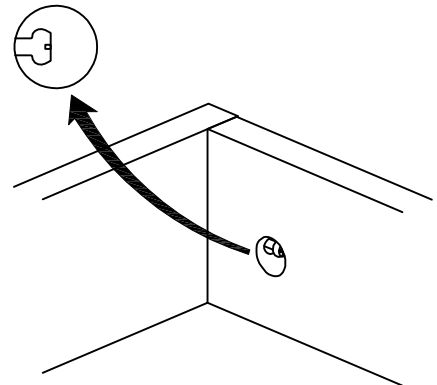


The head of the Cam Screw should be visible through the large hole.

 5

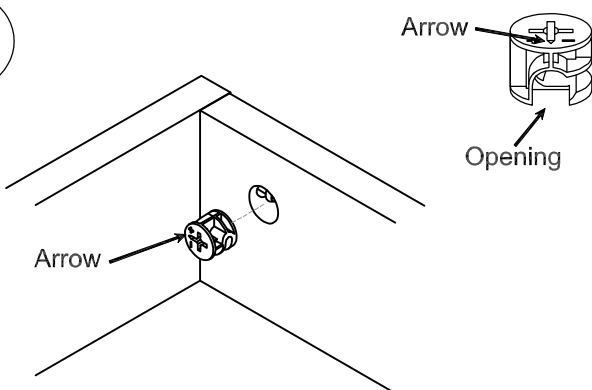


Insert the Cam Lock into the large hole. Make sure the arrow and the opening in the Cam Lock are facing the Cam Screw.

 6

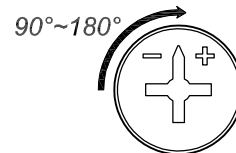


Do not over tighten!

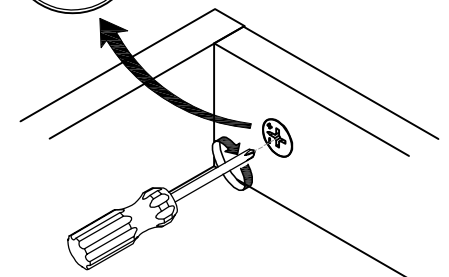 

Using a screwdriver, turn the Cam Lock at least 90° clock-wise to lock the two panels firmly together.


Assemble steps

 1

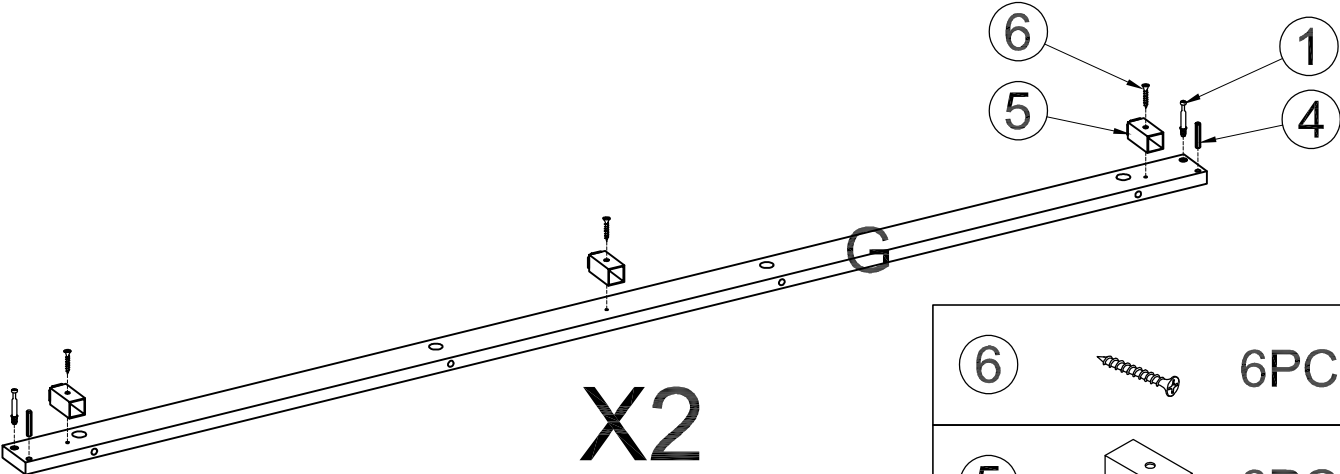

⑥		6PCS
⑤		6PCS
④		4PCS
①		4PCS

 
2

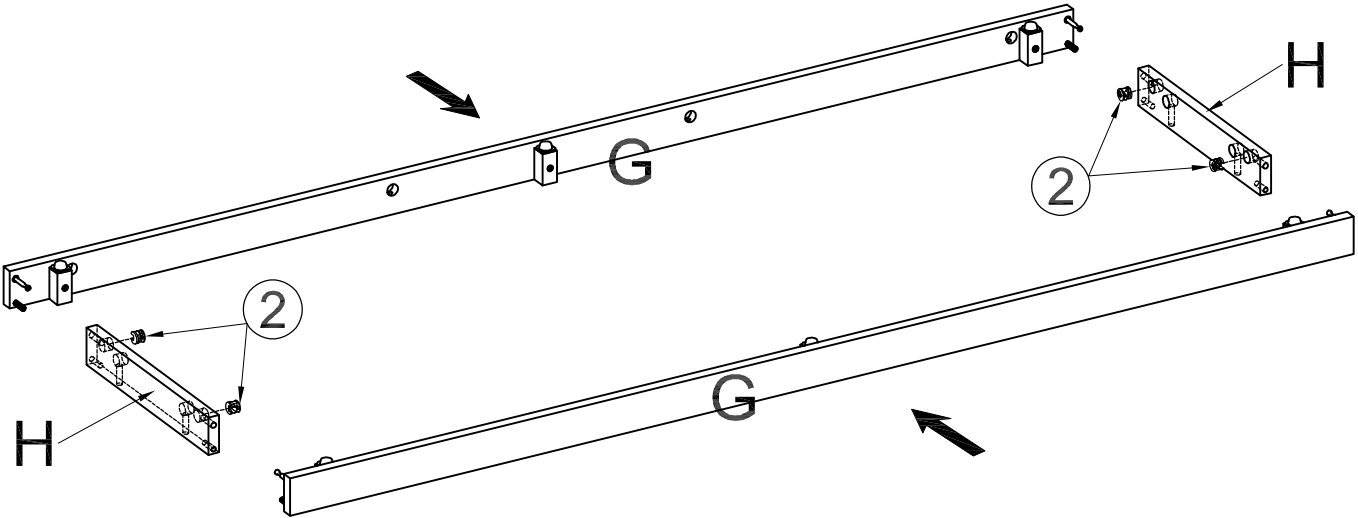


②		4PCS
---	--	------

Assemble steps

 3

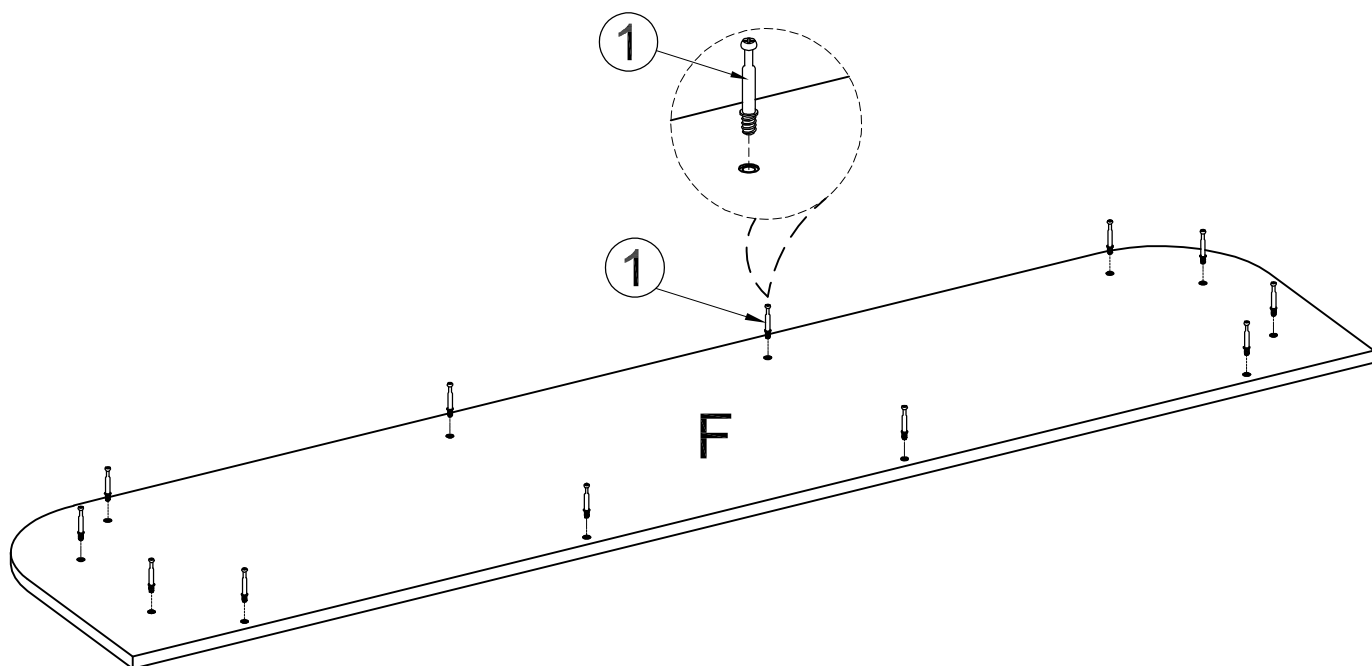


1

 

12PCS

 4

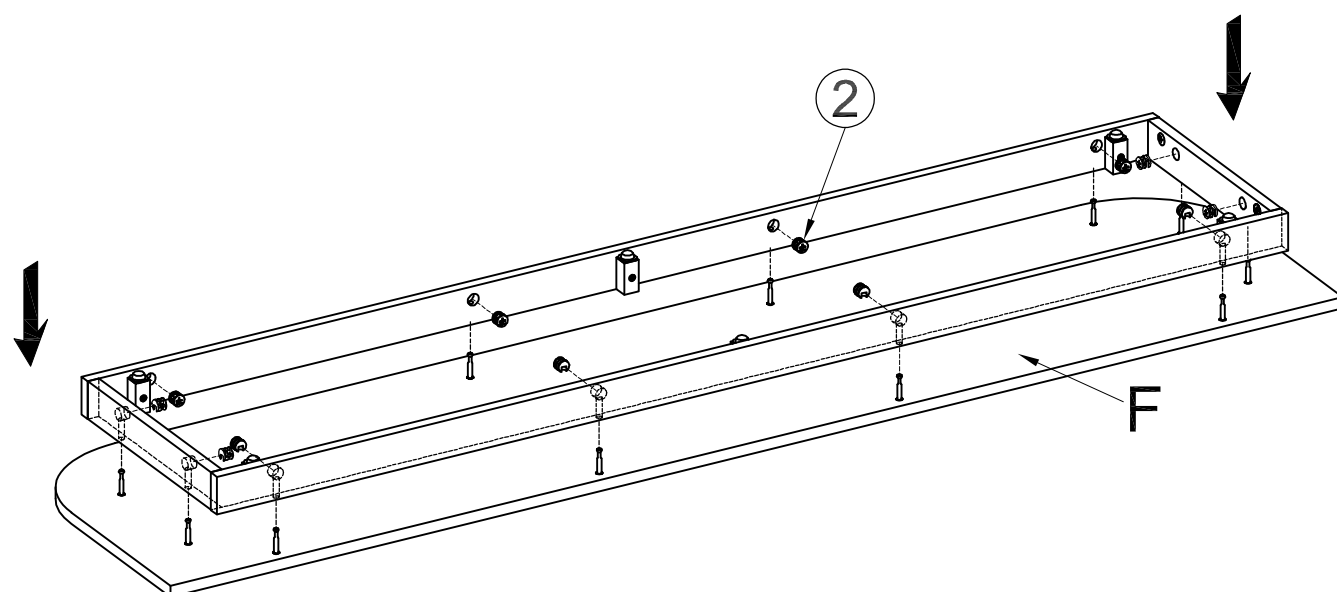


2



12PCS

Assemble steps

 
5

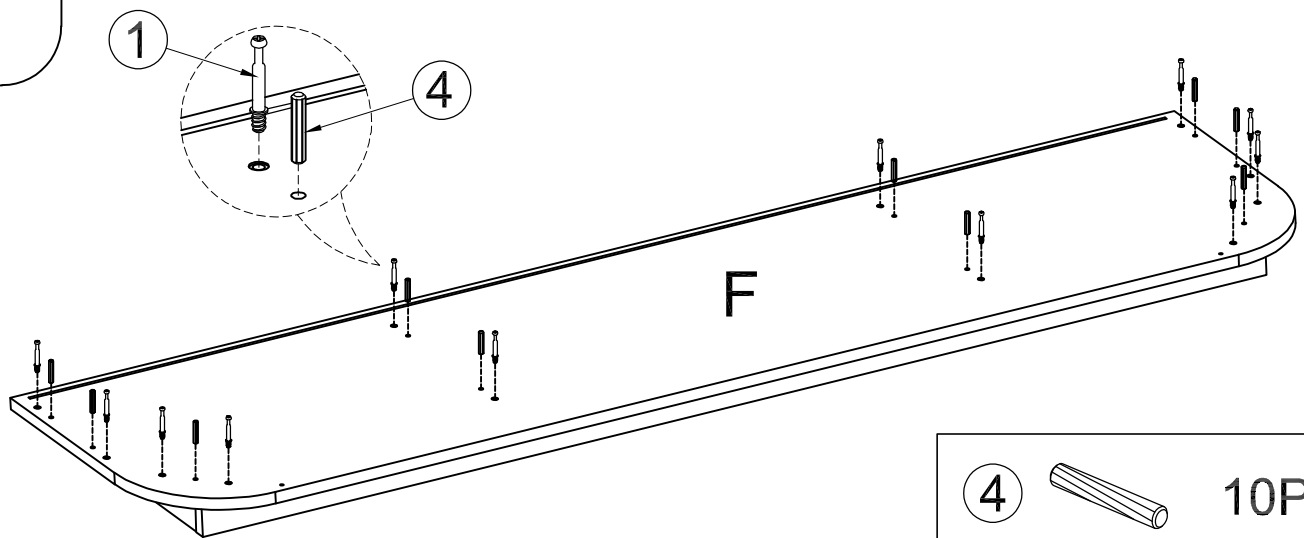

④ 10PCS

① 12PCS

 
6

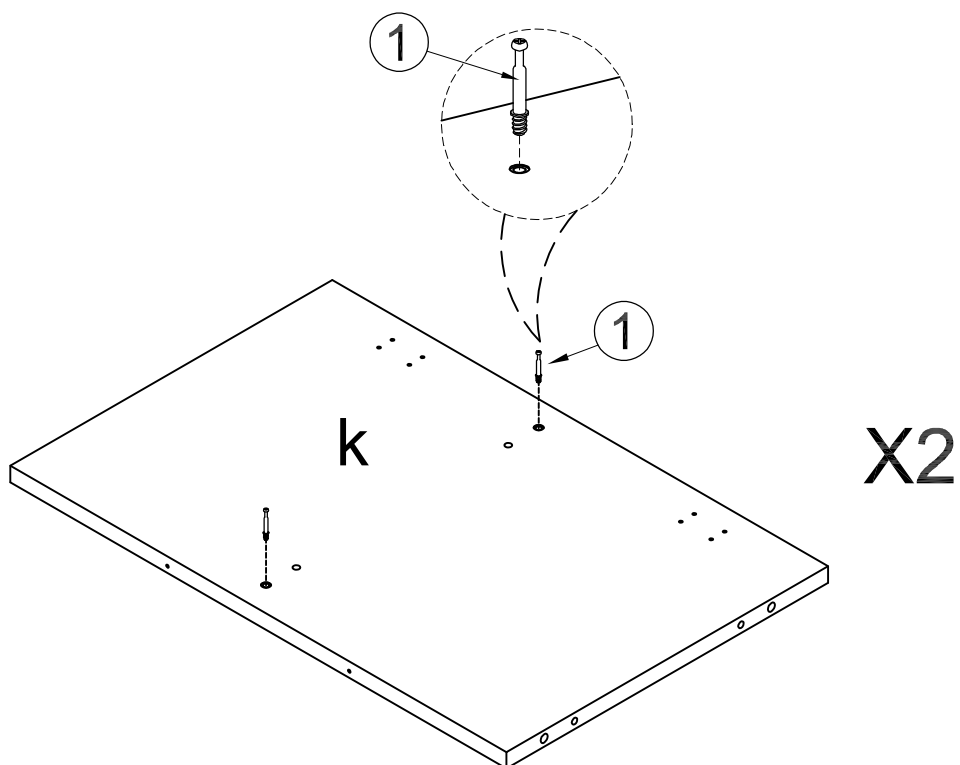


① 4PCS

Assemble steps

 7

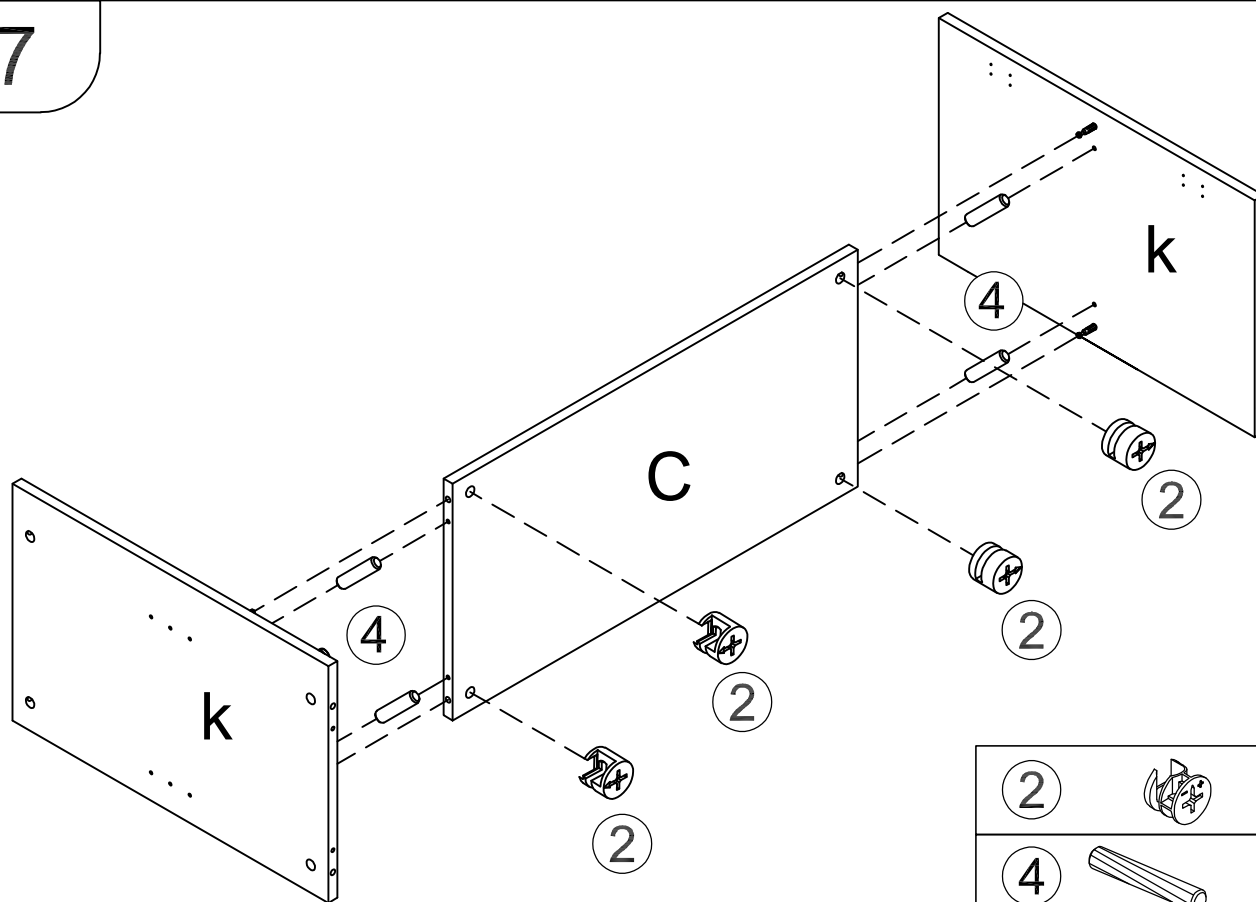


8

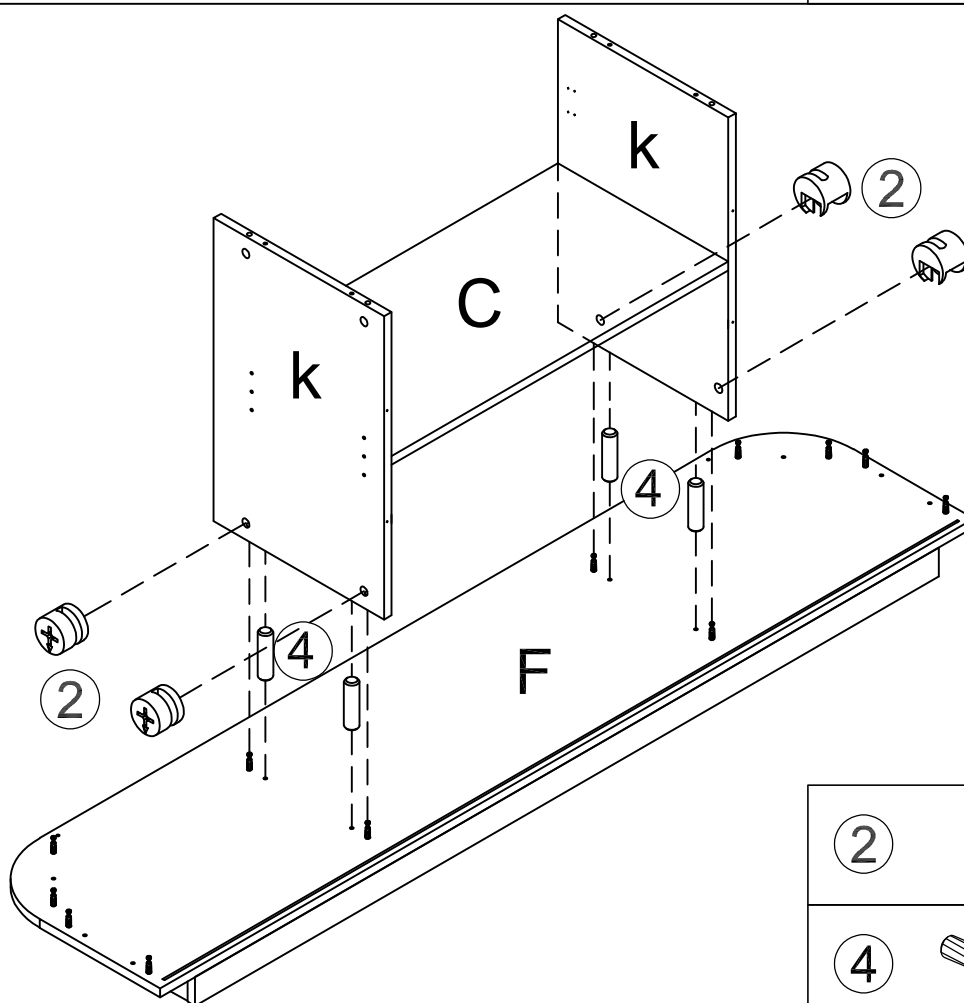 


Assemble steps

 9

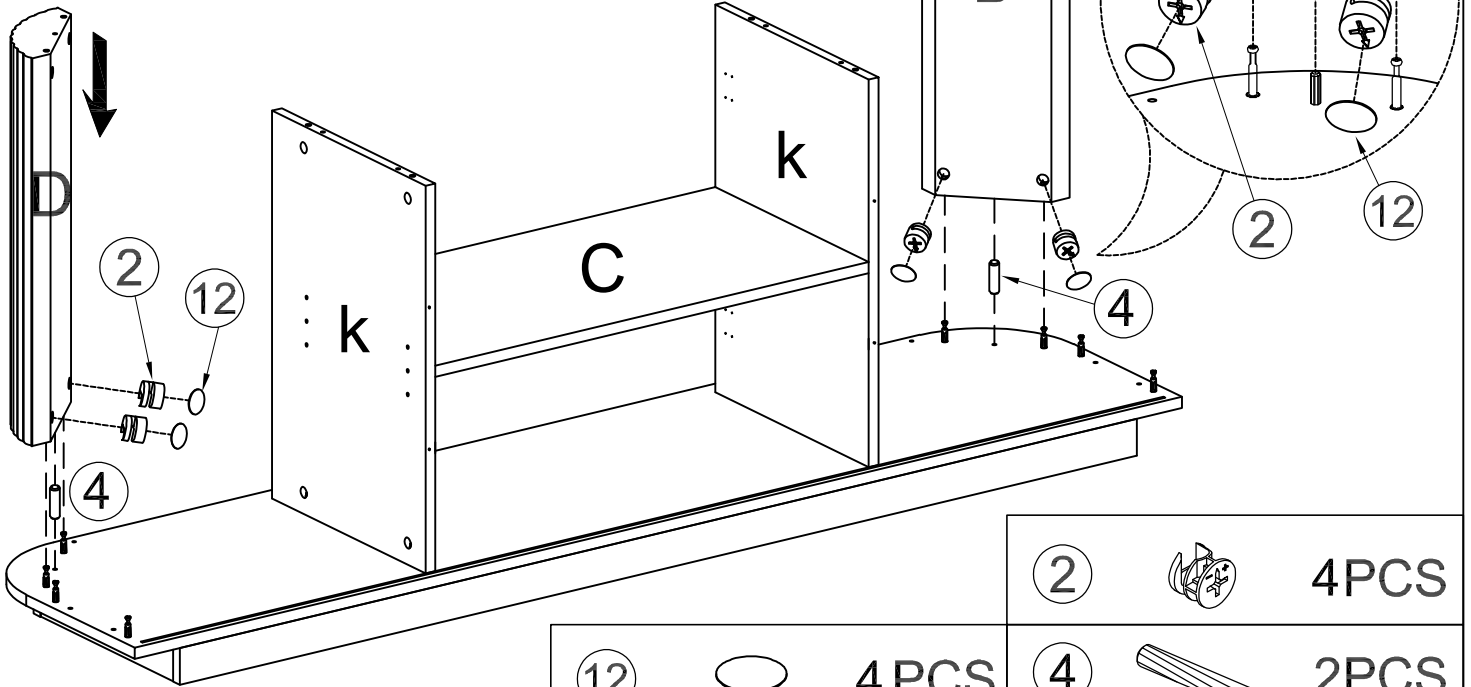


10

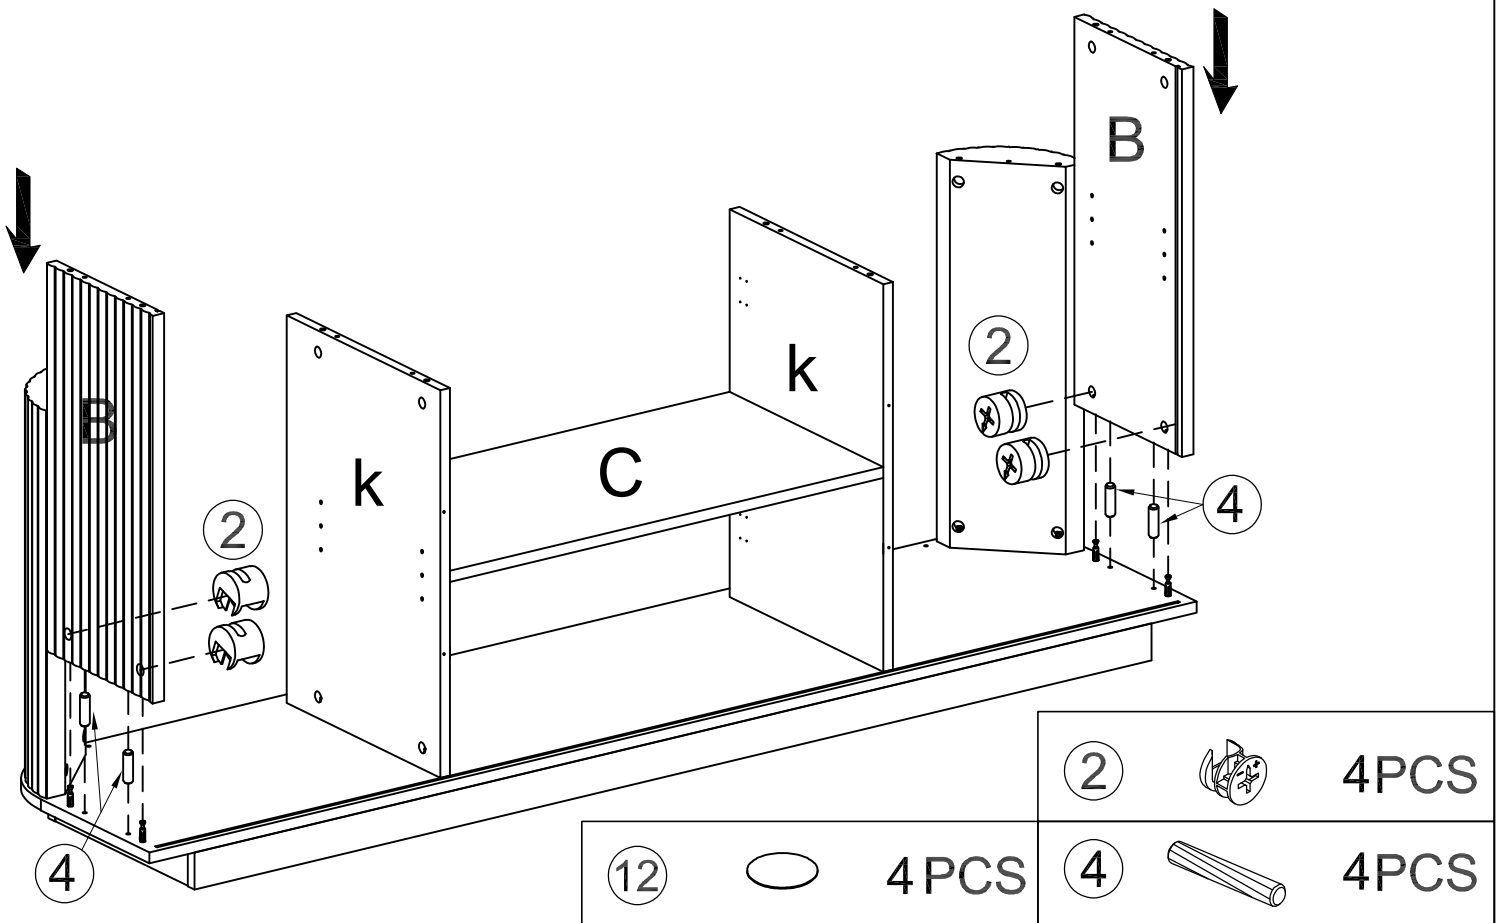 


Assemble steps

  11

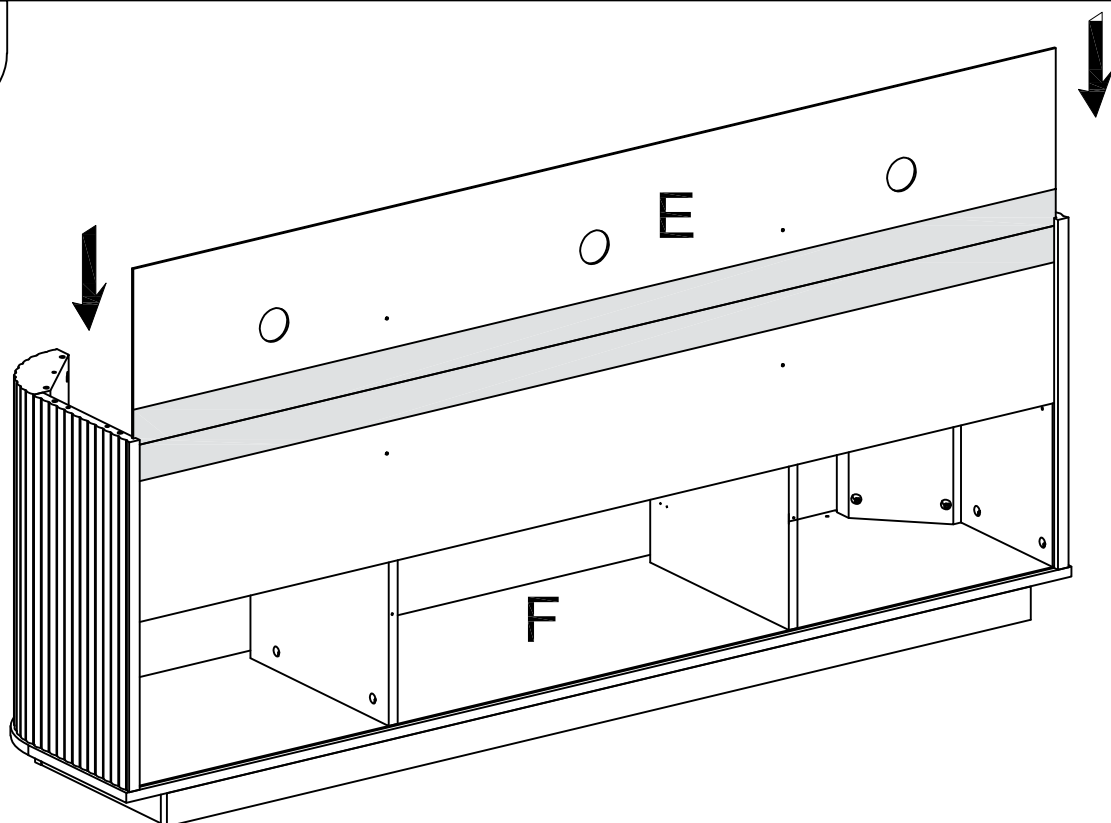


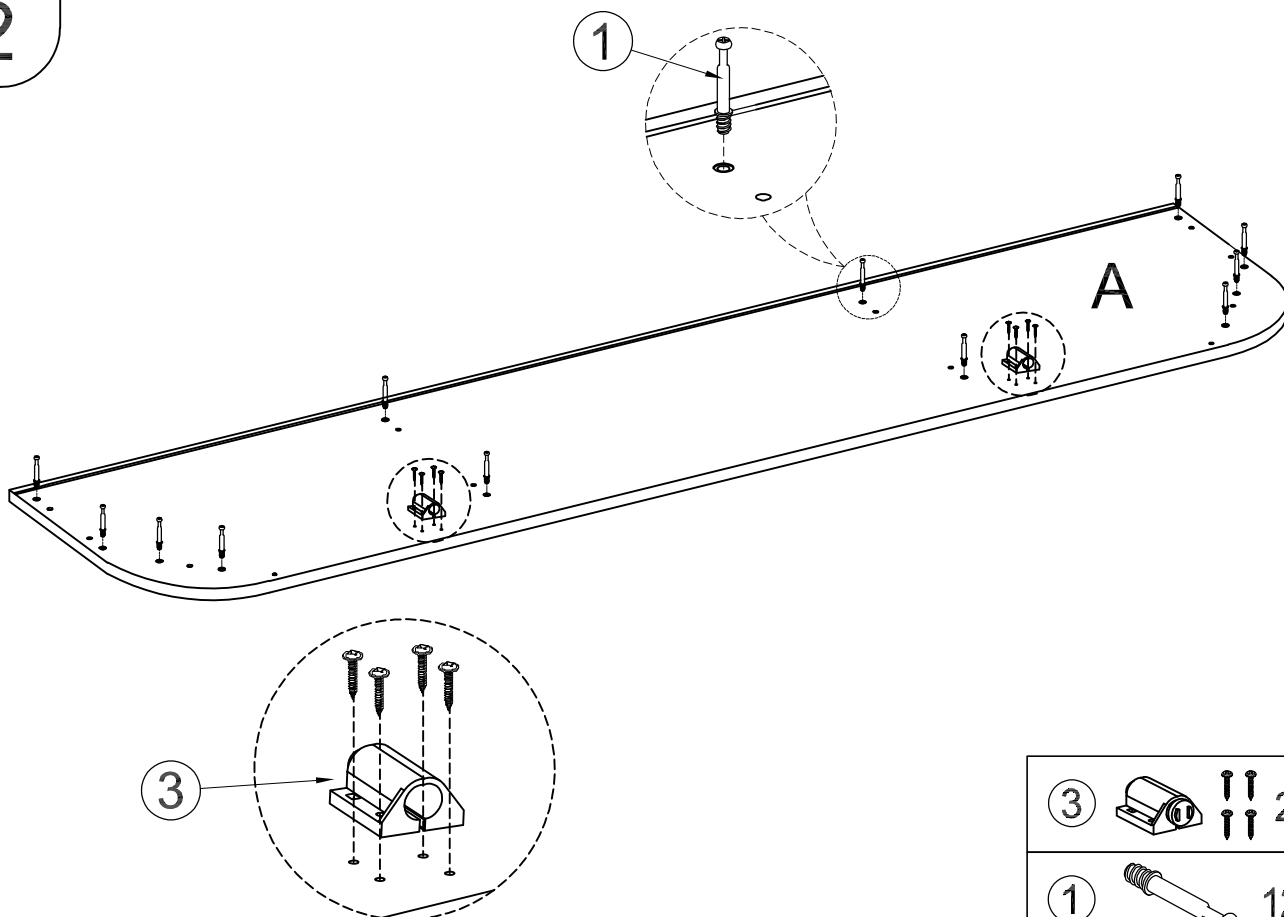


12



 
Assemble steps

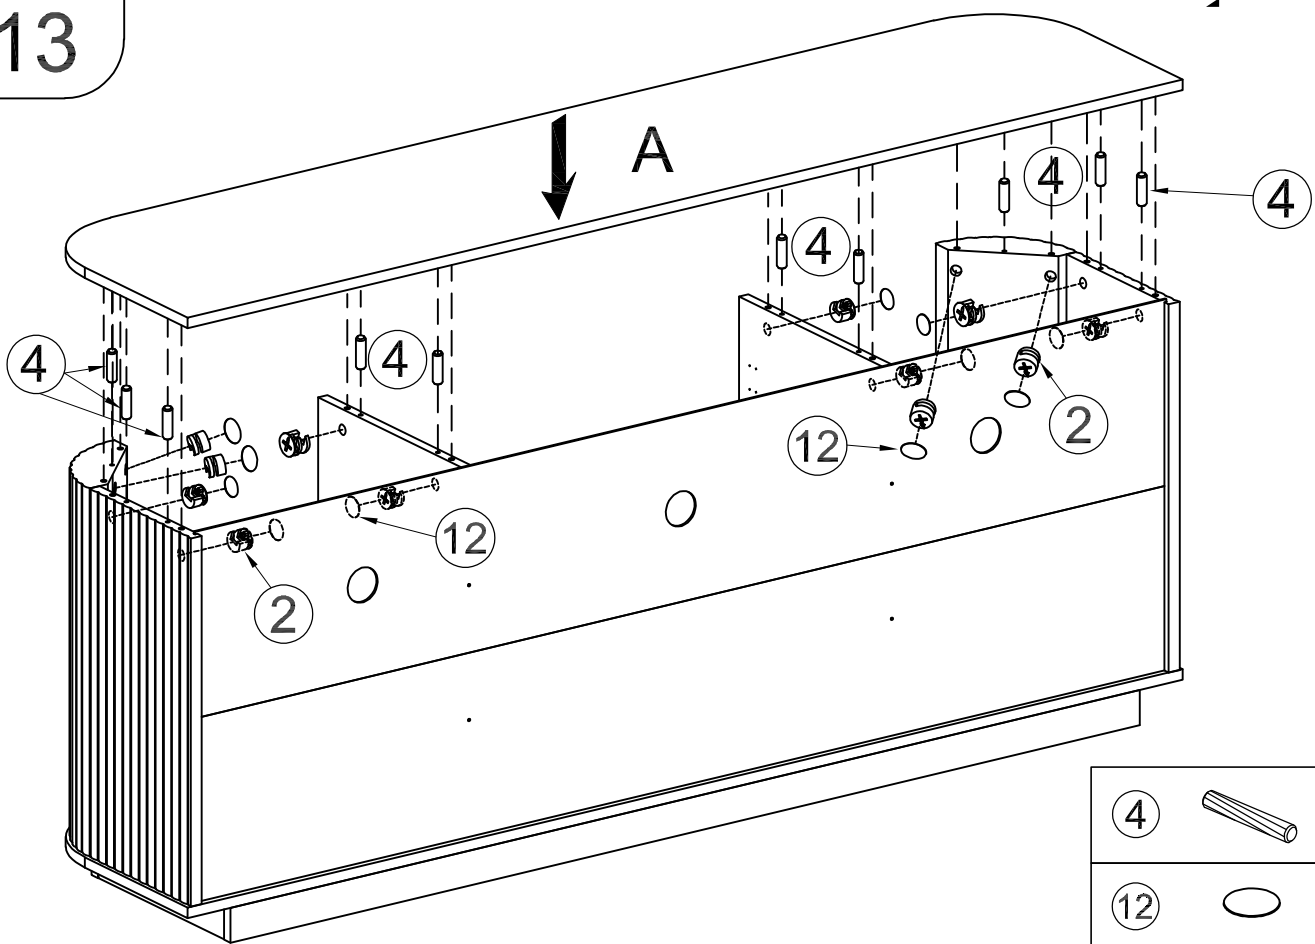

13



④		10PCS
⑫		12PCS
②		12PCS

  
14

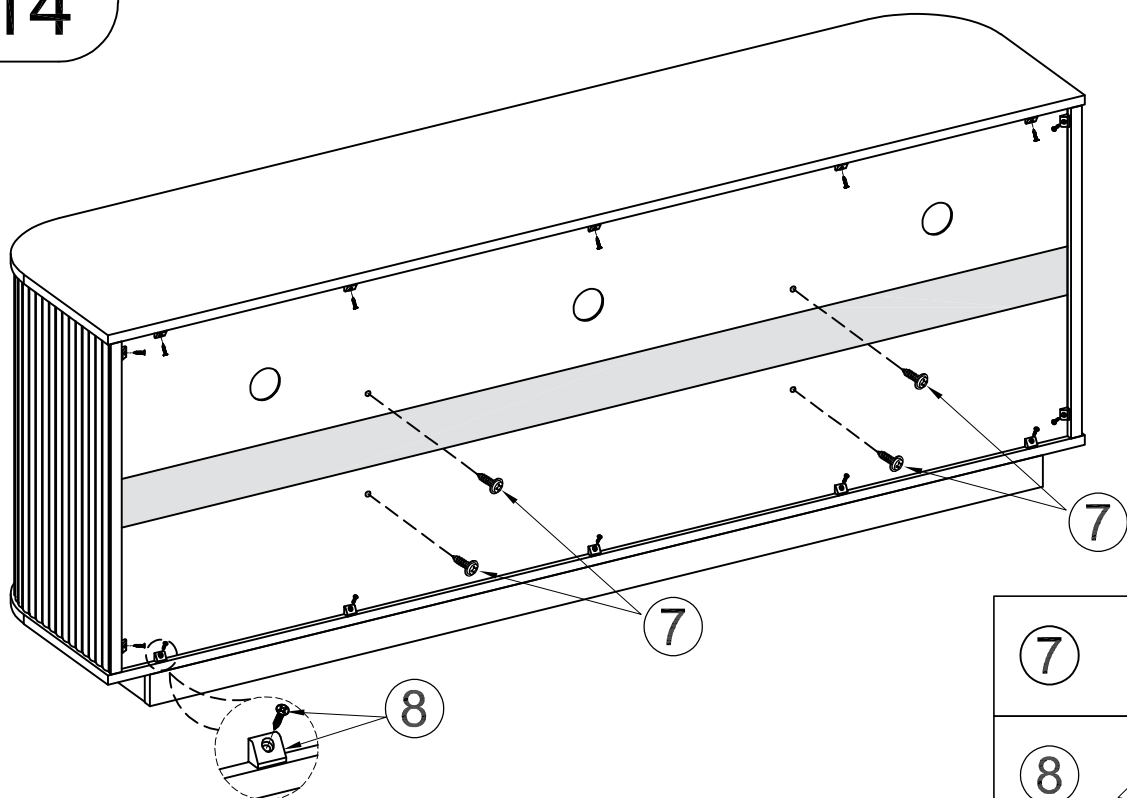


⑦		4PCS
⑧		14SET

Assemble steps

 
15

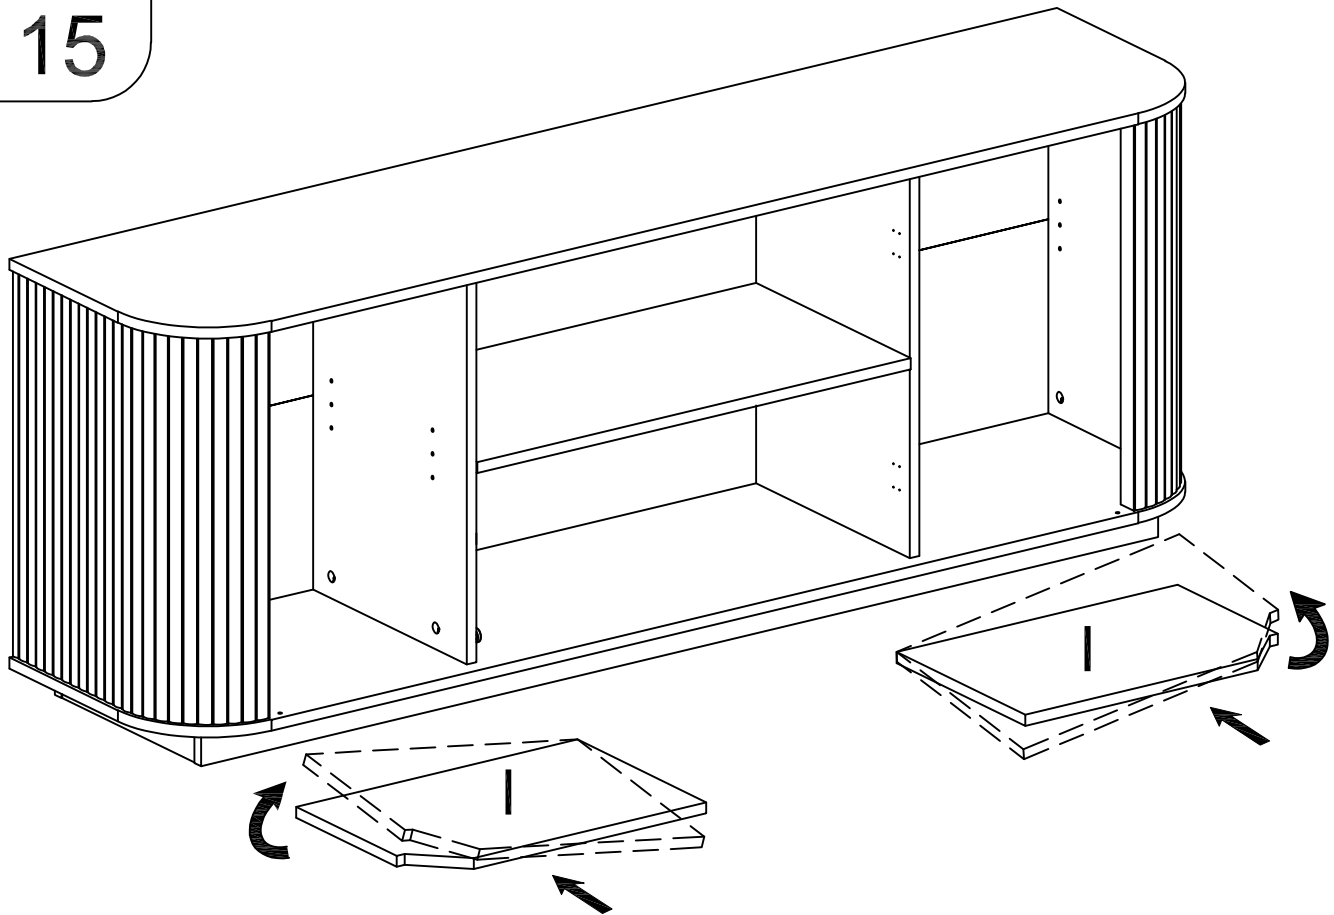

16

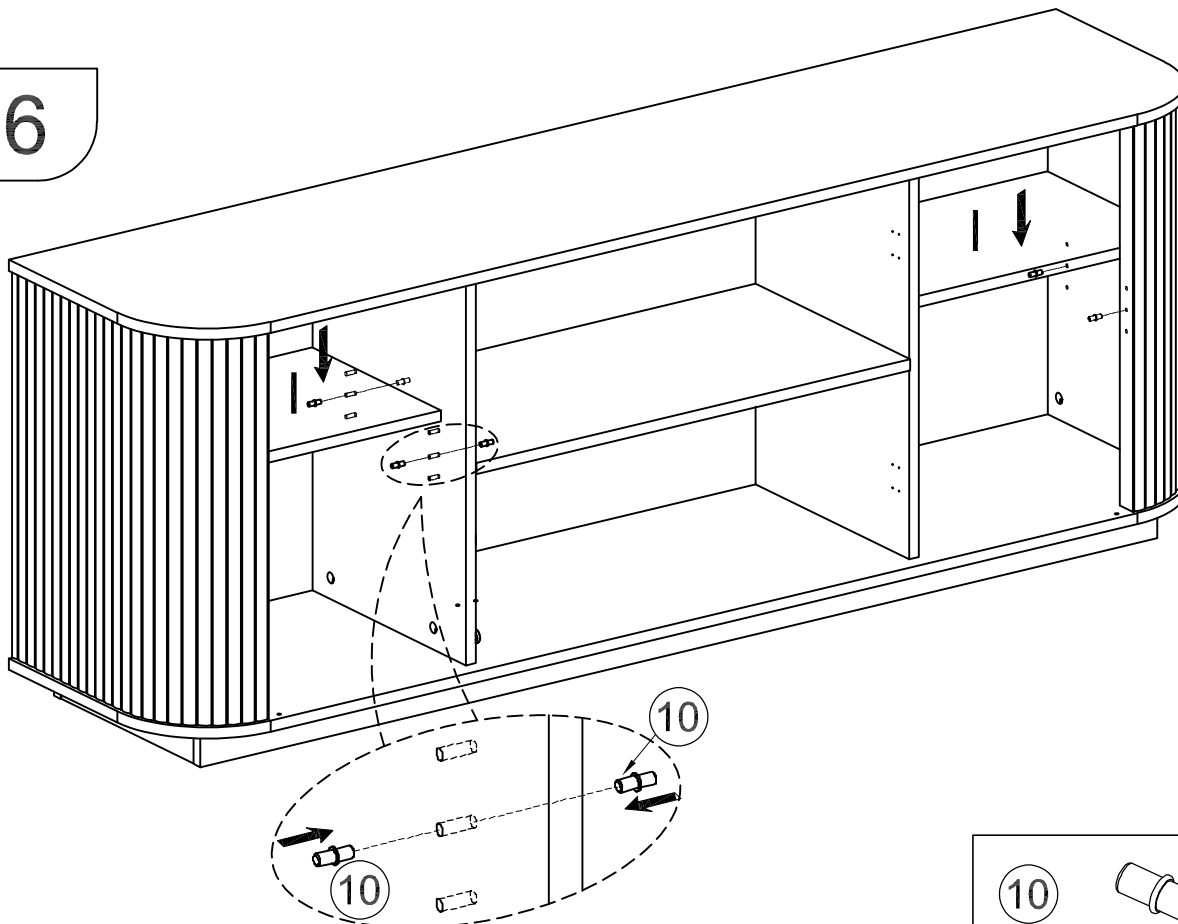 


10

 

8PCS


Assemble steps

 17

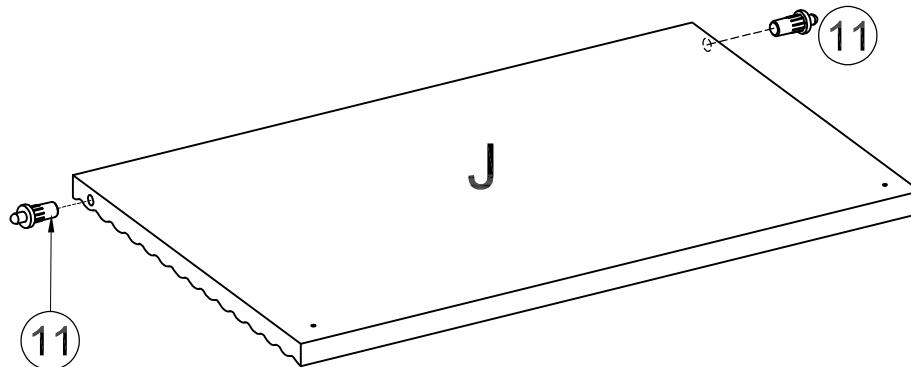


X2

 11



4PCS

 18

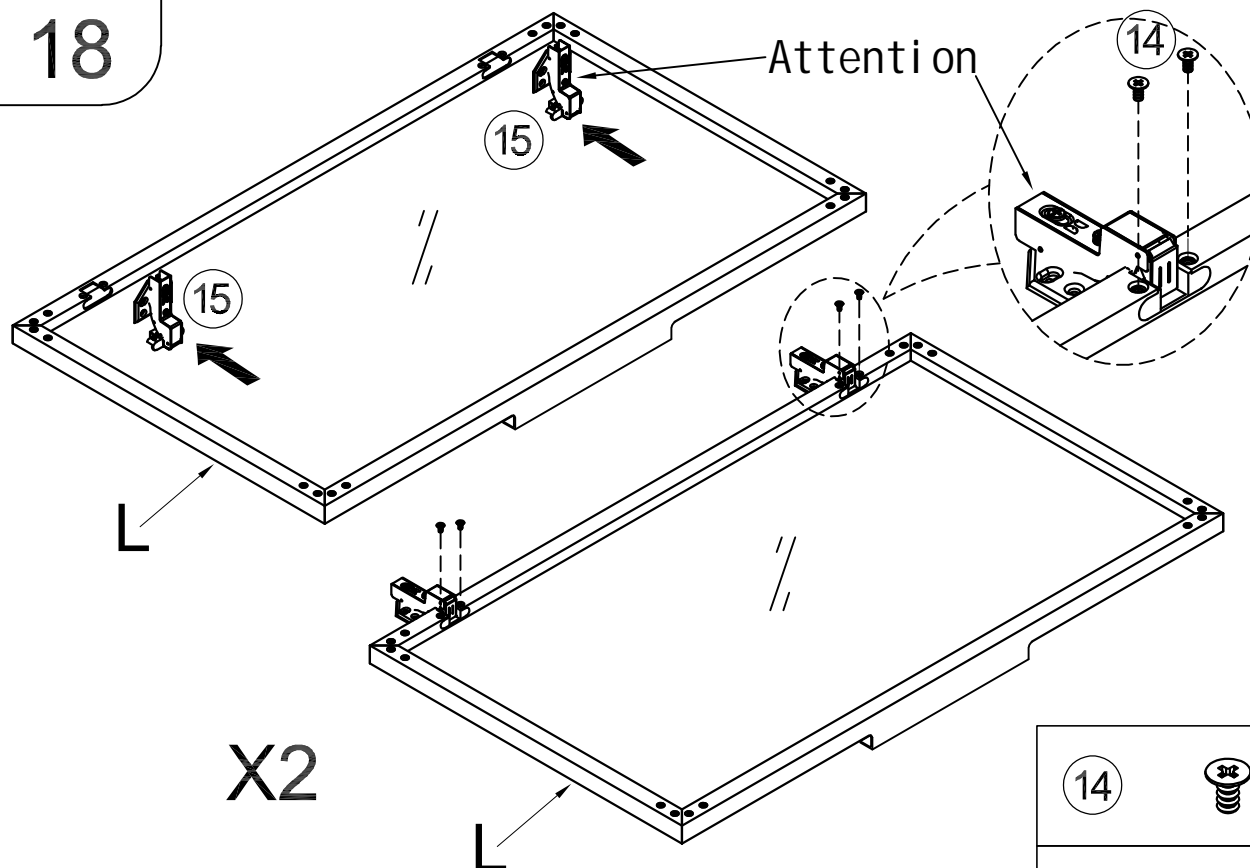

X2

14



8PCS

15



 
4PCS

Assemble steps


19



First, insert 11# part into the top plate hole
Then tilt the door, and insert the 11# part
into the bottom panel hole

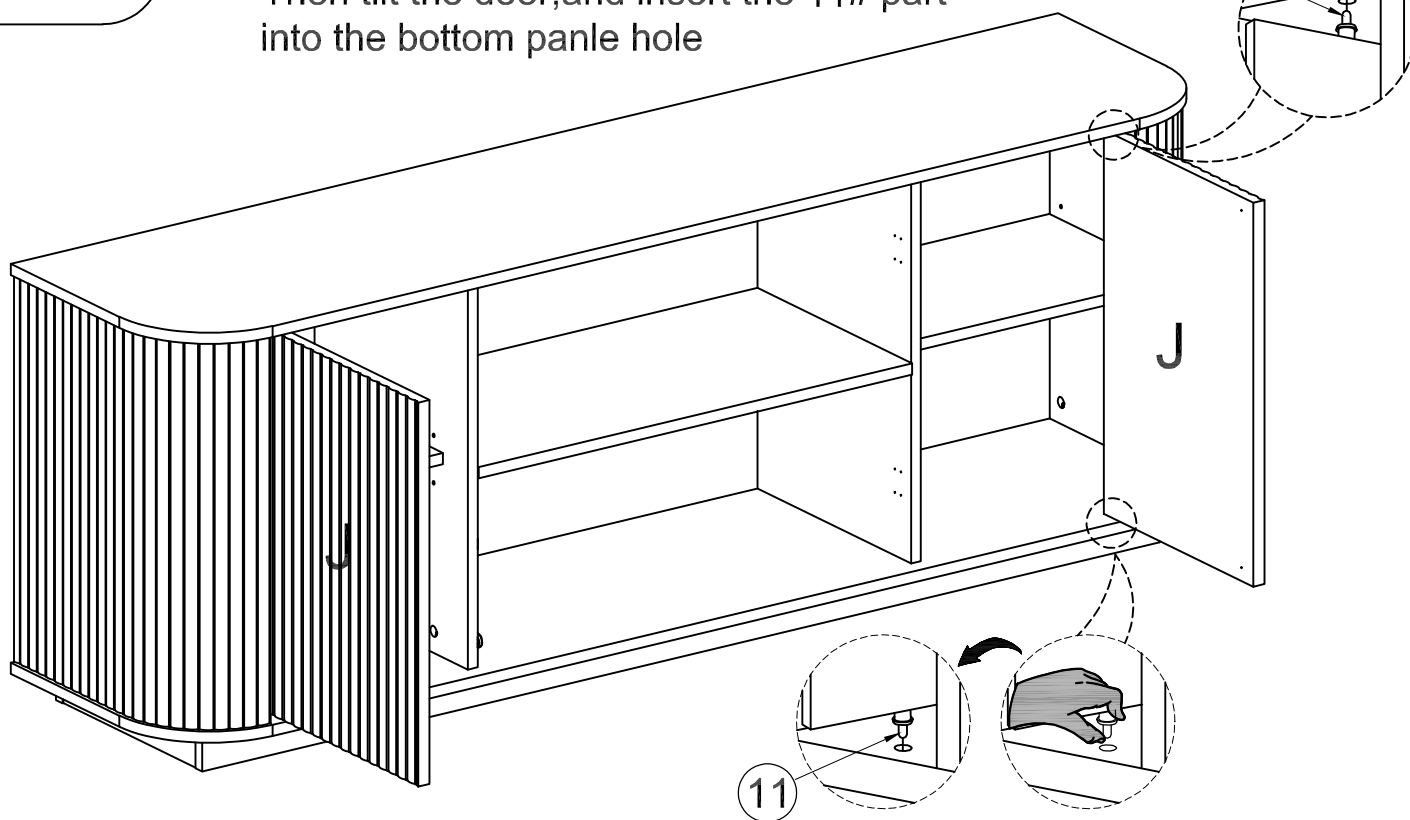

20

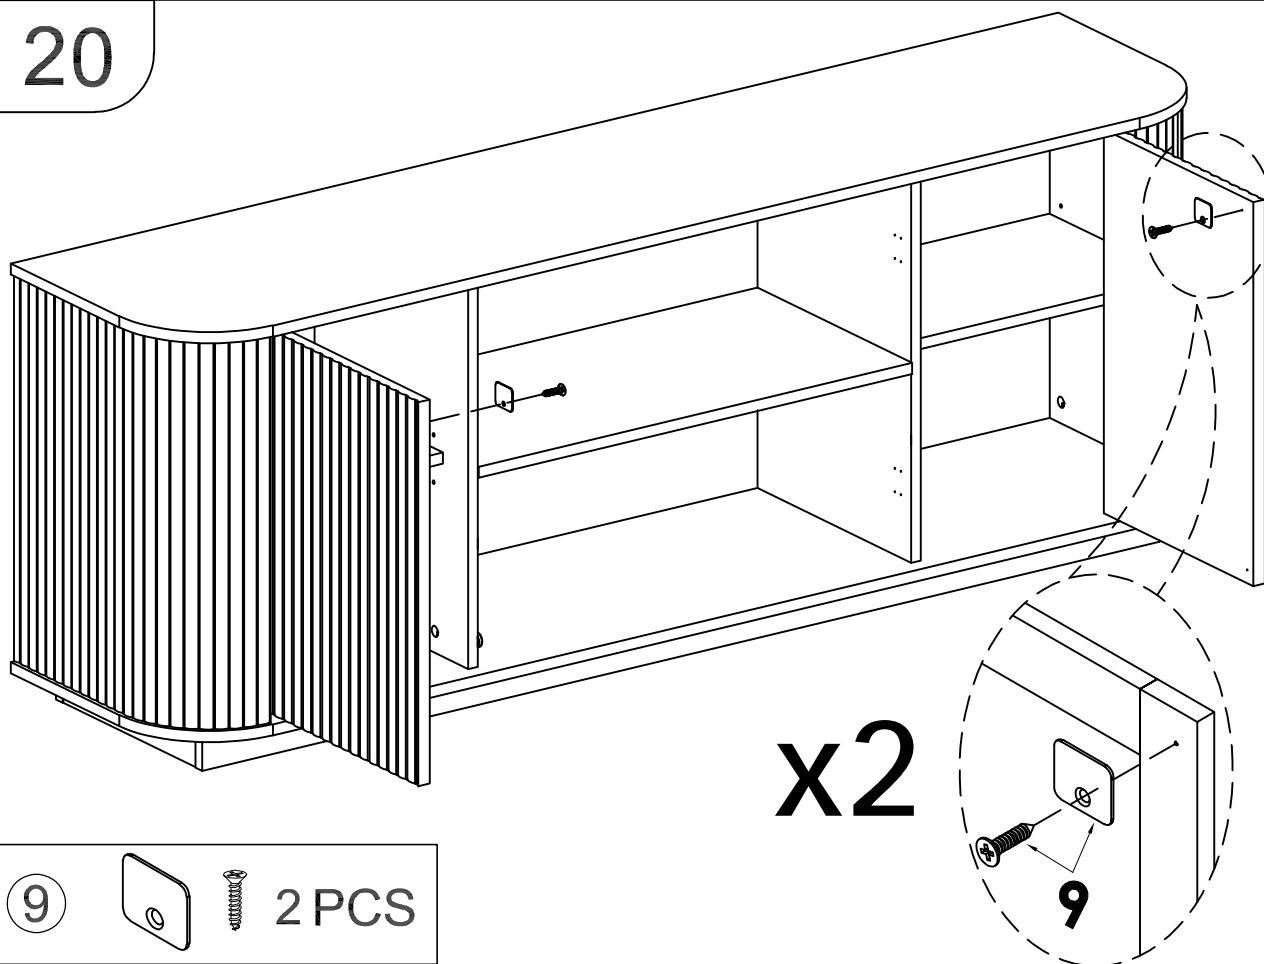 

9

 


2 PCS


9

Assemble steps

21

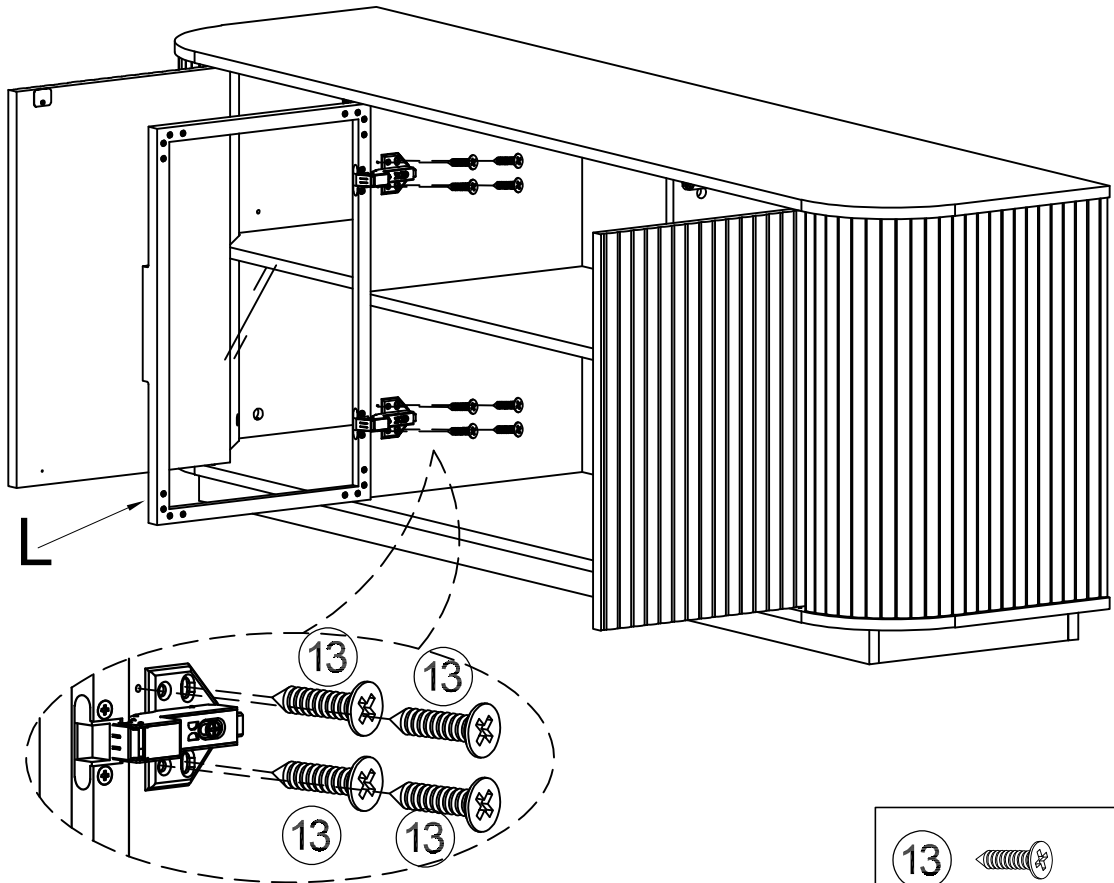


22

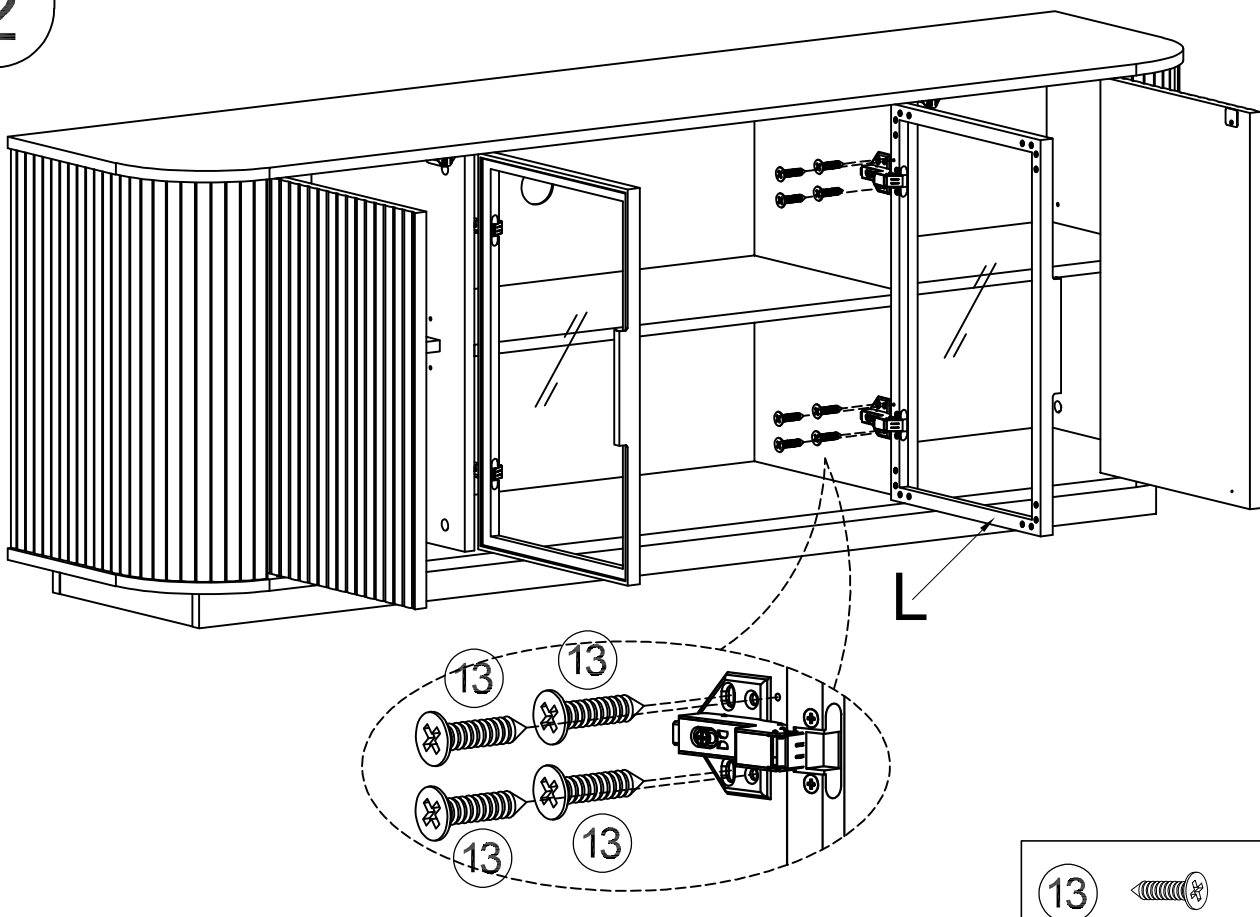 


Assemble steps

 23

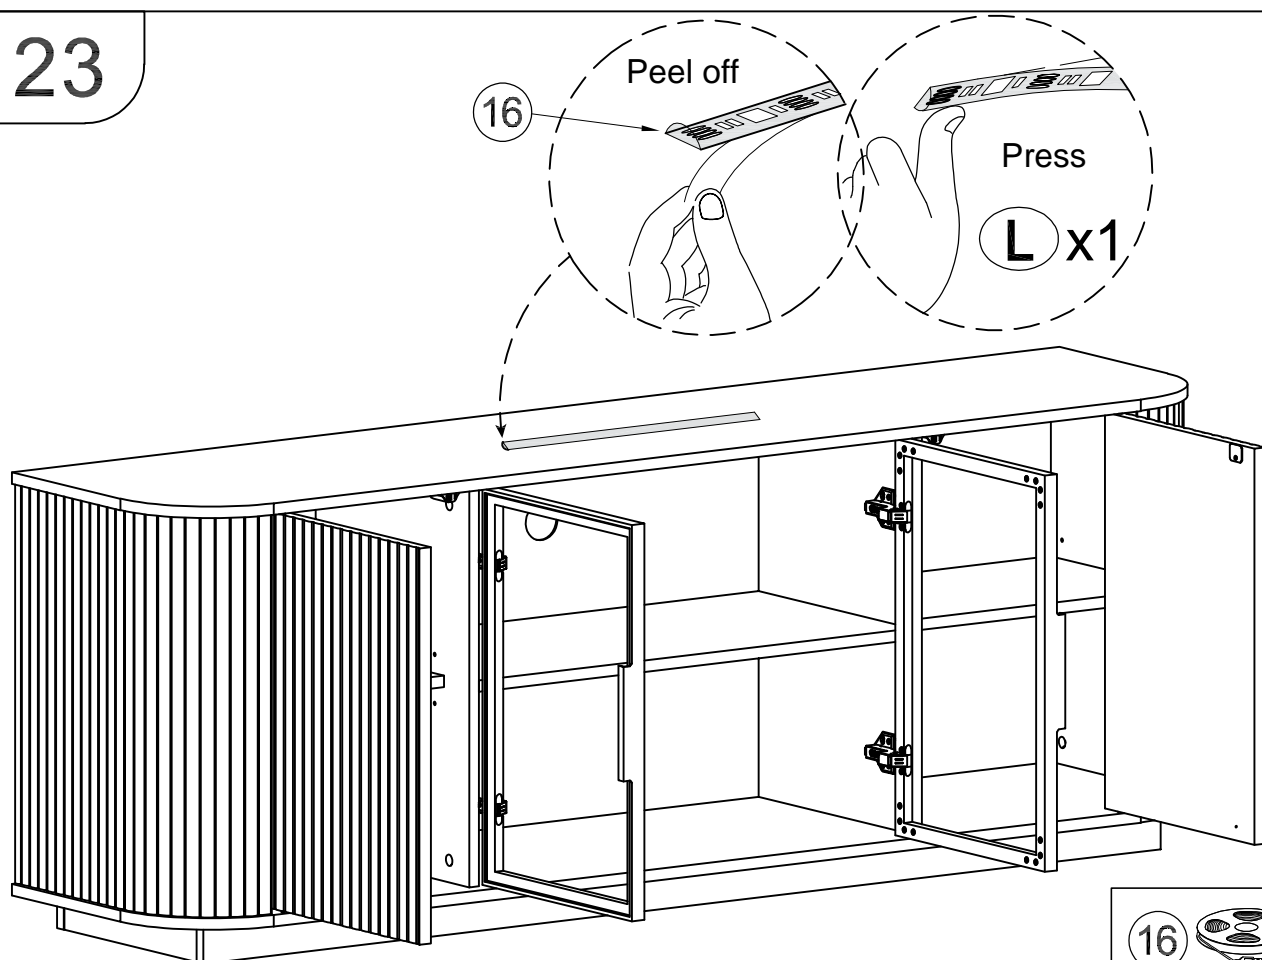

24

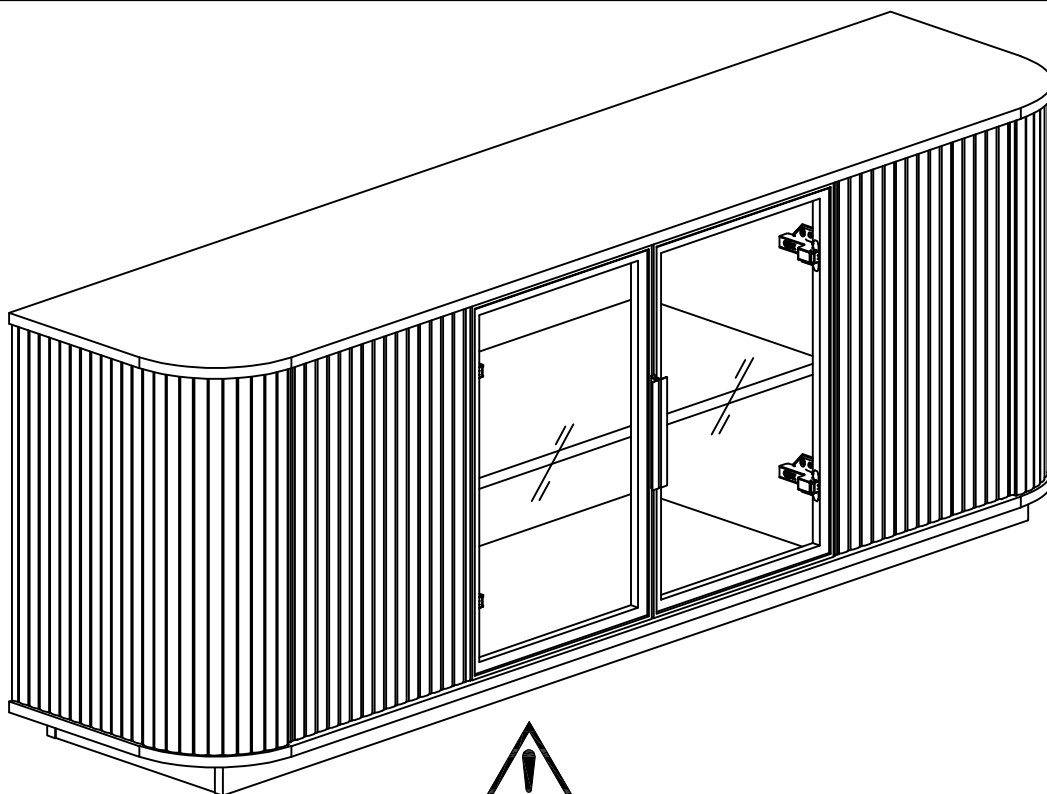 


NOTE: USE THE LEVELING FEET TO MAKE SURE FURNITURE IS LEVEL ON THE FLOOR BEFORE USING. LEVELING THE CABINET MAY AFFECT THE LEVEL OF THE DOORS. REMOVE ALL ITEMS FROM CABINET BEFORE ADJUSTING THE LEVELING FEET.


The ways to adjust the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.

 
Components Name

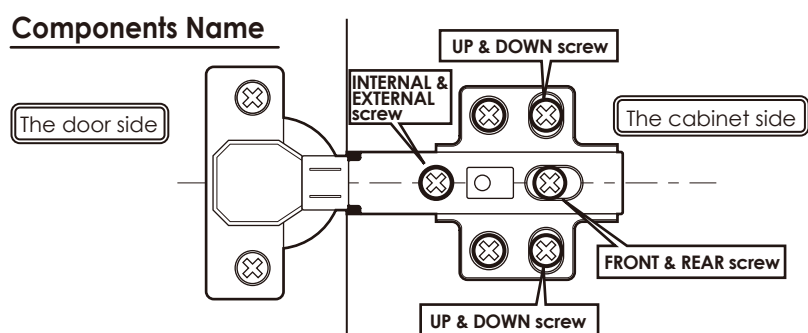

 Obvious gaps between doors or Doors don't look closed

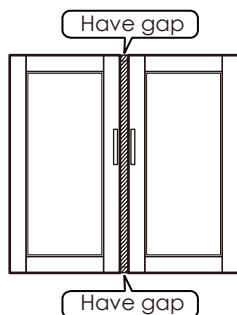


 - 1 Turn "internal & external screw" to the right can make the door approach inside. Please adjust the doors little by little.

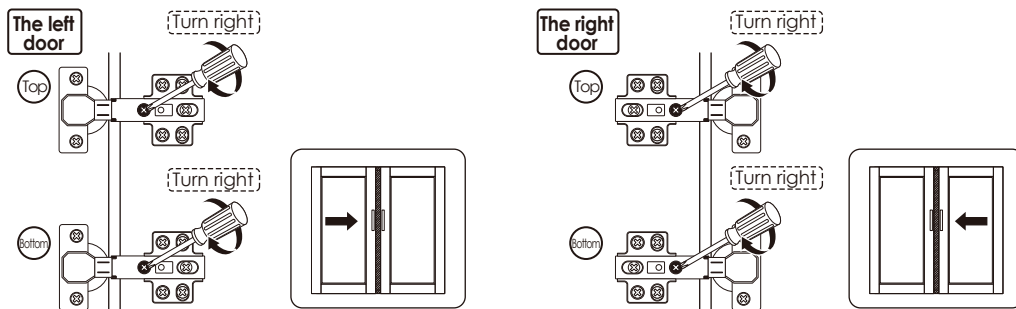


※ If the 2 doors are overlap, please turn the "internal & external screw" to the left.

 When door is crooked

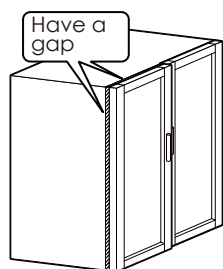


Please take the following steps to adjust first.

 - 1 Rotate the "front and rear screws" to the left

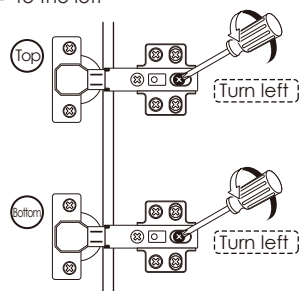


※ After adjusting the "front and rear screw", the door still does not change, please turn the "internal & external screw" to the right slightly.

 
- 2 Push the door to the cabinet

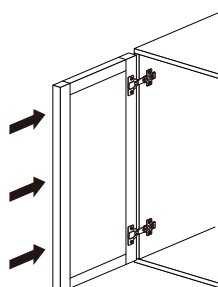

 
- 3 Rotate the "front and rear screws" to the right

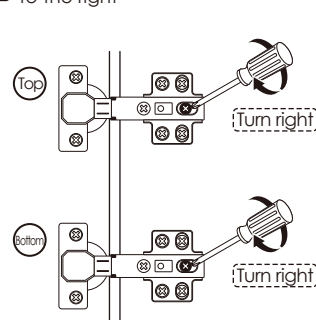


When door is leaning

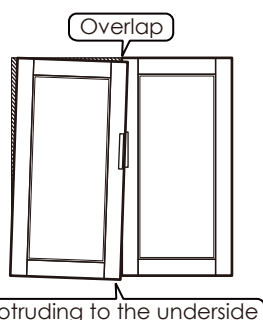 

 
- 1 Turn "internal & external screw" to the left can make the top of the door tilted outward.

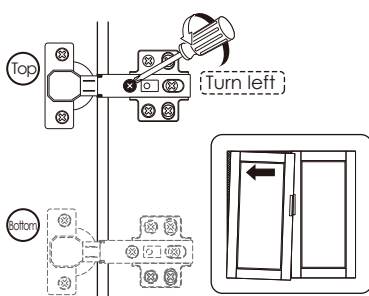


Protruding to the upside

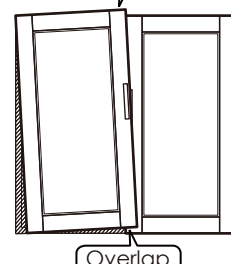 

 
- 1 Turn "internal & external screw" to the left can make the bottom of the door tilted outward.

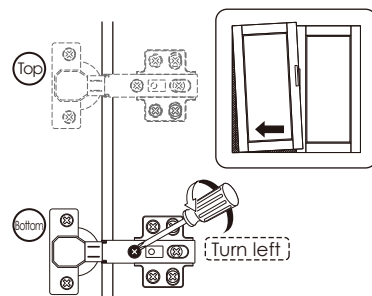


When the door is higher on top

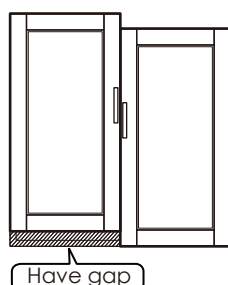 


- 1 Turn "up & down screw" to the left

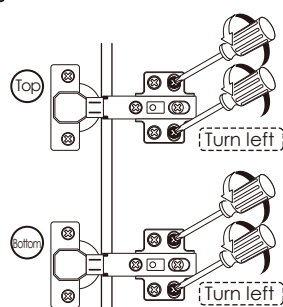 

 - 2 Lower the door's height so that 2 doors are of the same height.

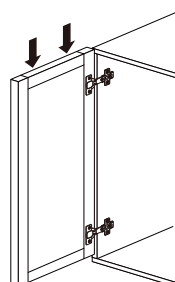

- 3 Turn "up & down screw" to the right

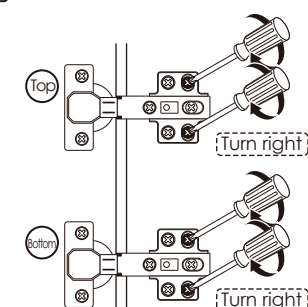 

※ If the door is lower on bottom, please lift up the left door slightly on step 2