 


# TV STAND

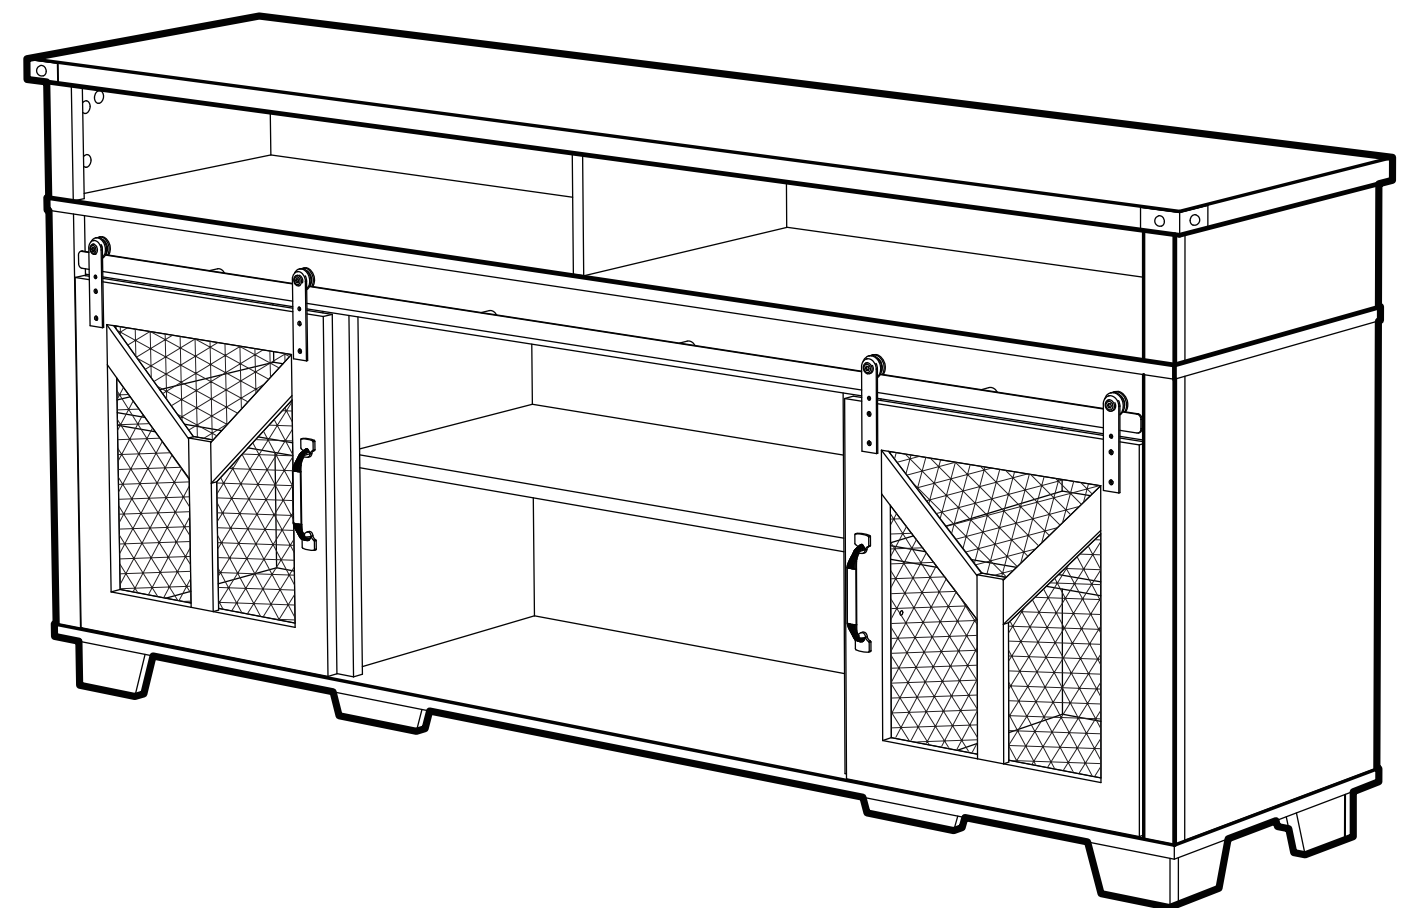

 
 
**SKU:250031 / 250032**  
**Assembly Instructions**





## WARNING

Children have died from furniture tip-over. To reduce the risk of furniture tip-over:



- ALWAYS install tip-over restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawer.

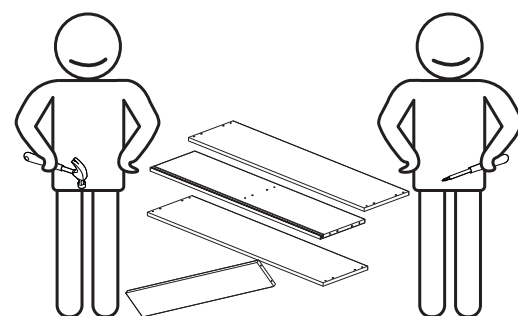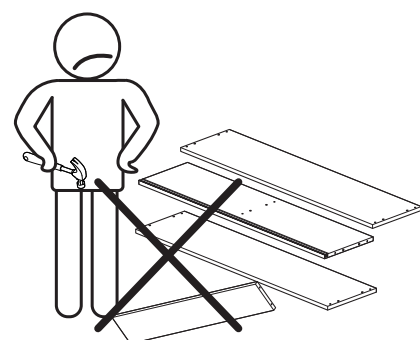

  
We recommend at least 2 people for the assembly.

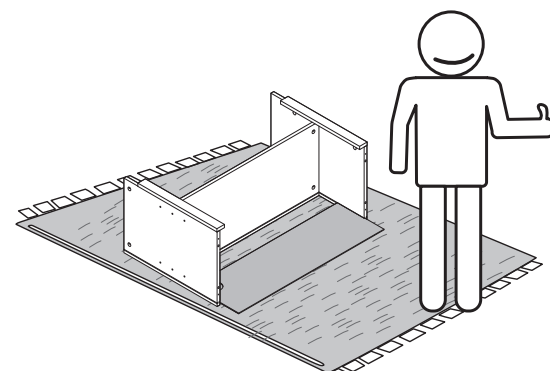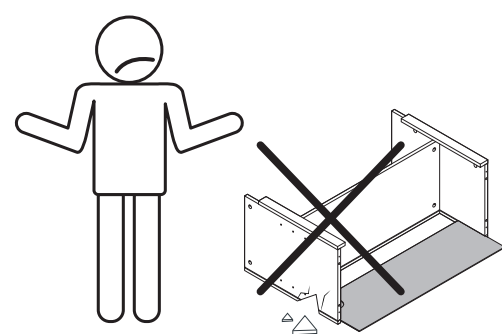

   To prevent any damage during assembly, place a mat under the pieces.

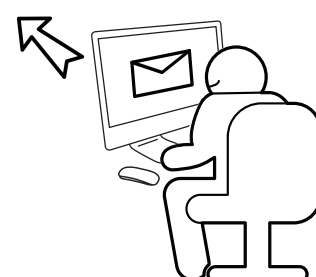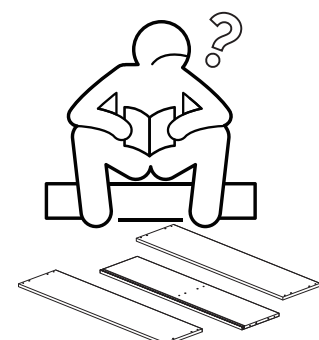

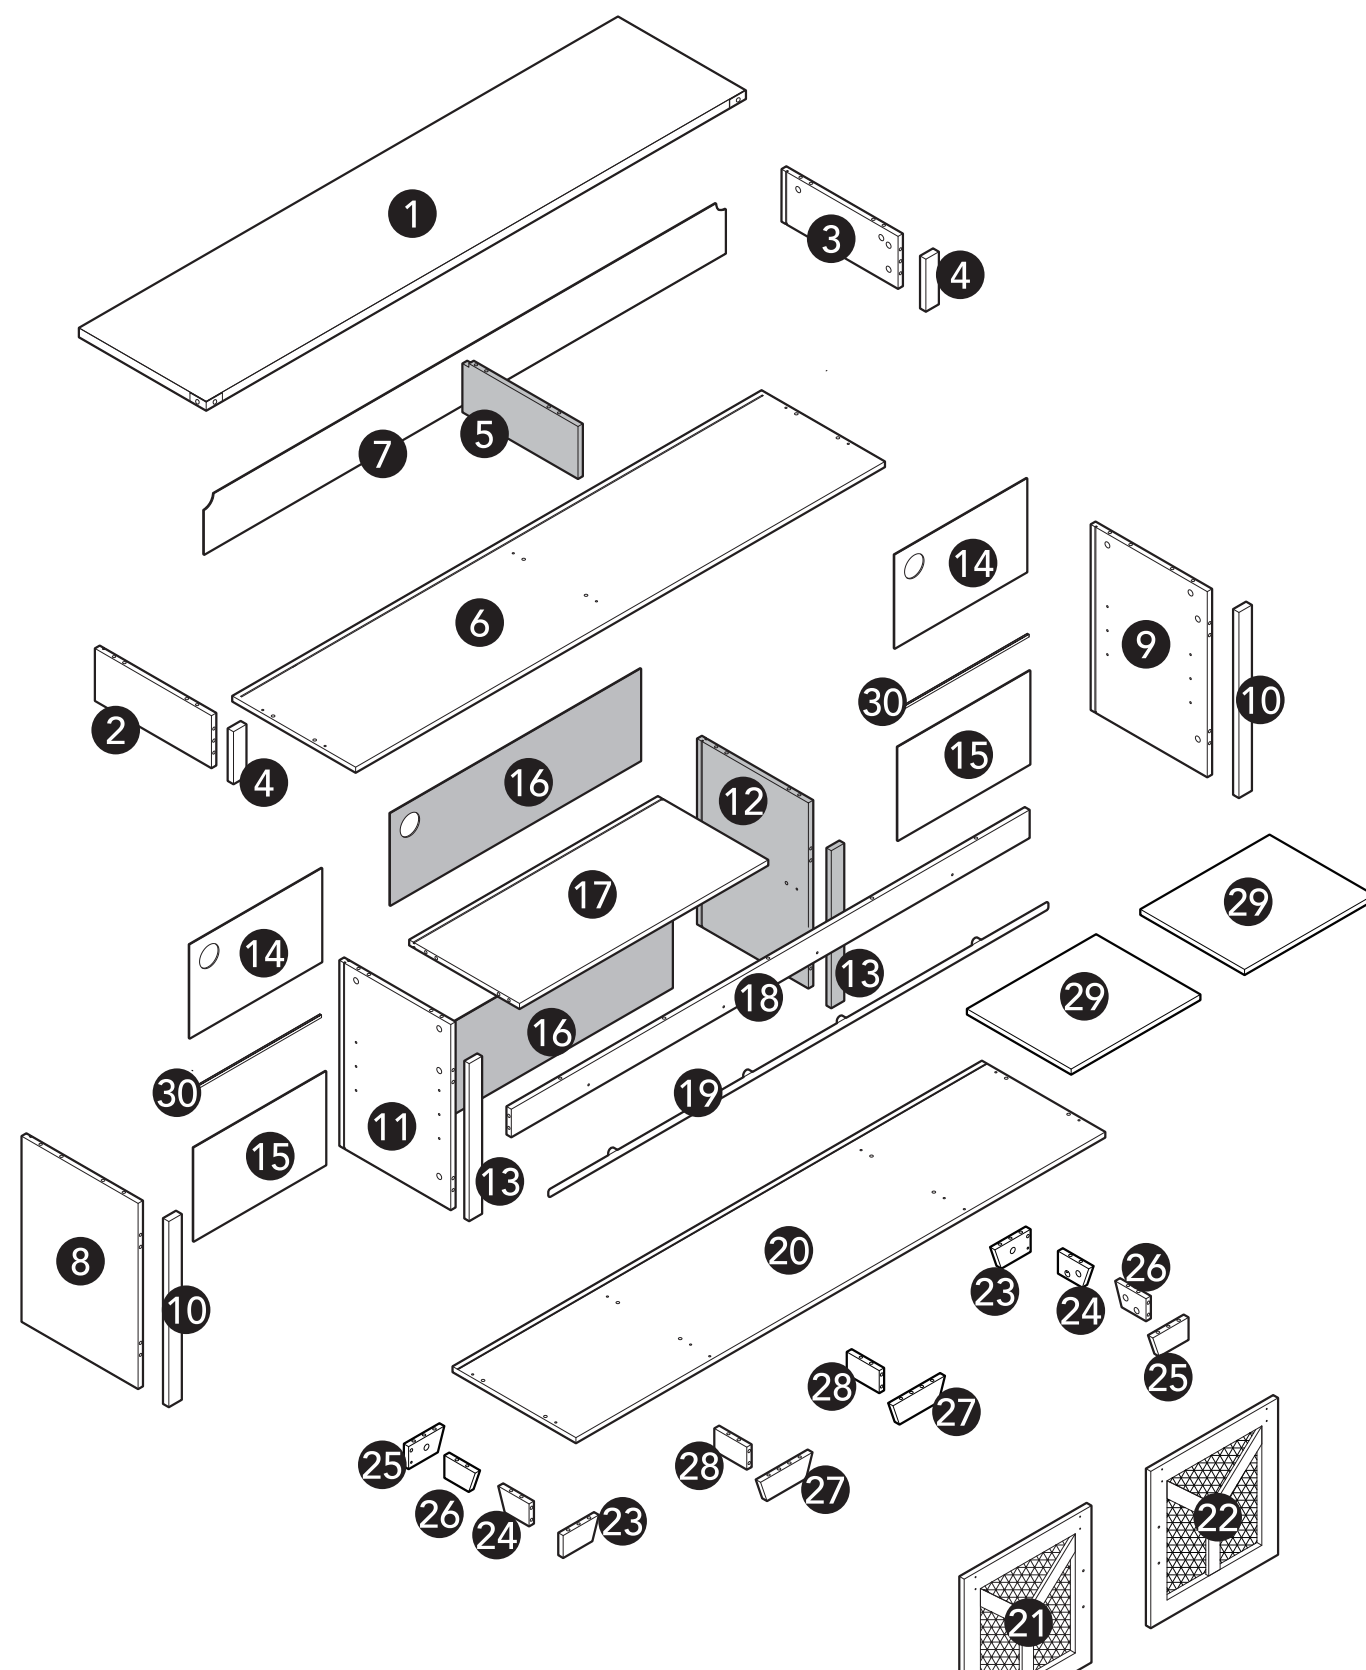

 

 




 
 



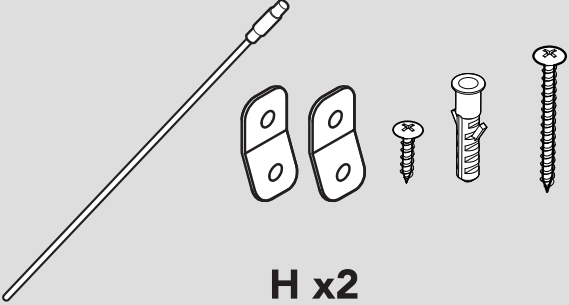 

 


# PARTS DIAGRAM




# HARDWARE KIT

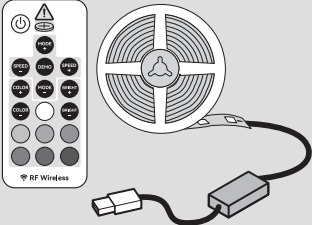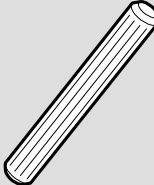 
 The plus numbers are the additional parts provided in case of missing or damaged ones.

 <b>A x53+3</b>	 <b>B x53+3</b>	 $\phi 8 \times 30\text{mm}$ <b>C x60+3</b>	 M4*35mm <b>D x14+2</b>
 <b>E x4</b>	 M6*20mm <b>F x4</b>	 <b>G x24+3</b>	 M3*16mm <b>I x24+3</b>
 <b>J x2</b>	 M4*20mm <b>K x4</b>	 <b>L x2</b>	 <b>M x1</b>
 $\phi 8 \times 50\text{mm}$ <b>N x4</b>	 M4*12mm <b>O x4</b>	 M4*14mm <b>P x8+1</b>	 <b>Q x8+1</b>
 <b>H x2</b>		 <b>R x26+3</b>	 M4 <b>S x1</b>


# CAM LOCK FASTEN SYSTEM

 Insert the cam bolt into the hole, then insert the cam lock and tighten.


1

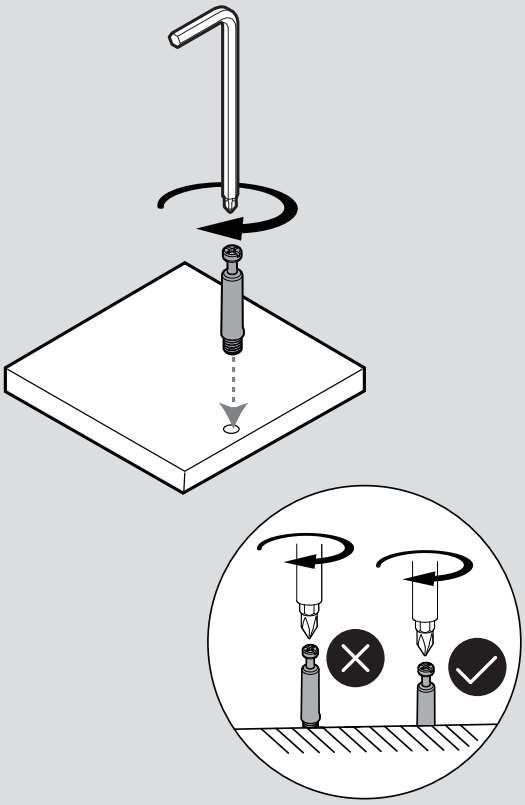


2

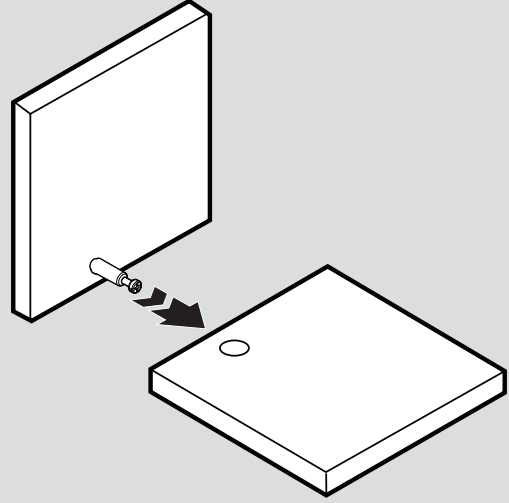 


3

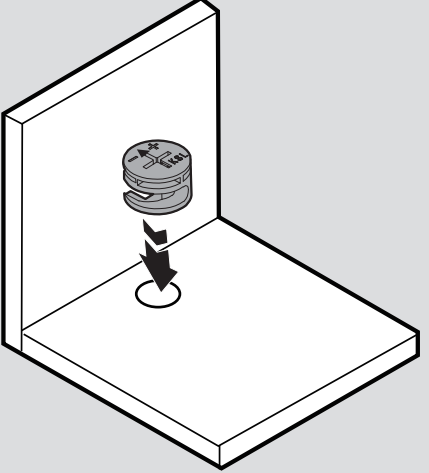 

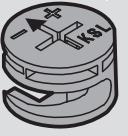 

Point the opening towards the edge of the board.

 4

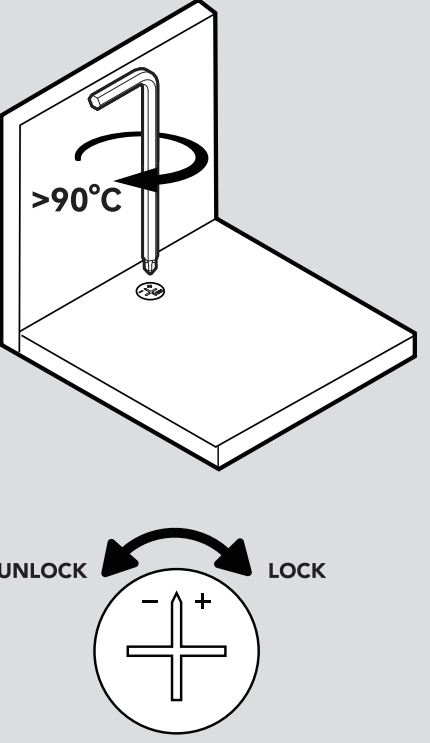


UNLOCK


LOCK

# ASSEMBLY

 
01 A x8

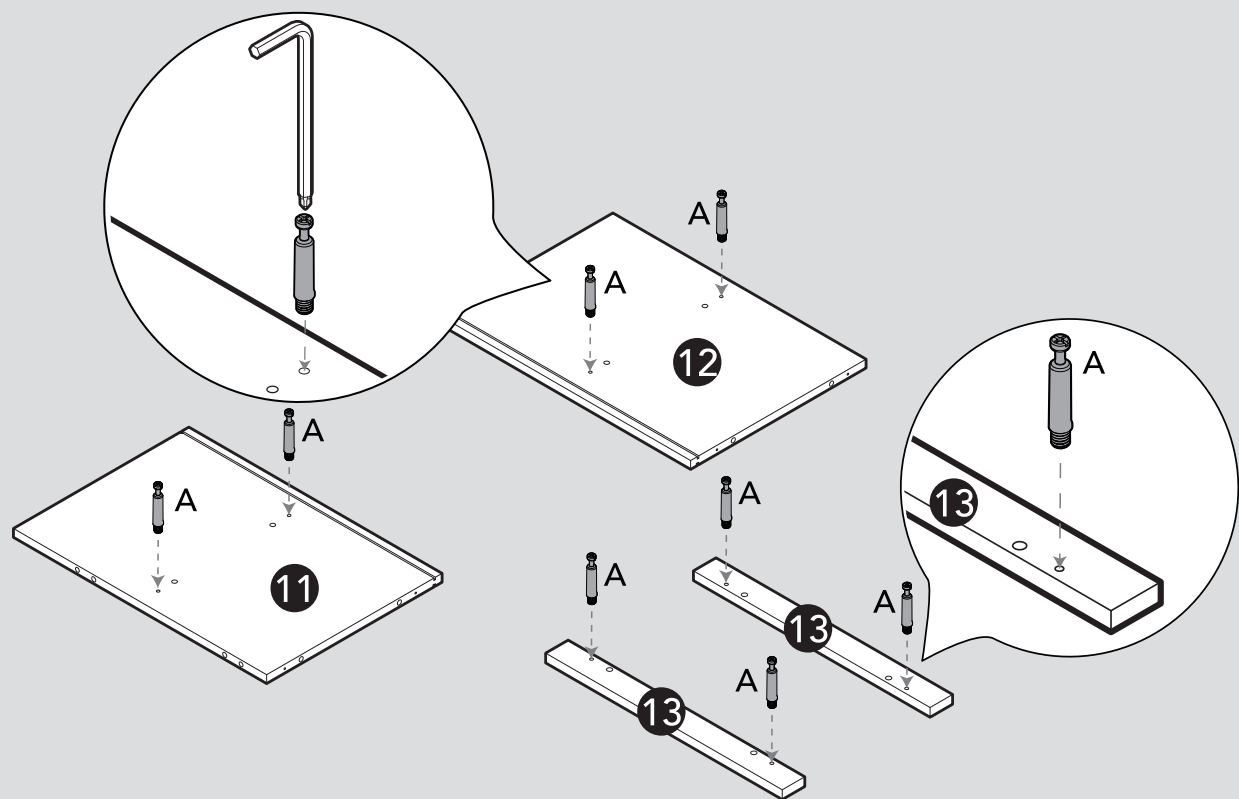


02 B x4 C x4

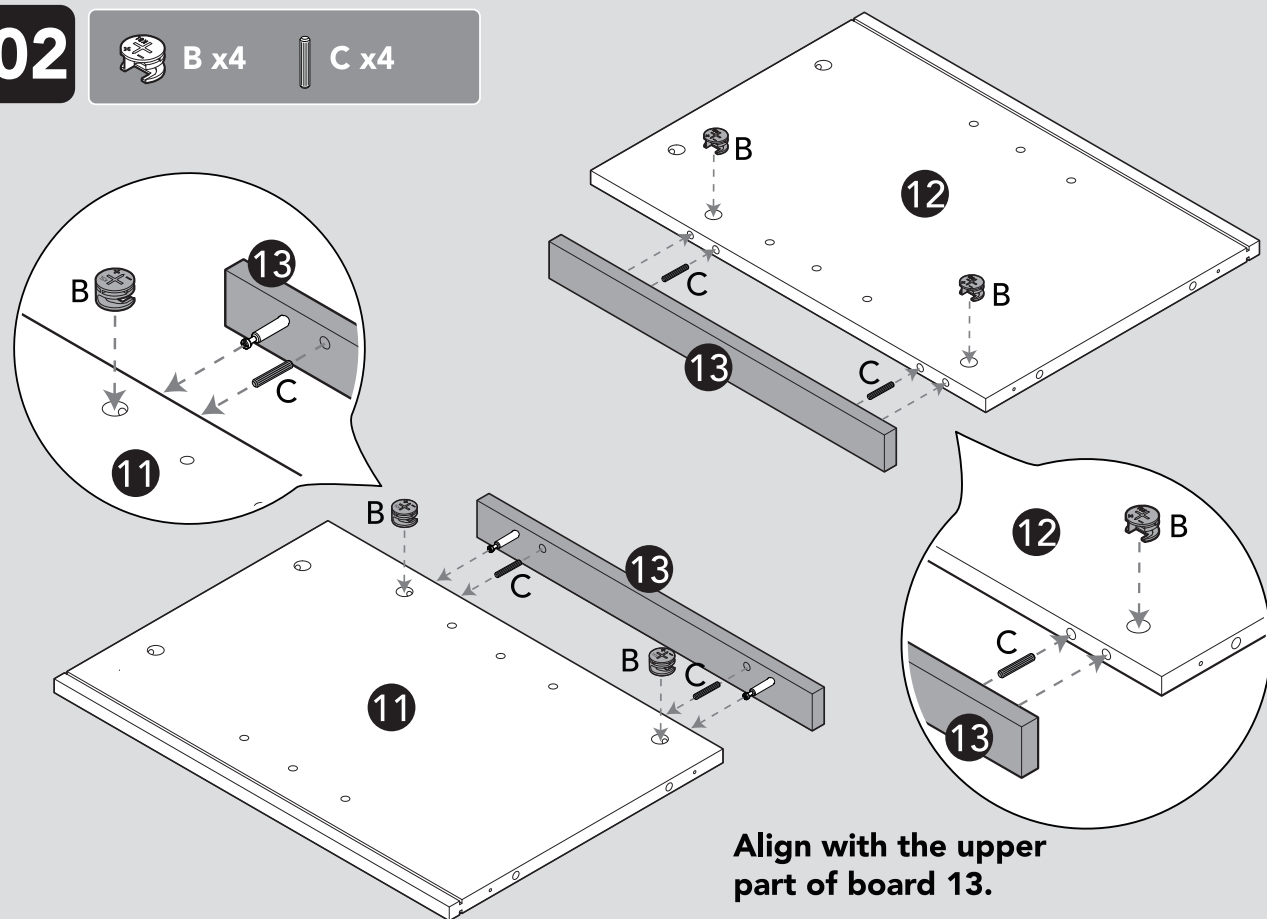 

03 B x4 C x4

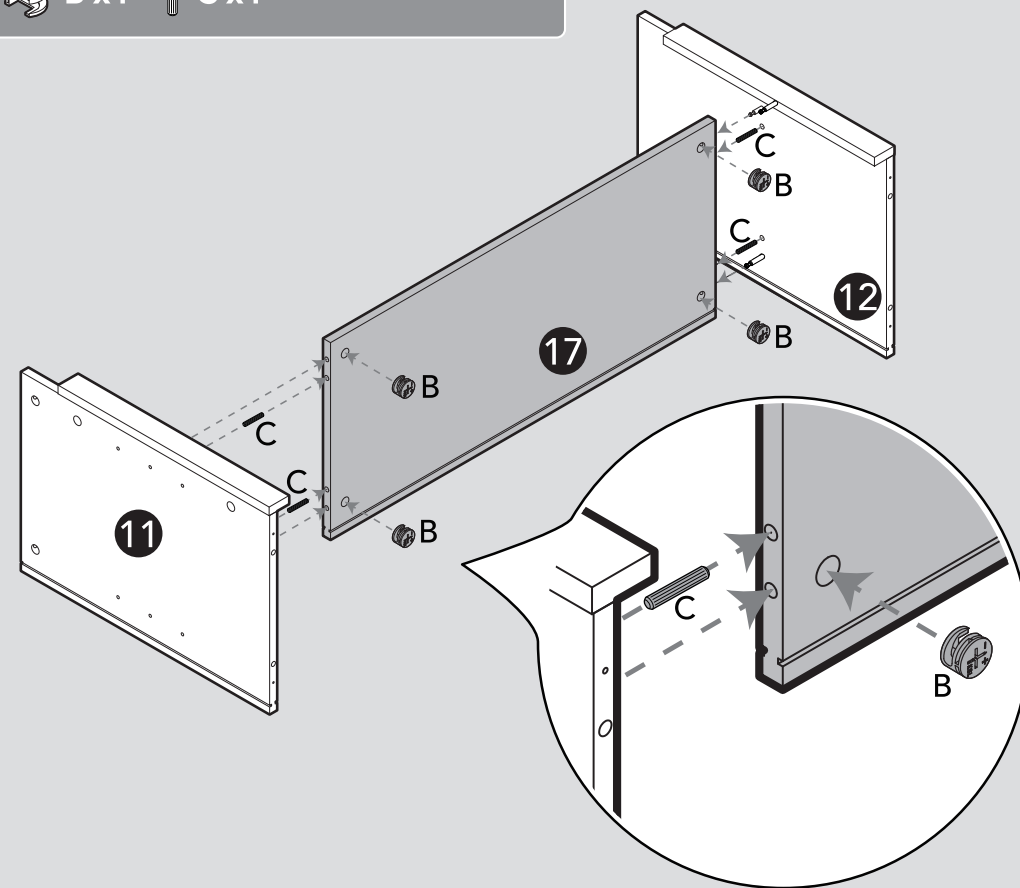 


04

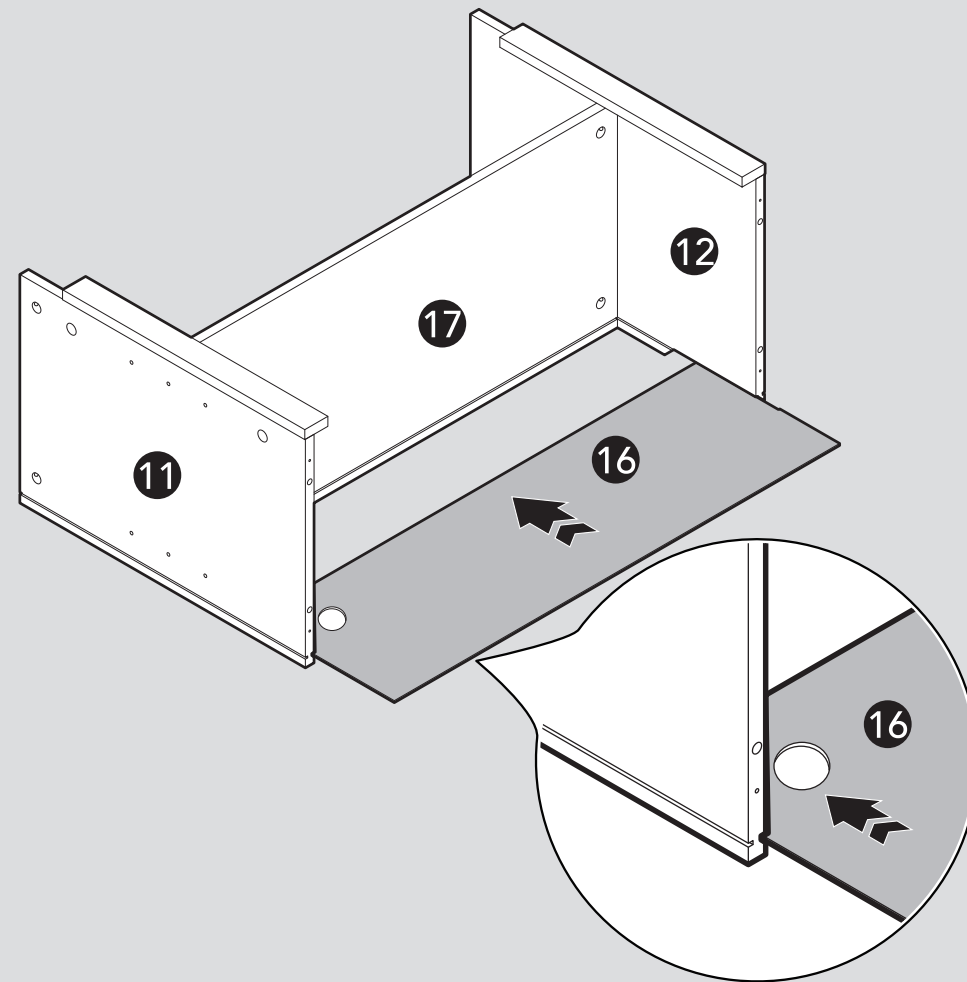 





05

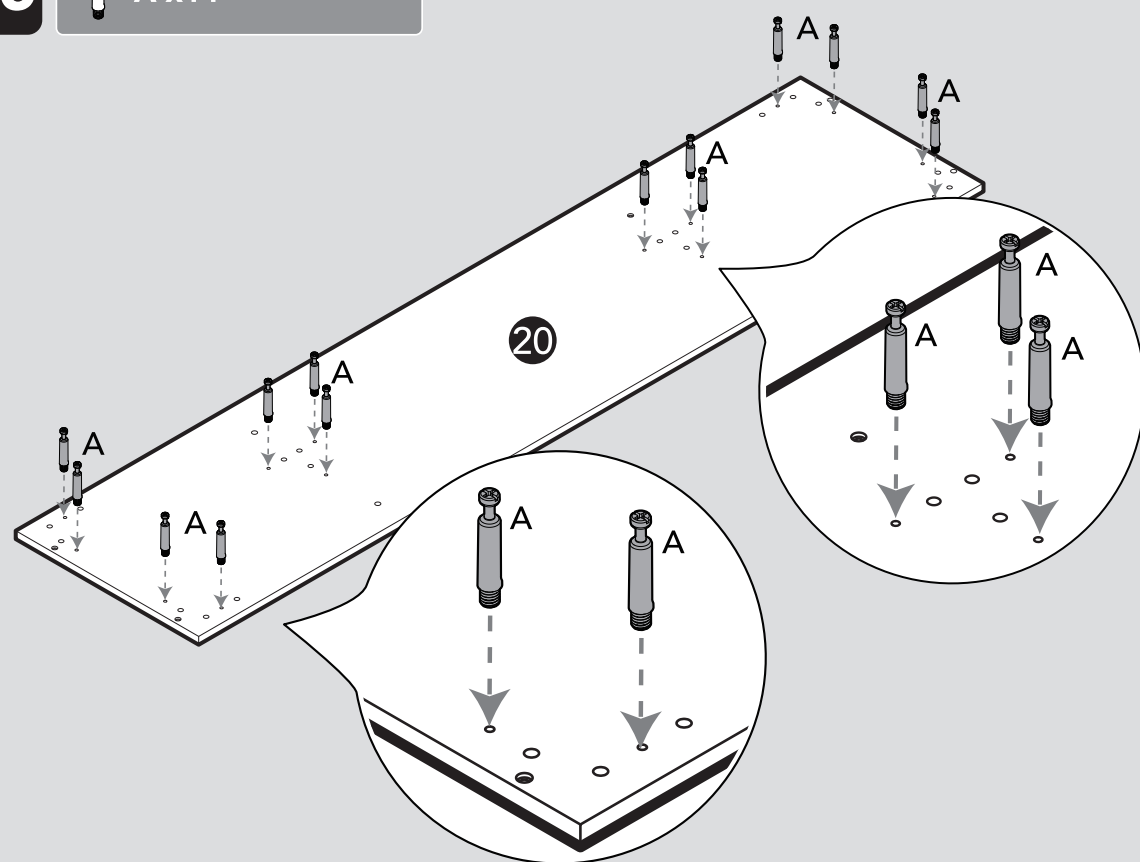  A x14

  
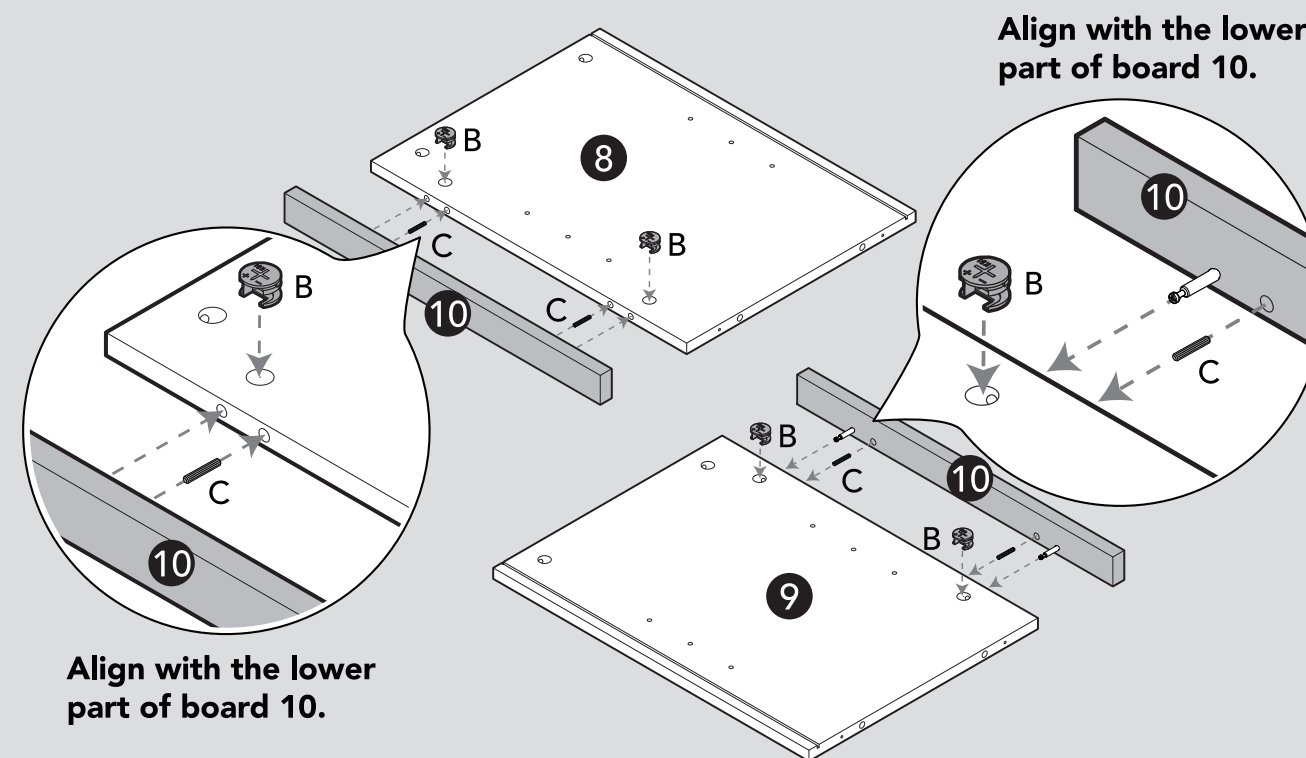 
06

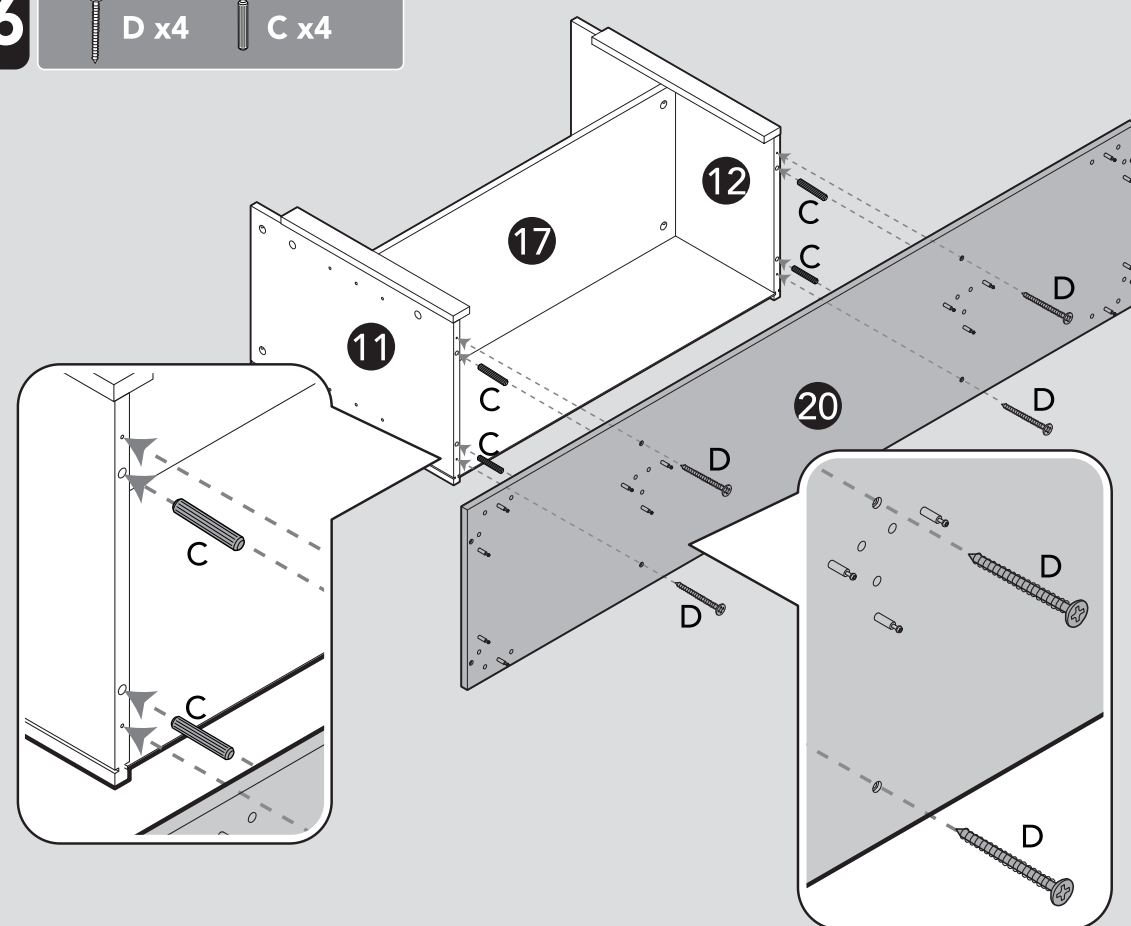 D x4  C x4


07

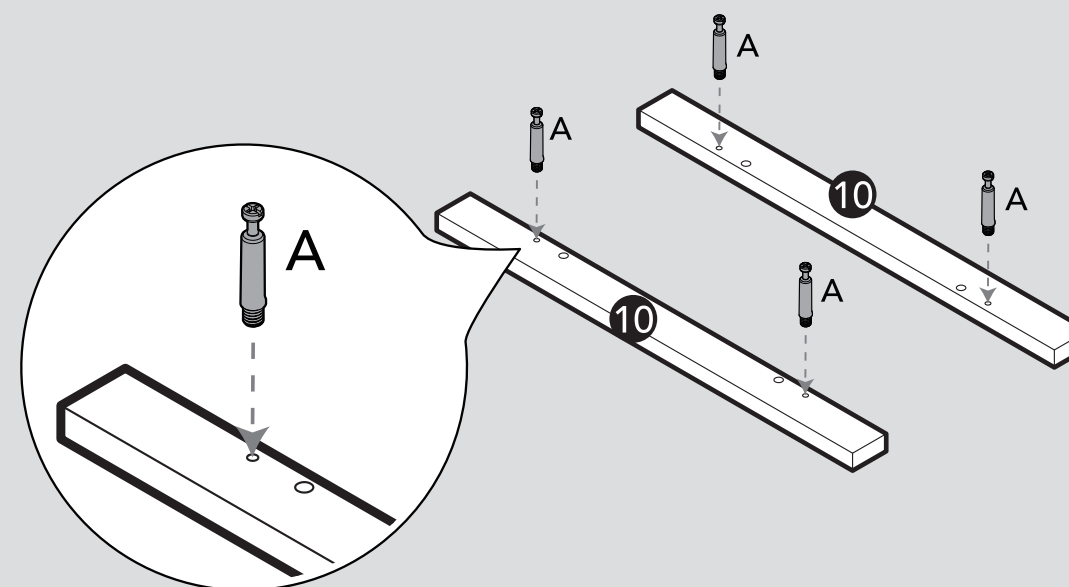 
 A x4


08

 B x4  C x4


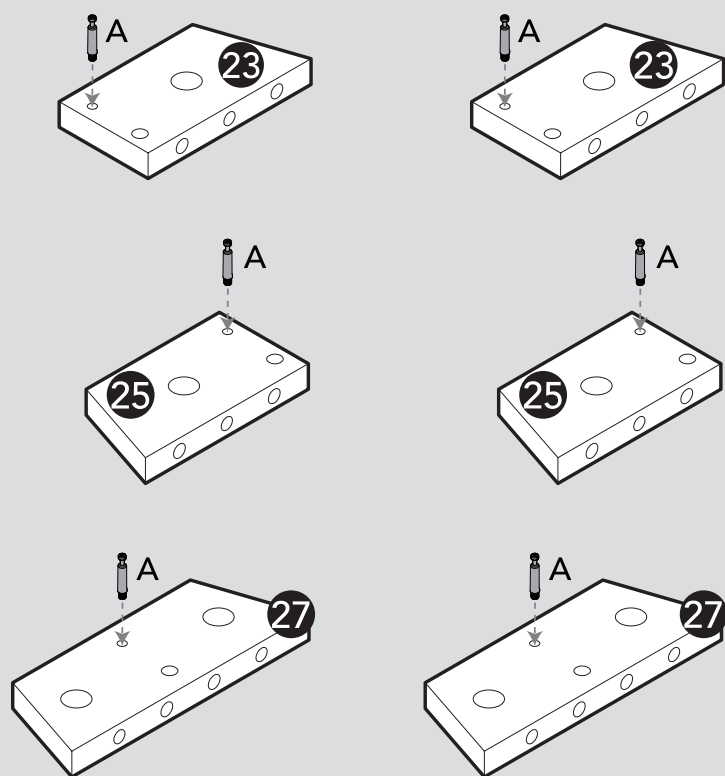 
09

D x4 C x4

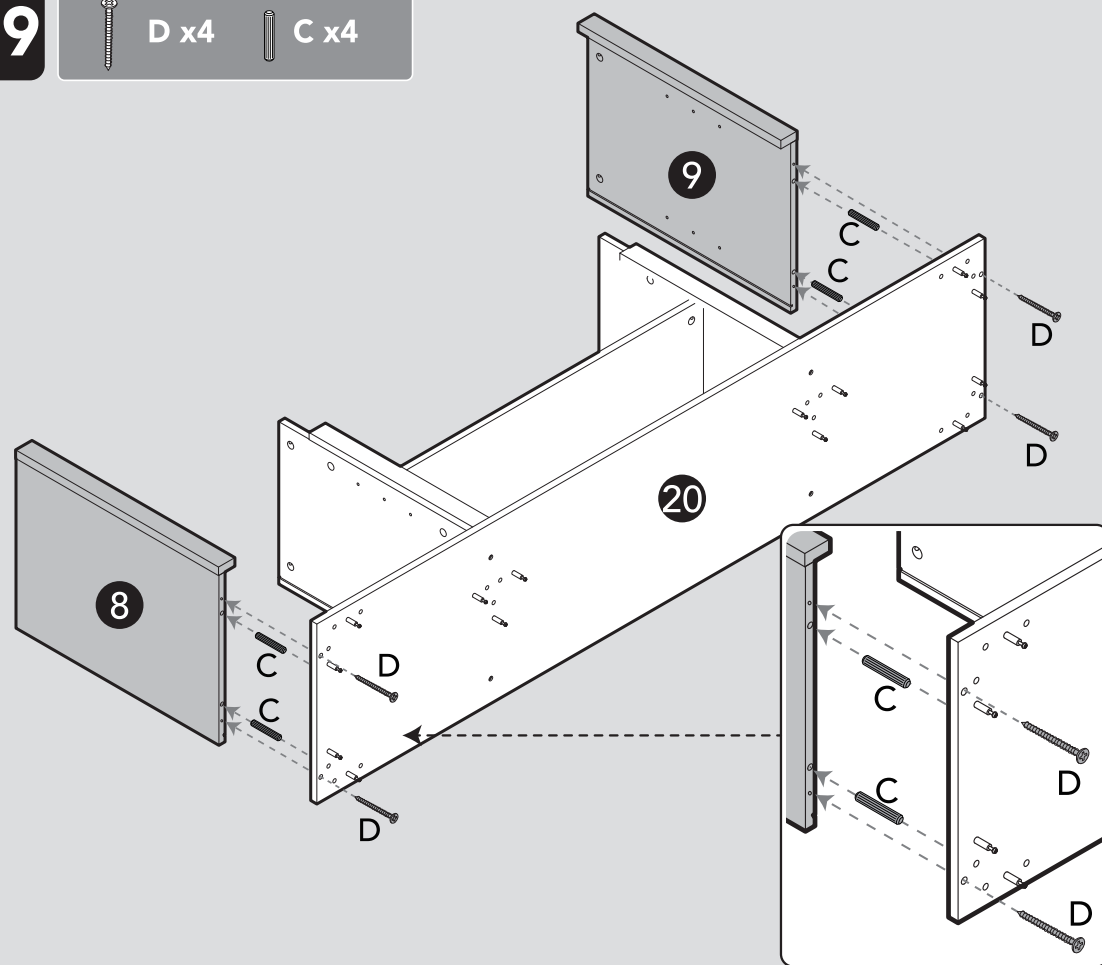

 
 
 
 
 
 
10

A x6




11

B x6 C x6

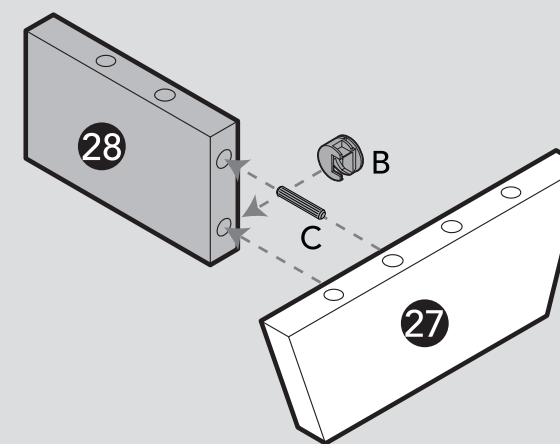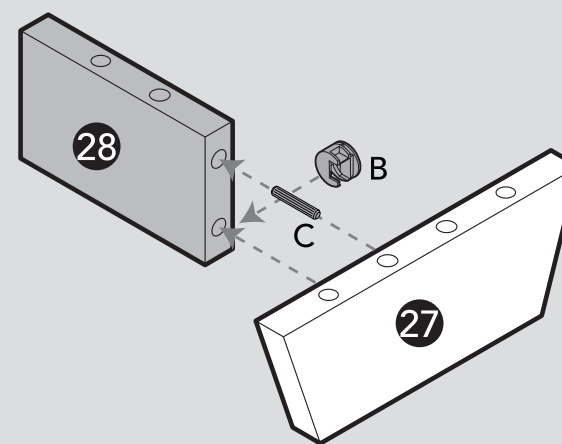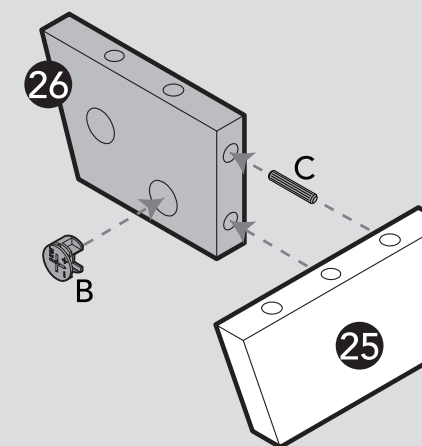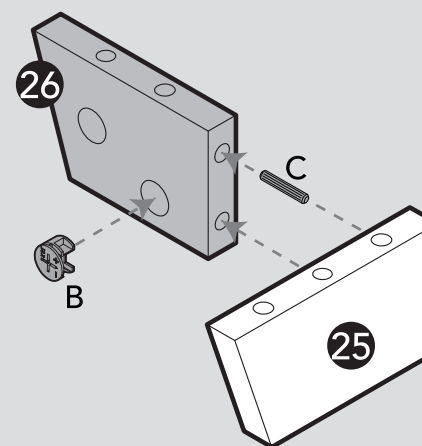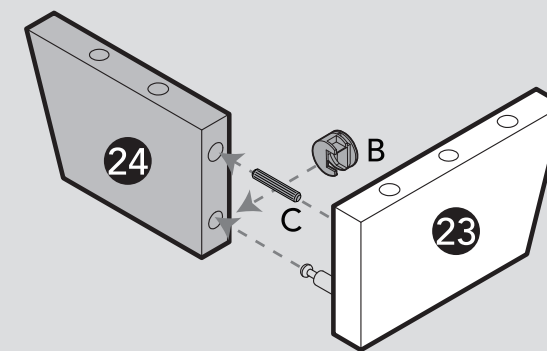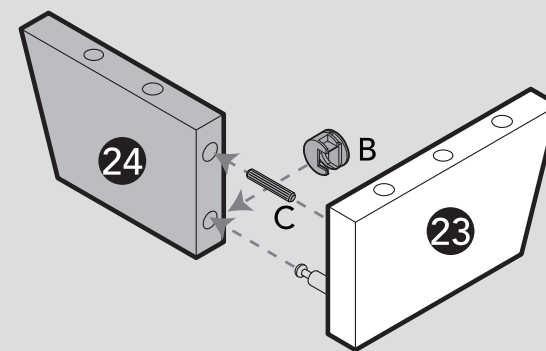


12

 B x14 C x18

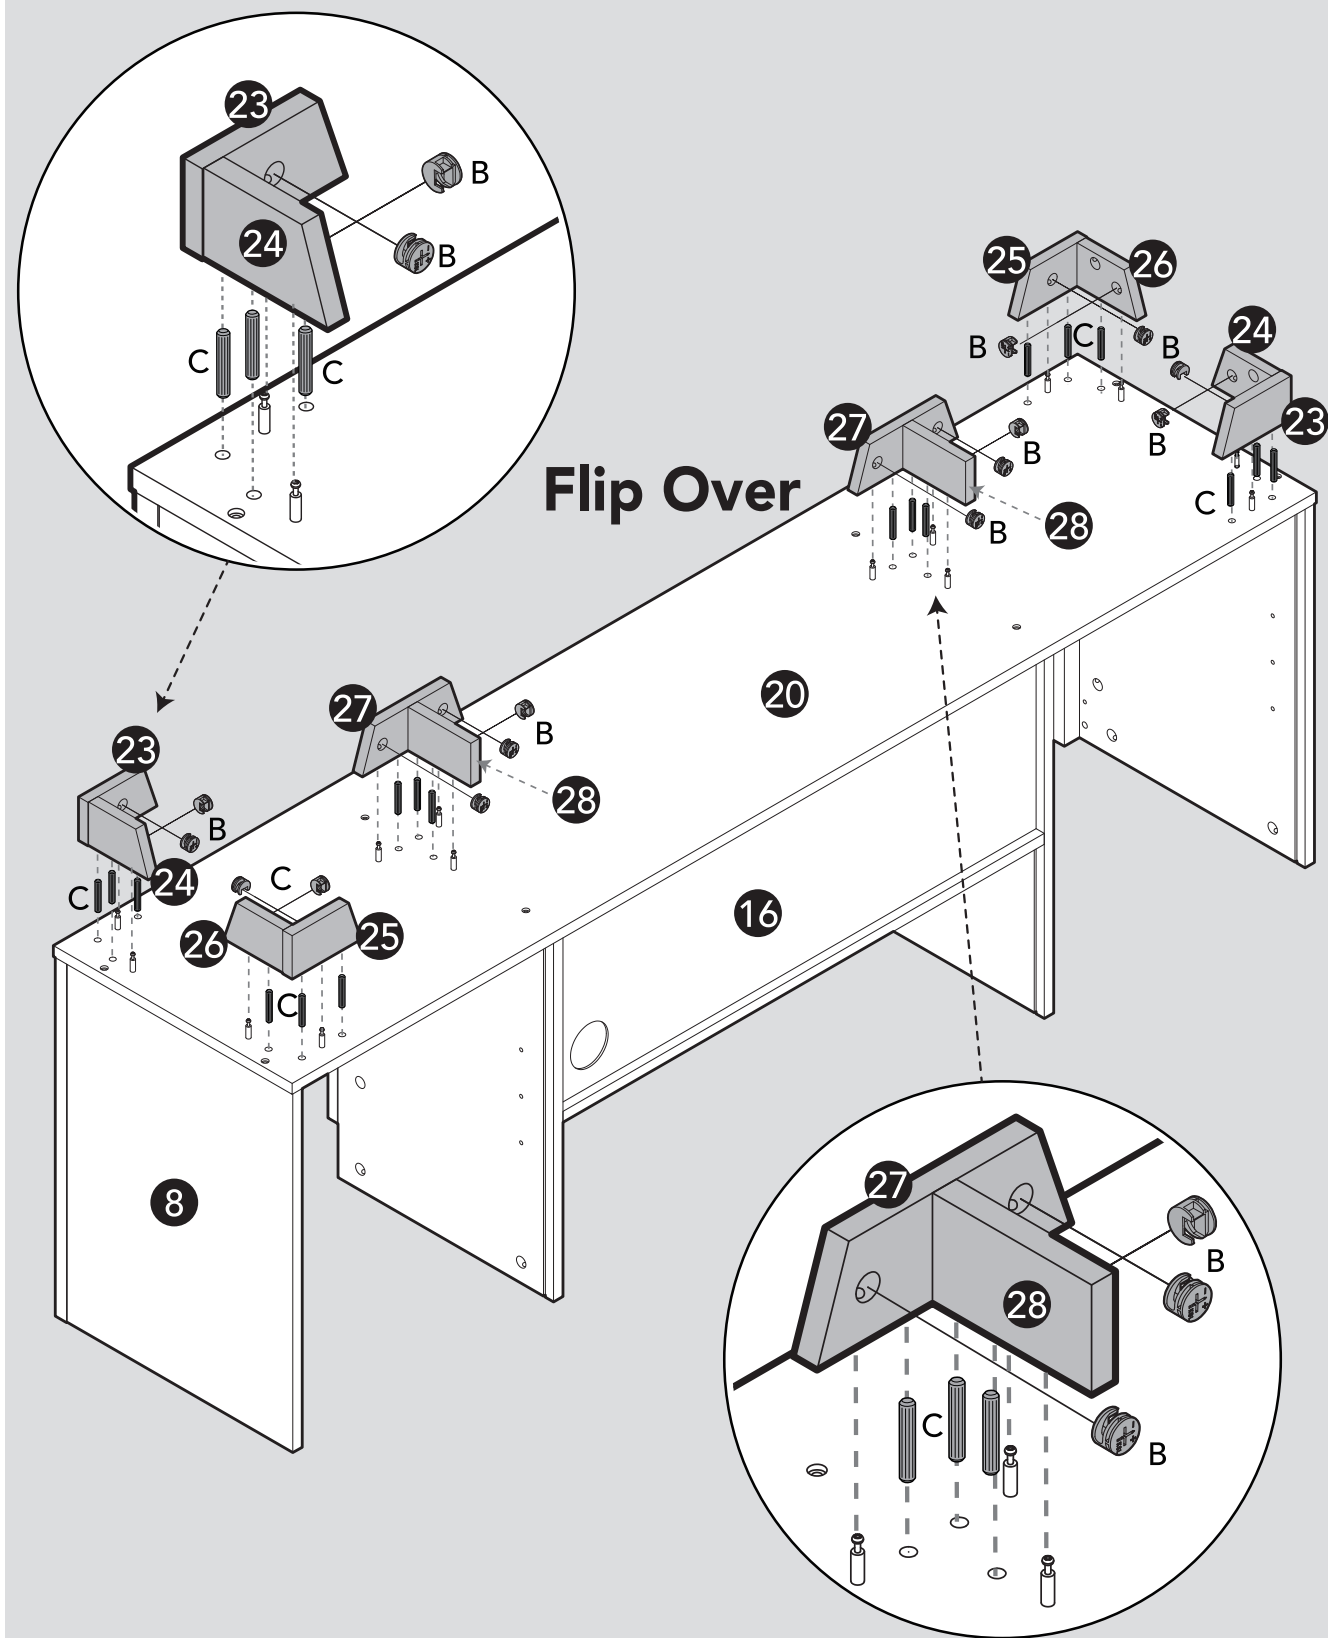


13

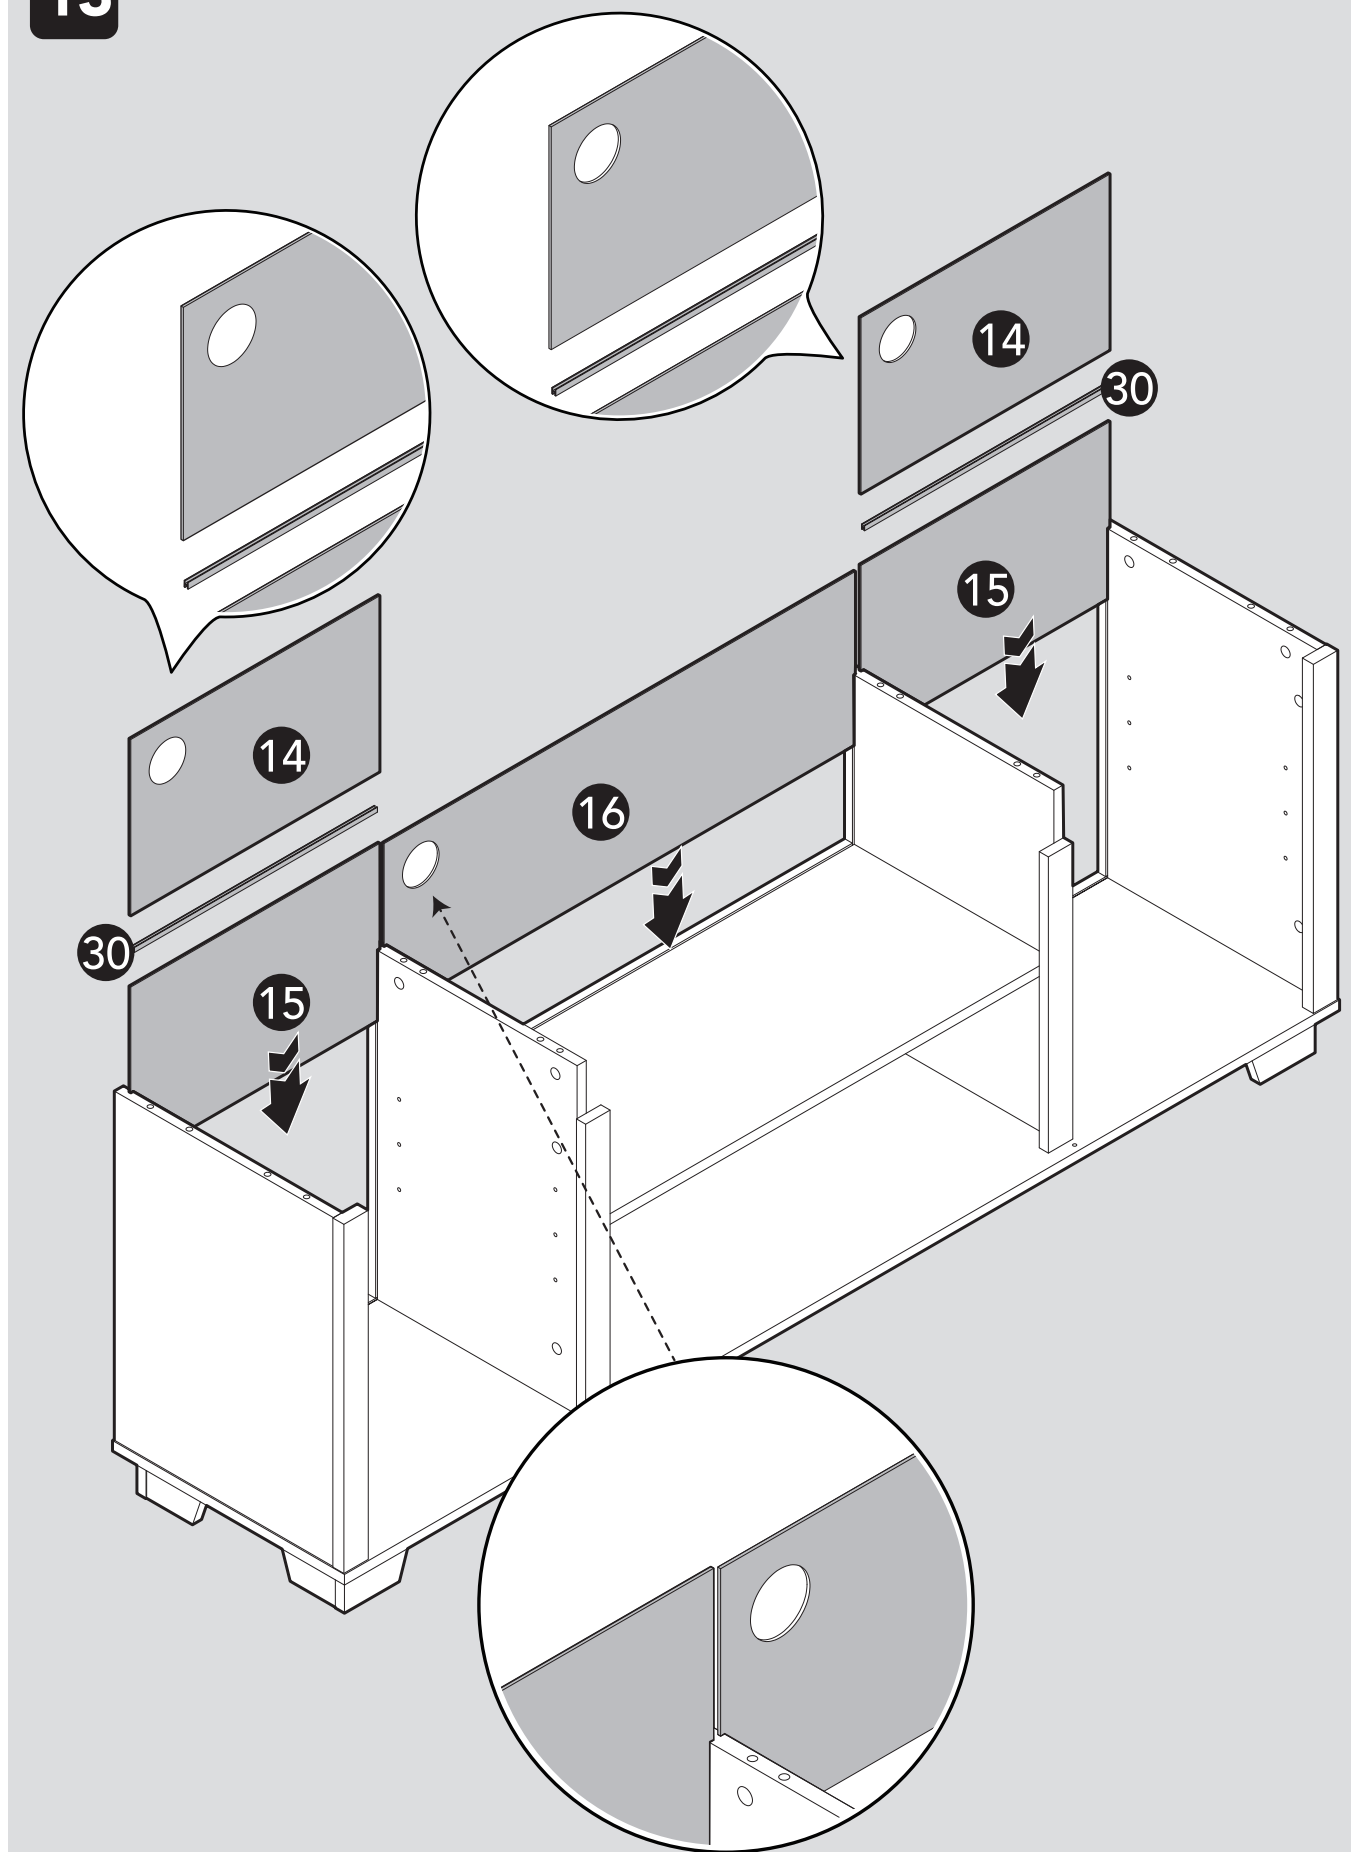 


14

 A x11

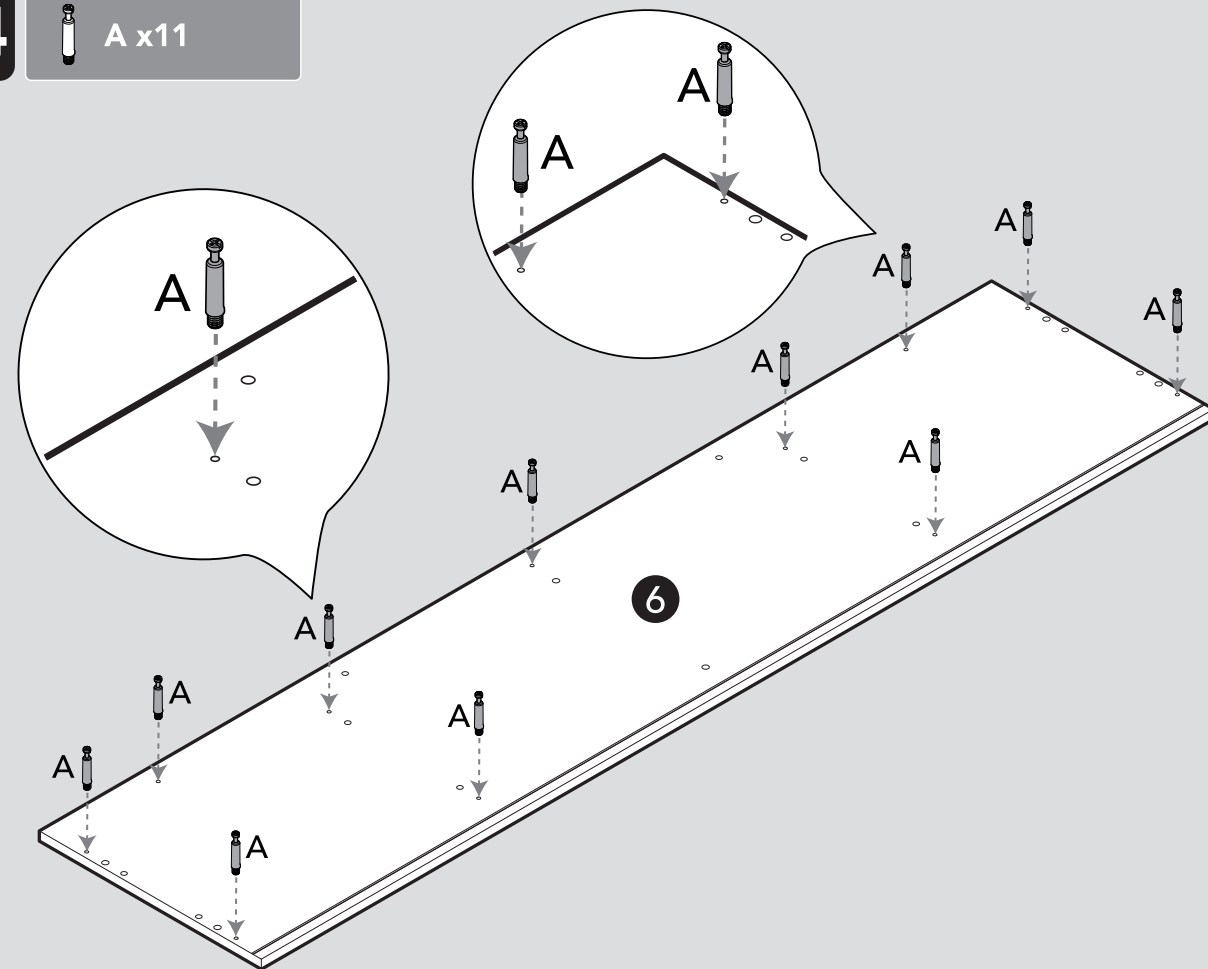



15

 A x4

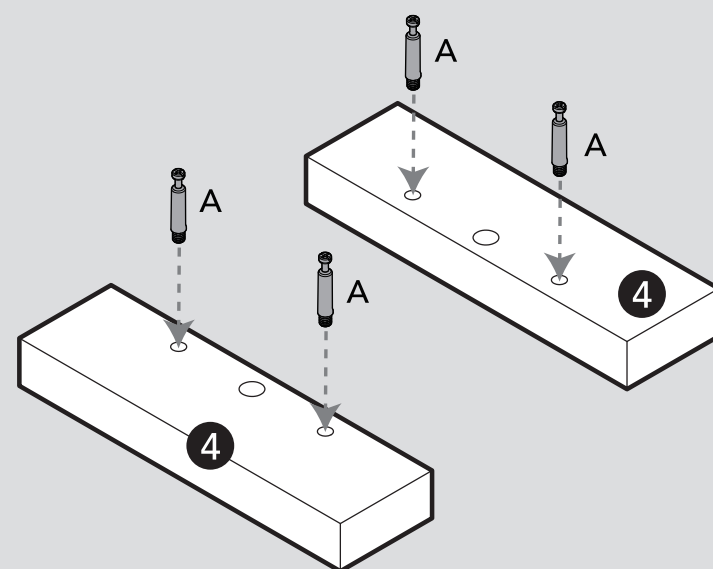


16

  B x4 C x2

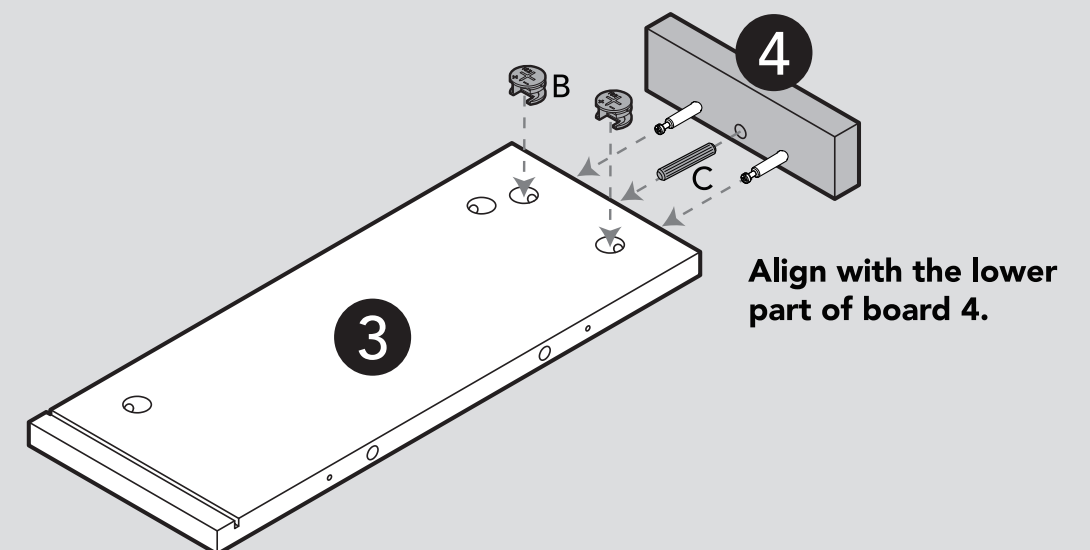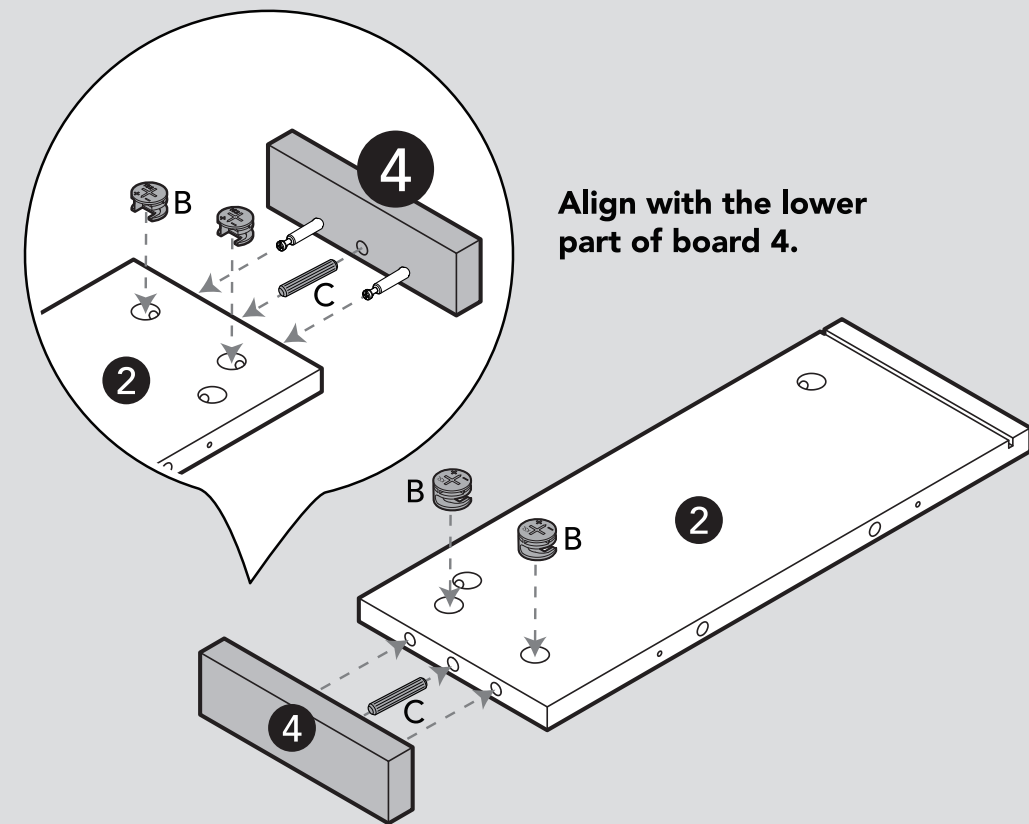


17

 D x6 C x2 N x4

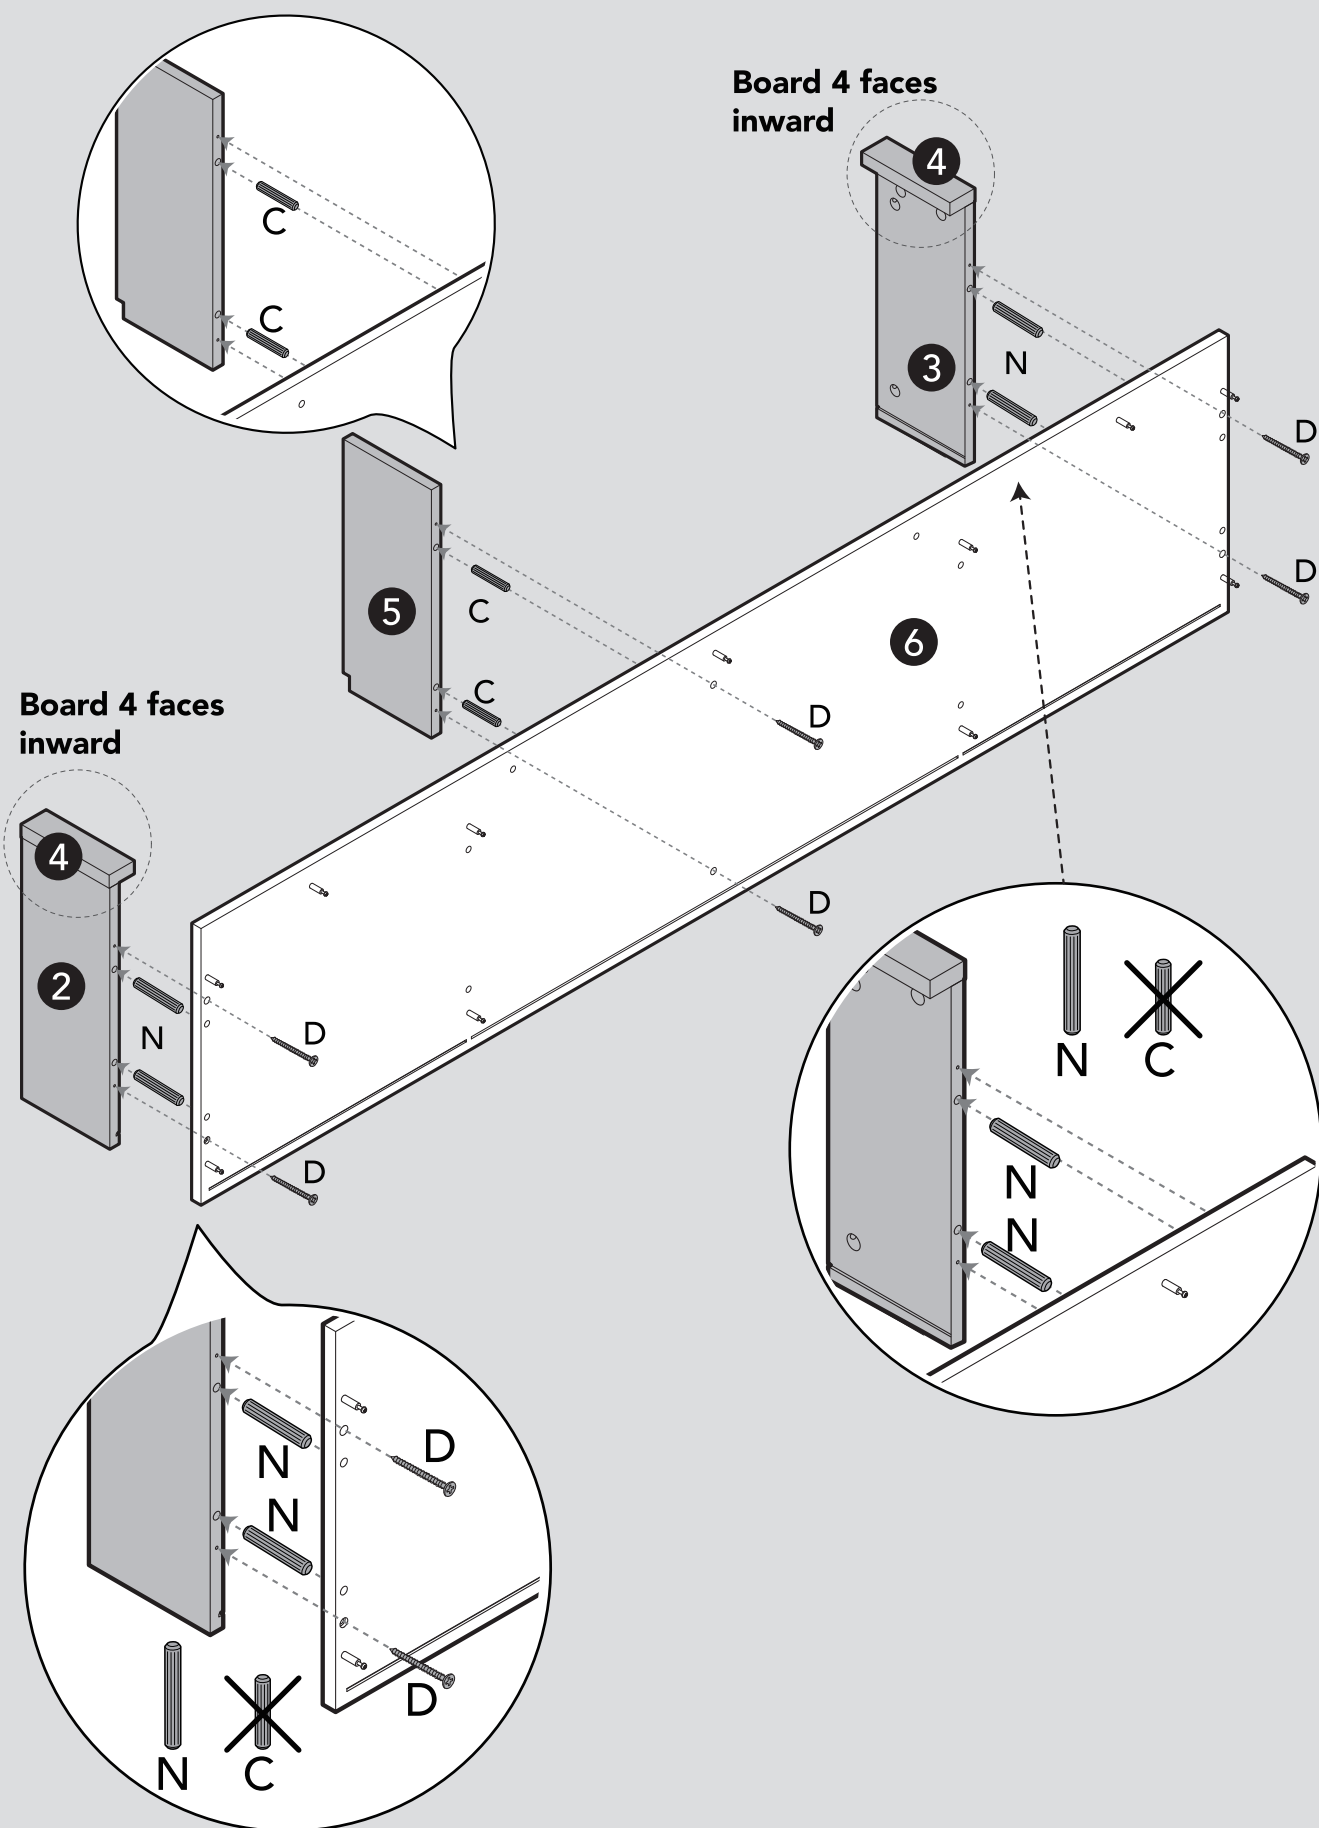


18

 F x4

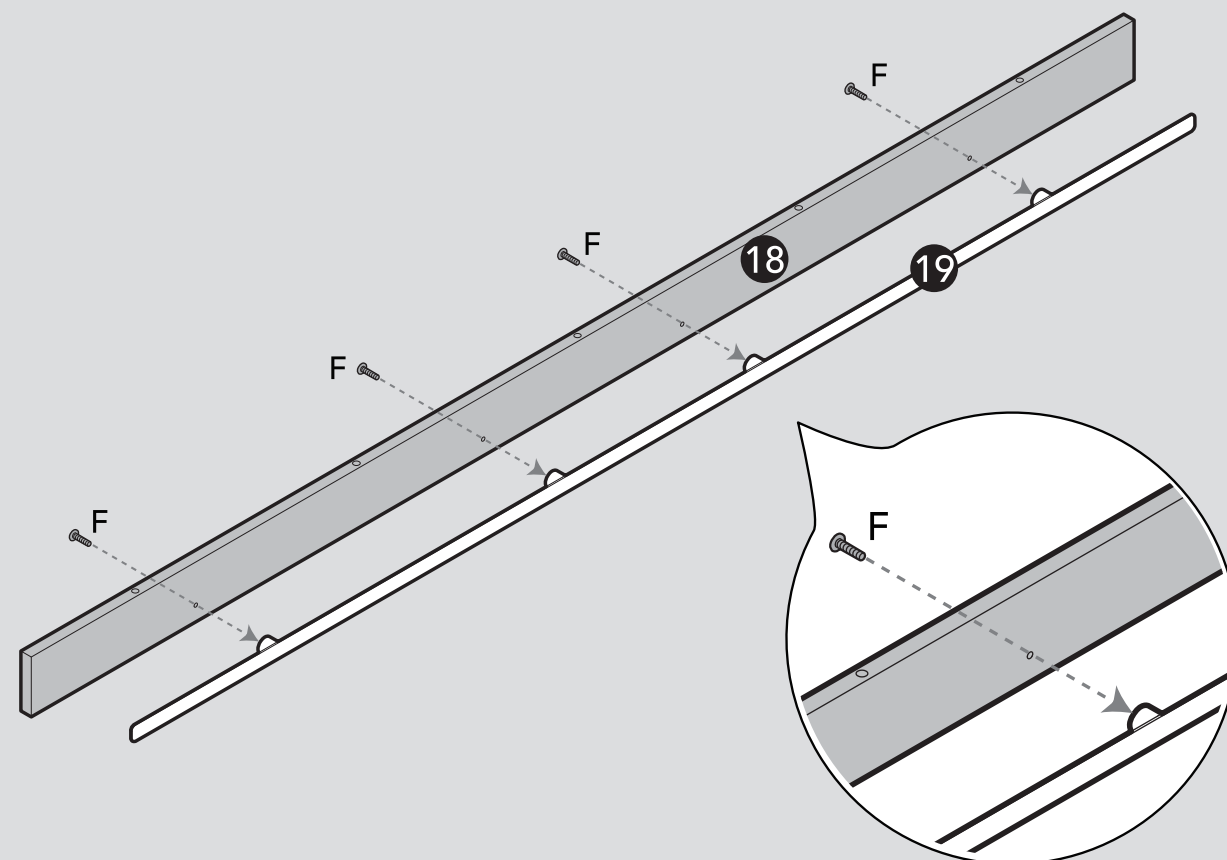

19

 B x3 C x2

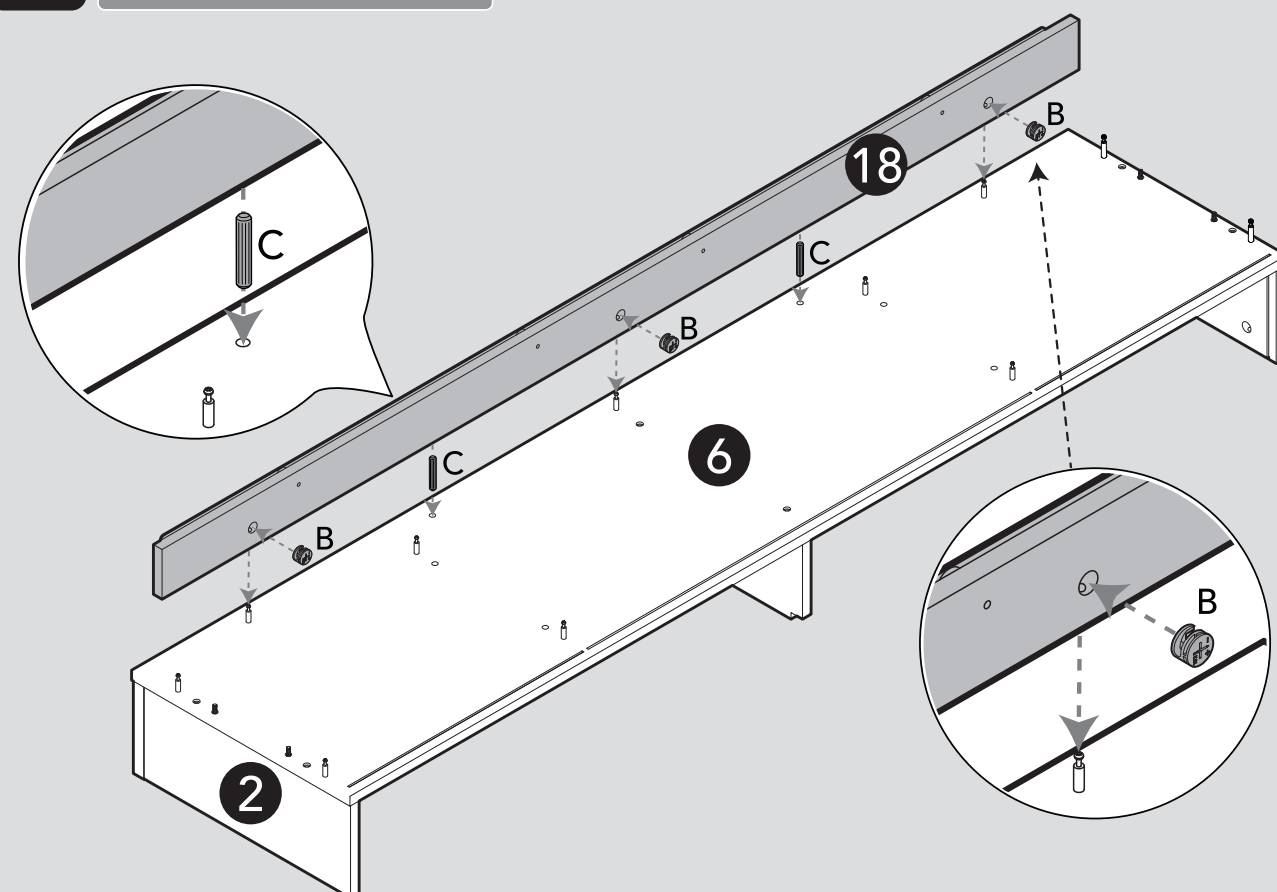

20

 


B x8




C x4

Flip Over

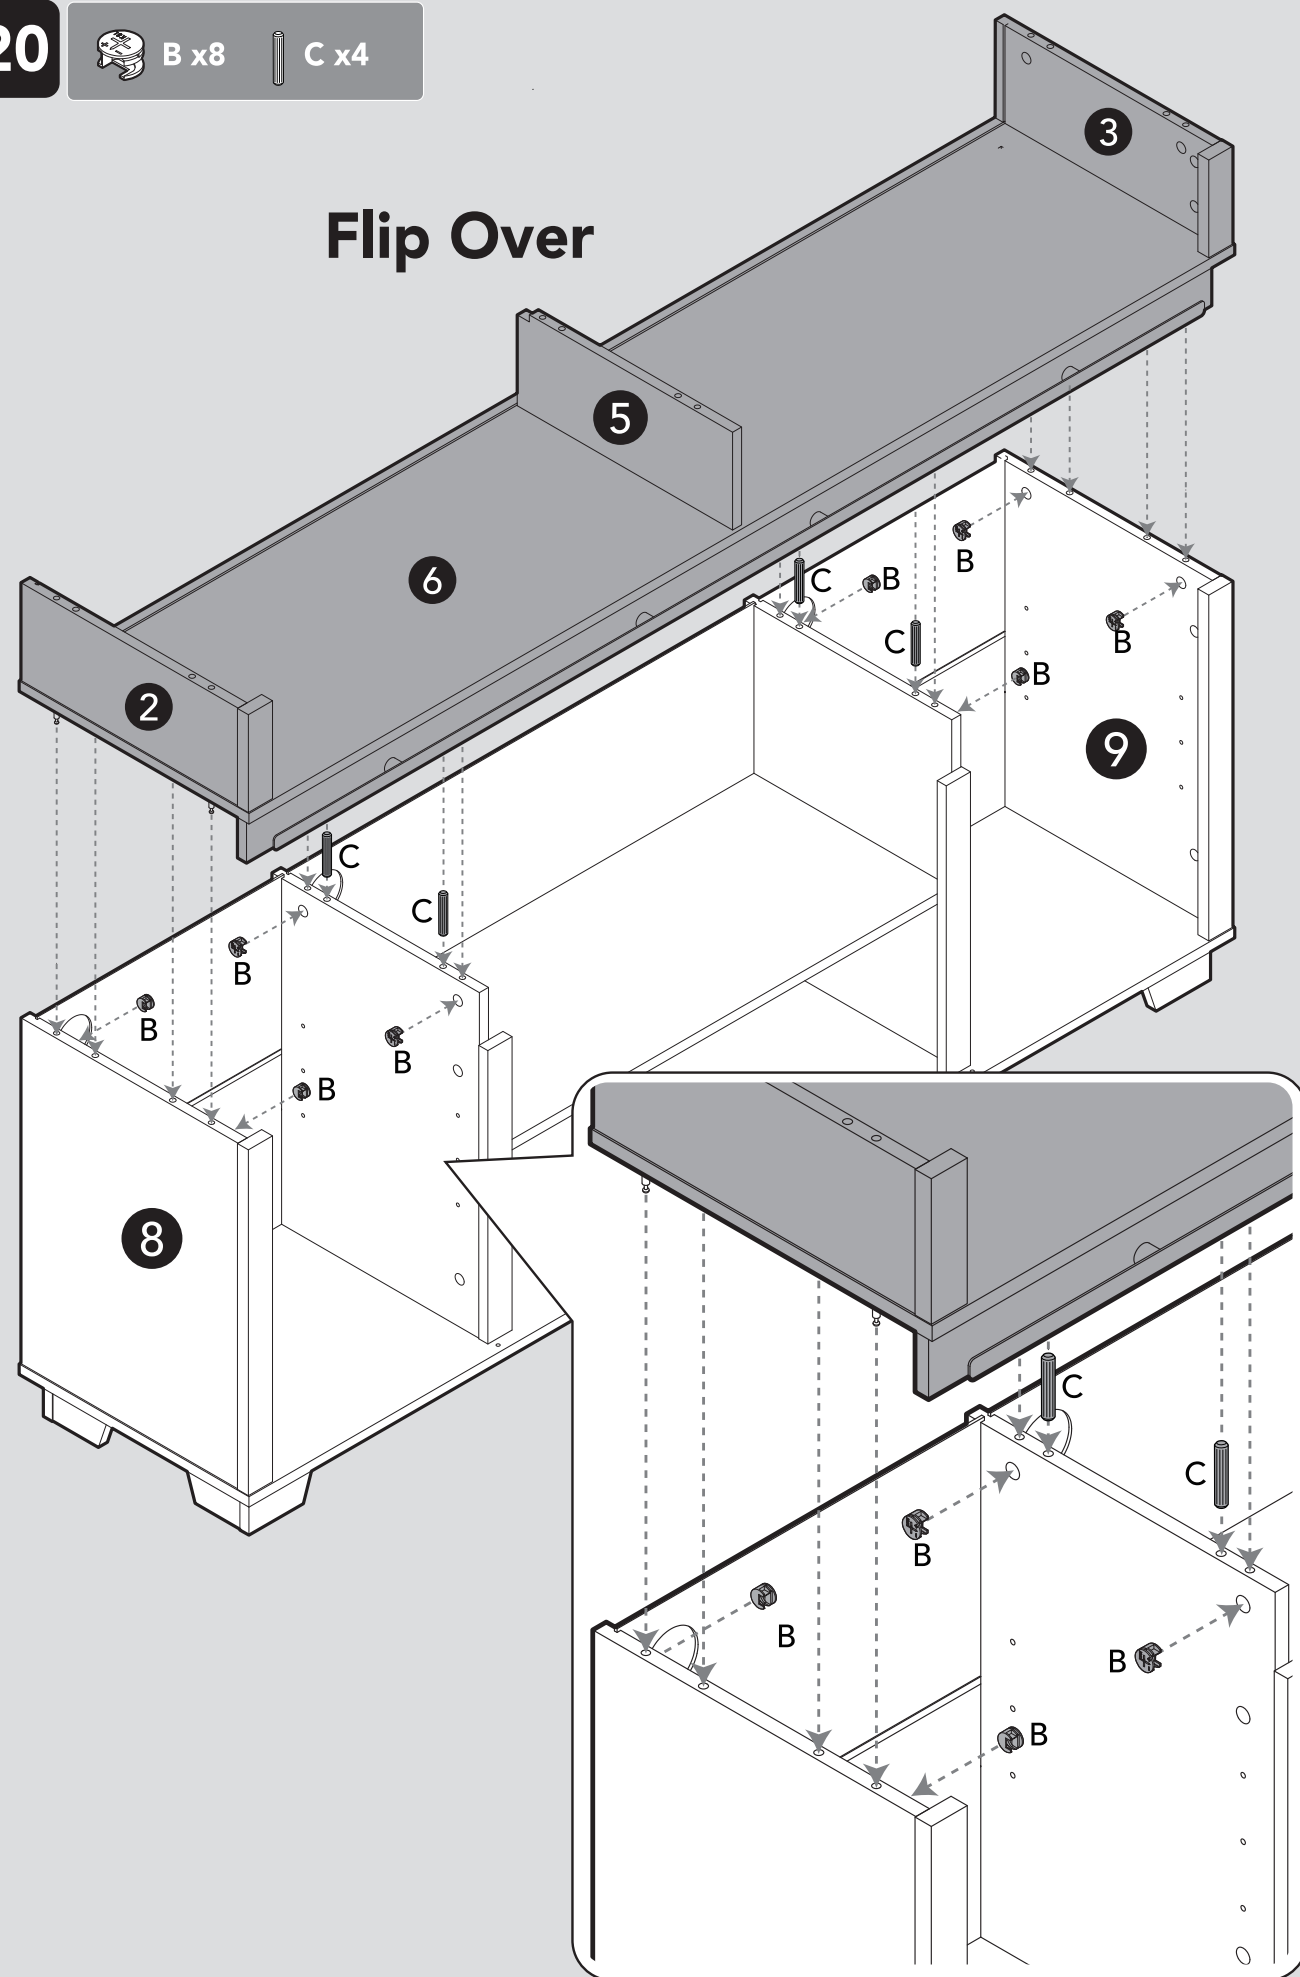


21

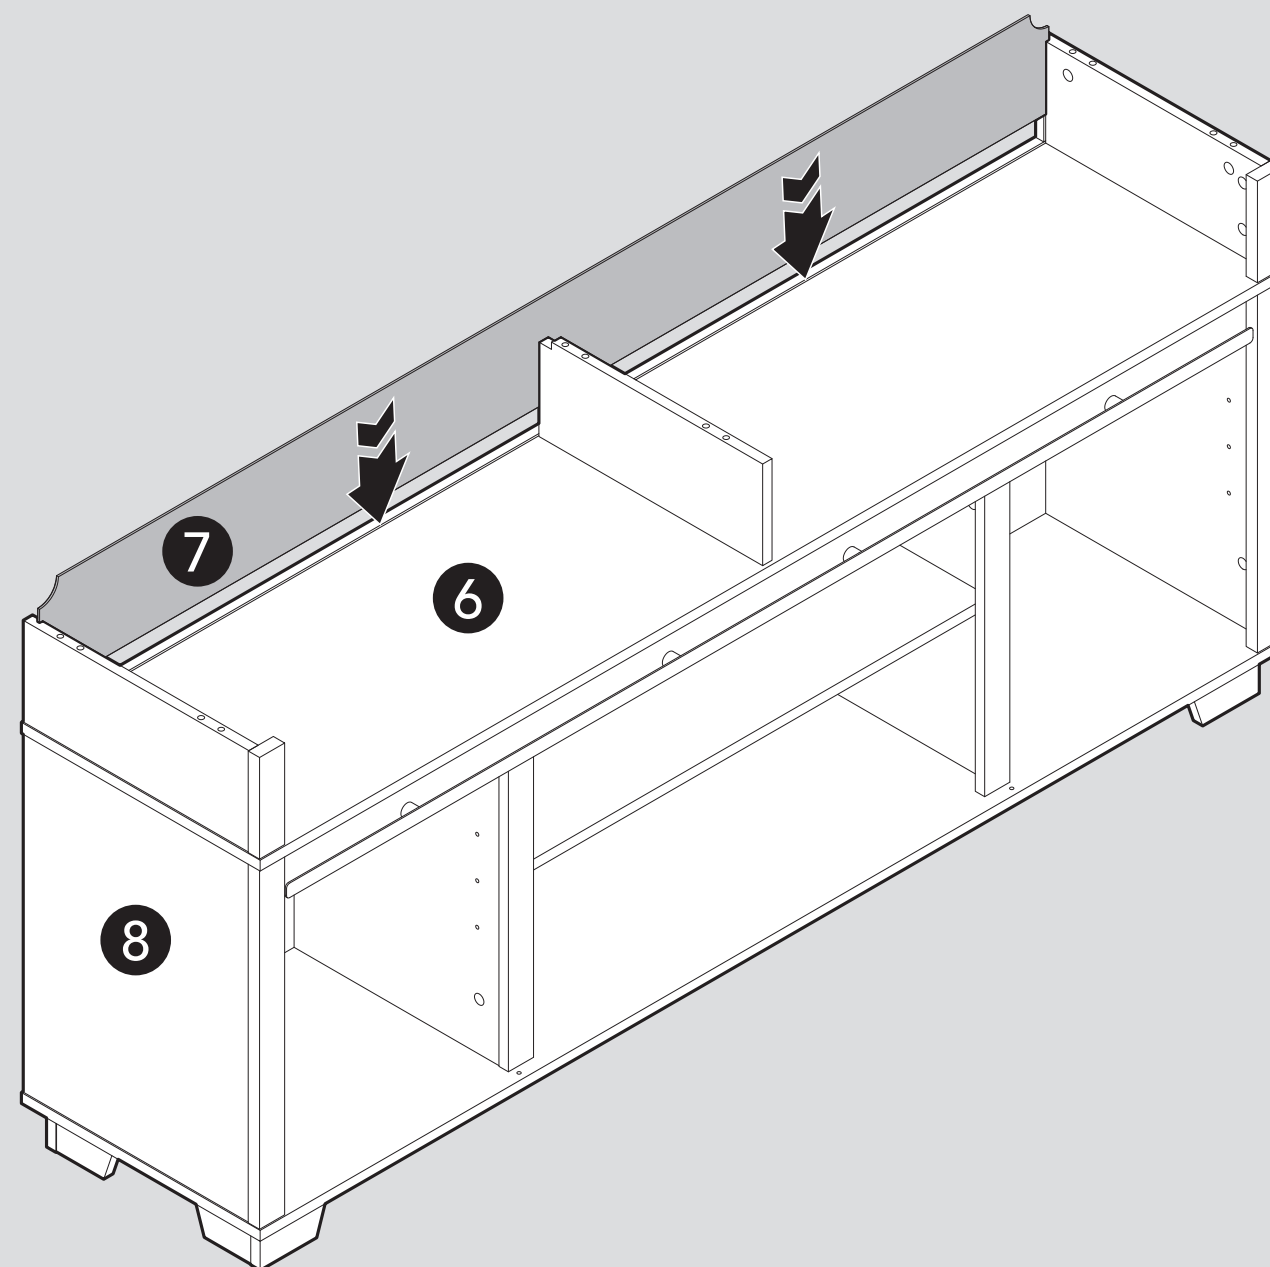 




22

 A x6 M x1

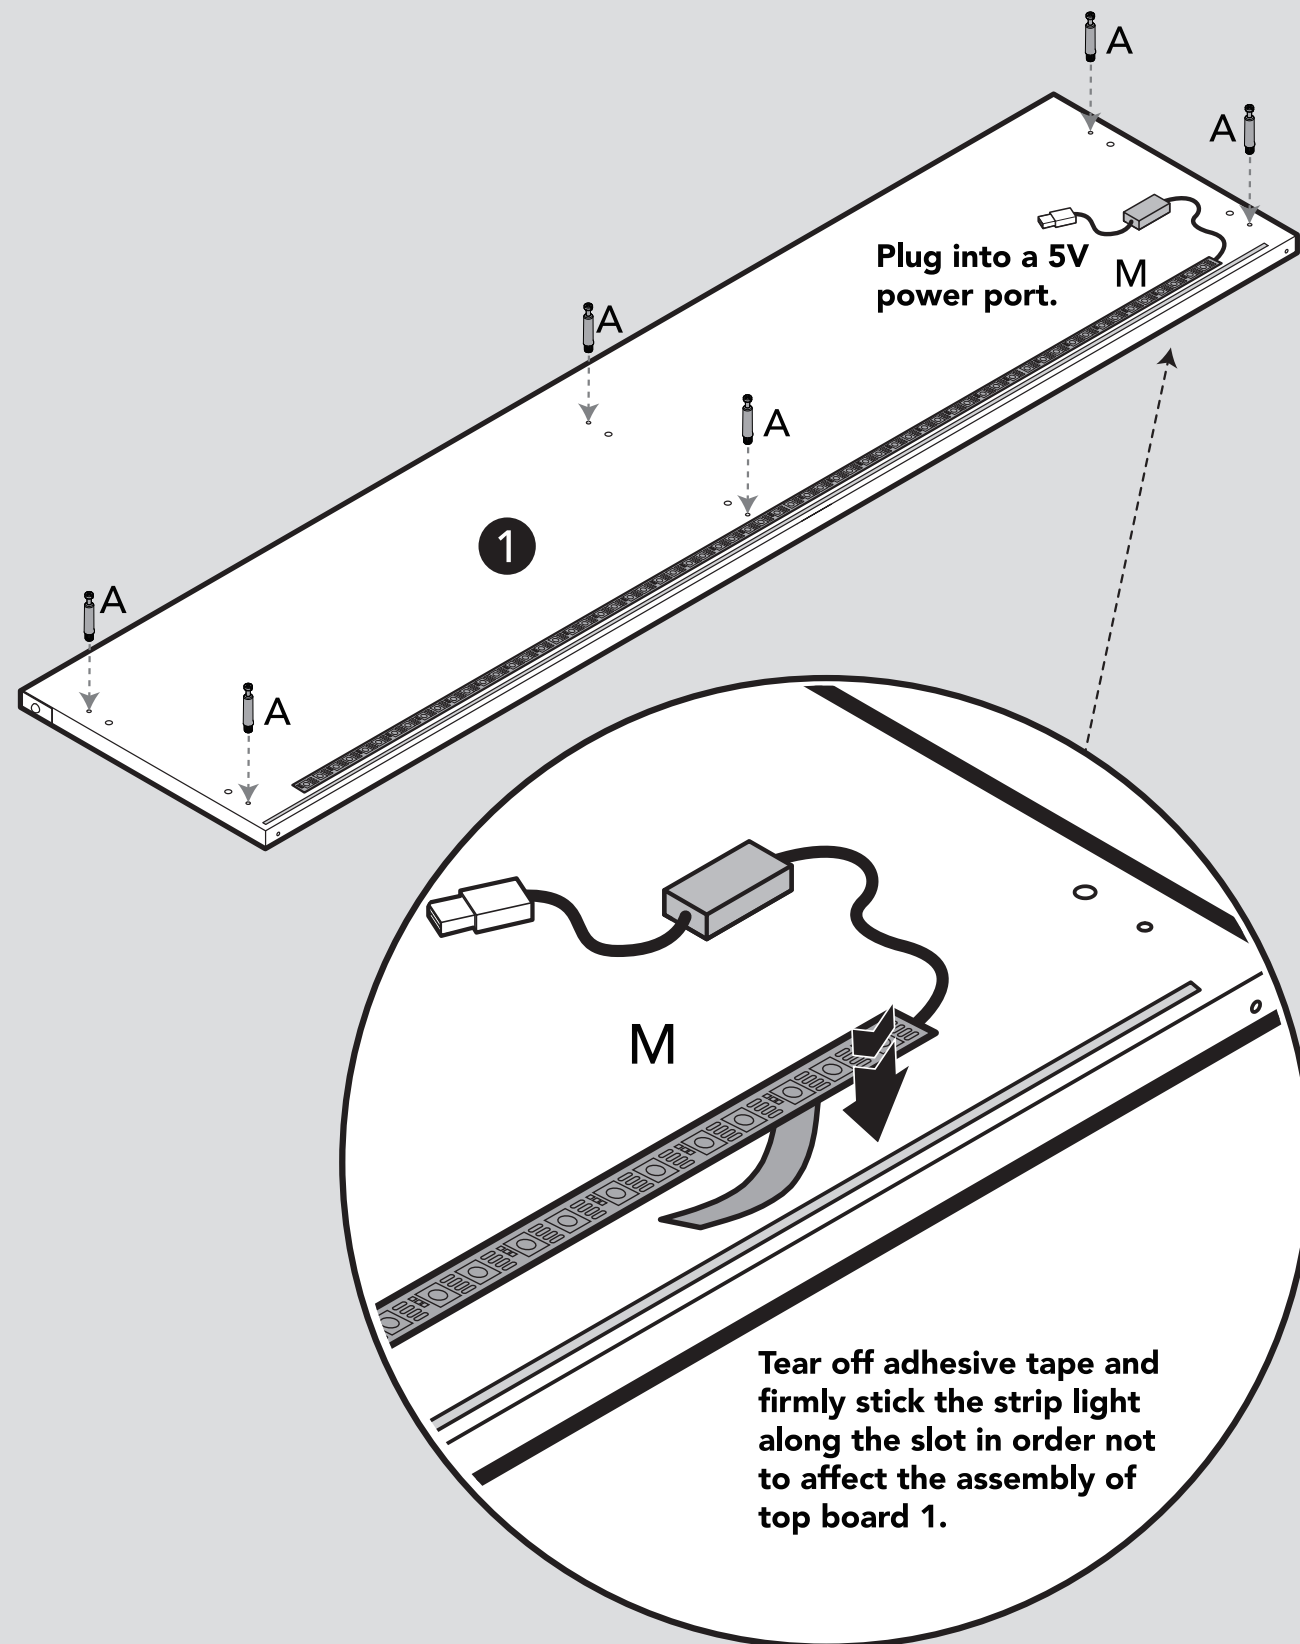

23

 B x6 C x6

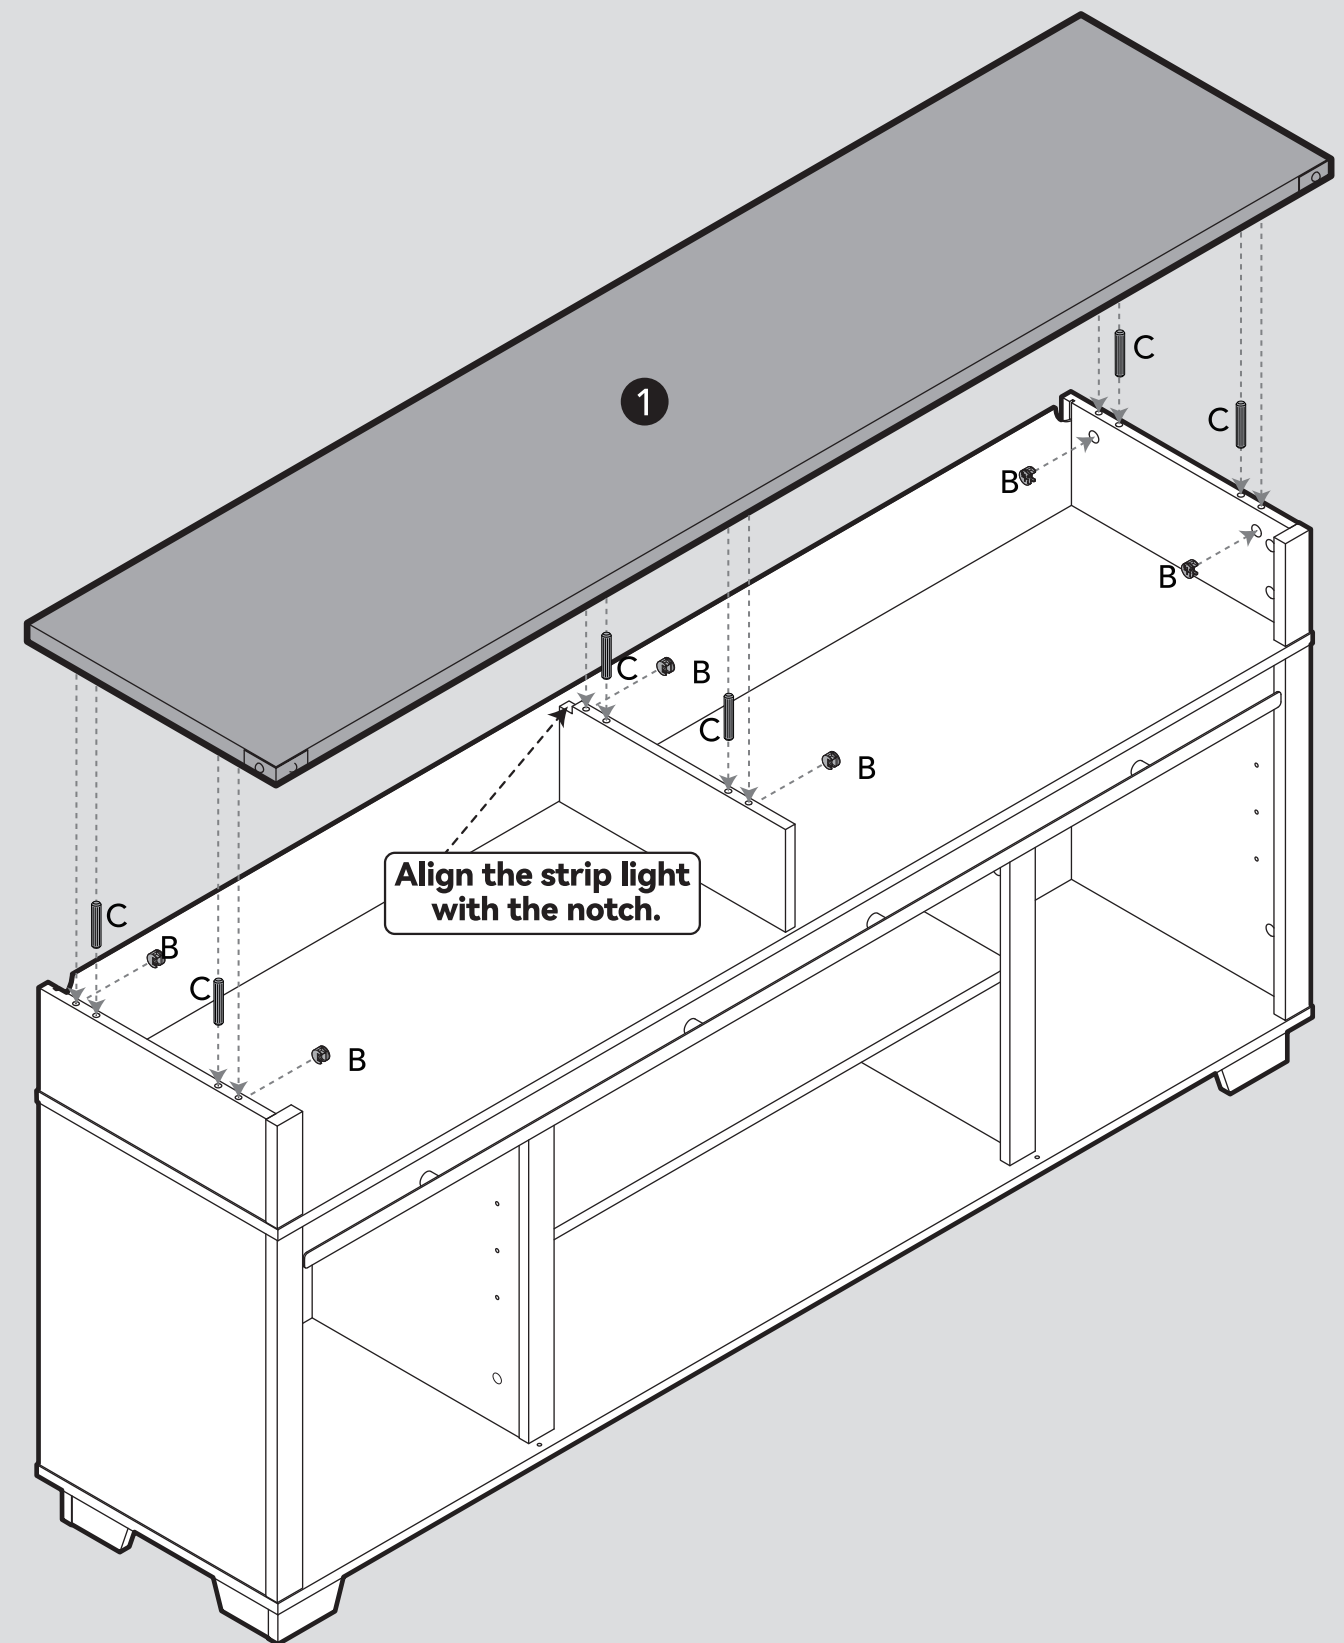


24




Q x8



 
J x2

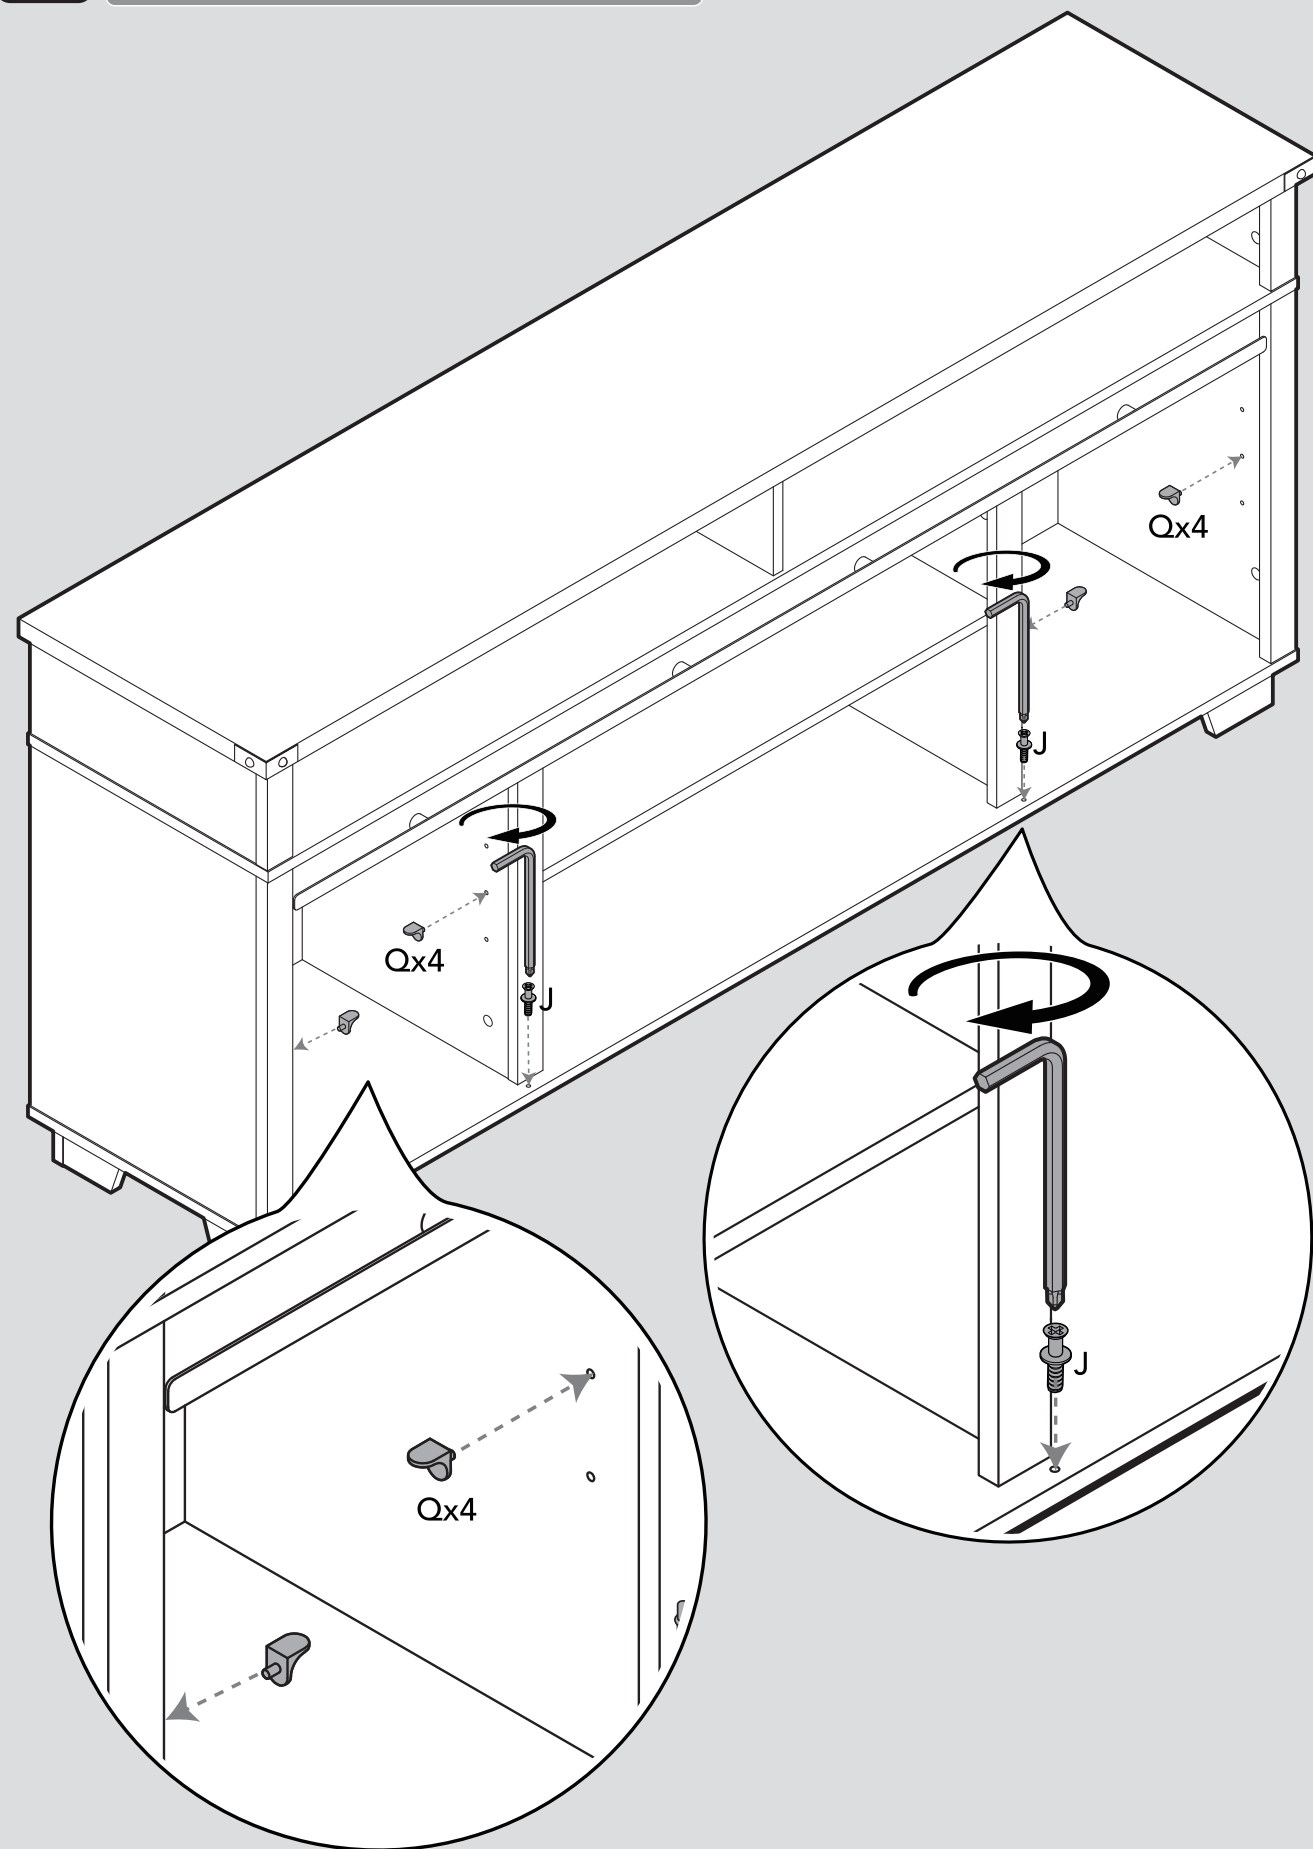

25

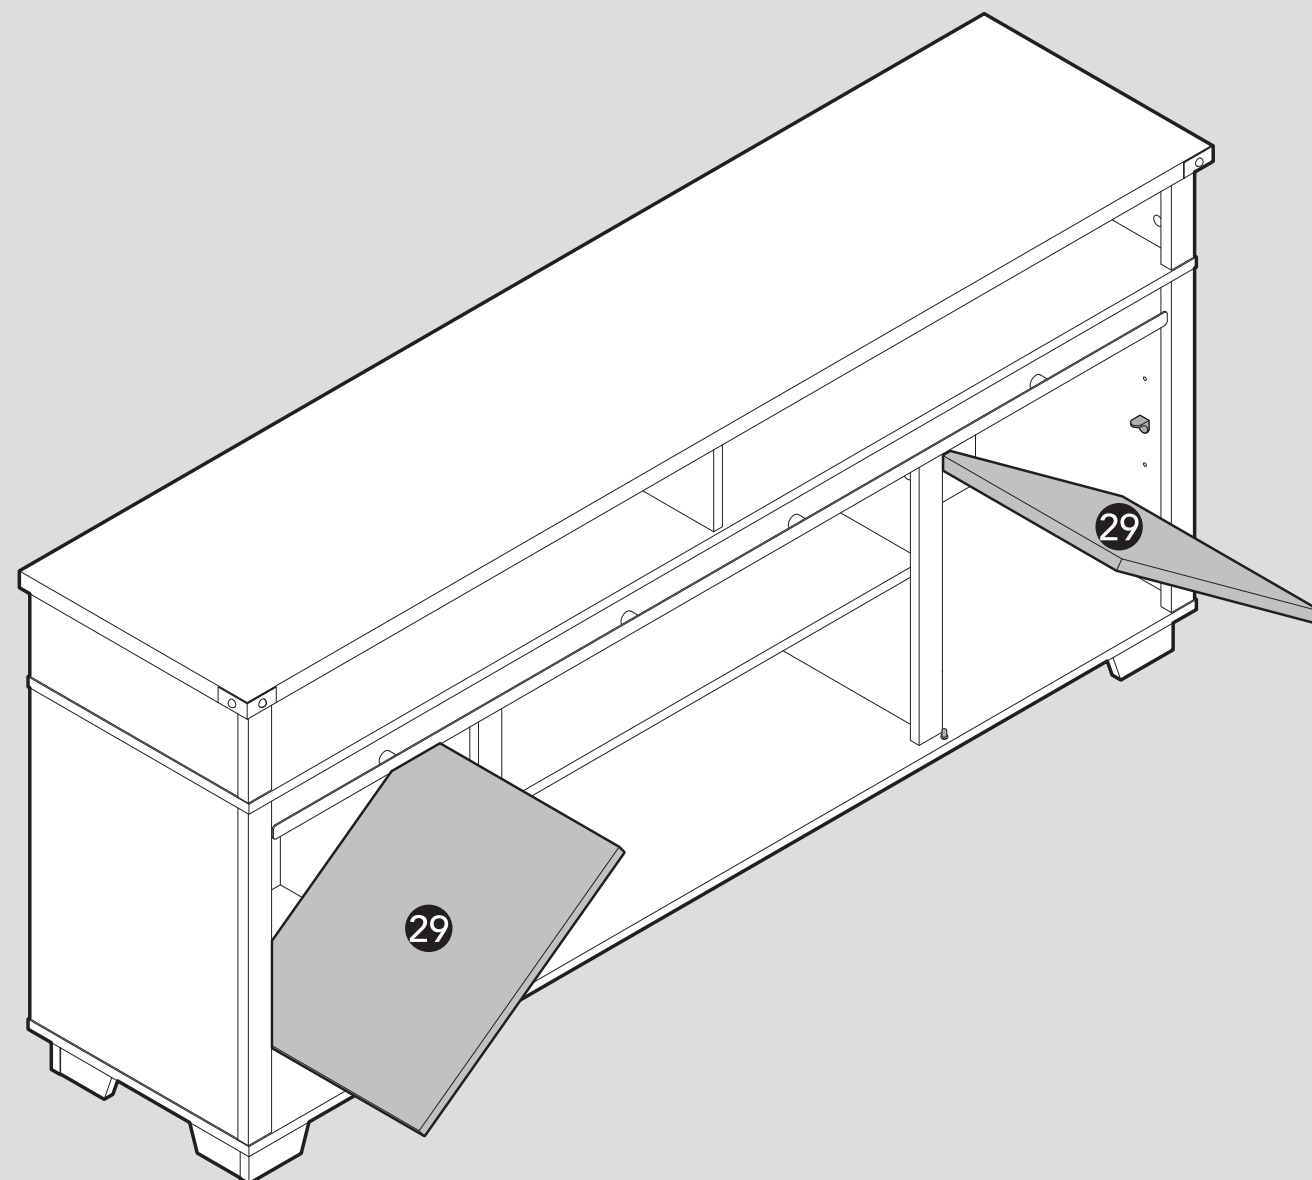 

26

 

E x4



 
L x2




P x8



K x4

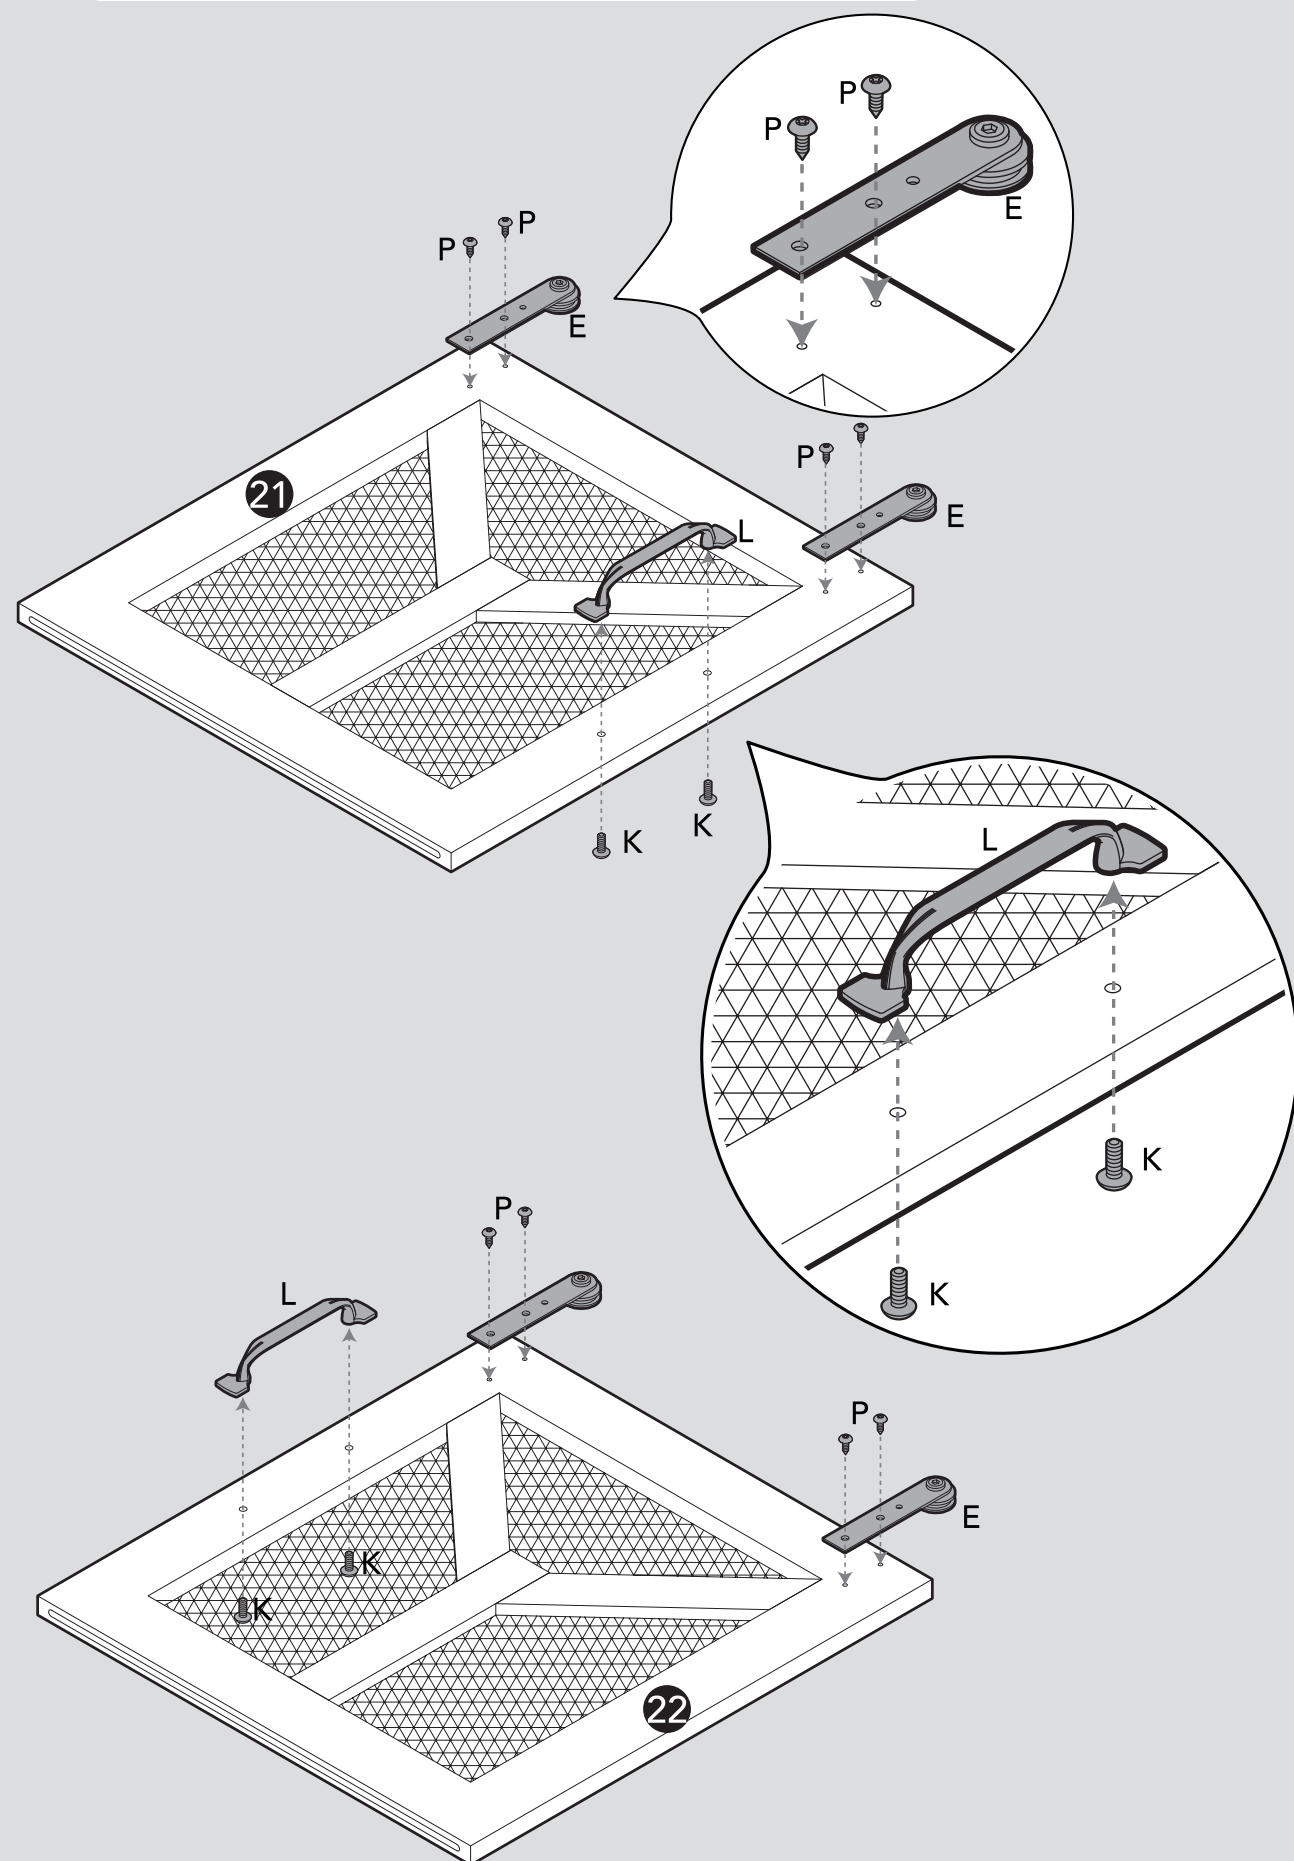


27

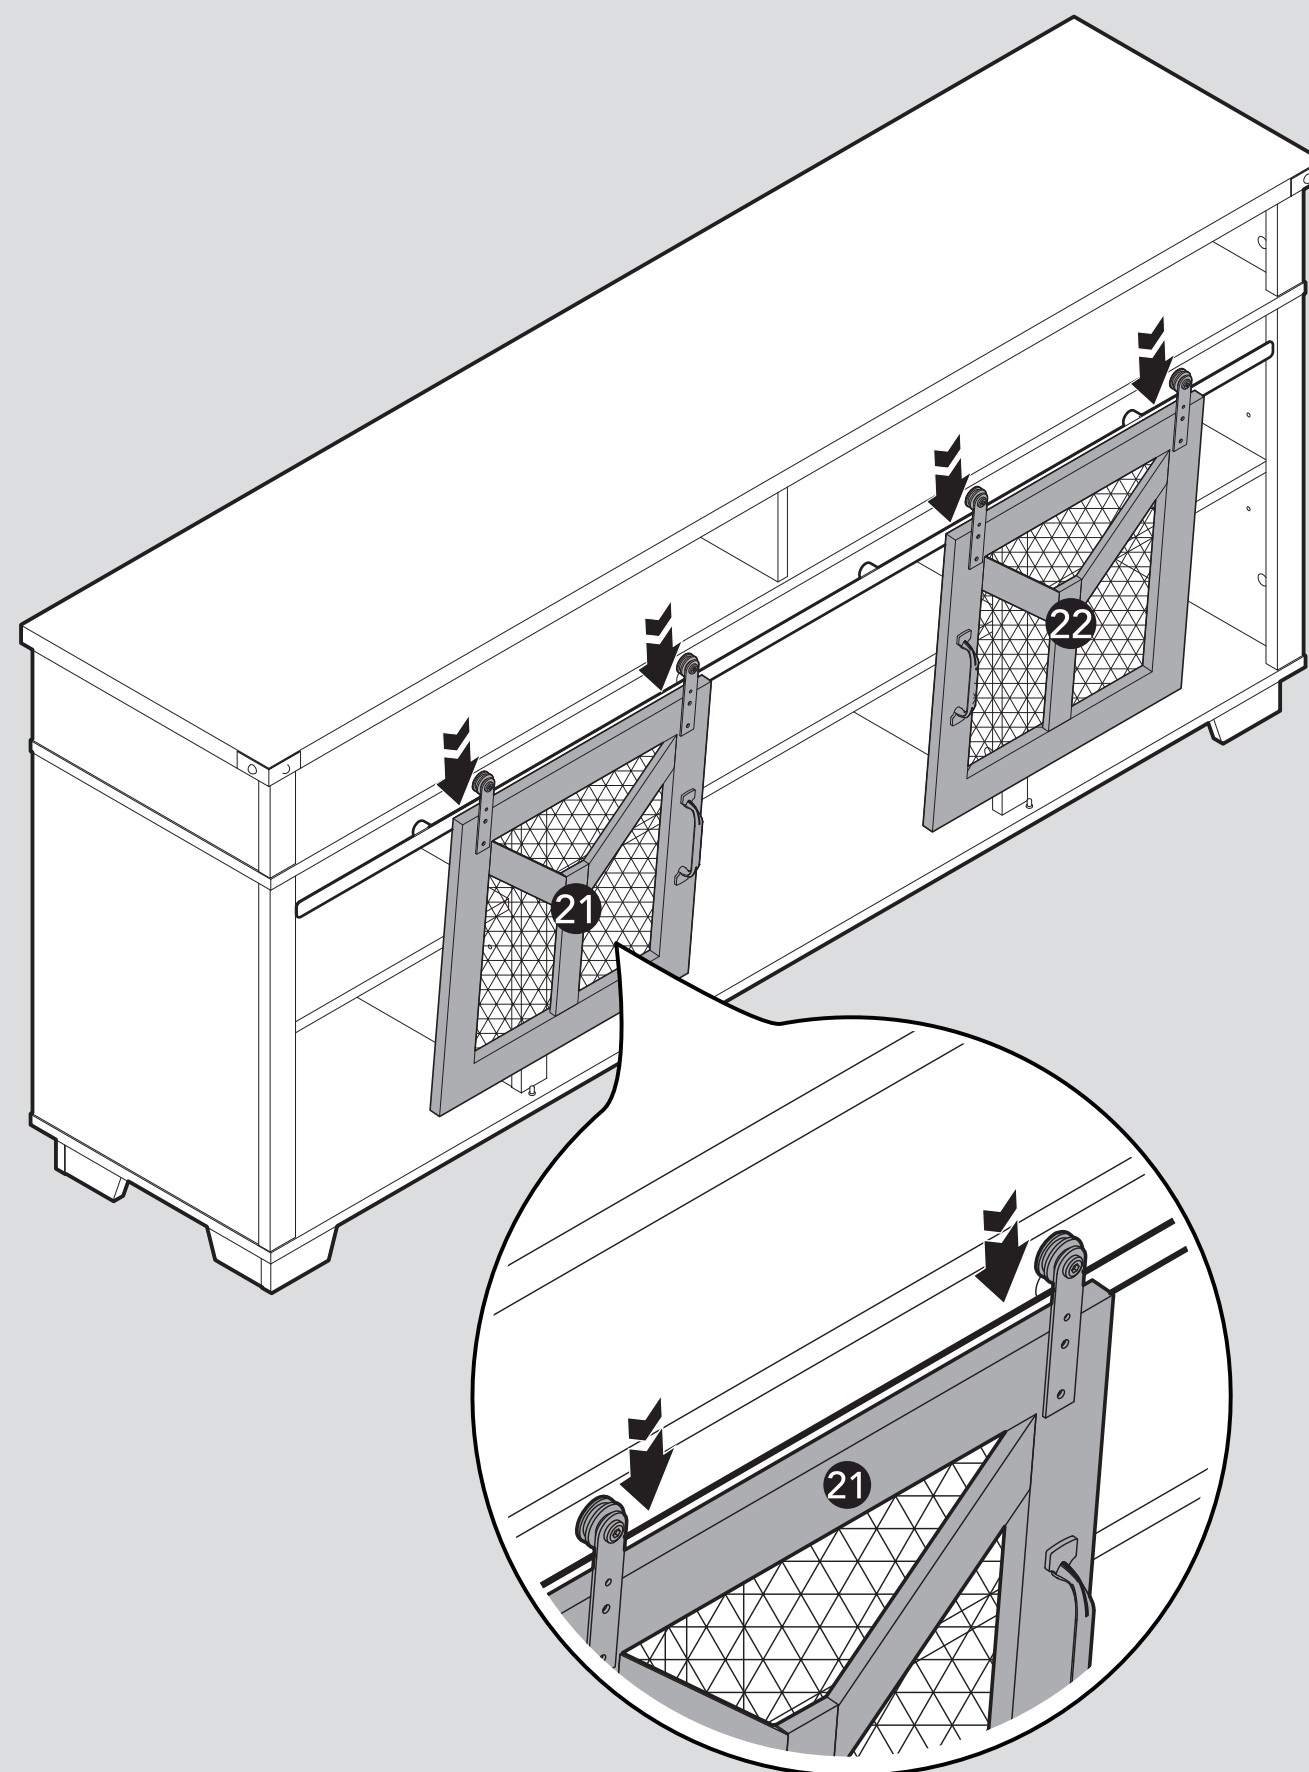 


28

 Ø x4

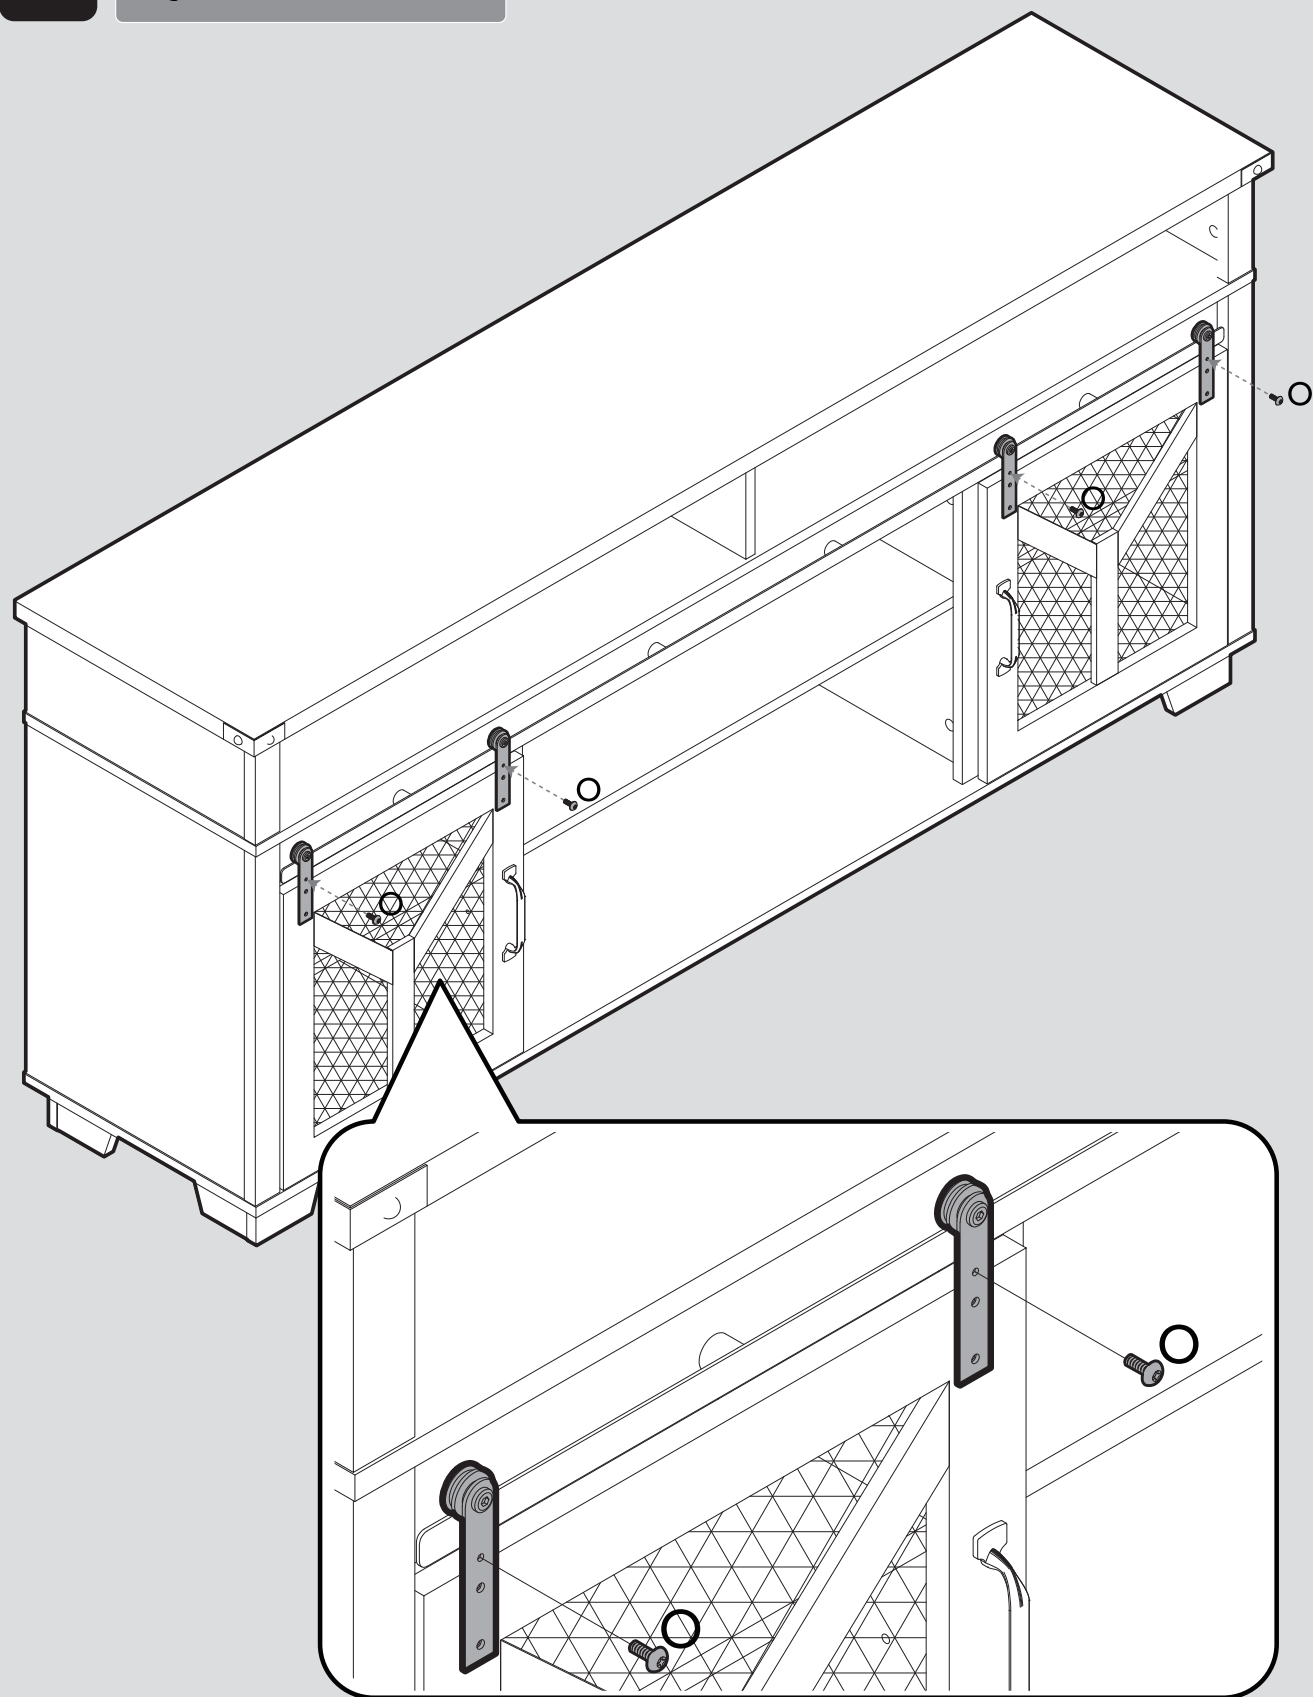


29

 G x24 I x24

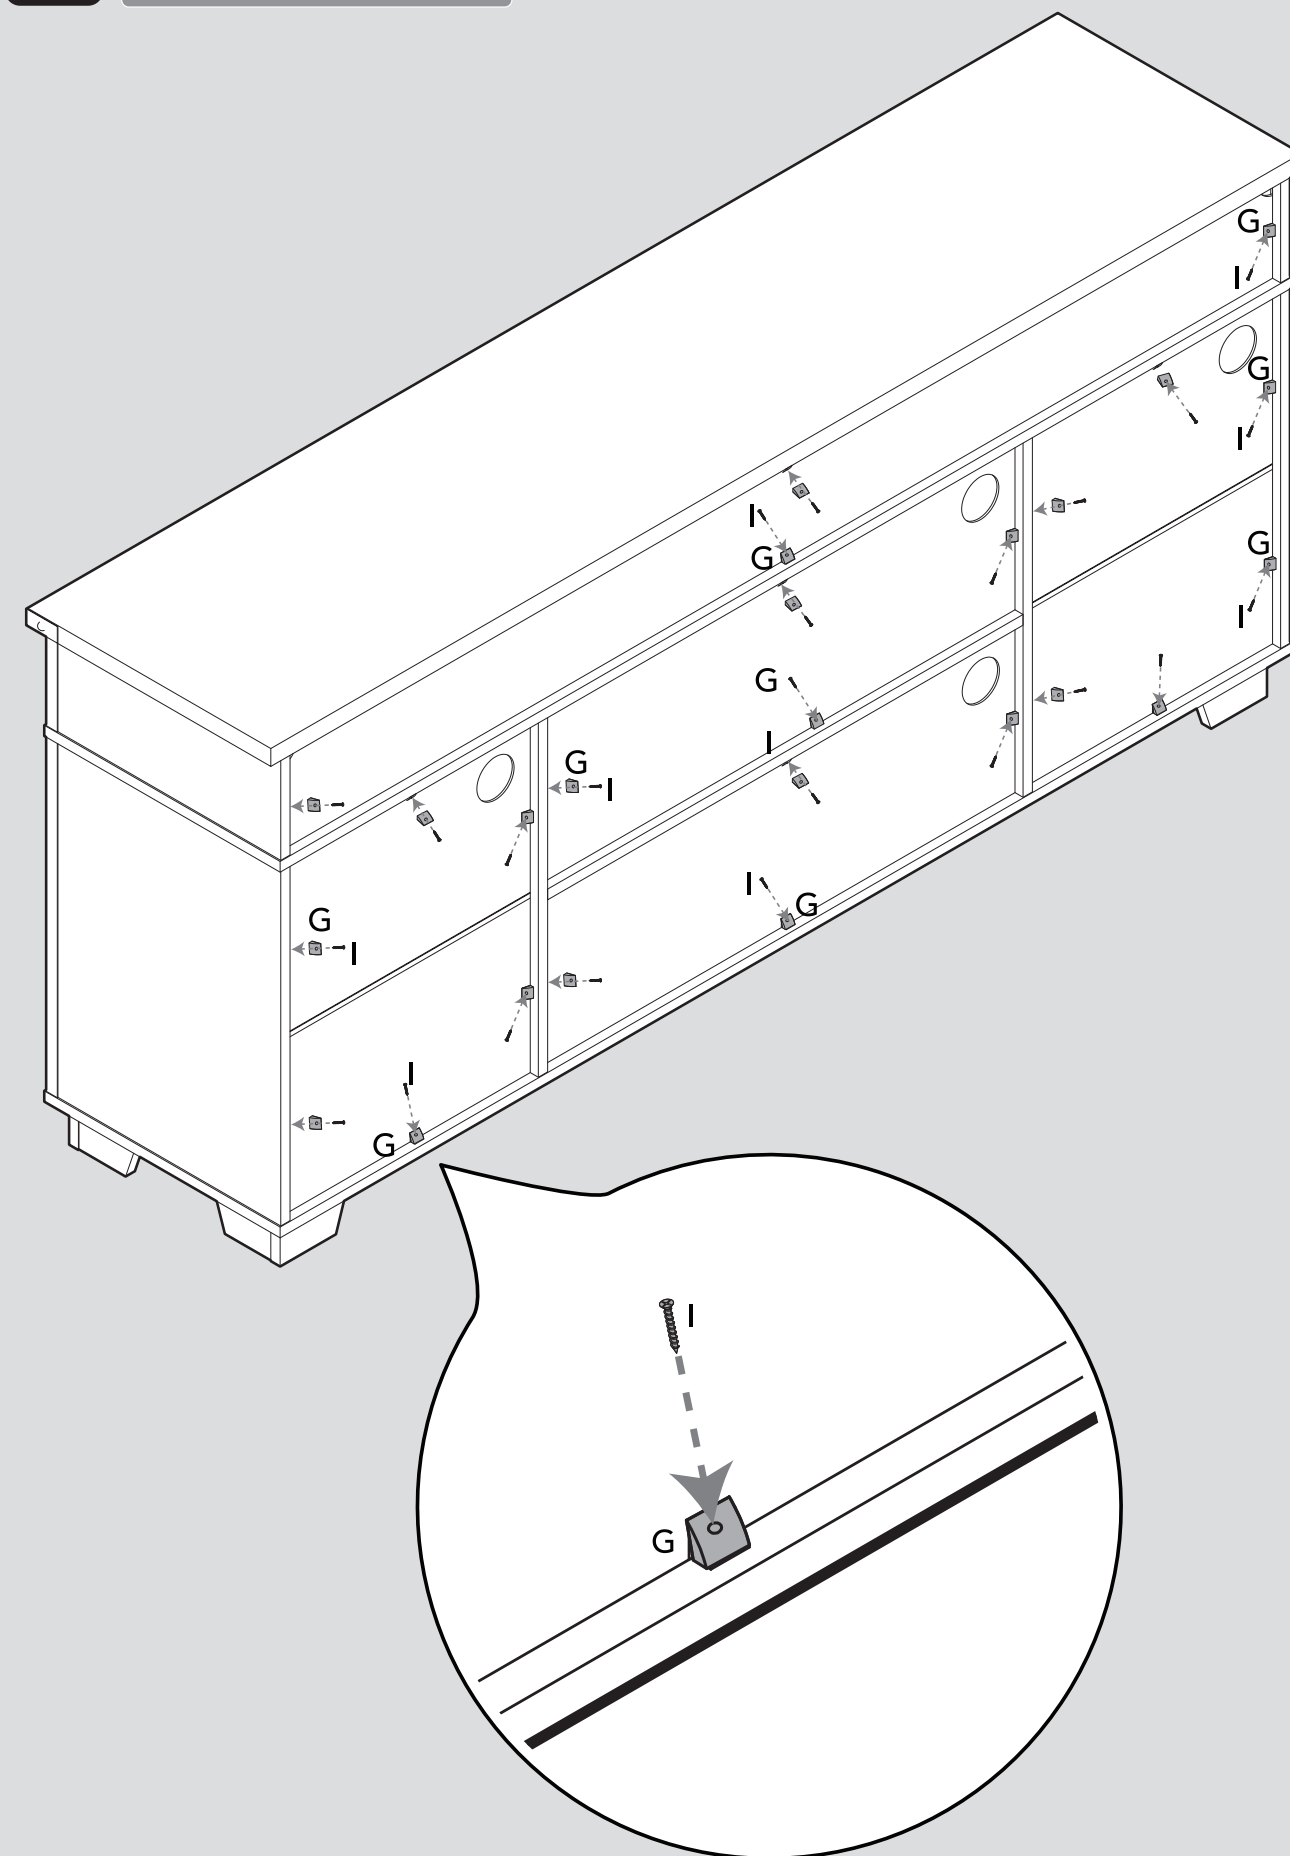





30

  H x2

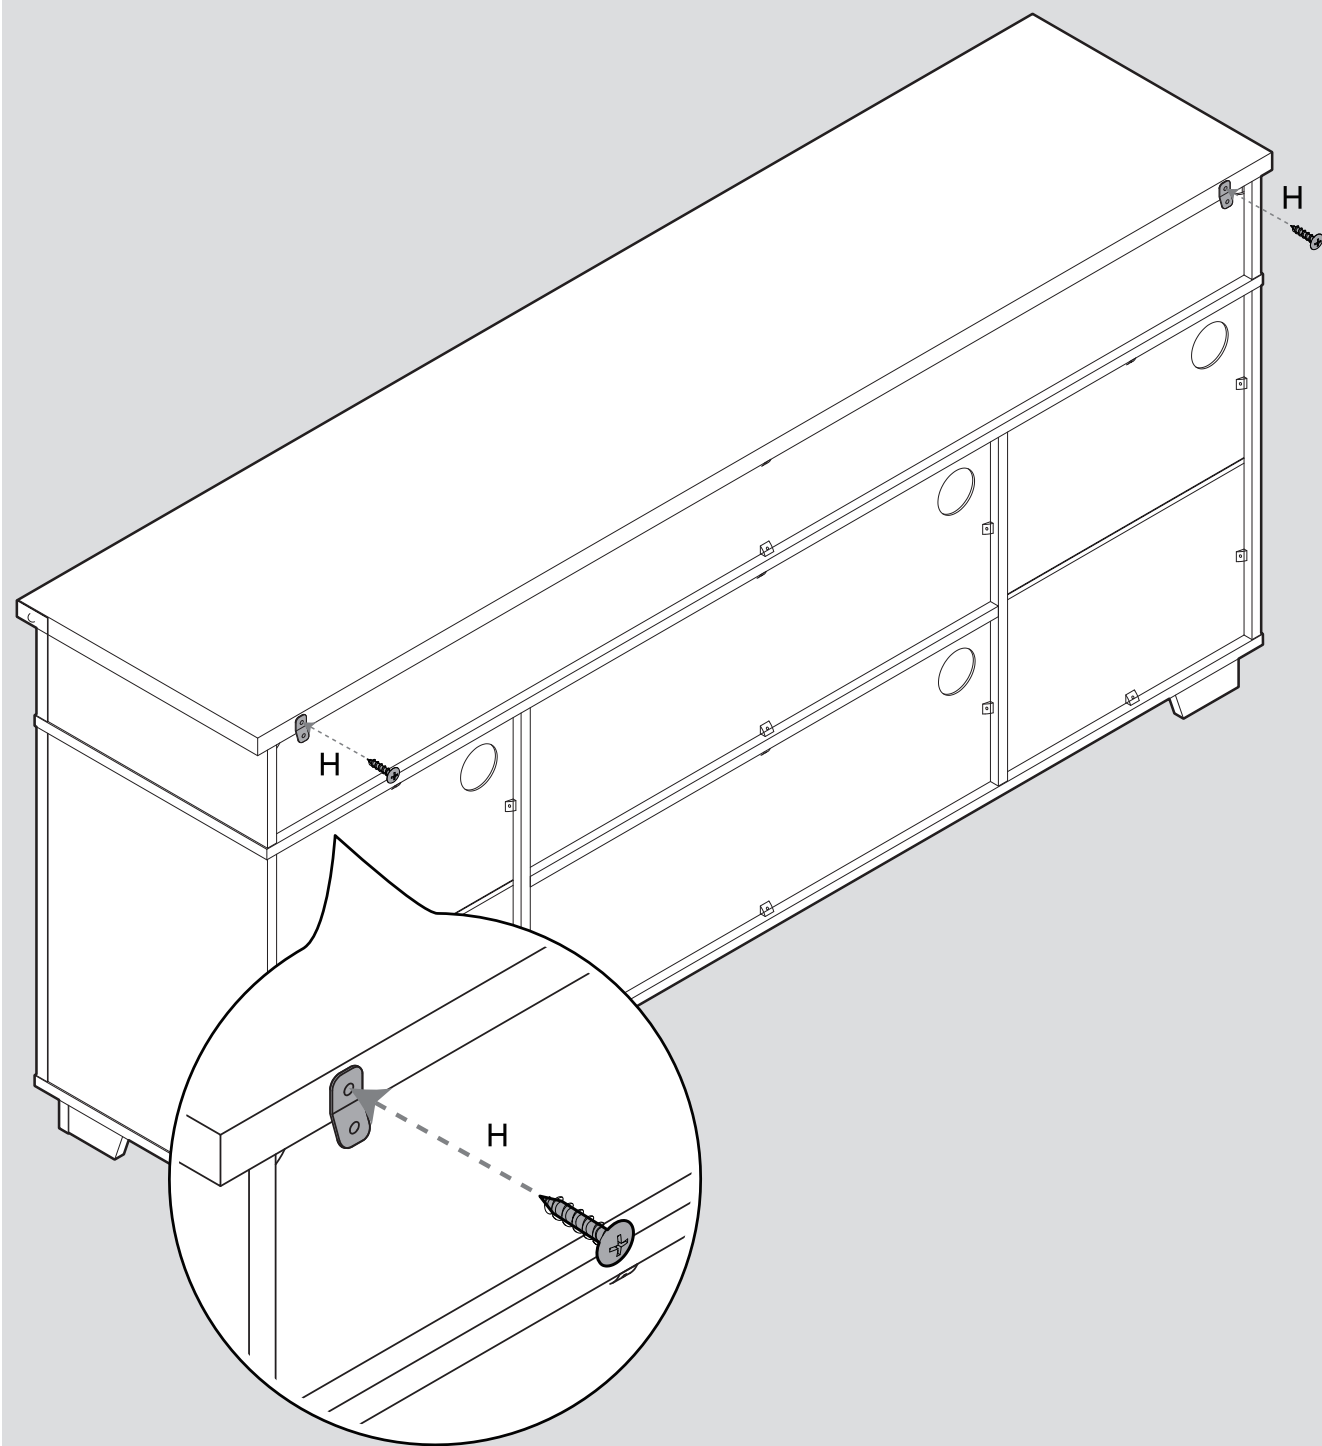

31

     H x2

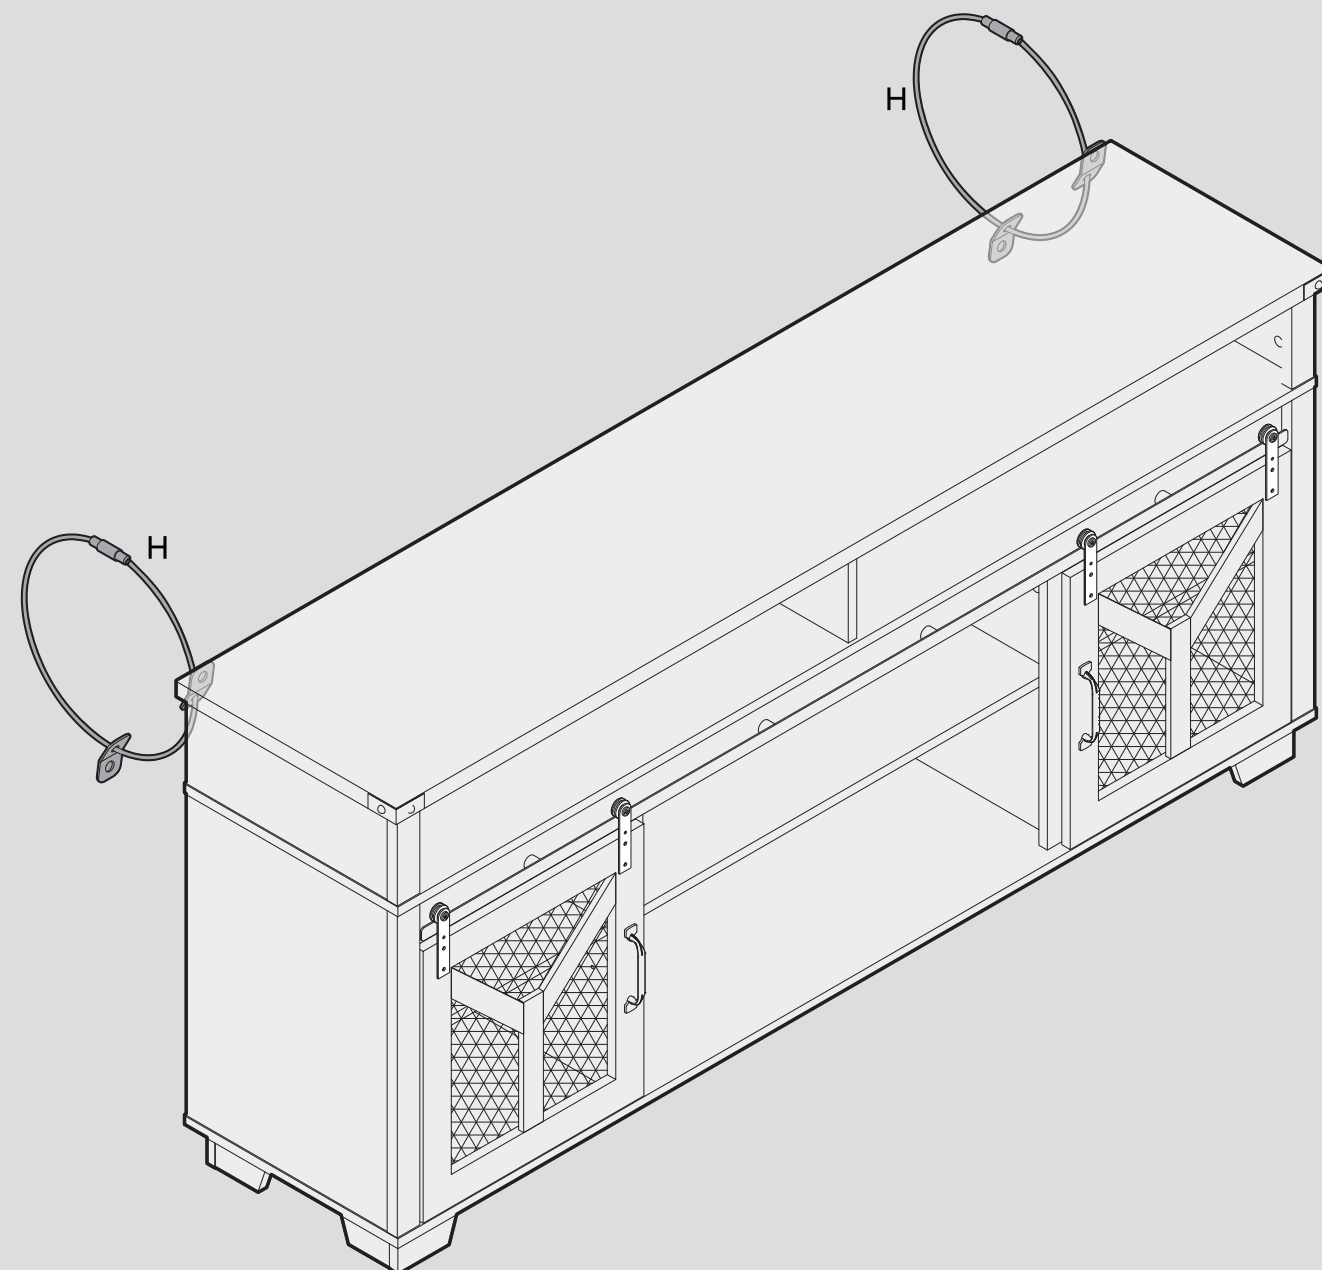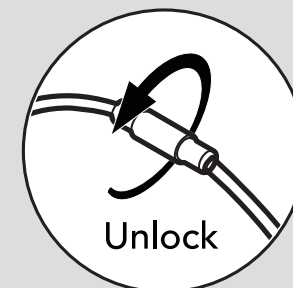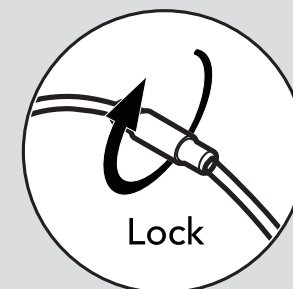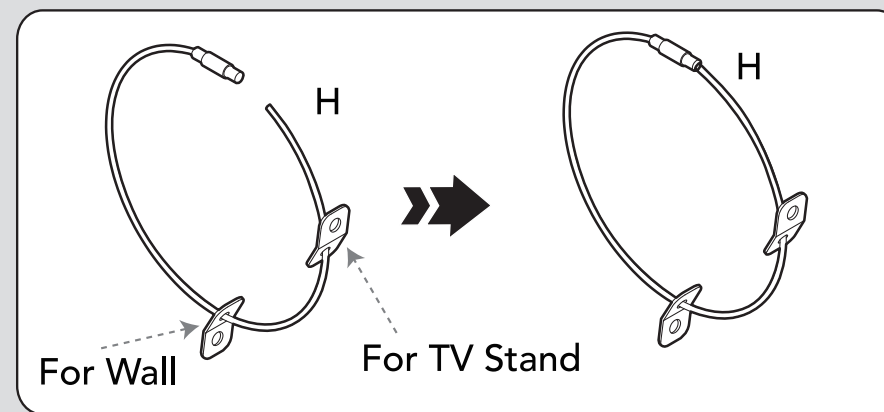





## WALL



Attach the sticker to your needs. The sticker easily falls off after an extended period of time.

 
H

R

## Using with Remote Control



The remote control is provided for easy control of color, brightness and lighting mode. Remove the plastic tab underneath the battery before use.

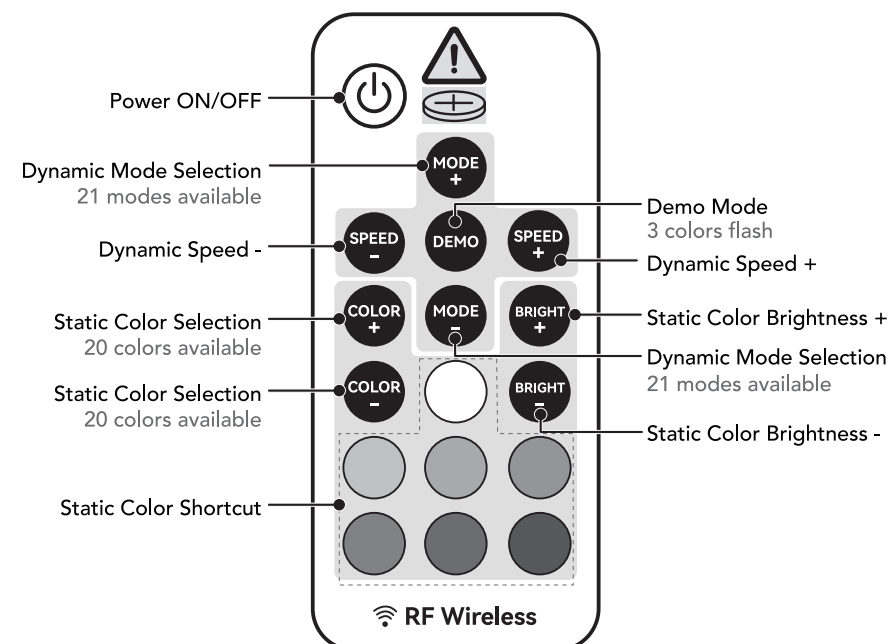

### WARNING

 
- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



## Replacing Battery



- Replace with new battery of the same type (CR2025, 3V) when necessary.
- When not using the remote control for an extended period of time, take out the battery.

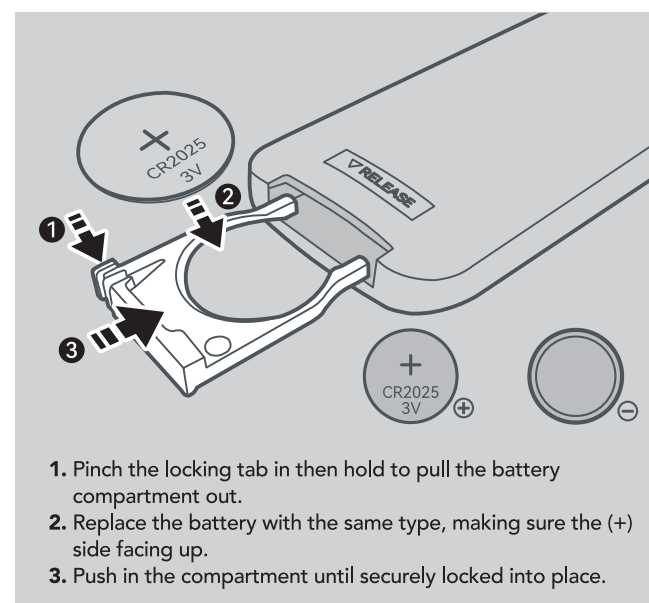

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. **DO NOT** dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Use or replace with new battery of the same type (CR2025, 3V).
- Non-rechargeable batteries are not to be recharged.
- **DO NOT** force discharge, recharge, disassemble, heat above 140 °F/60°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- **DO NOT** mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

### FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



成品尺寸：210\*297mm

骑马钉

材质：封面128克铜版纸

内页80g书纸

单色印刷