
# **OWNER'S MANUAL**


# **CEILING FAN LIGHT SHINE YOUR LIFE**





- For your safety, please entrust a professional person to install.
- For your safety, please wear gloves during installation.
- To avoid risk of electric shock, be sure to shut off power at the main fuse or circuit breaker box before installing or servicing this fixture.
   Turning off the electrical power by using the light switch is not sufficient to prevent electrical shock.
- All power supply shall not exceed the specified range (rated voltage DC110V/DC265V,50Hz,Support global voltage standard, can convert your country's standard voltage).
- Do not install lamps in the unstable ceiling or open air.
- In order to ensure safety, if there is any problem with lamps, please entrust professional personnel to carry out maintenance.
- Before installation, the whole lamp shall be tested for lighting, and the appearance of the lamp shall be checked for damage.

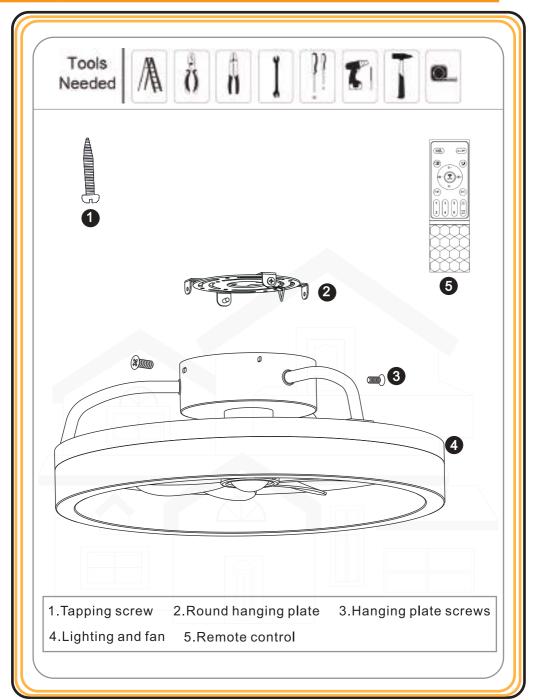

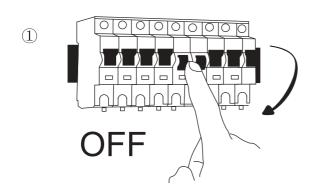




Failure to disconnect the power supply prior to installation may result in serious injury or death.


For a full description of the precautionary measures and warnings, please see the safety precautions page.

Punch holes in the ceiling with an impact drill, and then install expansion screws.

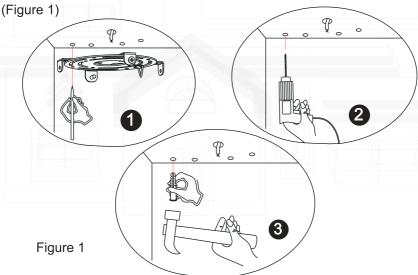


#### Suspension

2. Install the ceiling hanging plate, and then screw it down.(Figure 2)

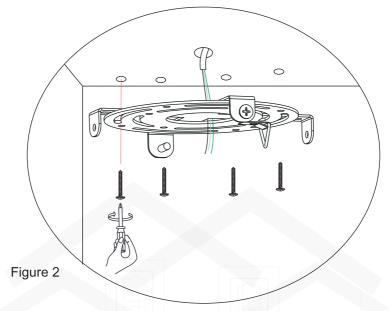

3. Hook the lamp body with the self-provided safety hook to prevent the lamp from falling, and then connect the power cord. (Figure 3)

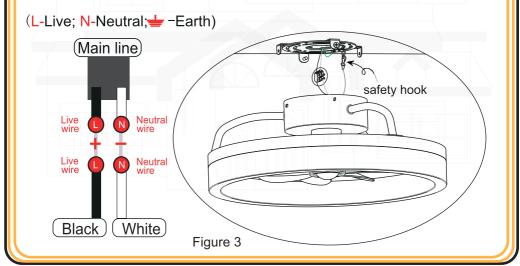

4. Install the lamp body on the upside- down board (Figure 4)

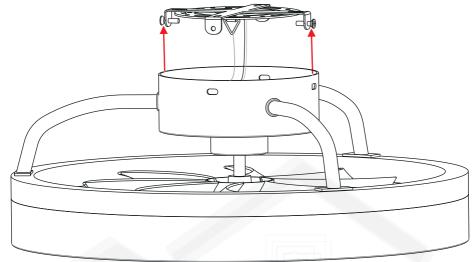


Figure 4

5. Lock the hanging plate and the lamp body together with screws to prevent falling.(Figure 5)





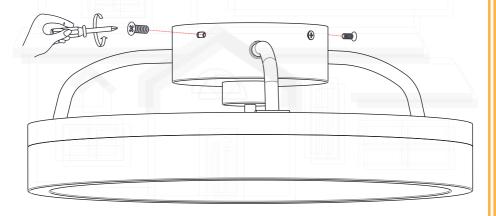


Figure 5

 

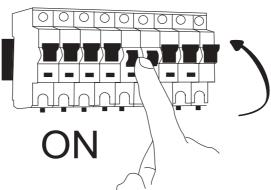


 

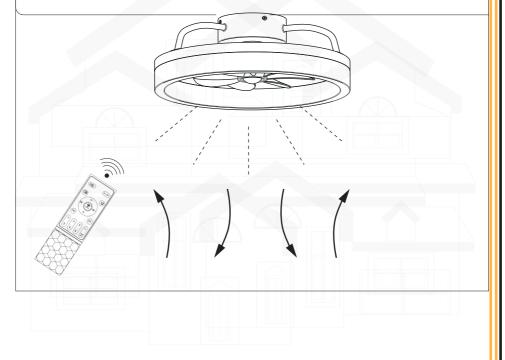

#### Remote control (Emitter) operation

Please click the picture below to install the remote control battery. Select whether to install a remote control wall mount

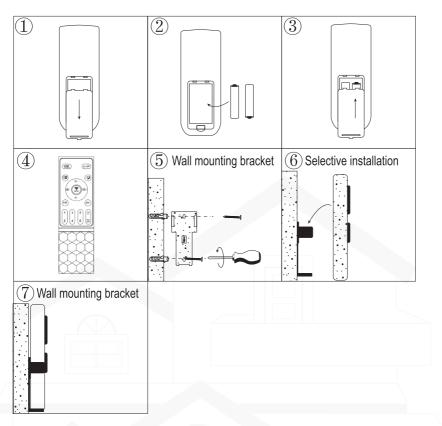

This remote is pre-programmed from the factory and should work right out of the box once the battery is installed. Should, for any reason, reprogramming be needed, please follow the syncing process as follows

SYNCING INSTRUCTIONS: Turn off the main power, then turn it back on. Within 30 seconds.press and hold the high and low speed buttons on the remote at the same time for 5 seconds.

The LED indicator will fash 3 times, signaling a successful synchronization. Once complete, the fan will start on the low speed with the light (if applicable) off.

ATTENTION! Do NOT use this fan with a dimmer switch or variable speed wall control. Using a dimmer switch or variable speed wall control will damage the fan.

## **Function Instruction**



#### **Method of connecting APP**

#### Before Installation:

- a) Please do not install any dimmer switch, but it is available to use a simple "on/off" wall switch with the remote.
- b) If you purchased the dimmable ceiling fan and are willing to install a dimmer switch, please do not install this remote. If does not acknowledge installing both controls at the same time.

#### Installation & Function



og,

(E)

(2H



Schematic Diagram Of Controller Wiring

Here Industrial Light Wee Bus

Each correspondent

Fan Motor

1.ON/OFF

2 Join/Get rid of

3.Color tenmoerature switching

4 Night lights

5 Brightness+

8 Brightness-

7 Color tenmoerature -8 Color tenmoerature +

9.Full pass

10.Set time

11.Fan off

12.Fan 1 gear

13.Fan 2 gear

14.Fan 3 gear

15.Fan 4 gear

16. Fan 5 gear

17.Fan 6 gear

18. Positive and cons

19. Wind turbing

Note: The battery for the remote controller is not included under the safety concern in transit, please use model# "AAA"battery.

"For several ceiling fans, please press the the turn office button quickly, the light tone will change immediately.

#### Re-Program:

- a) Turn Off the main power of the Ceiling fan for 10 minute, then turn On the main power
- b) Press General Off for 5 seconds at the same time
- c) The light will flicker 3 times

Then please try the remote again.



For your own safety tum off power at fuse box or circuit breaker before trouble shooting.

Trouble	Probable Cause	Suggested Remedy
1.FAN WILL NOT START	1. Fuse or circuit breaker blown. 2. Loose power line connections to the fan, or loose switch wire connections in the switch housing. 3. Dead battery in remote control. 4. Reversing switch in neutral position.	1. Check main and branch circuit fuses or circuit breakers. 2. Check line wire connections to fan and switch wire connections in the switch housings.  CAUTION: Make sure main power is turned off!  3. Replace with new battery.  4. Make sure reversing switch position is all the way to one side.
2.FAN SOUNDS NOISY	1. Loose screws in motor housing. 2. Wire connectors inside housing rattling. 3. Motor noise caused by solid state variable speed control.	1. Check to make sure all screws in motor housing are snug (do not overtighten). 2. Check to make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. CAUTION: Make sure main power is turned off! 3. Some fan motors are sensitive to signals from solid-state variable speed controls. Solid-state controls are not recommended, choose an alternative control method.
3.FAN WOBBLES EXCESSIVELY	Setscrew in downrod support is loose.     Setscrew in downrod/hanger ball assembly is loose.     Hanger bracket and/or ceiling assembly. outlet box is not securely fastened.	1. Tighten both setscrews securely in downrod support. 2. Tighten the setscrew in the downrod/hanger ball. 3. Tighten the hanger bracket screws to the outlet box, and secure outlet box.

### Cleaning and maintenance

#### **Dear Customer:**

This product from the date of purchase, free warranty 1 year. If the product has been misused, damaged by accident or in any other way of improper use, this warranty becomes void. If you have any problem in using the product, please feel free to contact uS, after-sales email address is: shangweishengdeng@163.com

Your satisfaction is our purpose of service.





Email:uroadmin@urogoo.com Phone:(657)384-1547

**MADE IN CHINA**