

**ASSEMBLY INSTRUCTION**  
**7.5FT PRE-LIT FLOCKED ARTIFICIAL**  
**CHRISTMAS TREE WITH 250 WARM**  
**WHITE C3 CLEAR LED LIGHTS,**  
**9 FUNCTION W/FOOT PEDAL**



---

Please carefully unpack and identify each component before beginning assembly. Before you begin, please refer to parts list to make sure that you have all parts. Please take care when assembling the unit and always place the parts on a clean, soft surface. If you require assistance with assembly or parts, please call 888-357-7263.

---

Get social with us and discover more about our products, tips and exclusive discounts!





 

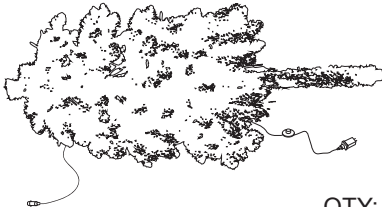 

 
## BEFORE ASSEMBLING

1. Please check and make sure all the parts have been received.
2. Tools are not required for assembly.
3. The length of extension cord is 60 inch, please set up the tree in the suitable place away from the power socket.

## CONTENT

Reference No.	Height	Number of tree parts	Stand
2030800035	7.5'	4	Metal

## PART LIST
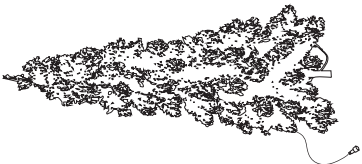
<p>Tree Top (A)</p>  <p>QTY: 1</p>	<p>Upper Part (B)</p>  <p>QTY: 1</p>
<p>Lower Part (C)</p>  <p>QTY: 1</p>	<p>Lower Part (D)</p>  <p>QTY: 1</p>
<p>Metal Stand (E)</p>  <p>QTY: 1</p>	

**STEP-BY-STEP ASSEMBLY**

PLEASE CAREFULLY UNPACK AND IDENTIFY EACH COMPONENT BEFORE BEGINNING ASSEMBLY. BEFORE YOU BEGIN, PLEASE REFER TO PARTS LIST TO MAKE SURE THAT YOU HAVE ALL PARTS.

- STEP 1** Insert the trunk in the stand as indicated in Figure 1. When the trunk consists of more than one part, begin by inserting into the stand (Part E) the lower parts of the tree (Part D, Part C, Part B) in respective order, ending with the top (Part A).

 
 
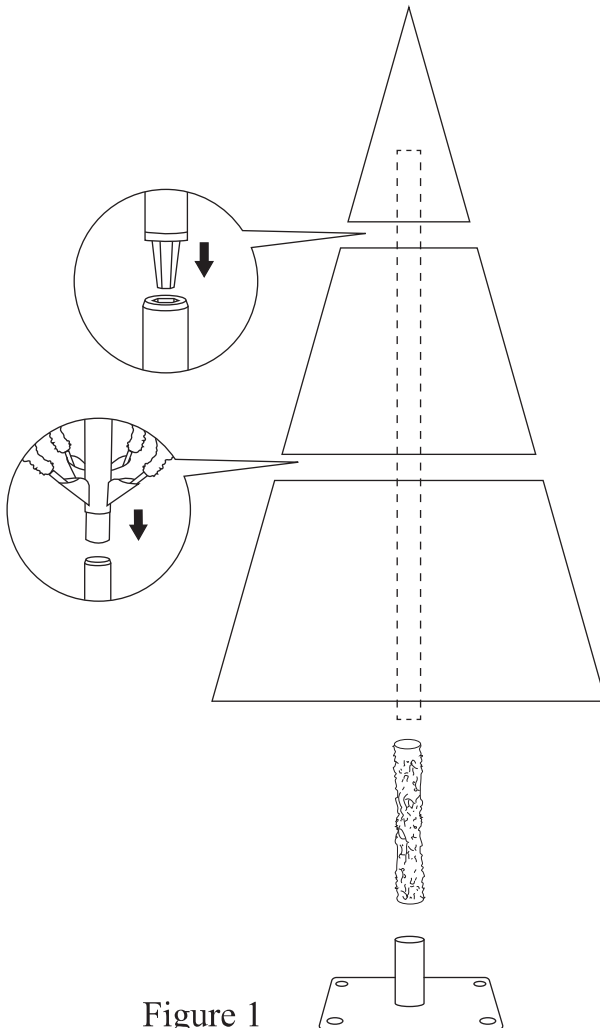 


Figure 1

 
**STEP 2** Unfold one-by-one the branches beginning by the lower branches.

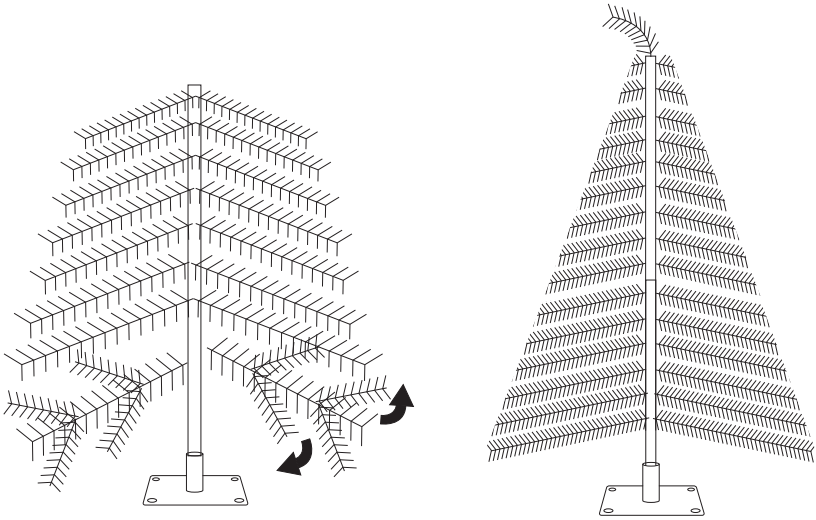

**STEP 3** Make final adjustment of the tree.

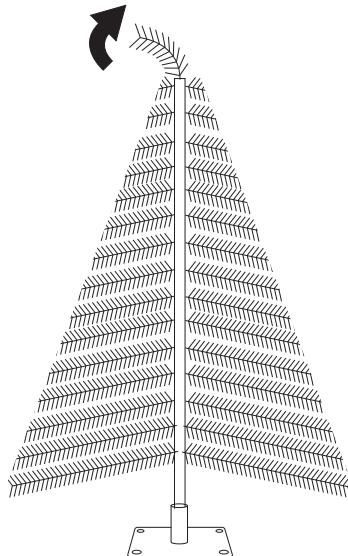

**STEP 5** Connect the plug end at the lower part of section A to the socket end at the upper part of section B, and connect the plug end at the lower part of section B to the socket end at the upper part of section C.

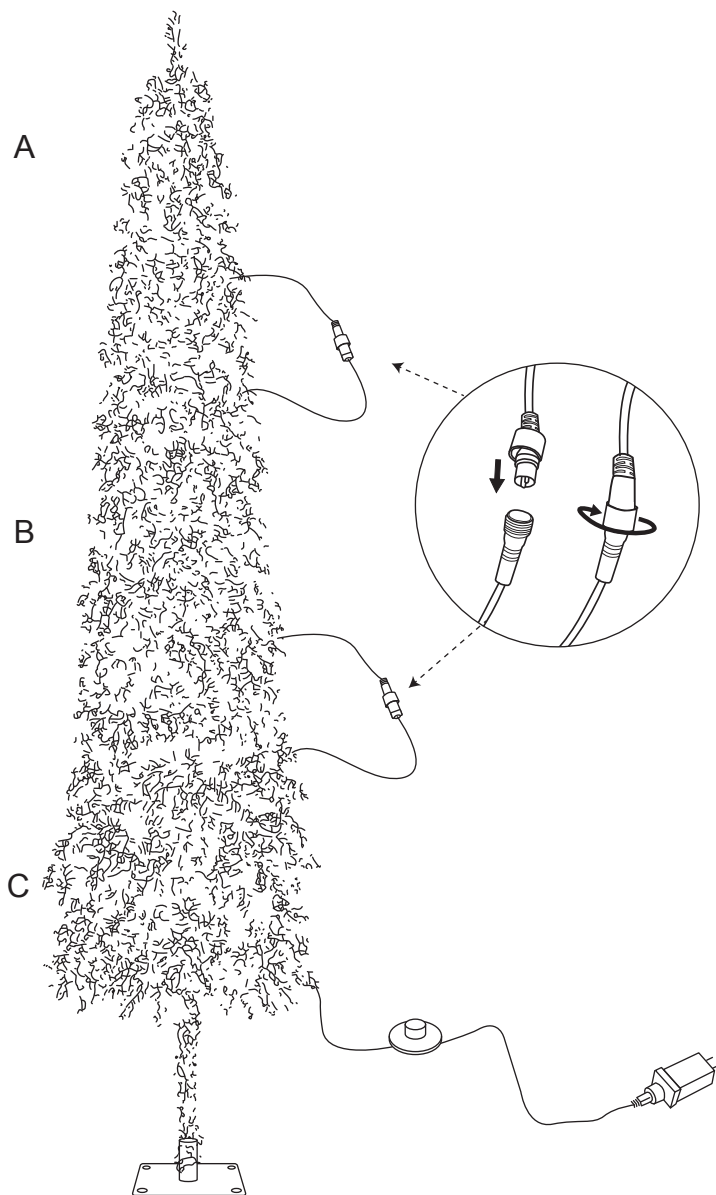

## DISASSEMBLY AND STORAGE

1. Remove all decorations.
2. Disassemble the tree in reverse order of assembly.
3. Suggest to store the tree in its original carton box or in storage bag and keep in a cool dry place.

## CAUTION

1. To be assembled by or under the supervision of an adult.
2. Keep plastic bags out of reach of children.
3. Keep away from fire or hot temperatures.
4. Do not light a candle on or near the tree.
5. Do not leave lighted electric cords unattended.
6. Do not overload with heavy ornaments and/or too many decorations.
7. Place the tree on an even surface to ensure stability.
8. This tree is intended for indoor use only.
9. Keep this information for future reference.

Made in China

glitzhom<sup>®</sup>

---

**Glitzhom ,LLC.**

Toll free 888-357-7263

[customerservice@glitzhom.com](mailto:customerservice@glitzhom.com)