


Part 1: Unboxing Instructions

Unbox Carefully: Use scissors to cut the sealed bag along the edge of the bag, **being careful not to cut the sofa body**, then remove the bag and take the sofa out of the sealed bag. The sofa will expand rapidly.



Patting wrinkles: After the sofa is taken out, it will be slightly wrinkled and dented at first. This is normal because the air has not yet completely filled the foam. Patting the wrinkles with your hands will be effective.

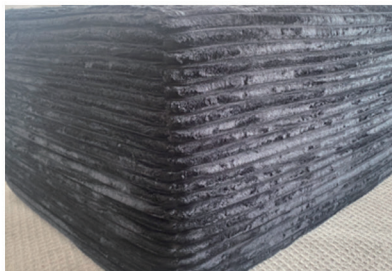

Part 2: Daily Maintenance instructions

- 1 Regular Cleaning:** Vacuum the sofa regularly to remove dust and dirt from surfaces and crevices.
- 2 Sunlight Protection:** Avoid placing the sofa in direct sunlight to prevent fading.
- 3 Stain Removal:** Use a damp cloth or sponge to rub away stains. Avoid harsh chemicals.

Part 3: Return & Warranty policy

If the item is damaged or defective, please take photos as evidence for replacements and refunds. Please do not return to store, contact the seller if you have any troubles with this product.

Important Note About Your New Sofa

The sofa may exhibit slight surface irregularities upon unpacking due to foam compression during transit. This is completely normal and easily resolved:



Quick Fix Steps:

1. Unzip the cover located at the bottom of the sofa.
2. Gently pull and adjust the foam cushions to redistribute filling evenly.
3. Lightly pat the affected areas to help the foam regain its original shape.
4. Reseal the zipper when complete.

Note:

Please adjust using hands only (**Sharp tools may compromise fabric integrity**)
Should you require additional assistance, we're happy to provide a step-by-step video guide upon request.