 
 



Product Manual




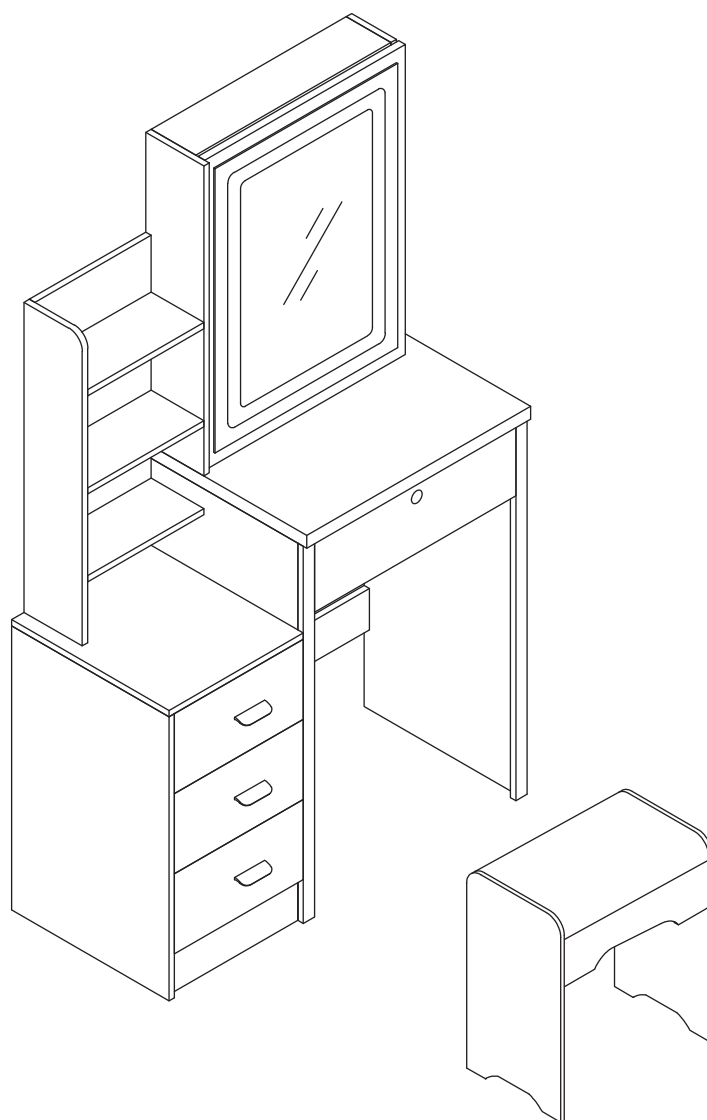


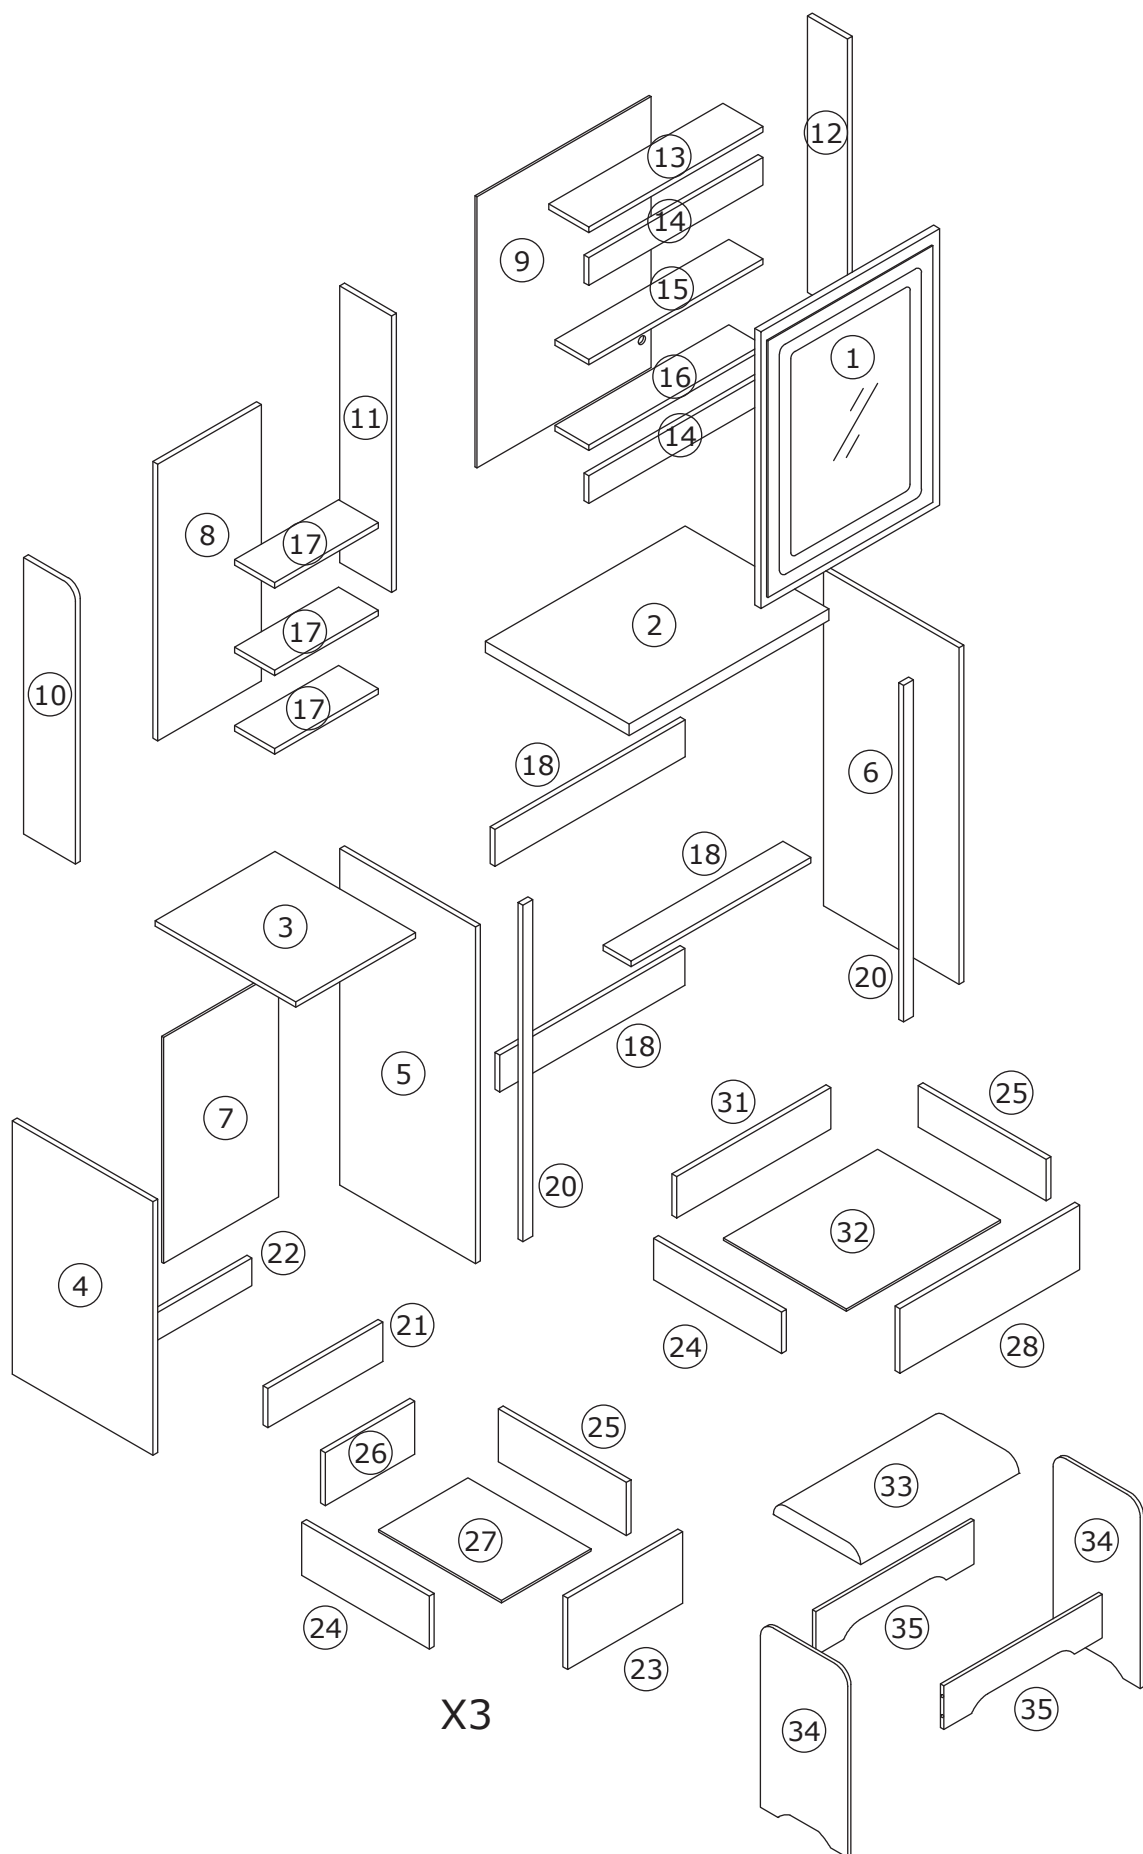





X3

     Eccentric installation principle


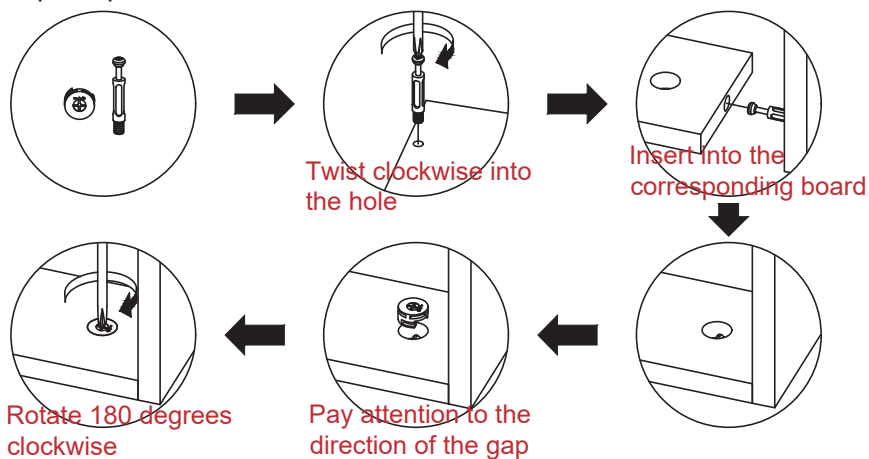


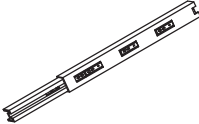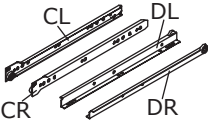A  x90	B ($\phi 12$)  x90	C  x1(SET)	D  x4(SET)	E ($\phi 3.5 \times 12$)  x70
F ($\phi 3 \times 30$)  x18	G  x3	H (3.5×16)  x7	I  x20	J  x20
K  x1	L  x4	M  x14	N ($\phi 3.5 \times 14$)  x5	 x5

   
 
1

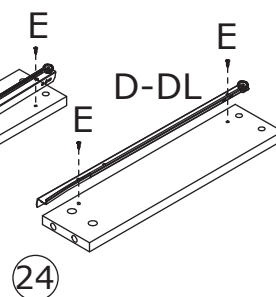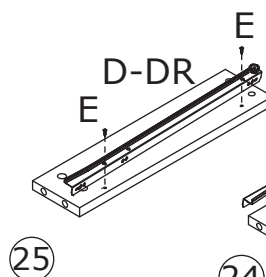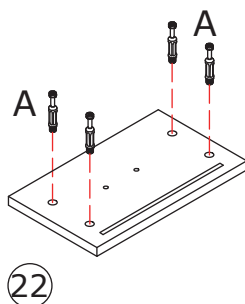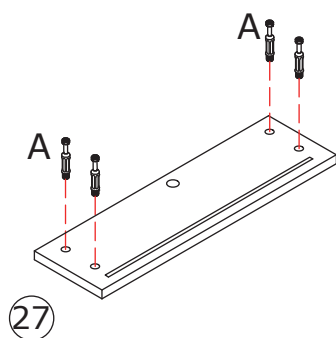


2

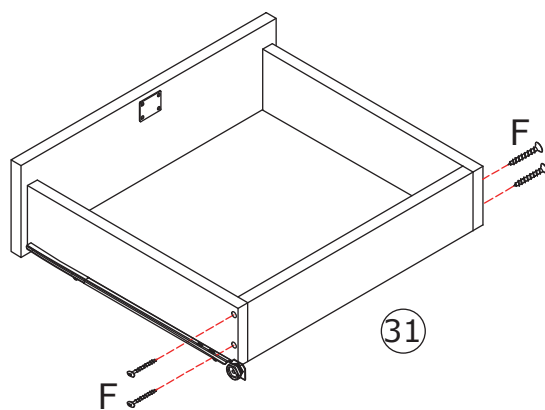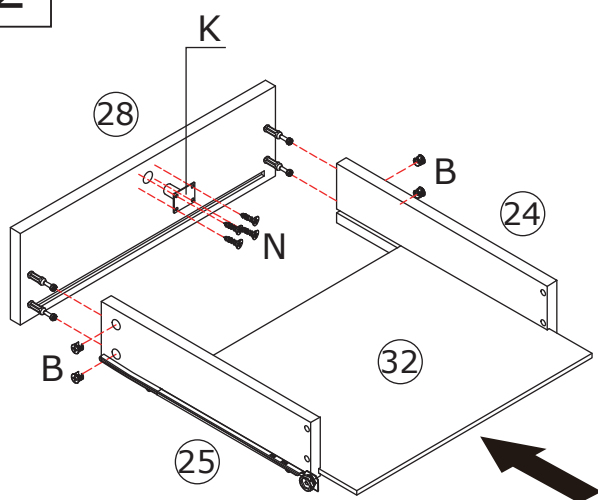  




3

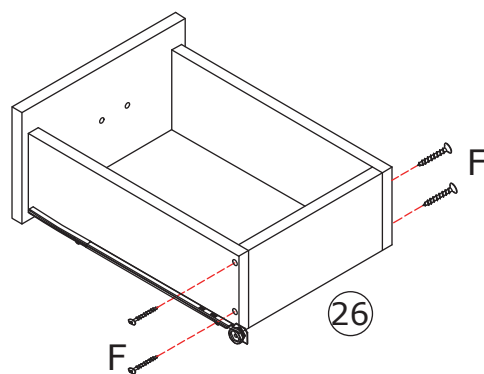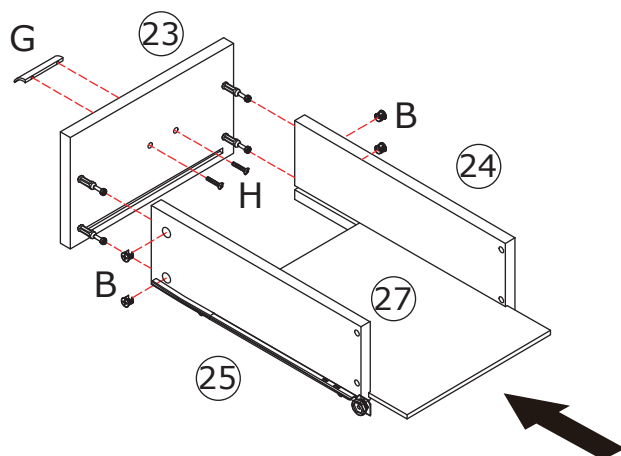  



4

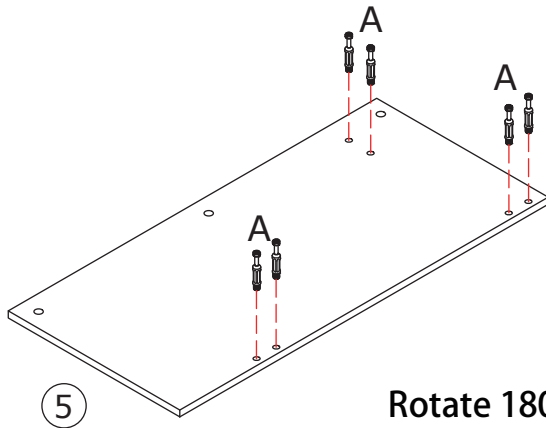 


Rotate 180°

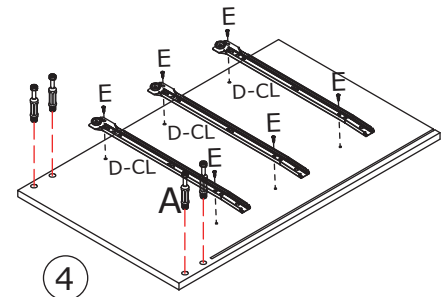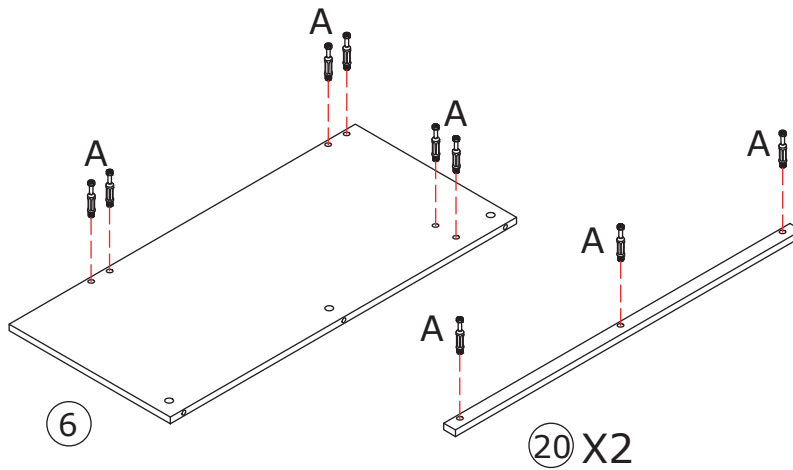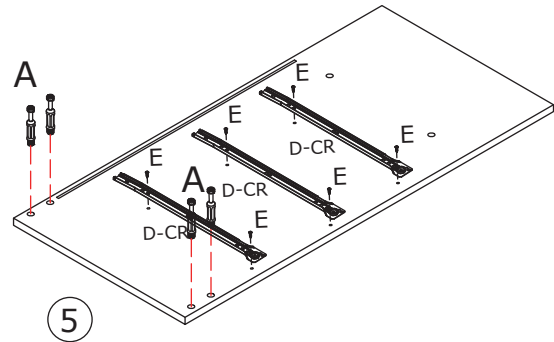   


5

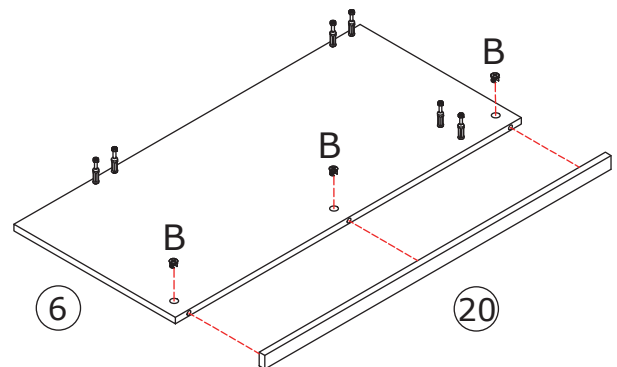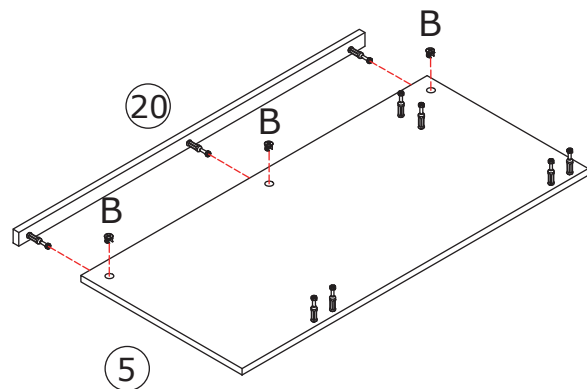  


6

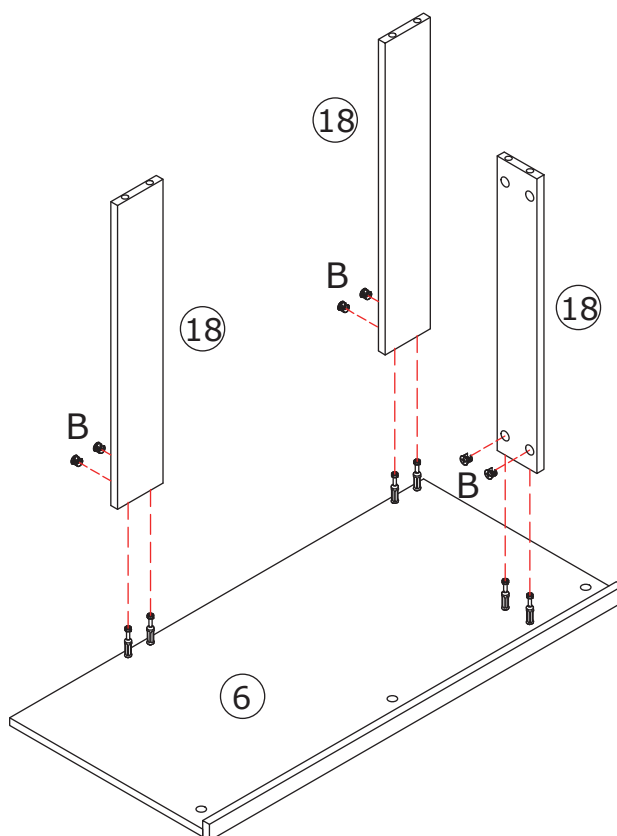 


7

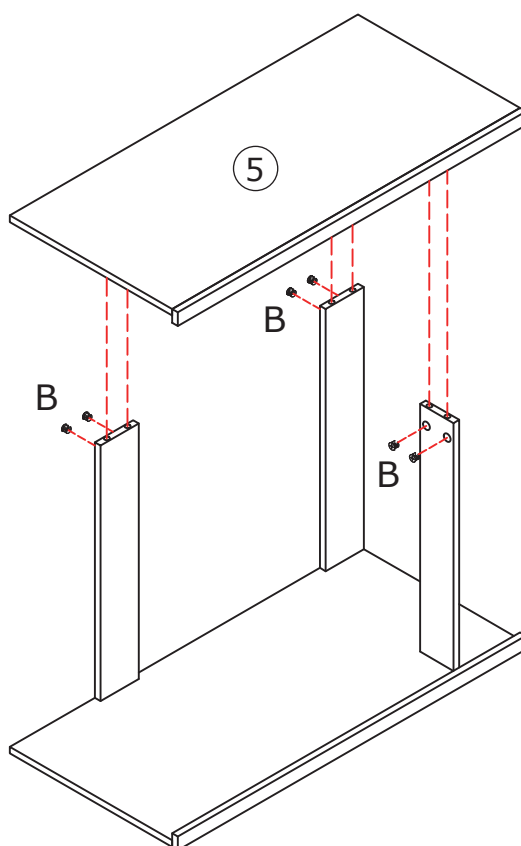 


8

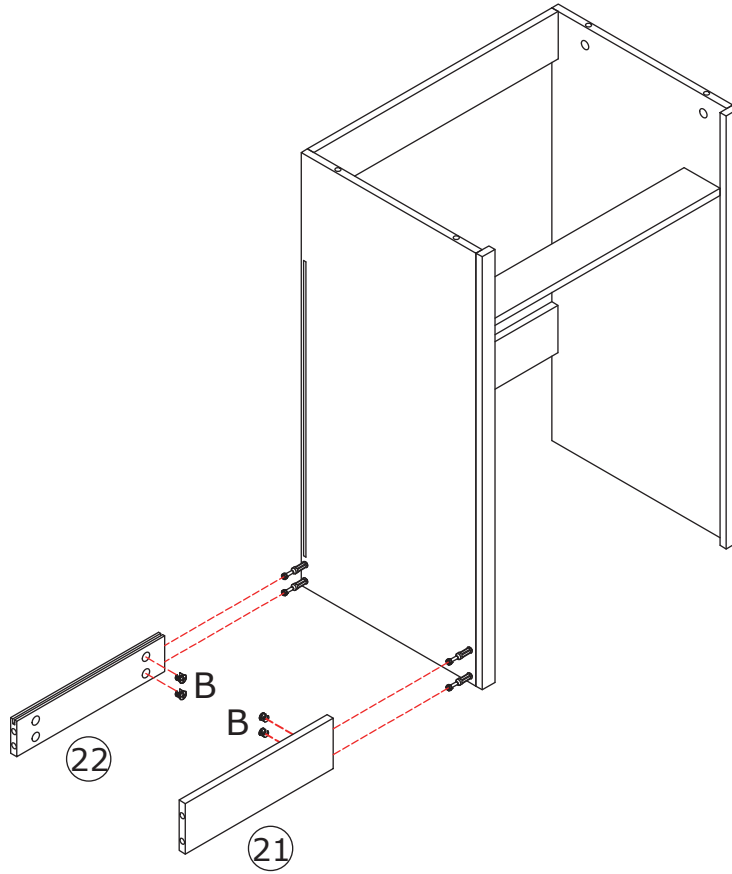 


9

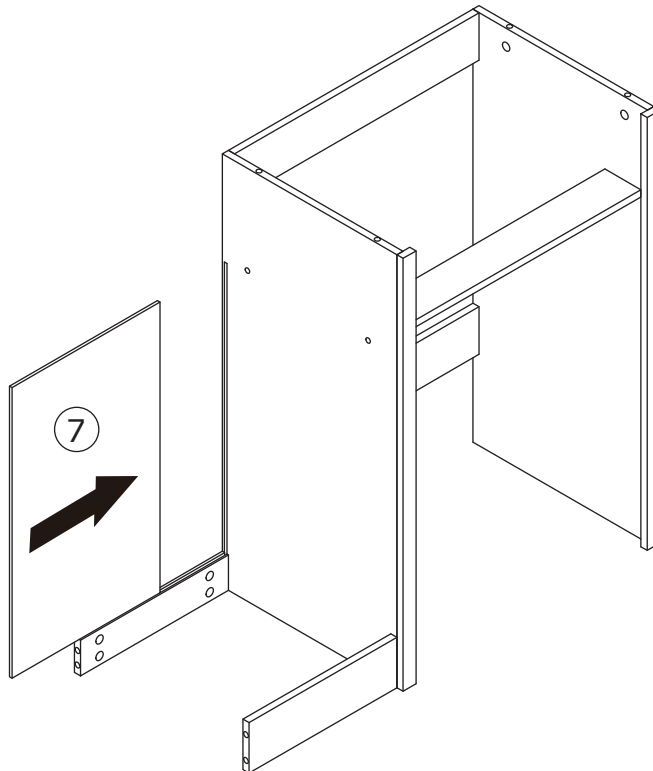 


10

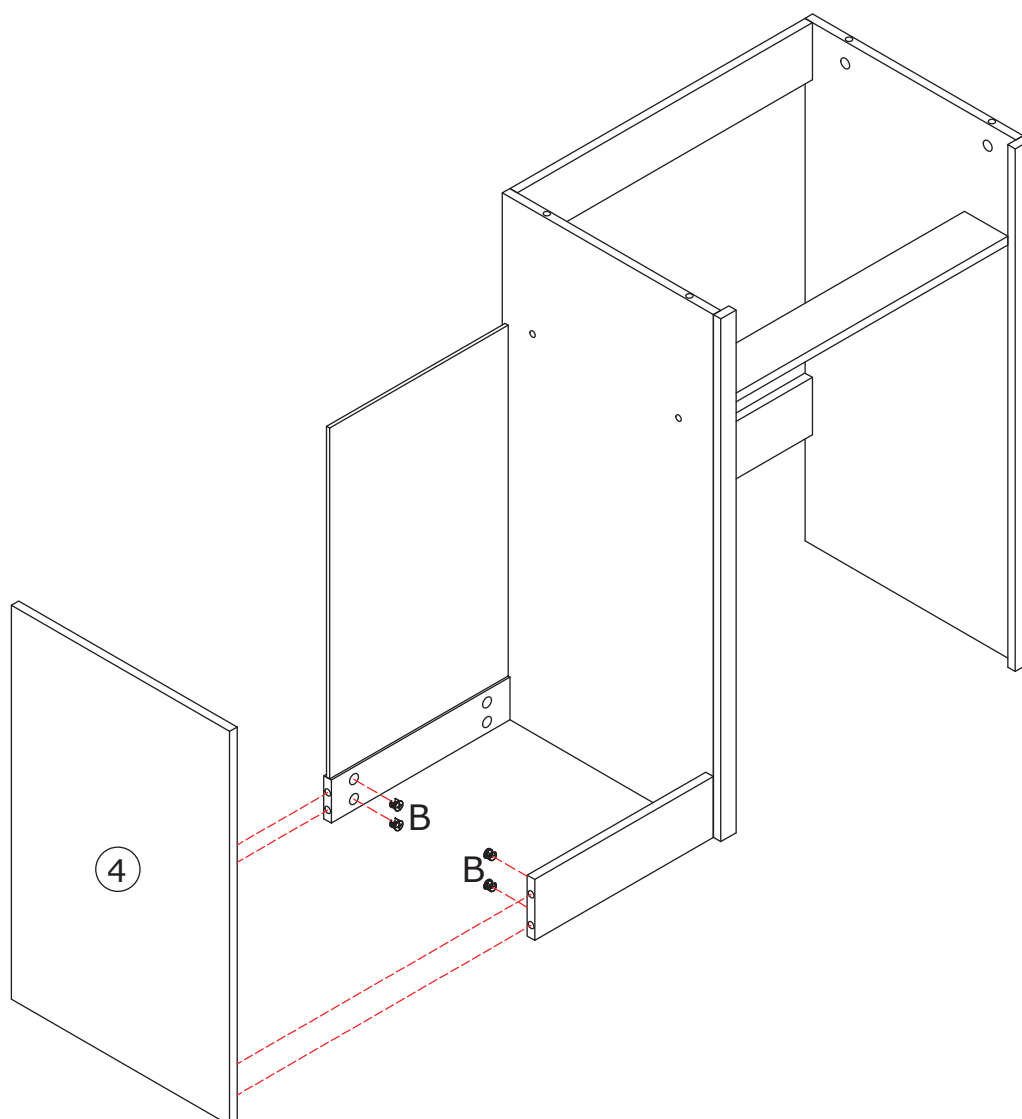 


11

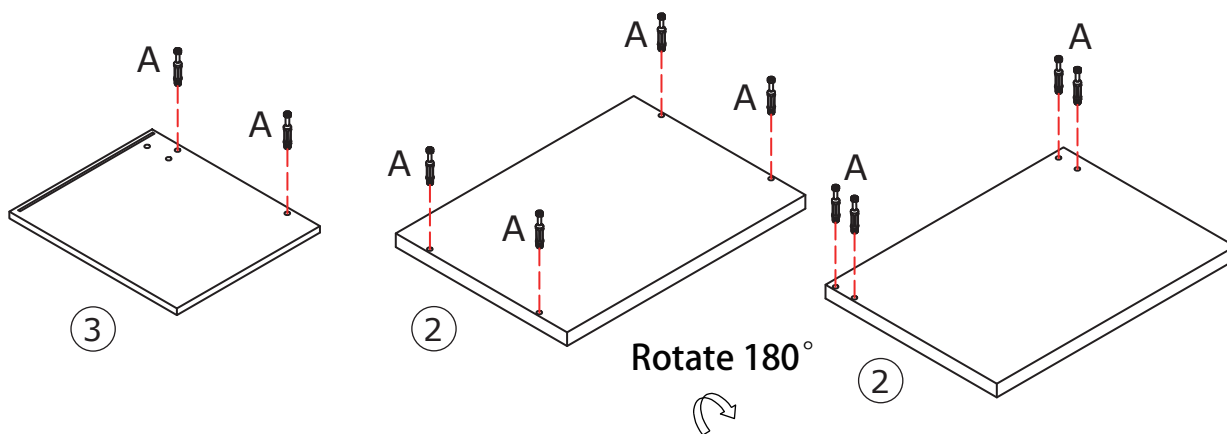 


12

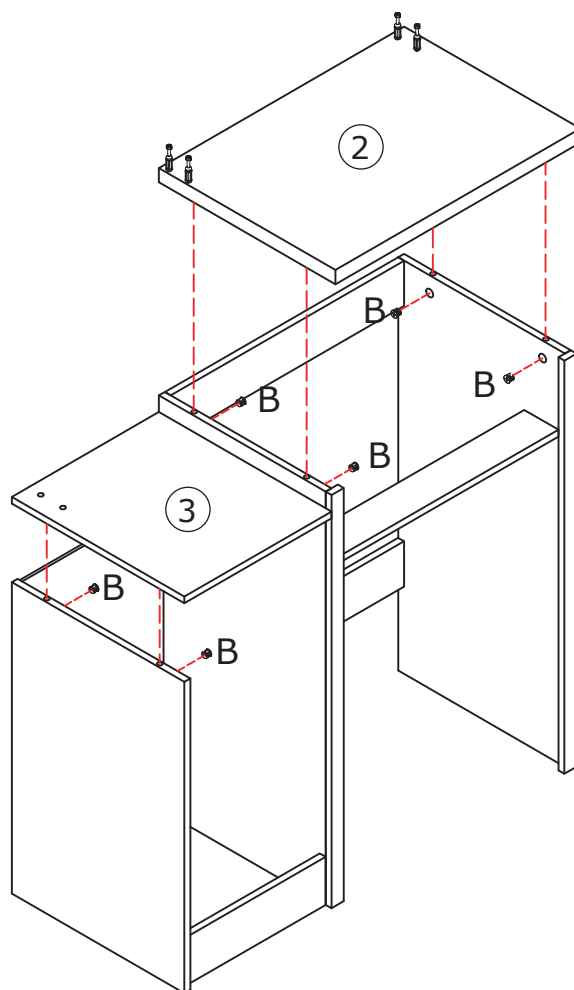 


13

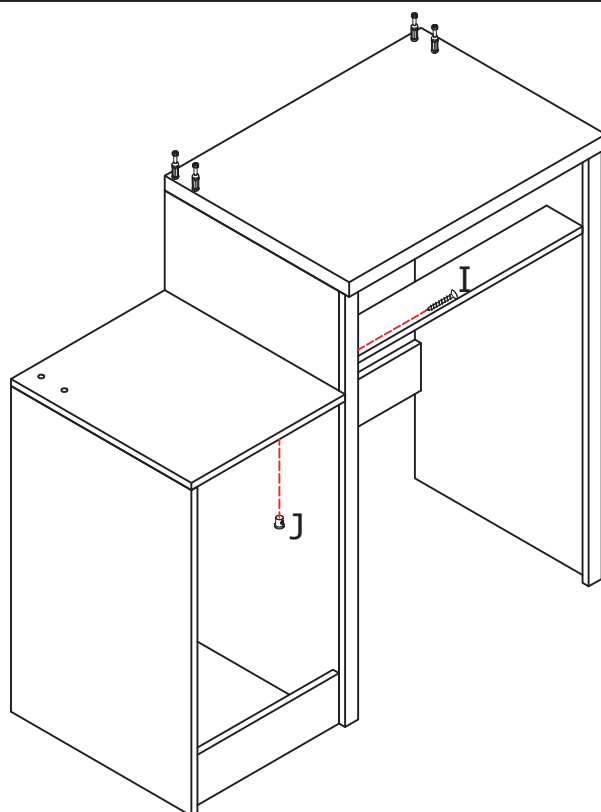 


14

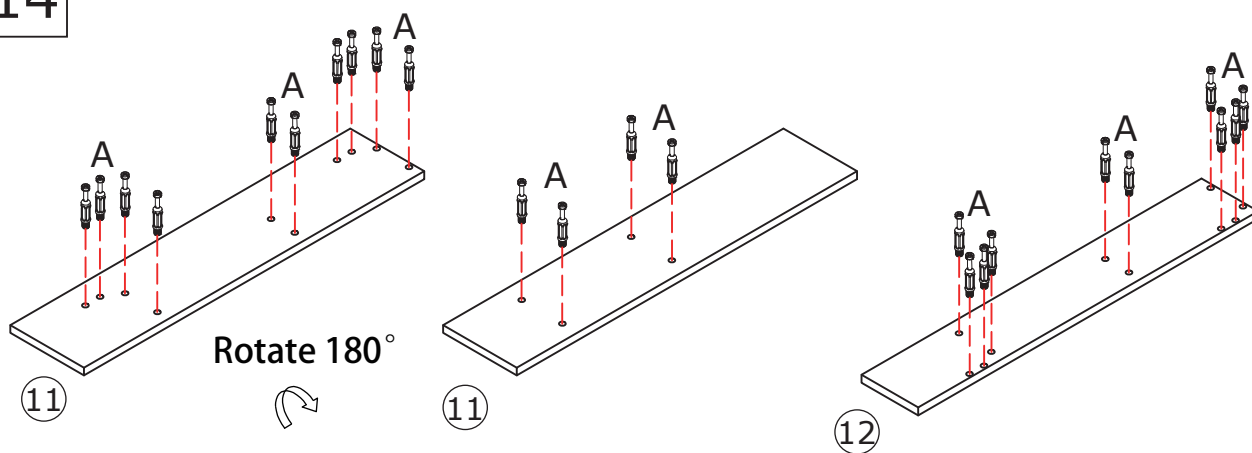 


15

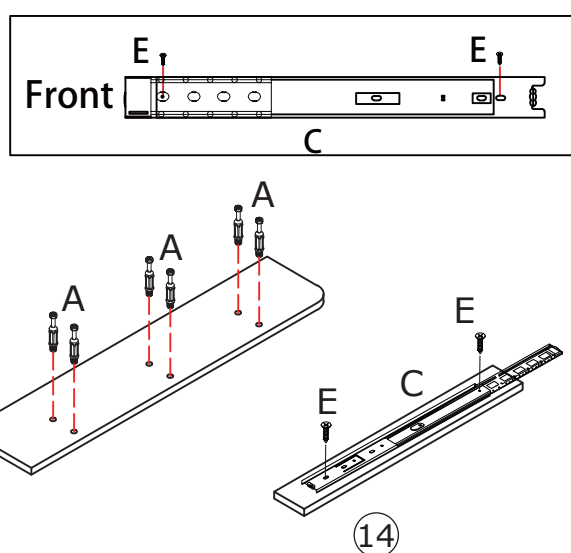 


16

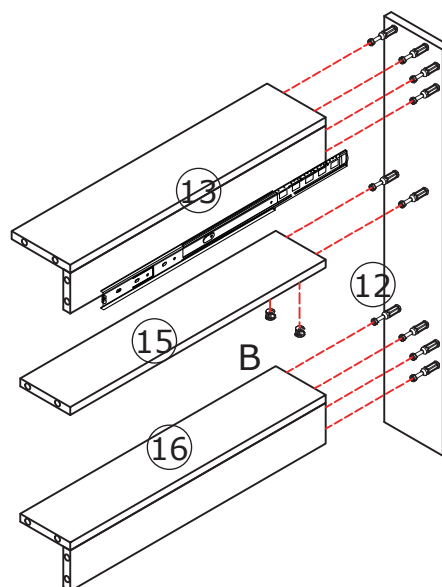 


17

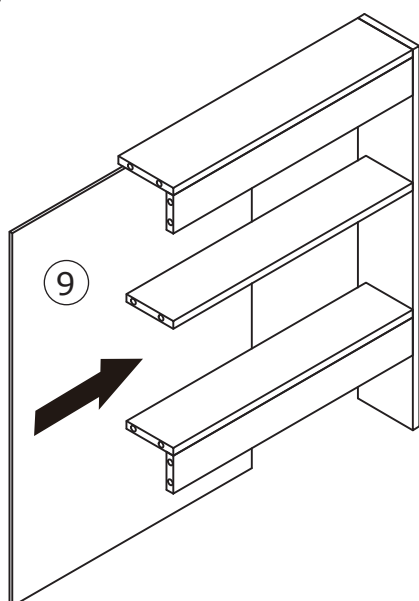 


18

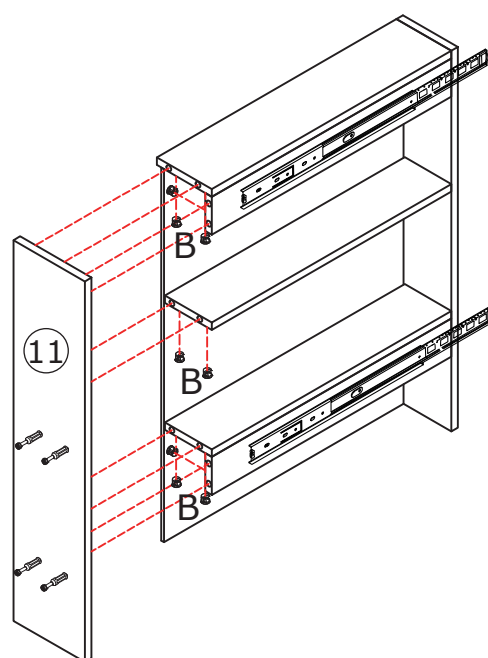 


19

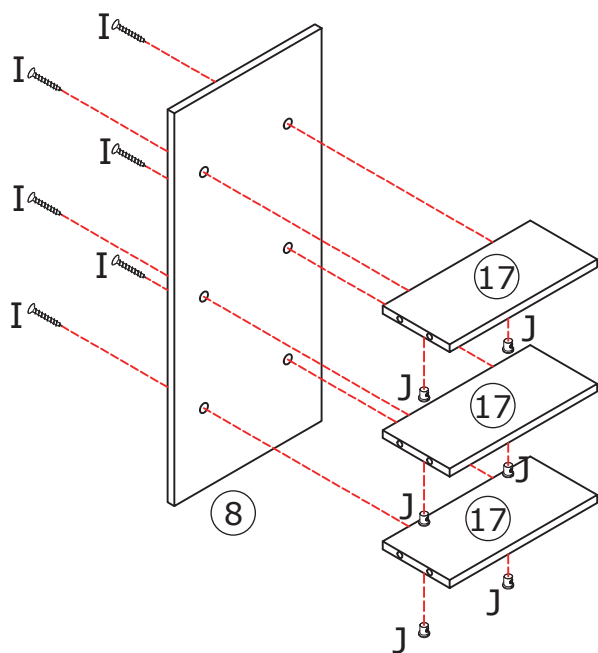 


20

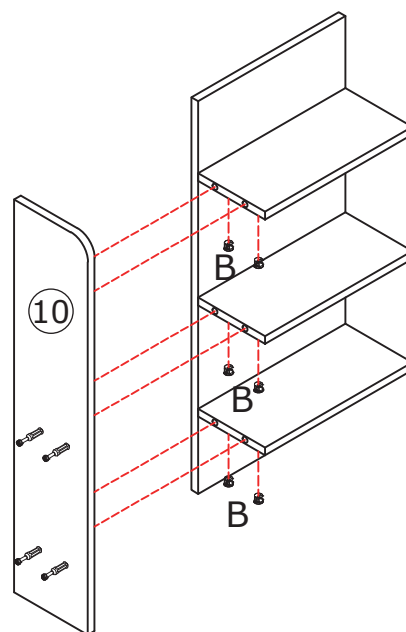 


21

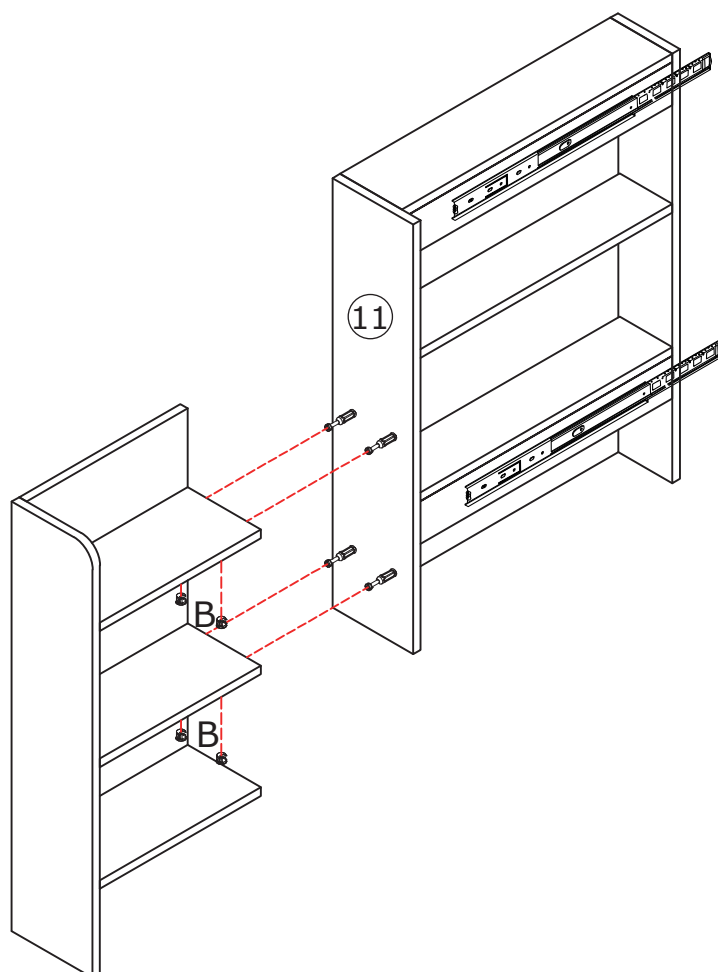 


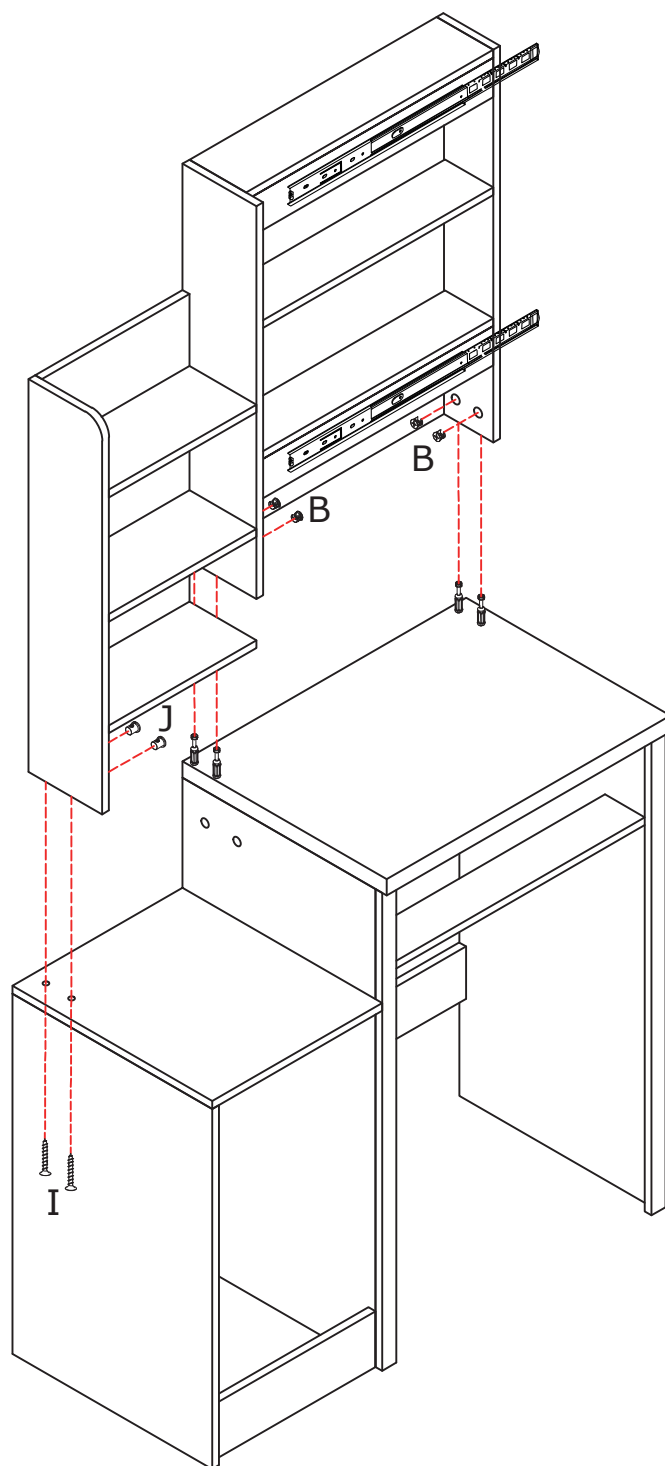 


22

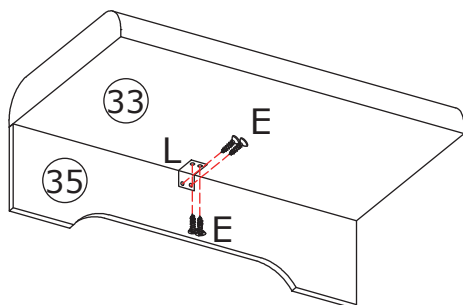 


23

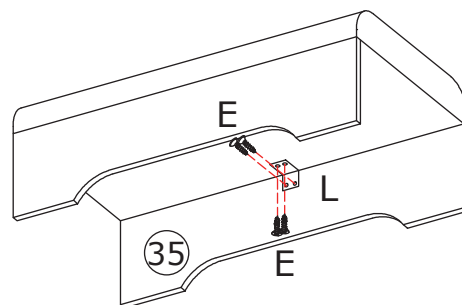 



24

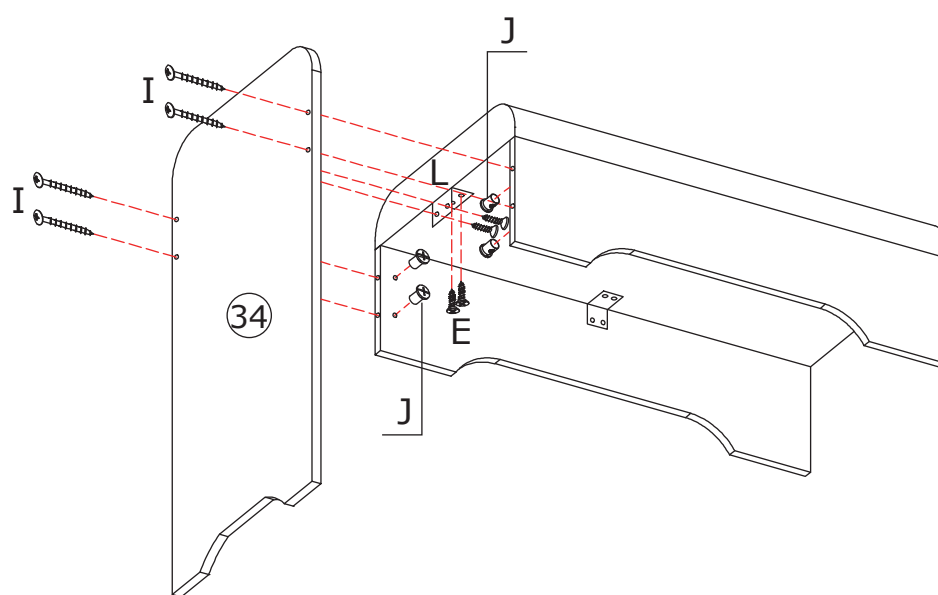 

25

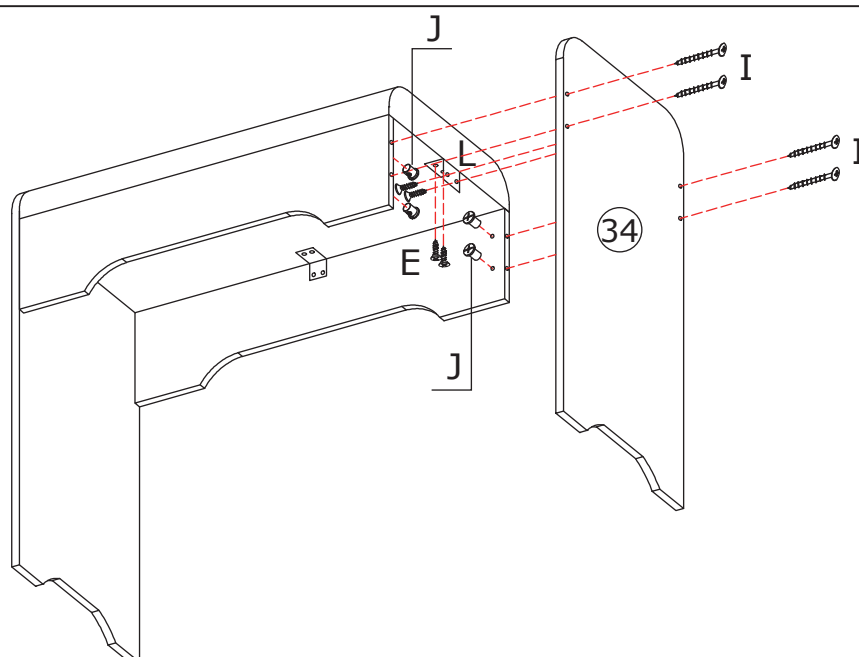 

26

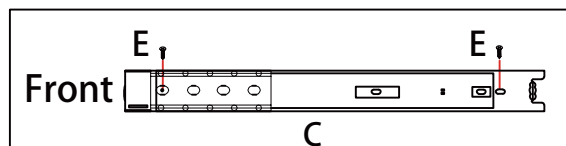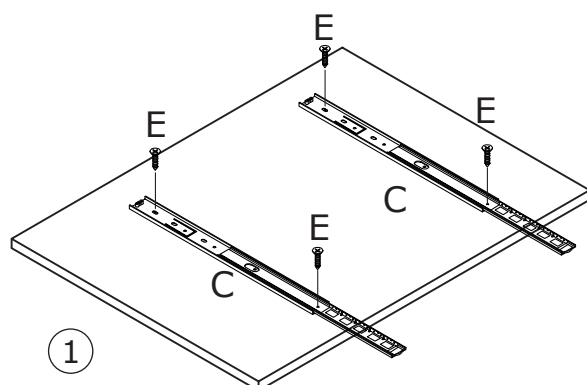  

27

