











Assembly Instructions


Caution : You must read this before you proceed

Care & Maintenance

- ⊘  ● Not for commercial use. For residential use only.
- ⊘  ● Do not put hot items directly on furniture surface.
- ⊘  ● Do not clean furniture with harsh cleansers or polish.
- ✓  ● To obtain the longest lifespan of your outdoor product minimizing exposure to direct sunlight is recommended.
- ⊘  ● Children should not climb or jump on the furniture.
- ⊘  ● Do not write on furniture without a padded barrier to protect the surface.
- ✓  ● To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.
- ⊘  ● Stains may be removed with mild soap solution and damp cloth.
- ✓  ● Keep away from sources of ignition.
- ✓  ● Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in the Seat Panel for hardware packs.

SWIVEL CLUB CHAIR


 
 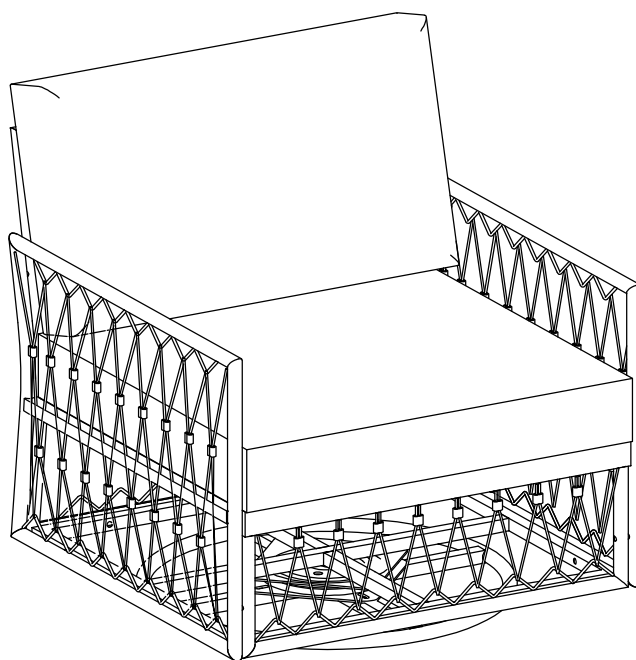




 

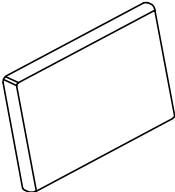
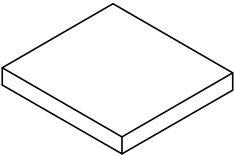
CAUTION: This Chair is NOT a TOY

Keep your child / children at bay during the assembly process.

For turning the Chair and to prevent damage to the product, 02 adults may be needed to execute this action

Part List:

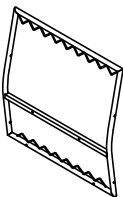Label	Picture	Description	Qty
A		Backrest Panel	1
B		Left Arm Panel	1
C		Right Arm Panel	1

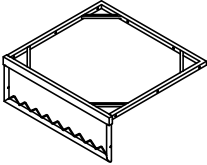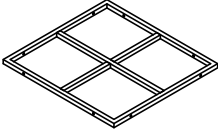
D		Seat Panel	1
E		Rectangular Frame	1
F		Round Frame	1
G		Swivel Tray	1
H		Back Cushion	1
I		Seat Cushion	1

Hardware

Label	Picture	Description	Qty
①		Bolt (M6x15mm) + Extra 1 pc	9
②		Bolt (M6x35mm) + Extra 1 pc	7
③		Bolt (M6x40mm) + Extra 1 pc	17
④		Flat washer (17x7x1mm) + Extra 1 pc	31
⑤		Allen wrench	1

Assembly Preparation

Before Beginning Assembly:

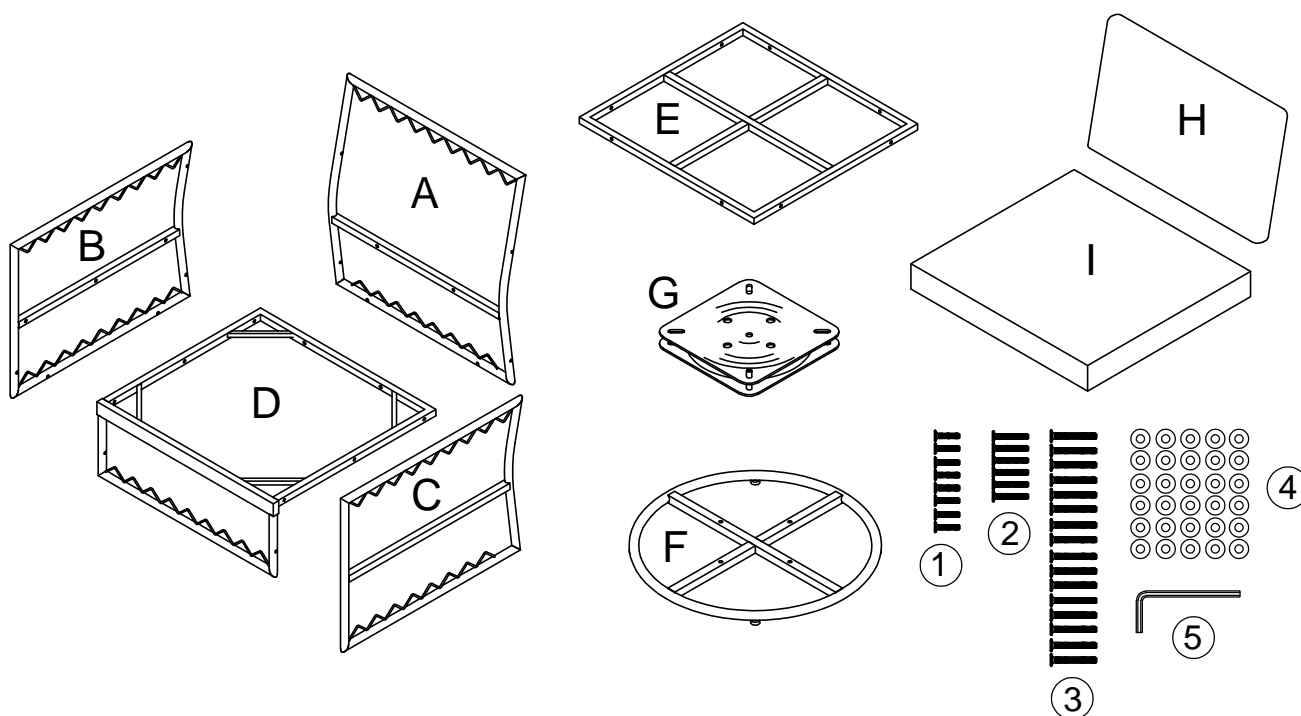

- Read instructions, cover to cover



- Have 2 adults on hand for assembly



- Do not assemble on the flooring or carpet




- Assemble on a clean, non-marring surface (packing foam)



- Save all packaging until finished.


Assembly Steps

Overview

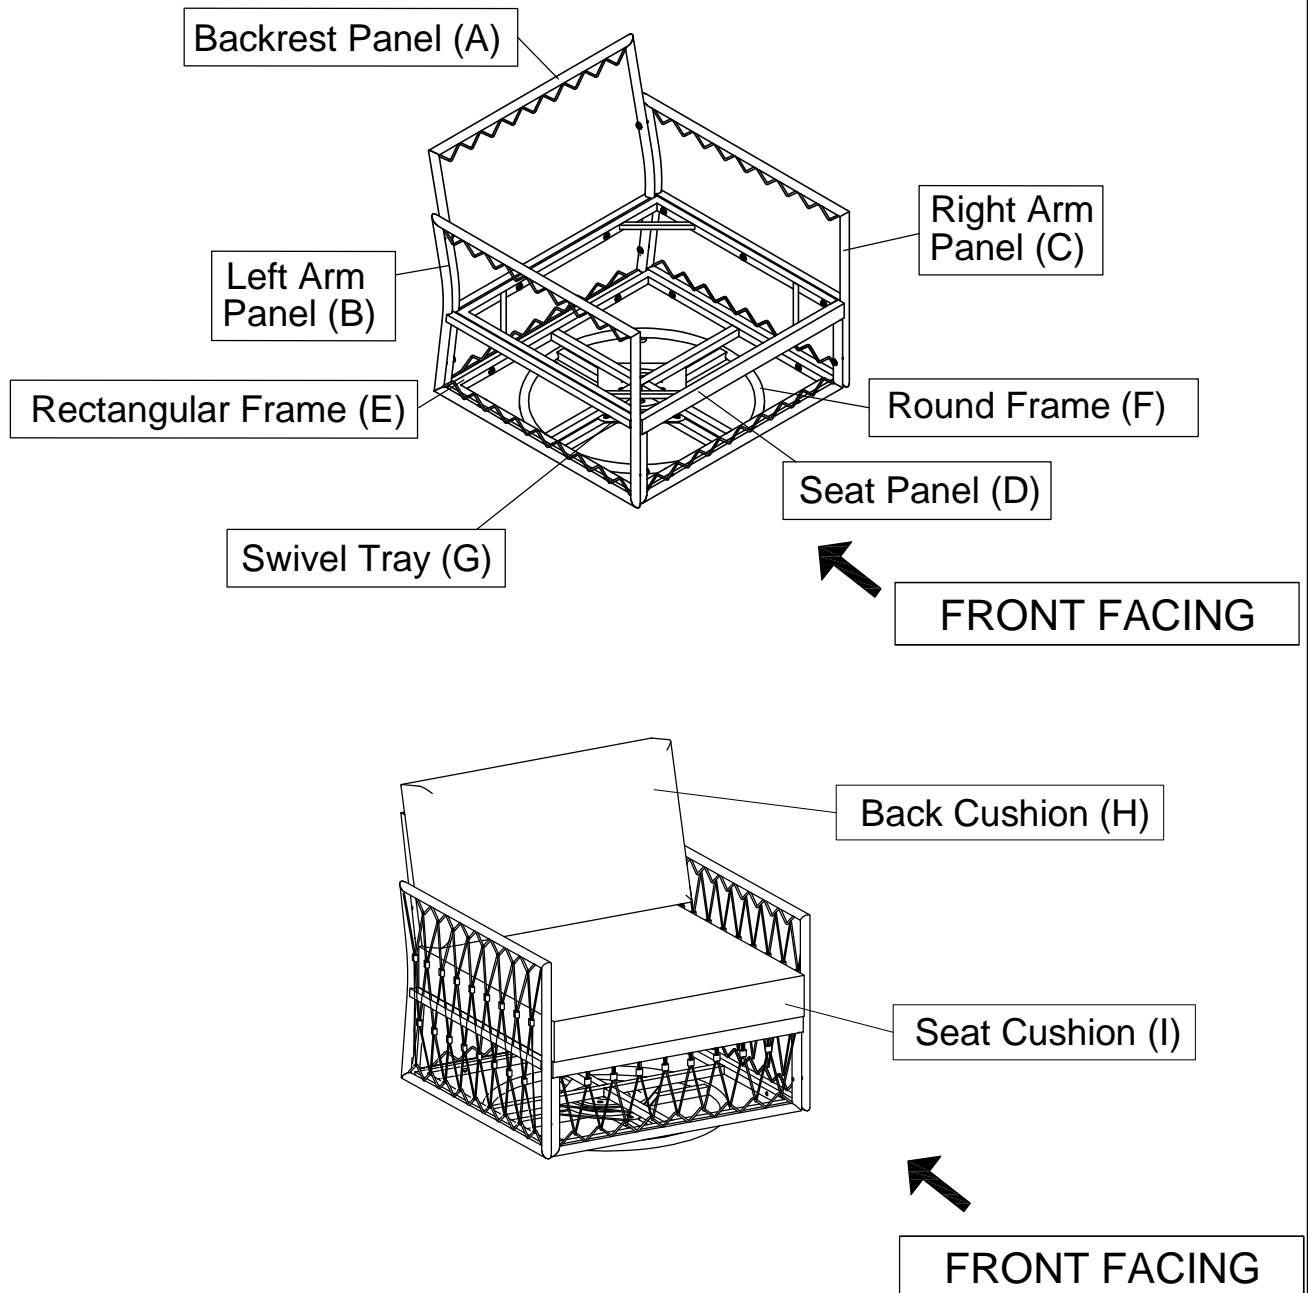


This Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Carly chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise the parts and steps before assembly.

Step 1:

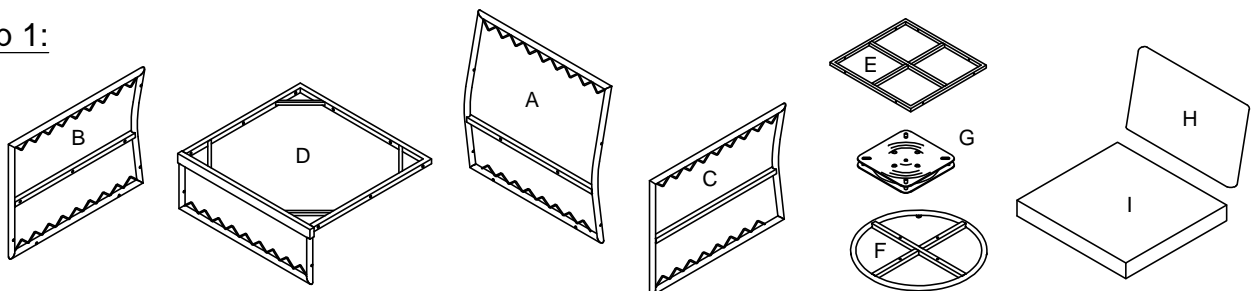


Unpack and place all the parts on a clean, non-marring surface.

Step 2:

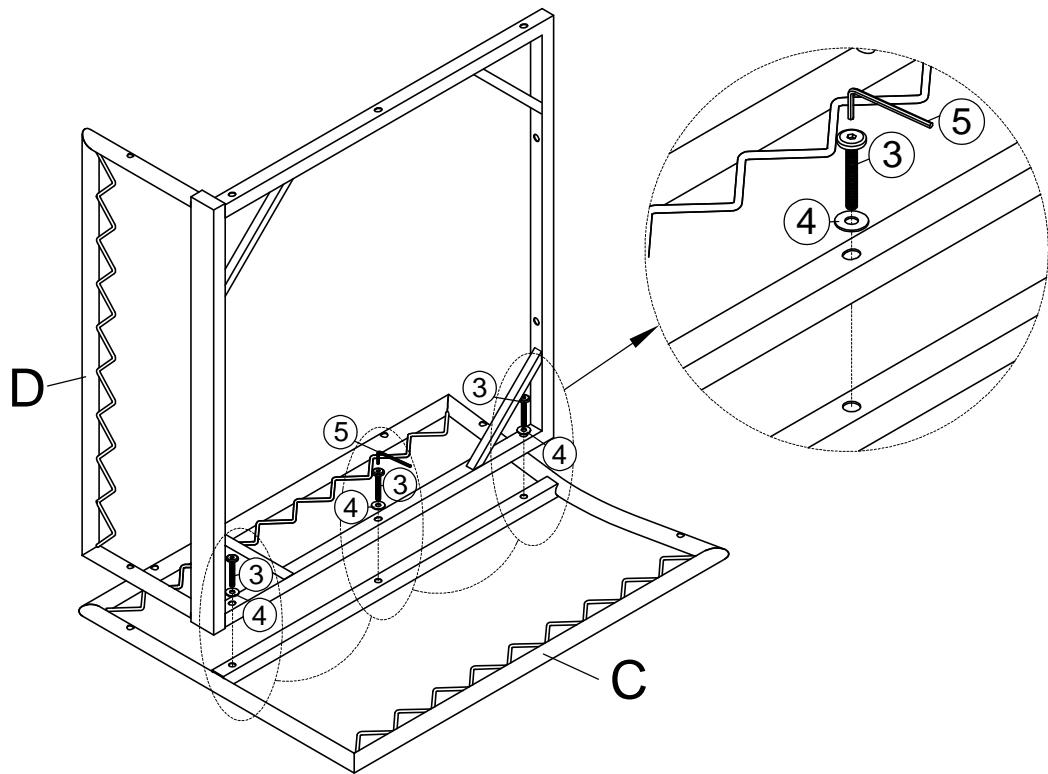


Using bolts ③, flat washers ④, and the allen wrench ⑤ to connect the right arm panel C to the seat panel D. **Do not fully tighten the bolts.**

Step 3:

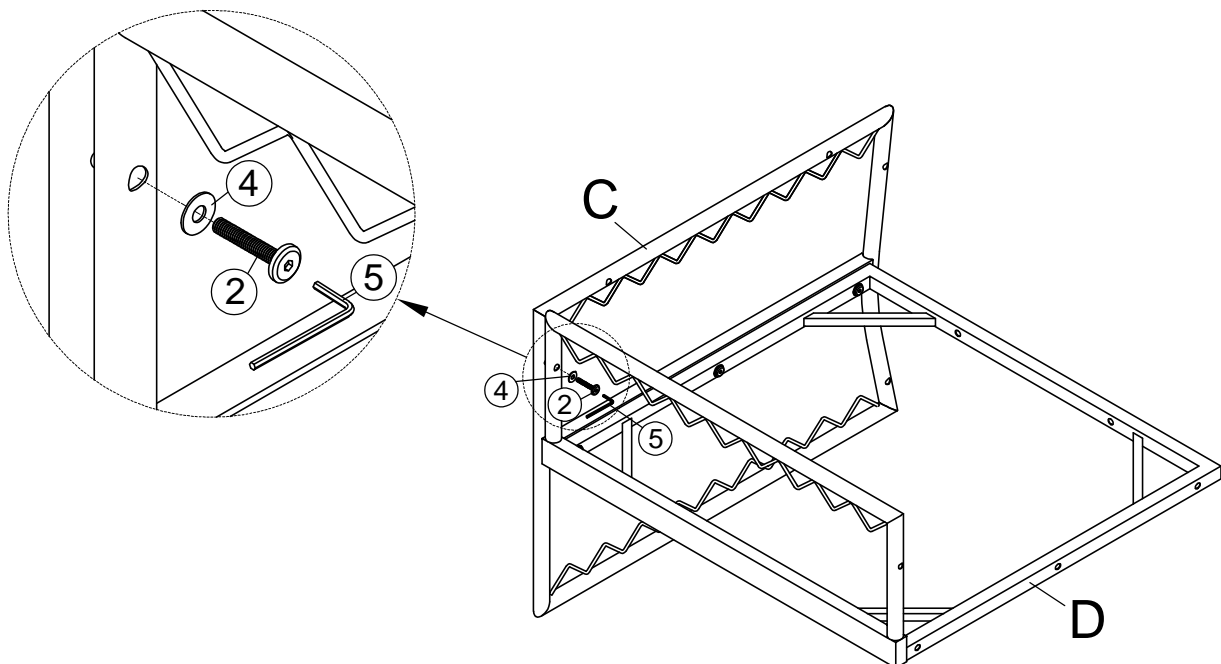


Using bolts ②, flat washers ④, and the allen wrench ⑤ to fix the right arm panel C to the seat panel D. **Do not fully tighten the bolts.**

Step 4:

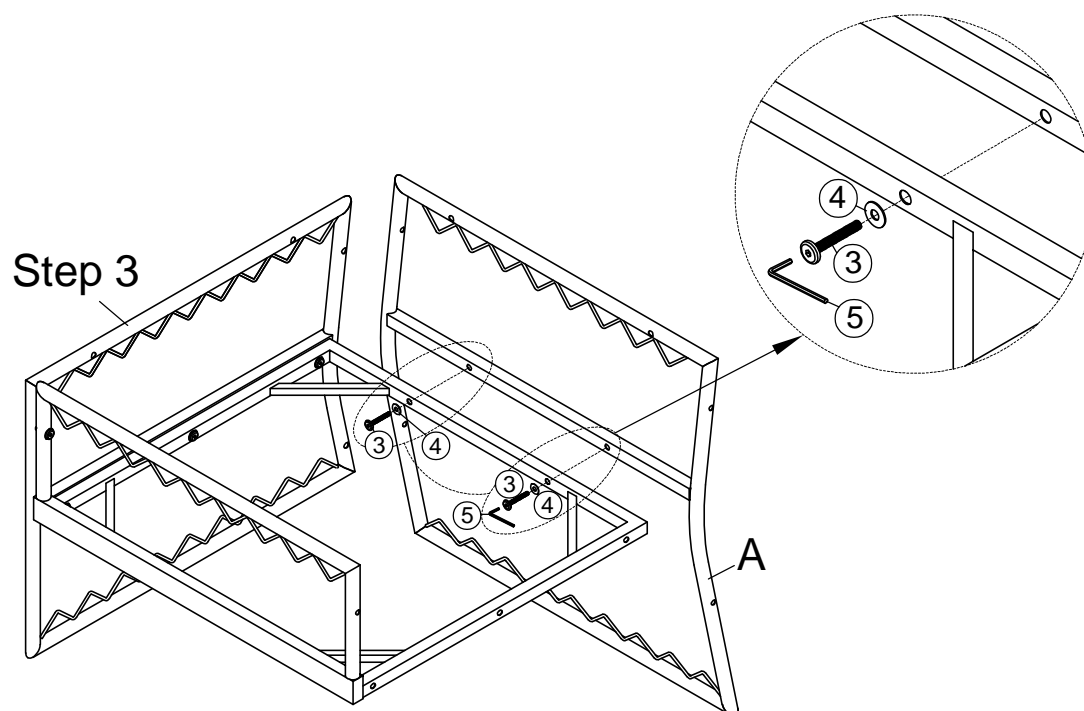


Fix the backrest panel A to the frame in Step 3 by using bolts ③, flat washers ④, and the allen wrench ⑤. **Do not fully tighten the bolts.**

Step 5:

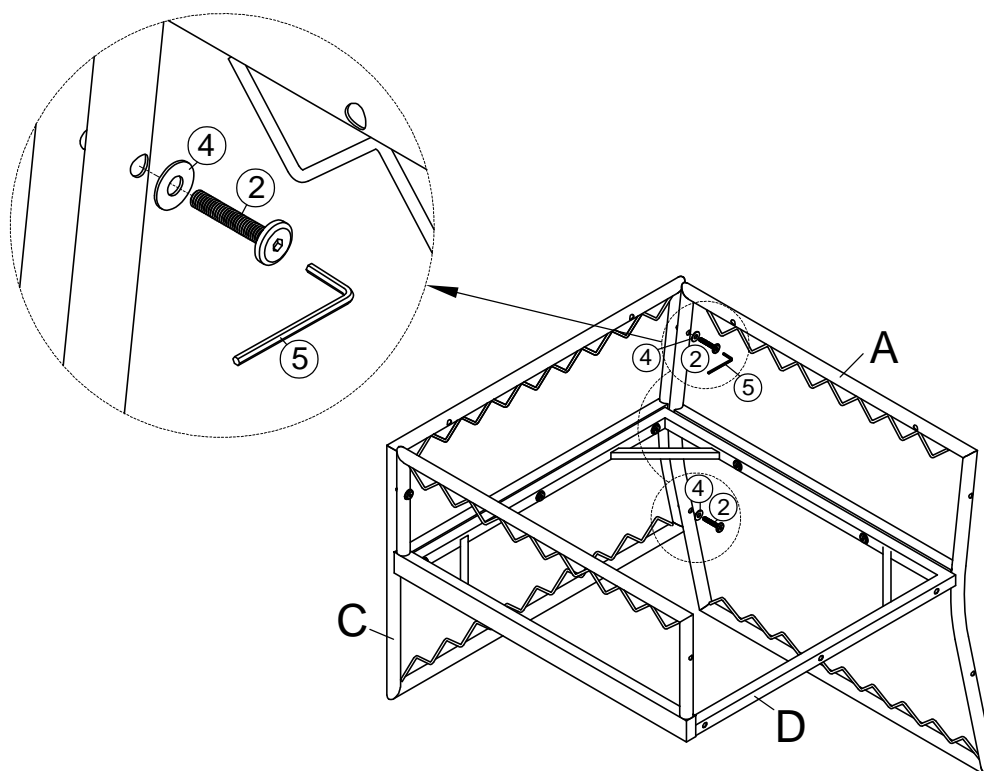


At the intersections of the backrest panel A and the right arm panel C, using bolts ②, flat washers ④, and the allen wrench ⑤ to fix the frame. **Do not fully tighten the bolts.**

Step 6:

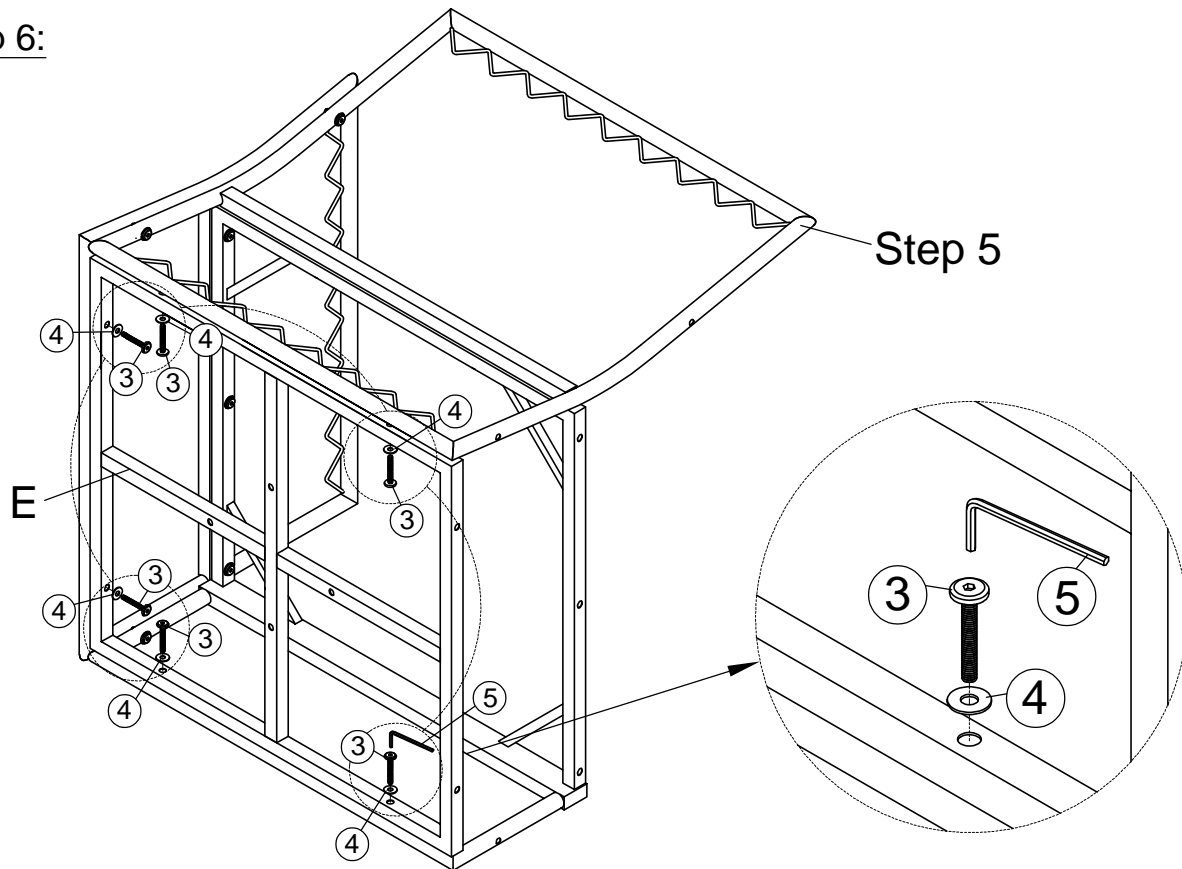


Two adults turn the frame. Fix the Rectangular frame E to the frame in Step 5 by using bolts ③, flat washers ④, and the allen wrench ⑤. **Do not fully tighten the bolts.**

Step 7:

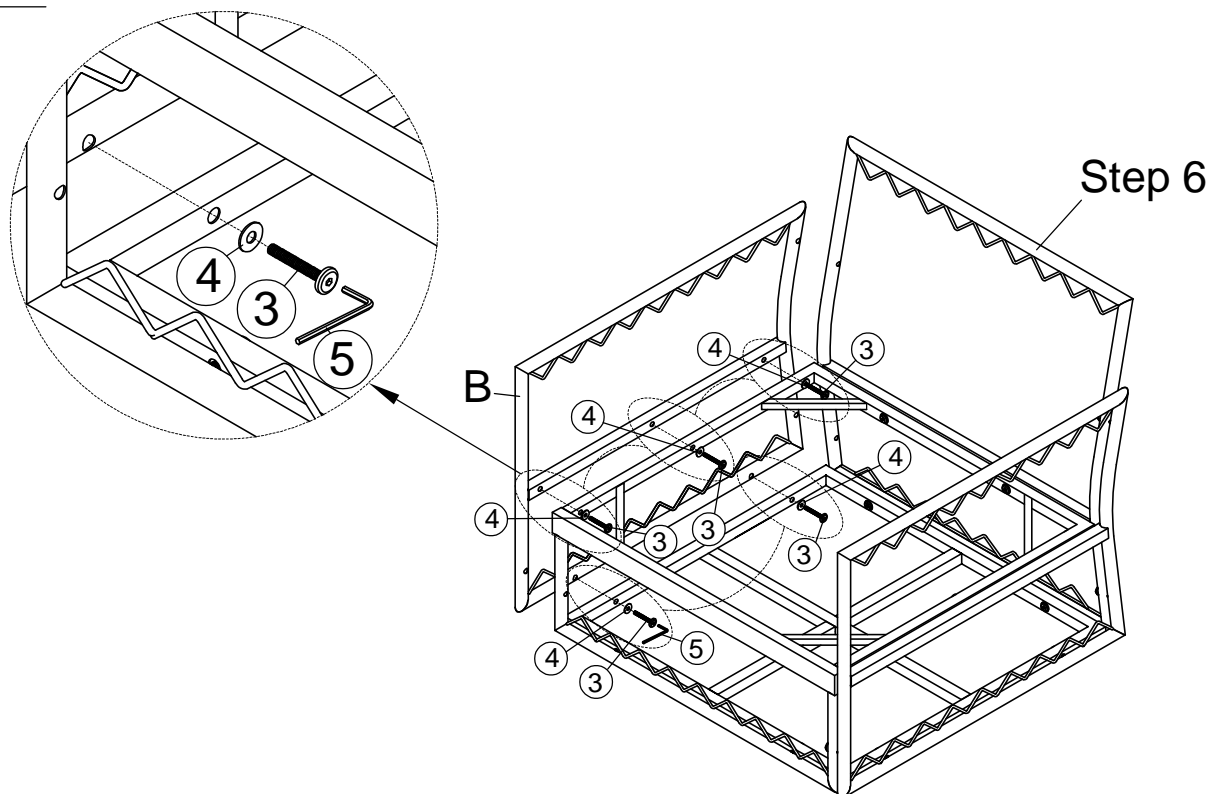


Two adults turn over the chair frame. Fix the left arm panel B to the frame in Step 6 using bolts ③, flat washers ④, and the allen wrench ⑤. **Do not fully tighten the bolts.**

Step 8:

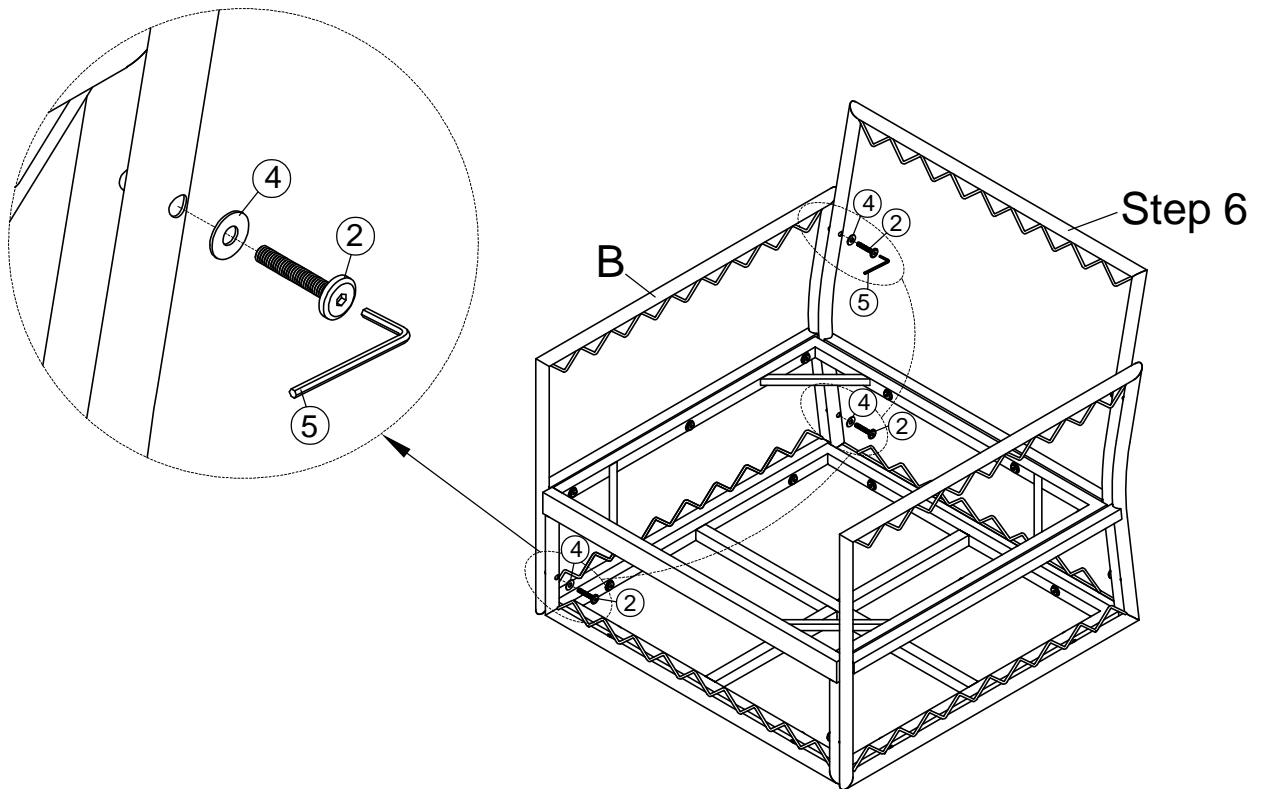


Using the bolts ②, flat washers ④, and the allen wrench ⑤ to fix the left arm panel B to the frame in Step 6. **Do not fully tighten the bolts.**

Step 9:

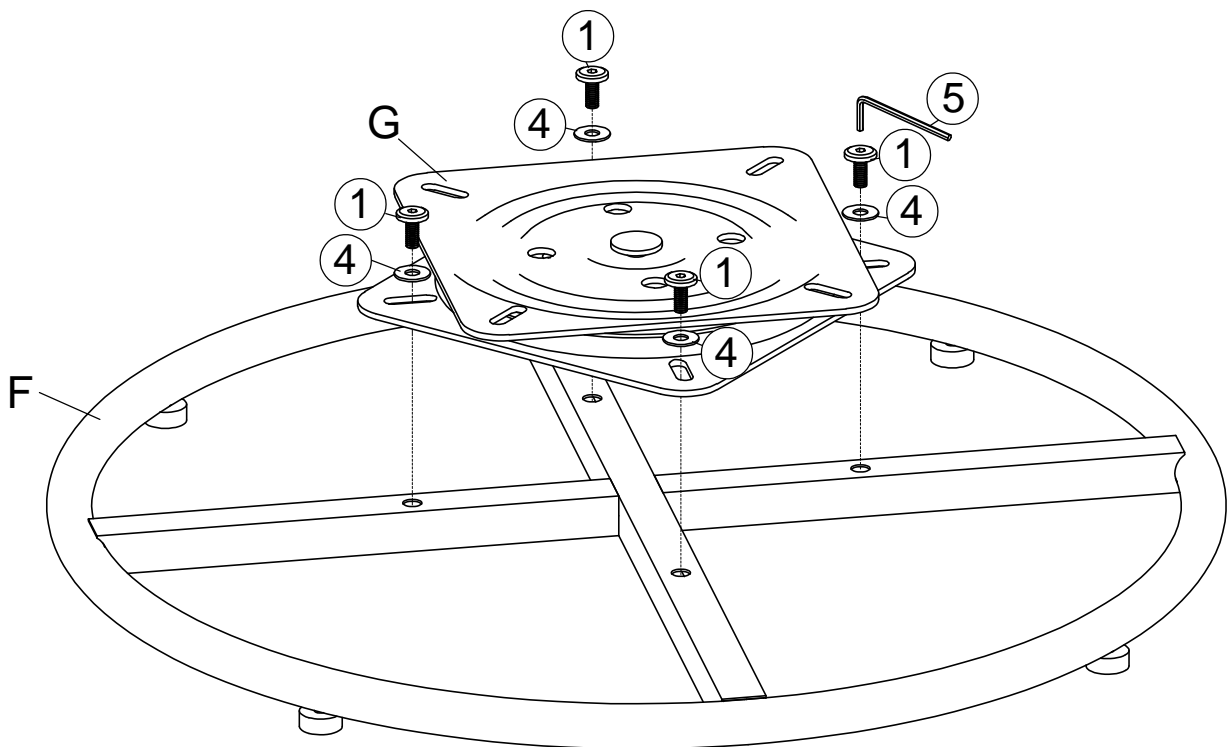


Using bolts ①, flat washers ④, and the allen wrench ⑤ to fix the swivel tray G with the round frame F. **Fully tighten the bolts.**

Step 10:

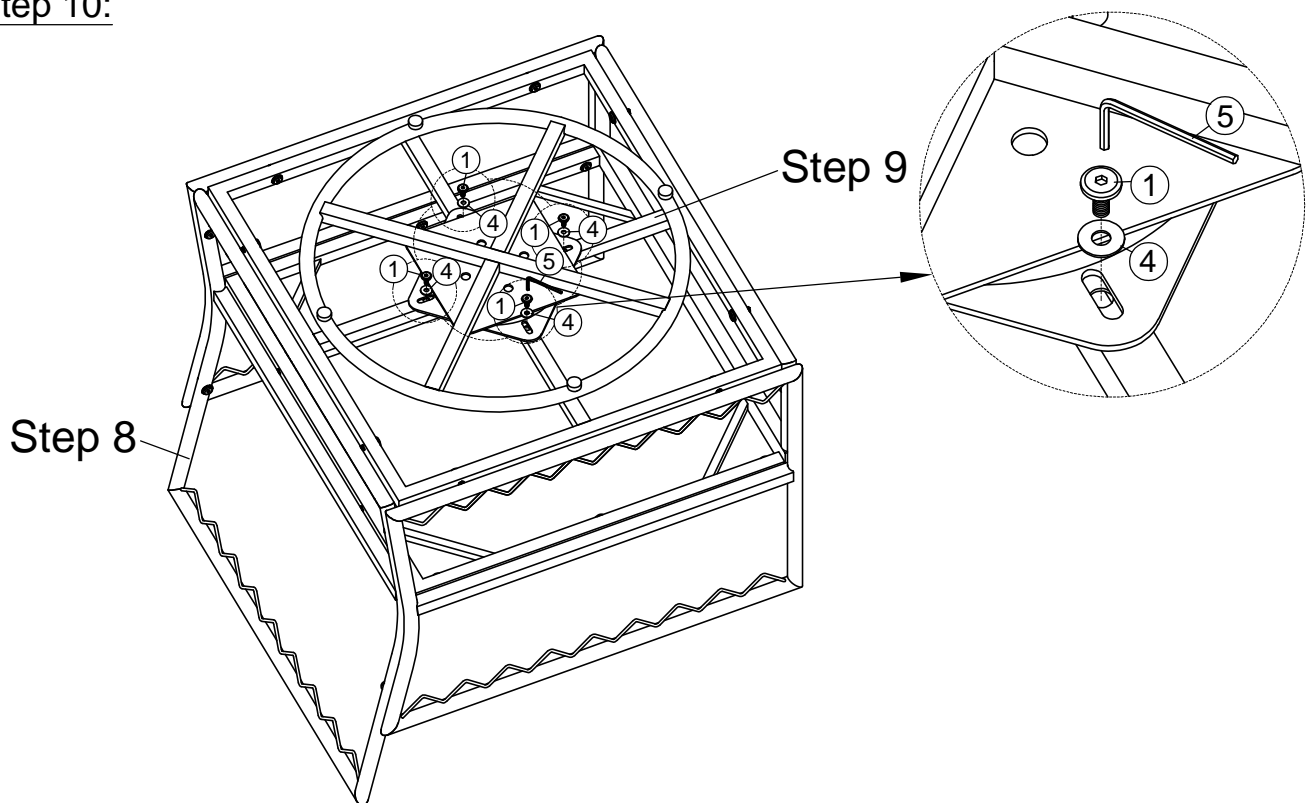

Two adults turn over the chair frame, and insert the frame in Step 9 on the chair frame in Step 8 by using the bolts ①, flat washers ④, and the allen wrench ⑤ to fix them.
Fully tighten all the bolts in this chair frame.



Step 11:

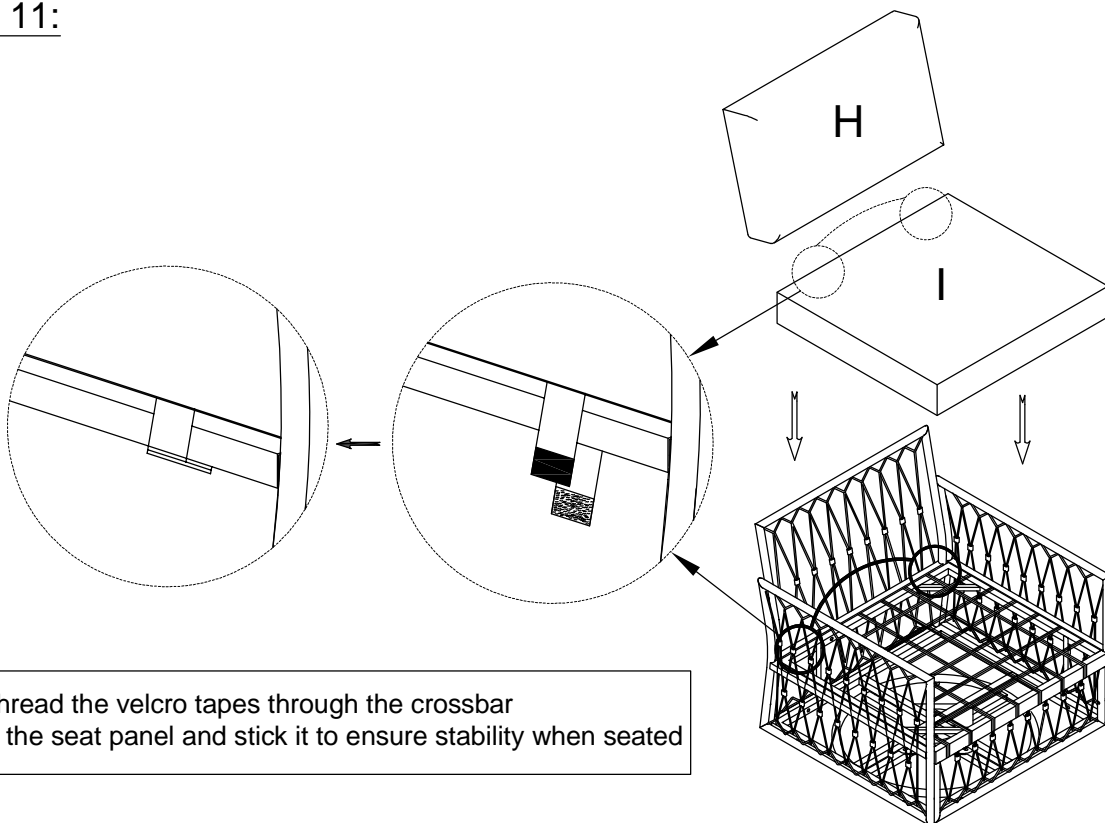


Thread the velcro tapes through the crossbar in the seat panel and stick it to ensure stability when seated

With your adult partner's help, turn over the chair frame in Step 10. Put the seat cushion I, which has 2 velcro tapes, on the chair frame. Put the back cushion H on the seat cushion I.

Step 12:

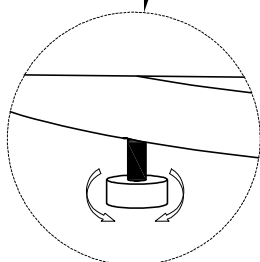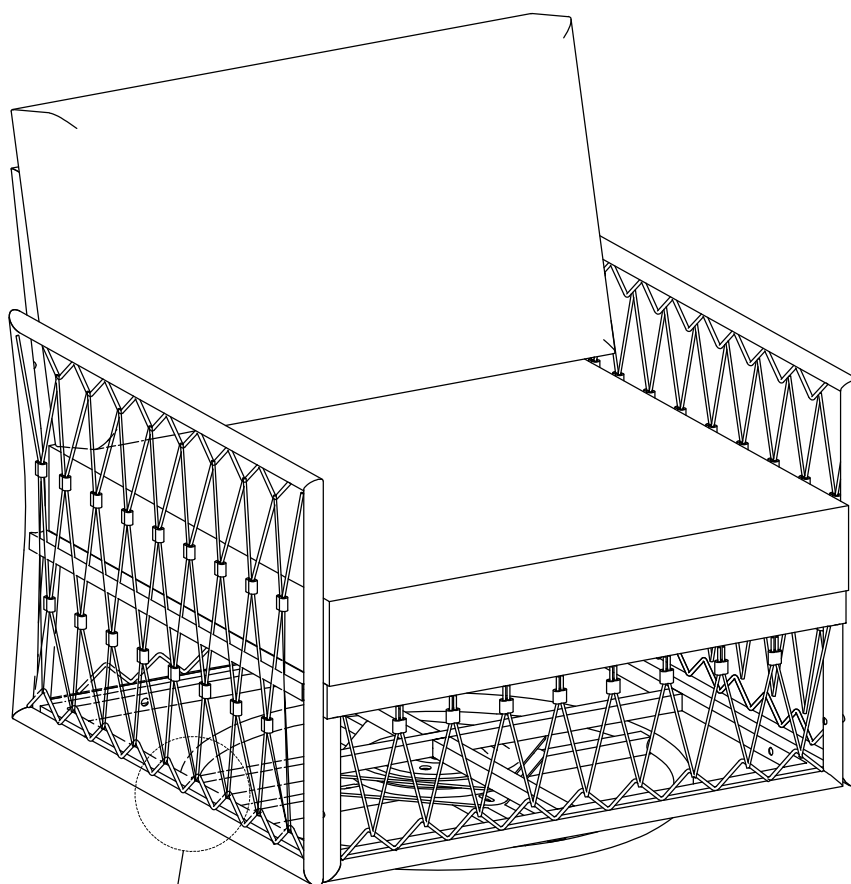

Adjust height for balance

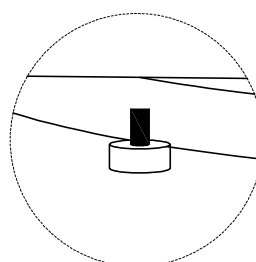

Adjust low for balance



Adjust Pre-installed Levellers
height for balance

Warning: If your Swivel Club chair is not stable, it could damage the product.
Your Swivel Club chair is ready to use.
This chair can only be used on a flat, level surface.