


Parkridge Side Table

WS20007

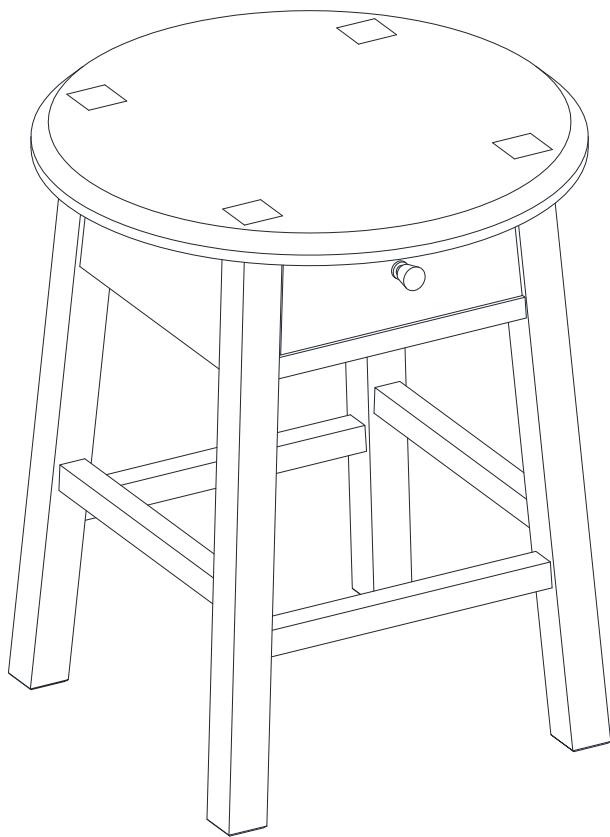


ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, DO NOT return this item to the store where it was purchased. Please contact with our customer service and have your instructions and parts list ready to provide the model name, part name.

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

MAXIMUM RECOMMENDED WEIGHT LOADS

MANUFACTURER: Woodenshine
CATALOG: Parkridge Side Table
MODEL # WS20006

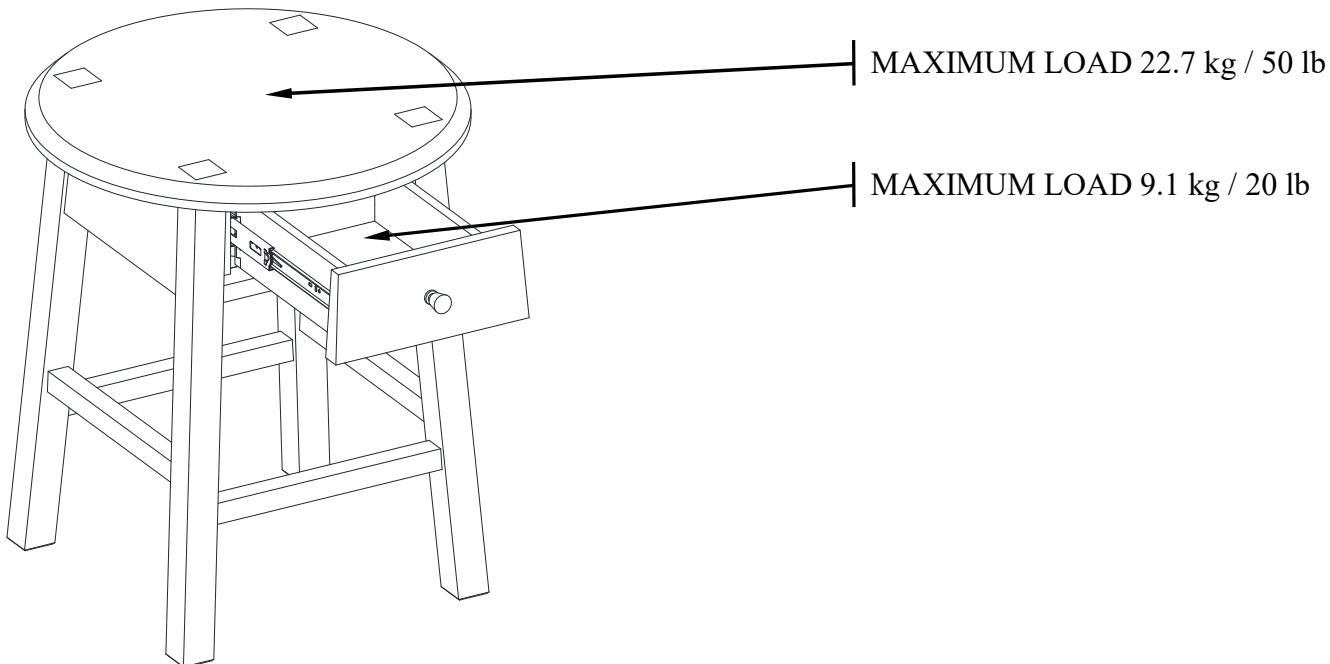

WARNING


THIS UNIT IS INTENDED ONLY FOR USE WITHIN THE MAXIMUM WEIGHTS INDICATED. USE WITH LOAD HEAVIER THAN THE MAXIMUM WEIGHTS INDICATED MAY RESULT IN INSTABILITY, CAUSING POSSIBLE INJURY.

GENERAL INFORMATION, TIPS AND TRICKS


1. Please read the Assembly Instructions prior to assembling the unit.
2. To avoid damage, assemble the unit on a sturdy, level and non-abrasive surface.
3. Keep all hardware part out of reach of children.
4. Please wait until all steps are completed before fully tightening bolts.
5. Make sure all bolts are tightly fastened before the unit is used.
6. Check that all bolts, screws and knobs are tight at least every 3 months or as needed.

Parts and Hardware List


Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.

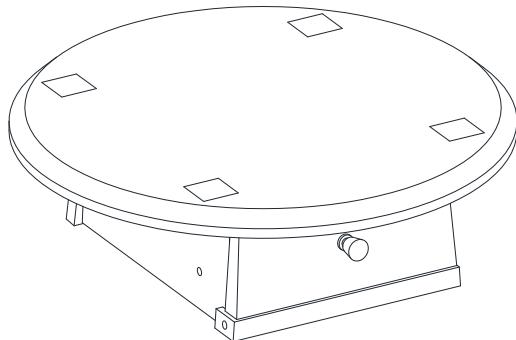


A-Table Top
(Qty. 1)

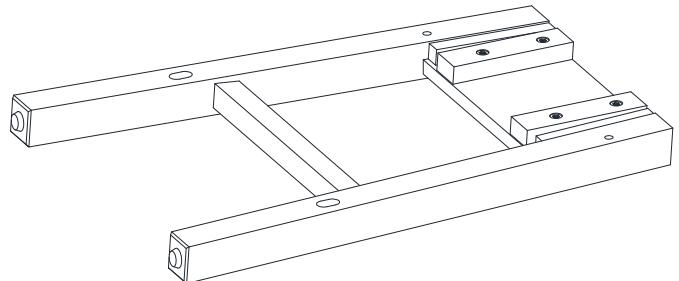

B- Left Side Frame
(Qty. 1)

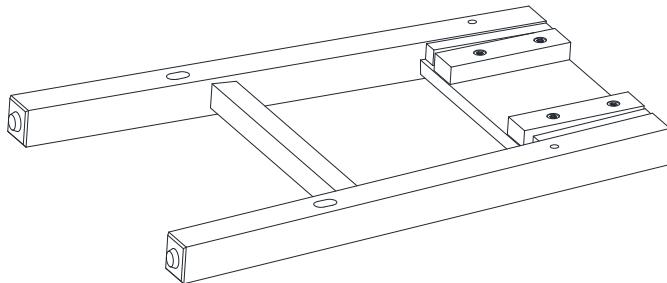


C- Right Side Frame
(Qty. 1)

 

D- Bottom Stretcher
(Qty. 2)

Parts and Hardware List

 
Please read completely through the instructions and verify that all listed parts and hardware are present before beginning assembly.




(1) 1/4" x 35 mm Bolt
(Qty. 8+1 extra)




(2) Lock Washer
(Qty. 8+1 extra)

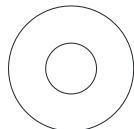

 
(3) Flat Washer
(Qty. 8+1 extra)



 
(4) M8 x 30 mm Wood Dowel
(Qty. 4+1 extra)



(5) M4 x 40 mm Screw
(Qty. 4+1 extra)

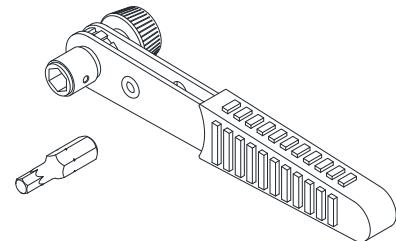


Ratchet Wrench
(Qty. 1)

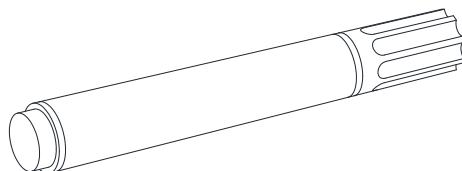


Touch-up Pen
(Qty. 1)

Tools required: Ratchet wrench (provided) and Phillips screwdriver (not provided).



Assembly Instructions

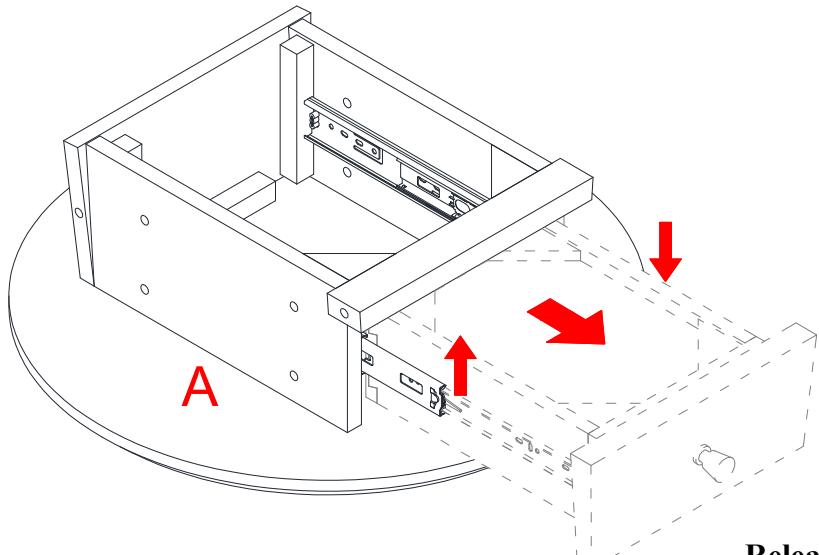

Release lever

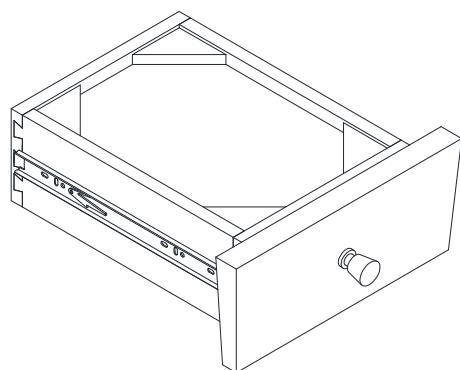



Drawer removal

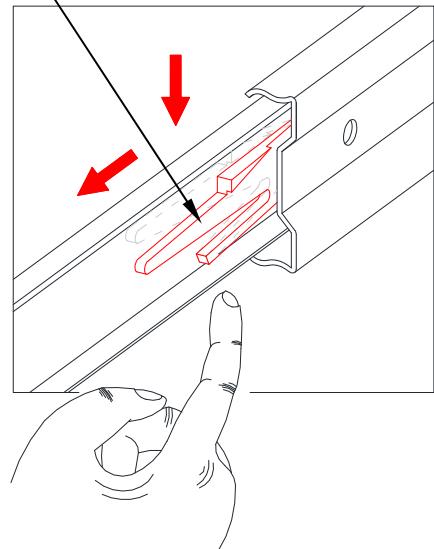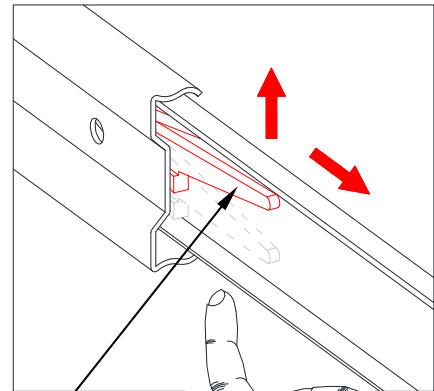


NOTE: Please do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

1. Unpack the unit and confirm that you have all the hardware and required parts listed. Assemble the unit on a carpeted floor or the empty carton to avoid any scratch.
2. Place the Table Top (A) upside down on a level and protected surface.
3. Pull the drawer all the way out, then simultaneous push the plastic release lever of the ball bearing slides up on one side and down on the other side and pull the drawer completely out.


Assembly Instructions

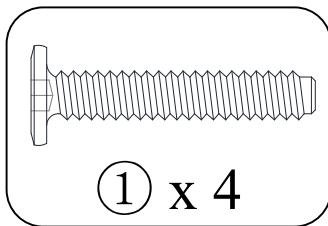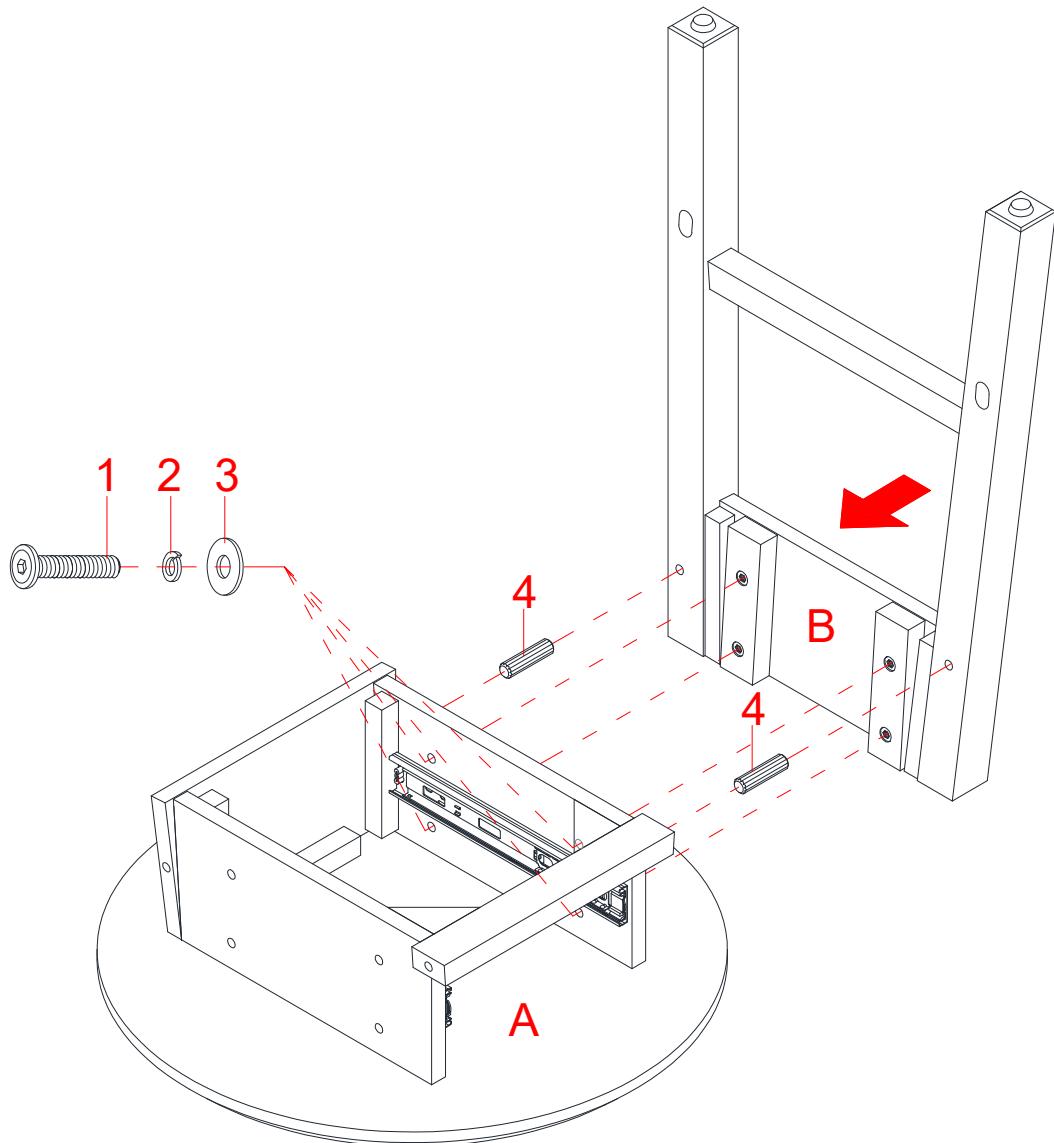


① x 4

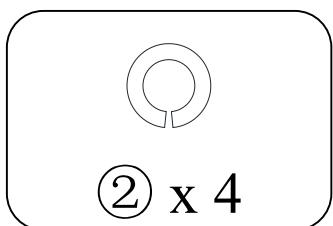

② x 4

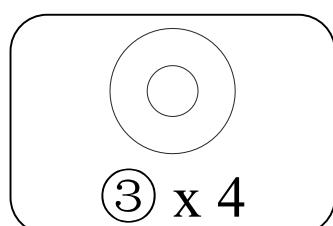

③ x 4





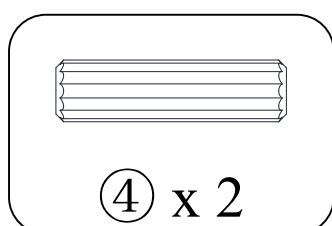


④ x 2

4. Insert two Wood Dowels (4) into the upper holes of the Left Side Frame (B).
5. Align and attach the Left Side Frame (B) to the drawer box left panel and insert four 35 mm Bolts (1), four Lock Washers (2) and four Flat Washers (3) through the mounting holes on the drawer box and screw into the Left Side Frame (B). **DO NOT** fully tighten the bolts in this step.



Assembly Instructions

The slant holes will face the floor when the unit is turned upright.

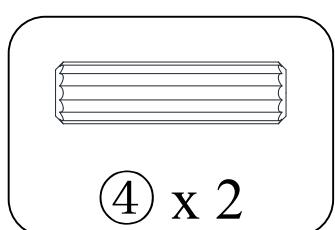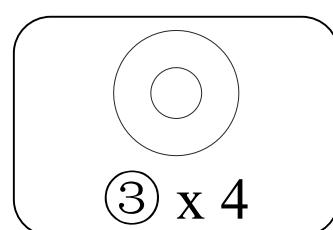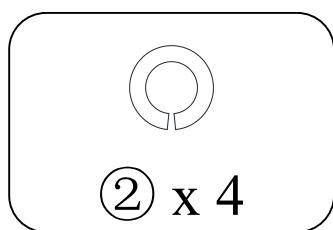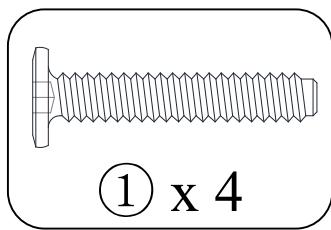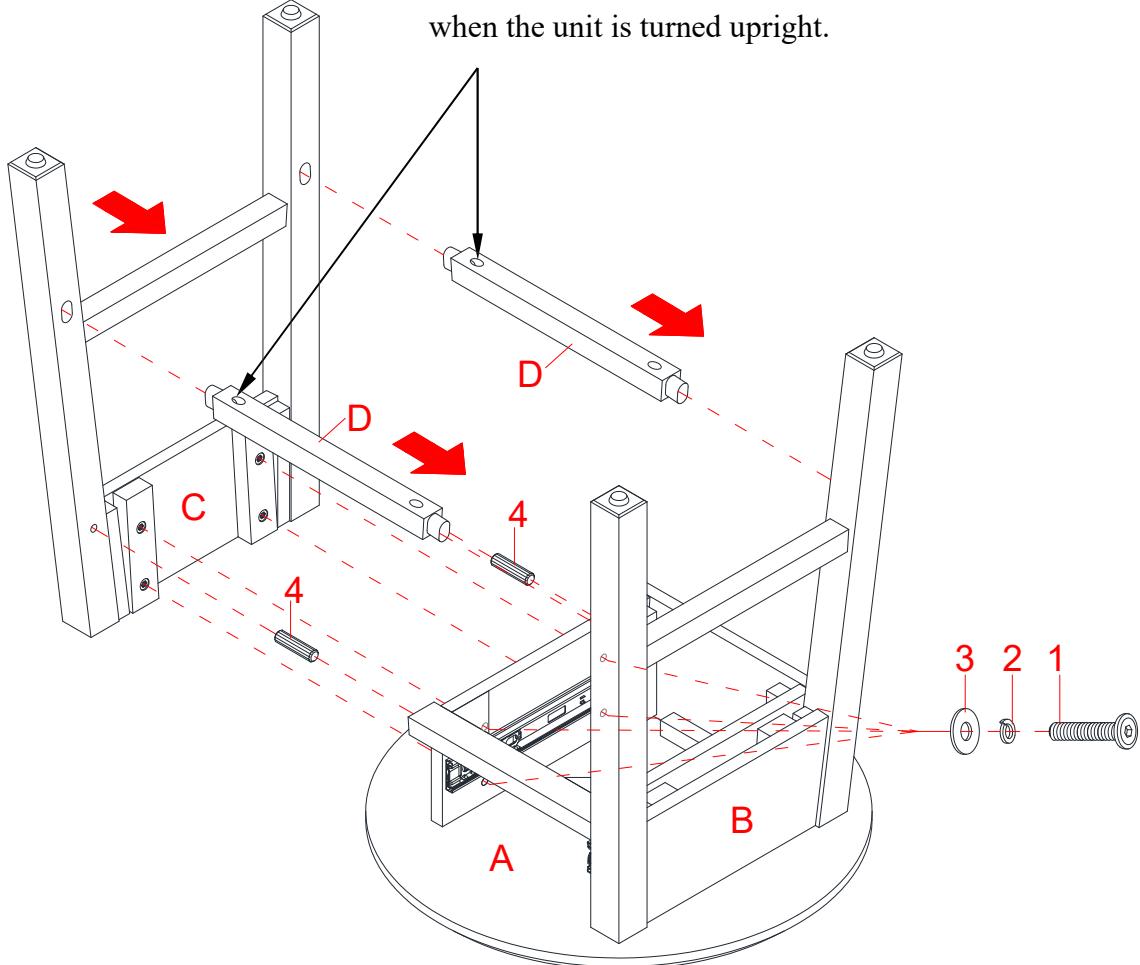


6. Orient and insert the tenons of Bottom Stretchers (D) into the mortises of the Left Side Frame (B).
7. Repeat the same procedure to attach the Right Side Frame (C) at the opposite end.

Assembly Instructions

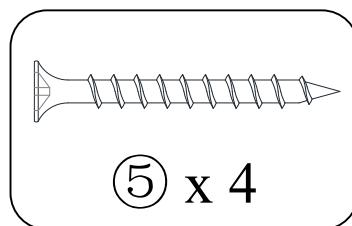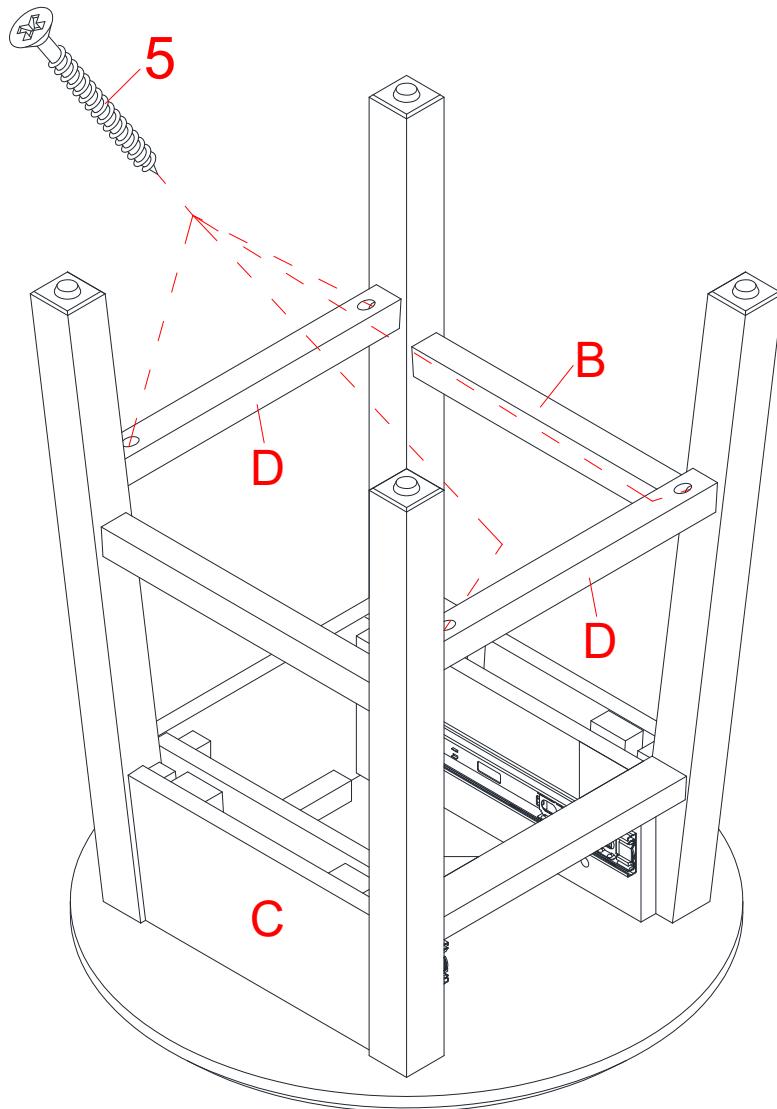

8. Go back and tighten all bolts with the enclosed Ratchet Wrench.
9. Insert and screw four 40 mm Screws (5) into the slant holes in the Bottom Stretchers (D). Tighten the screws with a Phillips screwdriver.


Assembly Instructions

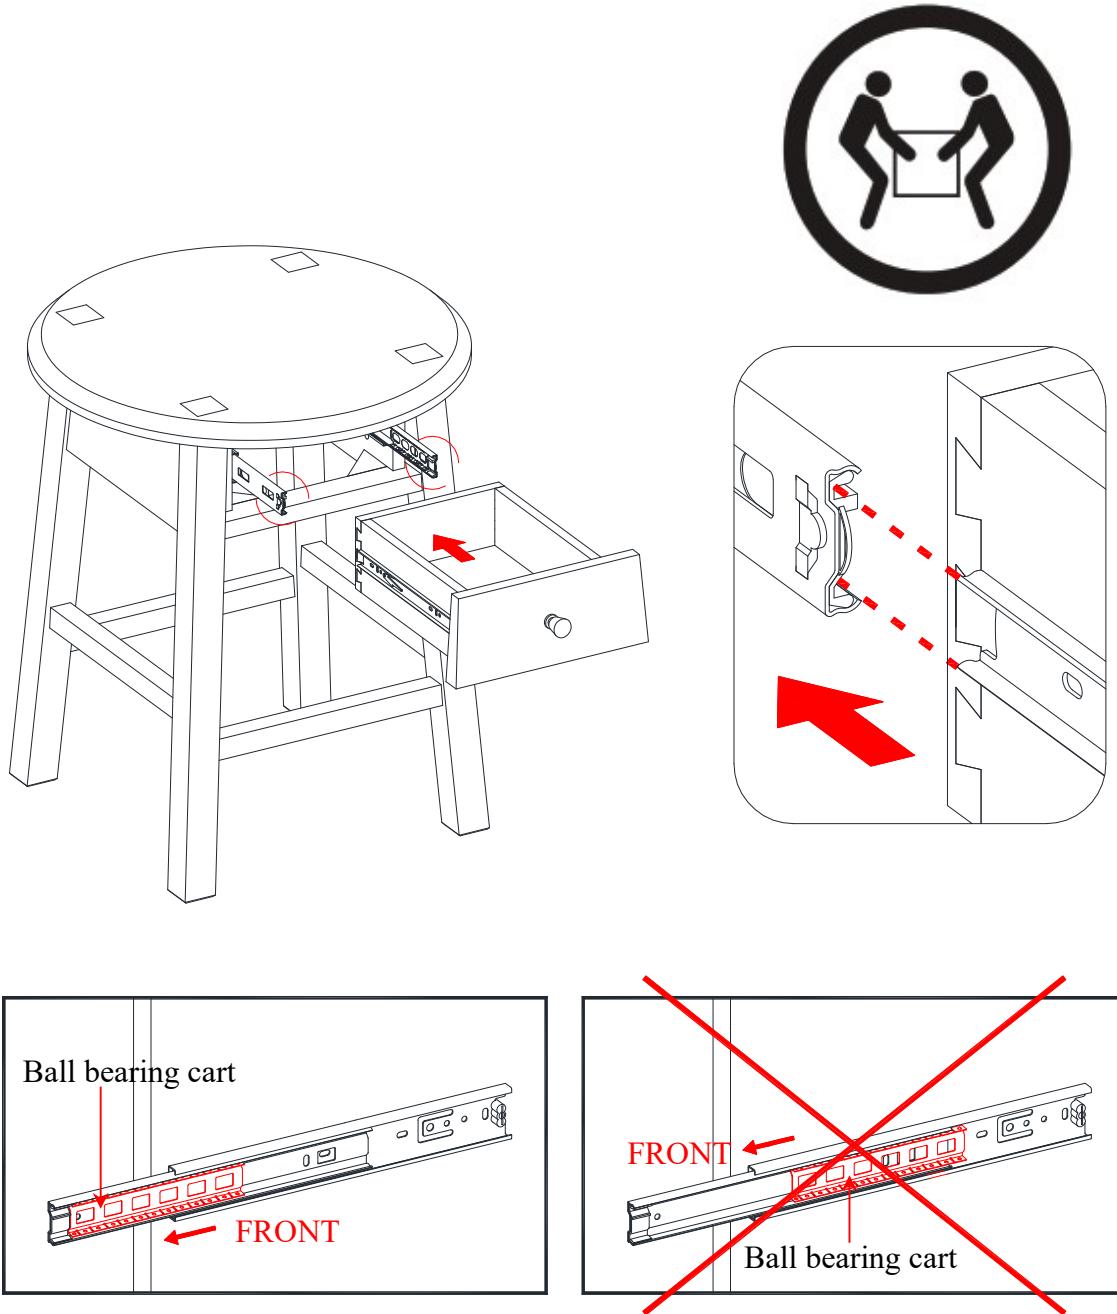

10. Ask for assistance to lift the assembled unit upright and position it at the desired location.
11. Extend the ball bearing cart all the way to the end of the slides on both sides and align the slide runners on the drawer with the slide tracks on the unit. Push the drawer carefully inside until it stops.

NOTE: If the drawer does not go in smoothly, please take it out and repeat the step.

Assembly Instructions

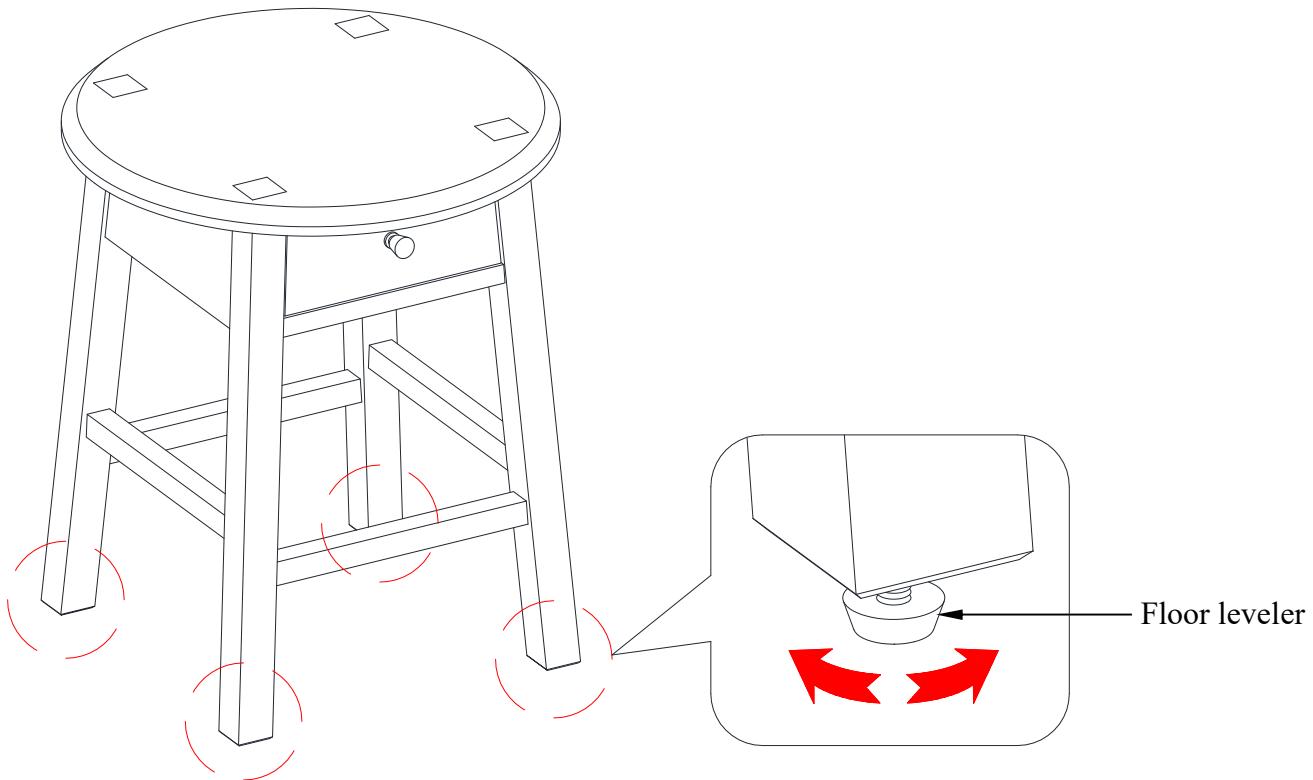

12. If necessary, adjust the floor levelers pre-attached underneath the Side Frames (B and C) to level the unit.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further Advice about Wood Furniture Care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

A touch-up pen has been provided to minimize the small nicks or scratches that may occur during assembly or shipping.

We hope you enjoy your purchase for many years.

Thank you for your purchase!

QUALITY GUARANTEE

We are confident that you will be delighted with your Woodenshine Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Woodenshine Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.