 
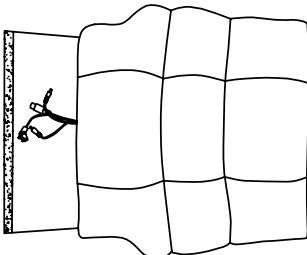 
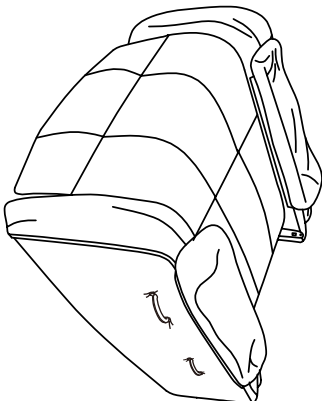 
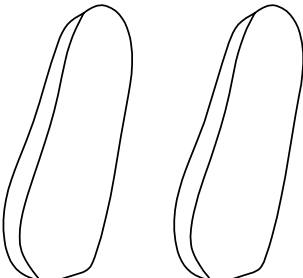 
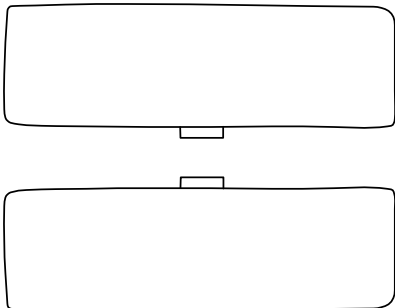 
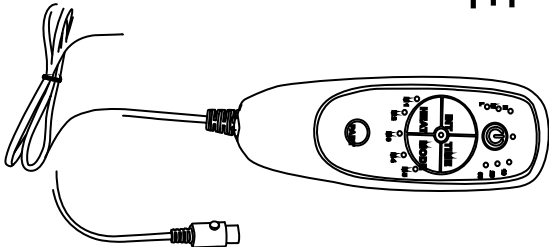 
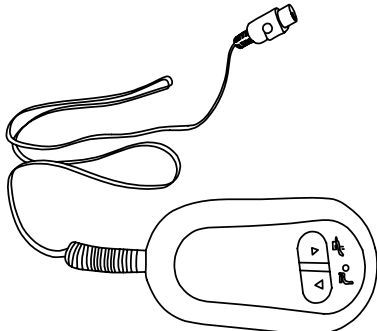 
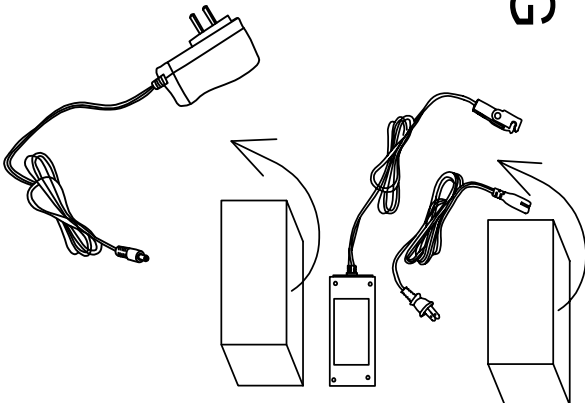 
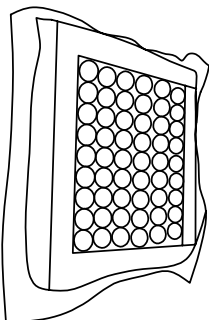 
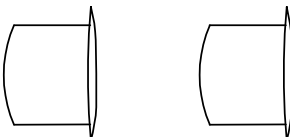 



PART LIST

<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 
<div>E</div> 	<div>F</div> 	<div>G</div> 	<div>H</div> 
<div>I</div> 			


1

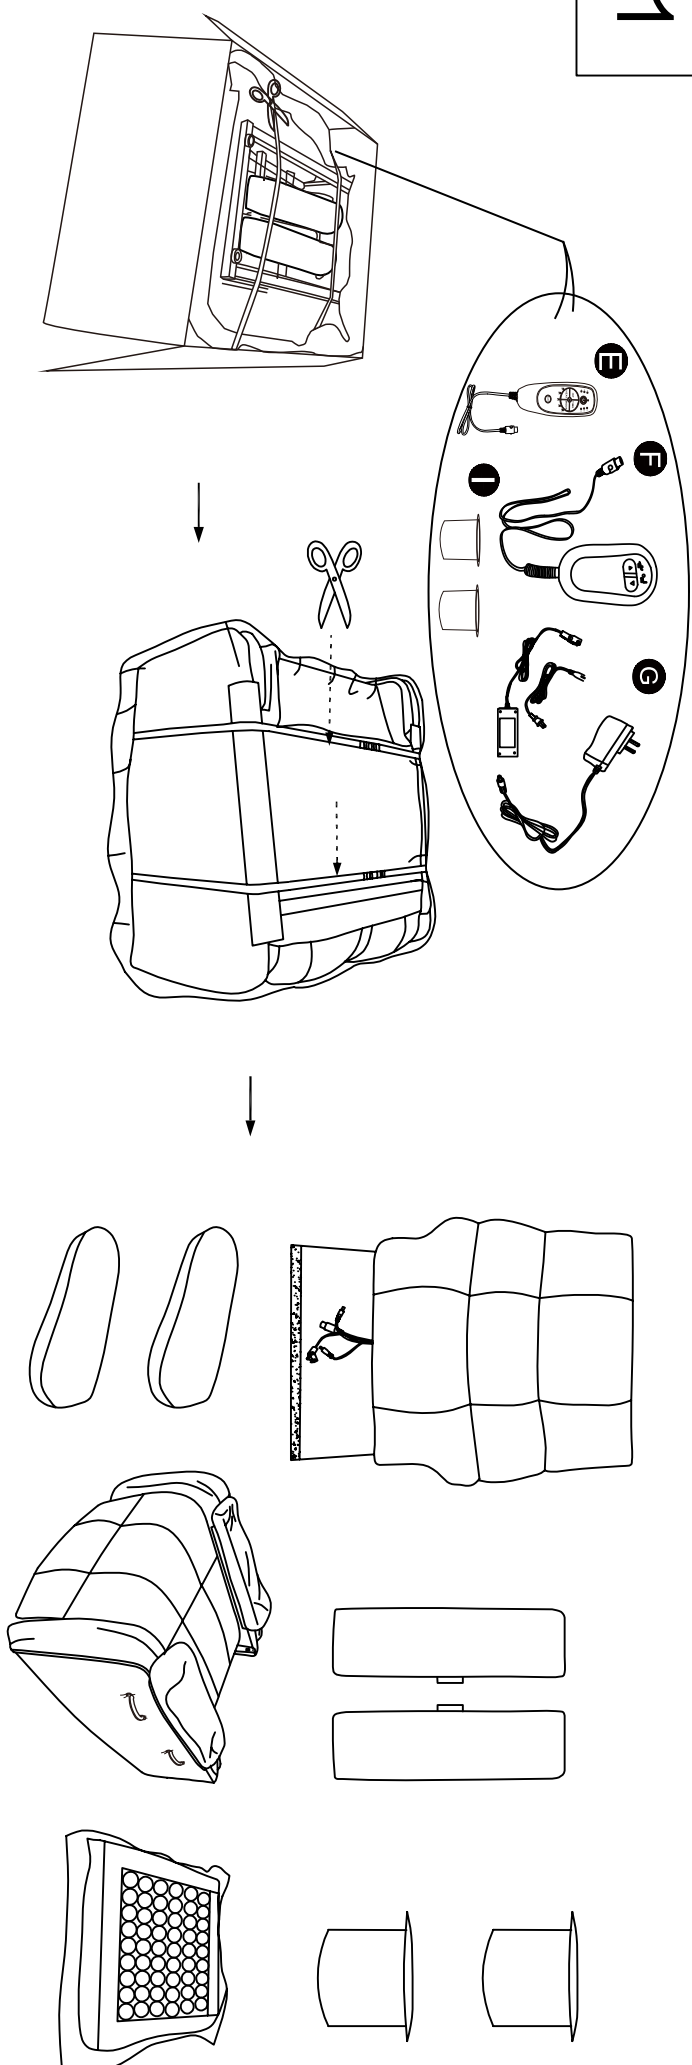

 
2

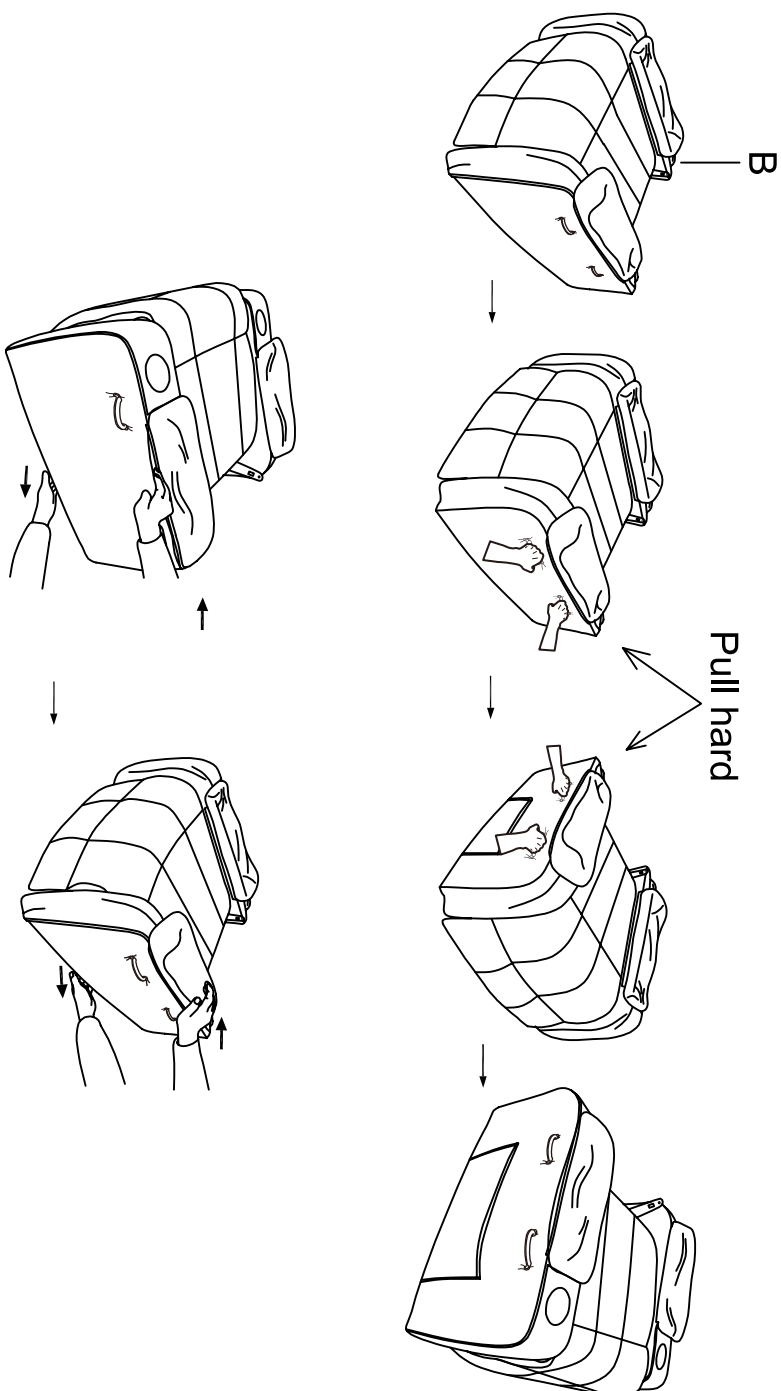




3

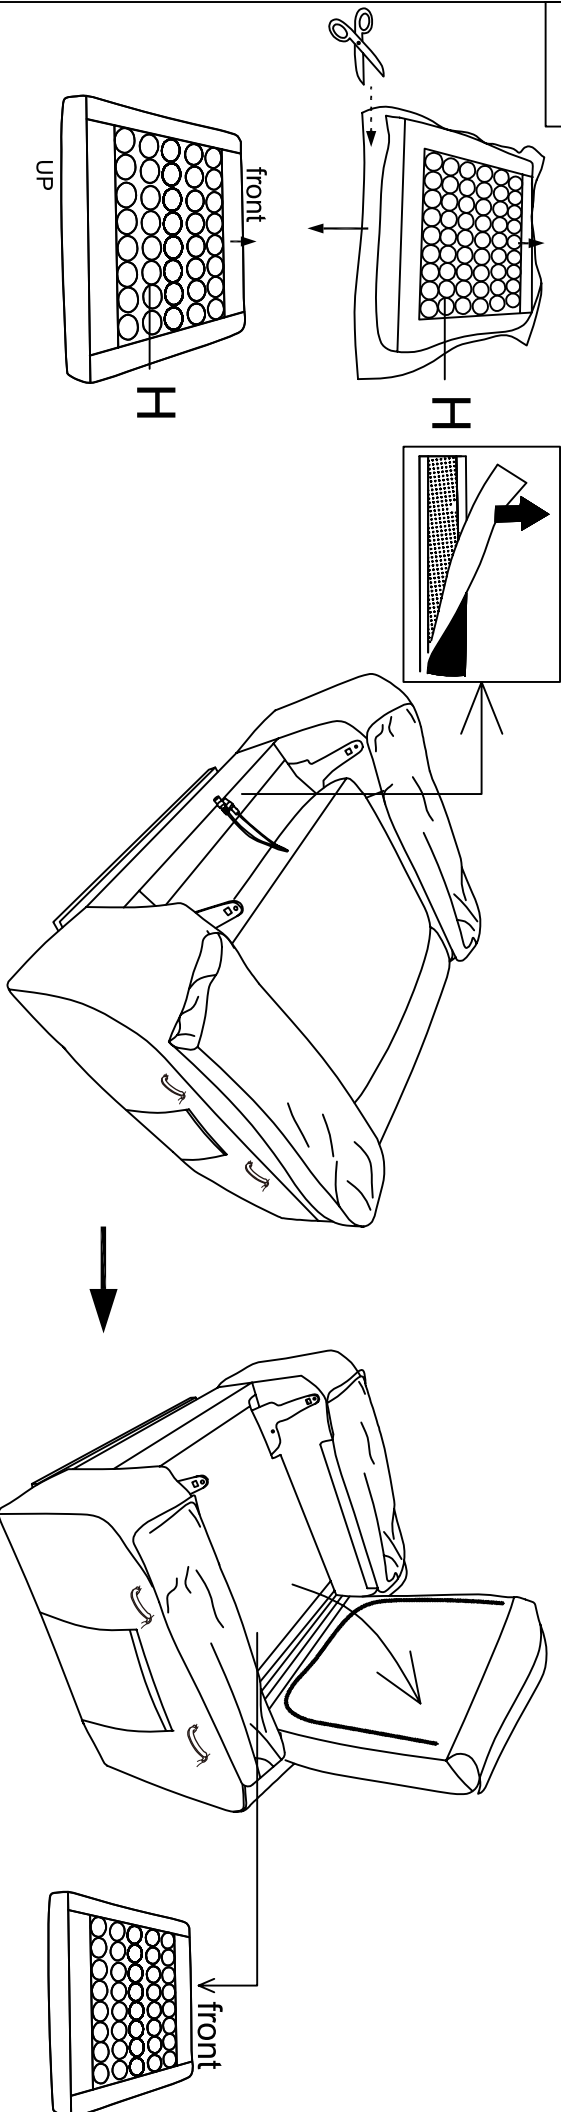 



4

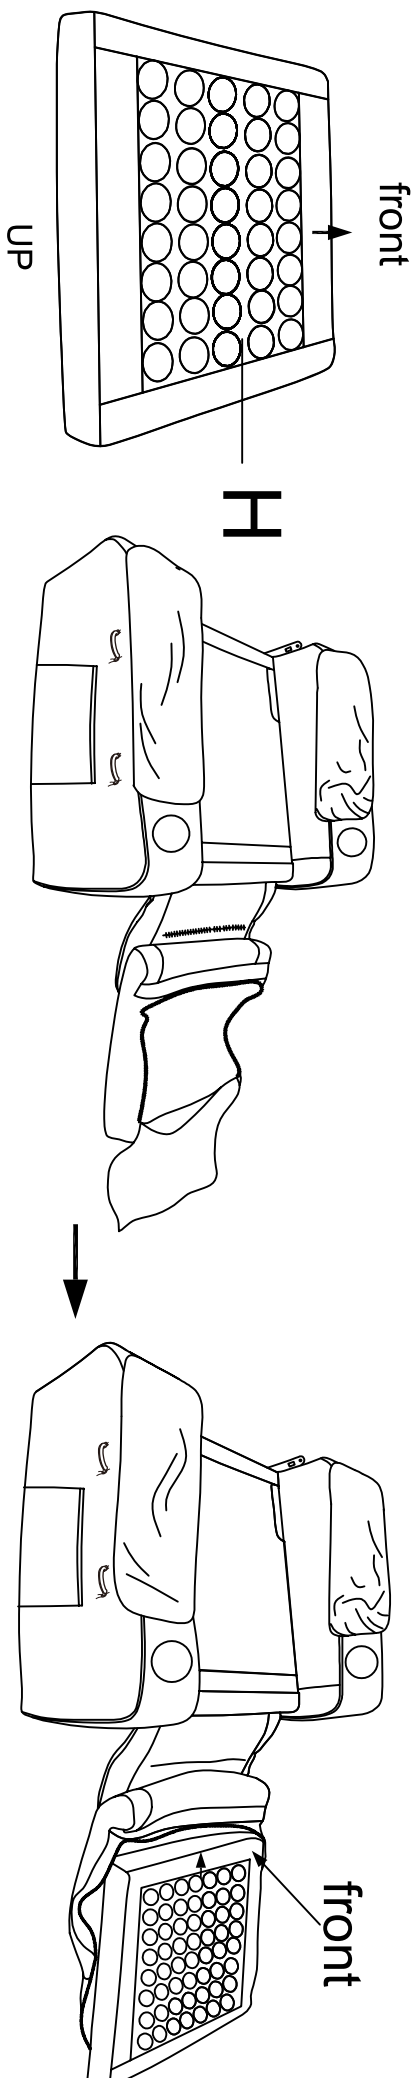 






5

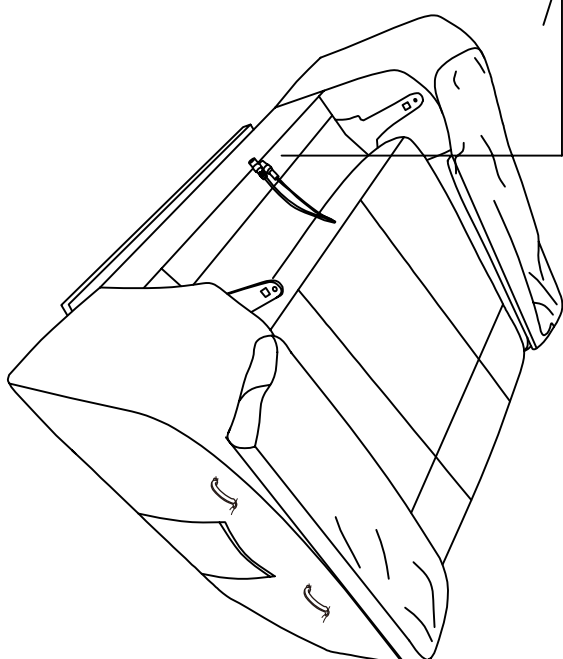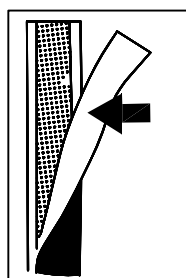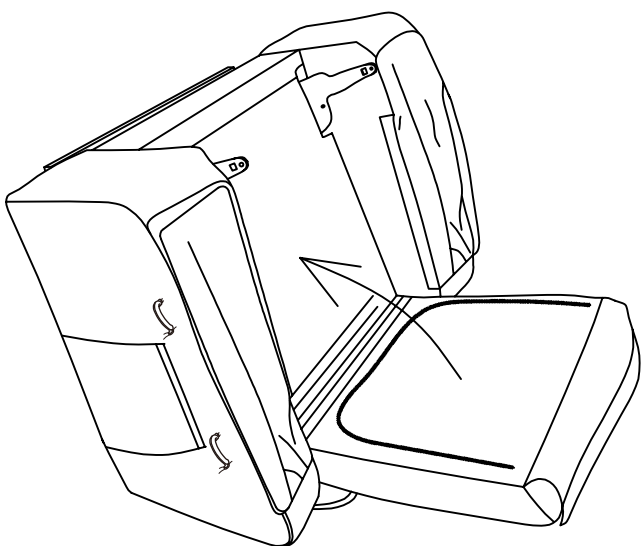   



6

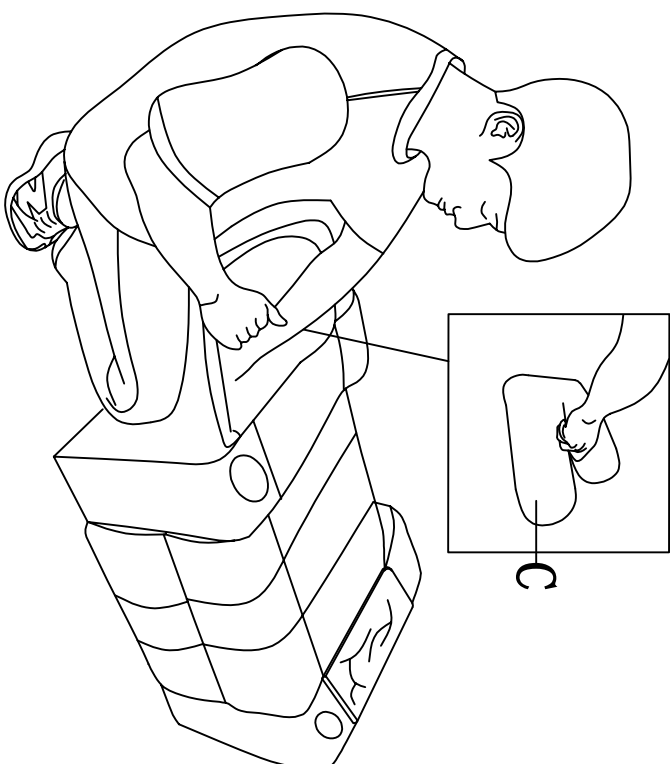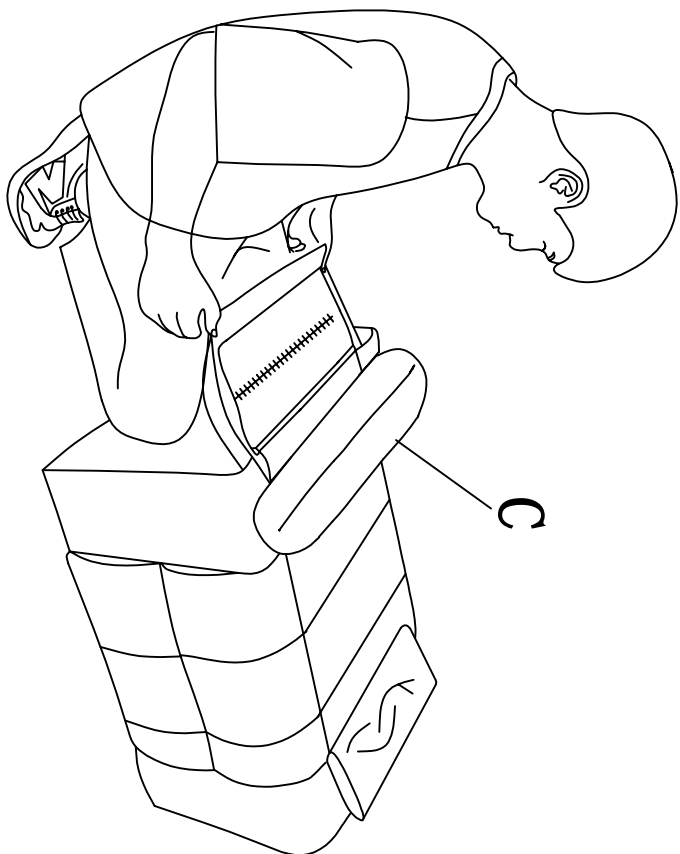  


7

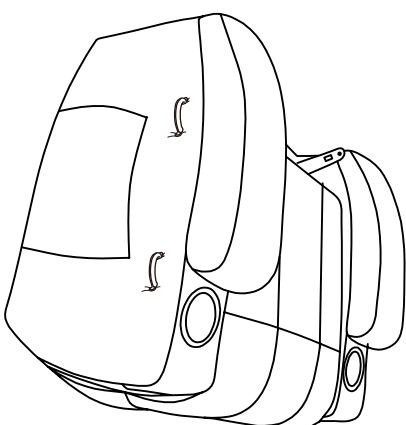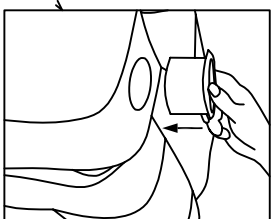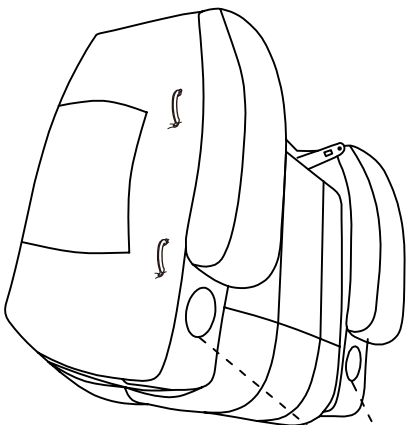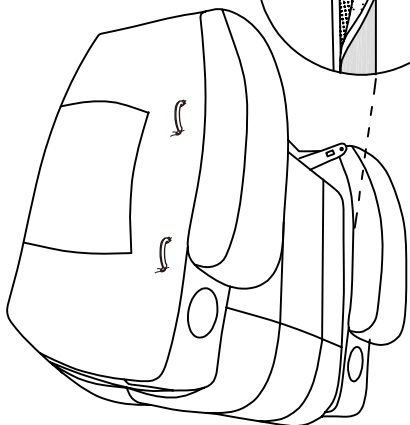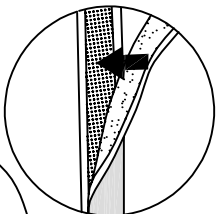     


8

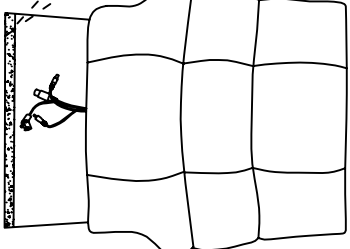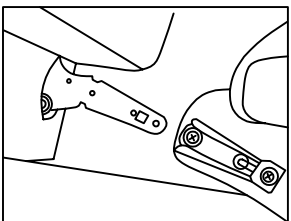  


A

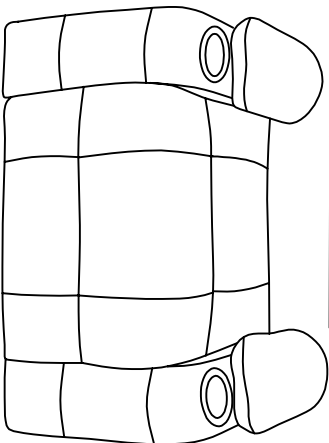 



B

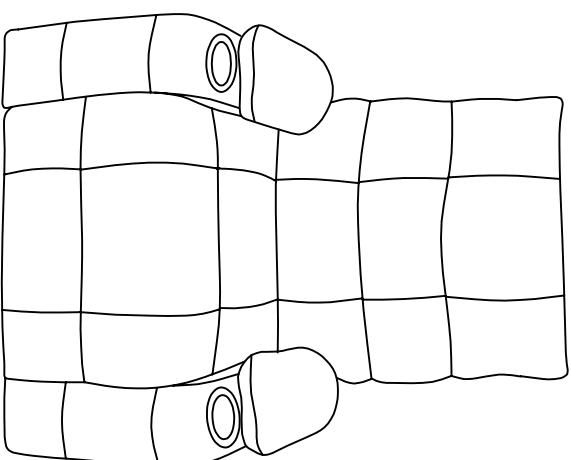 

9

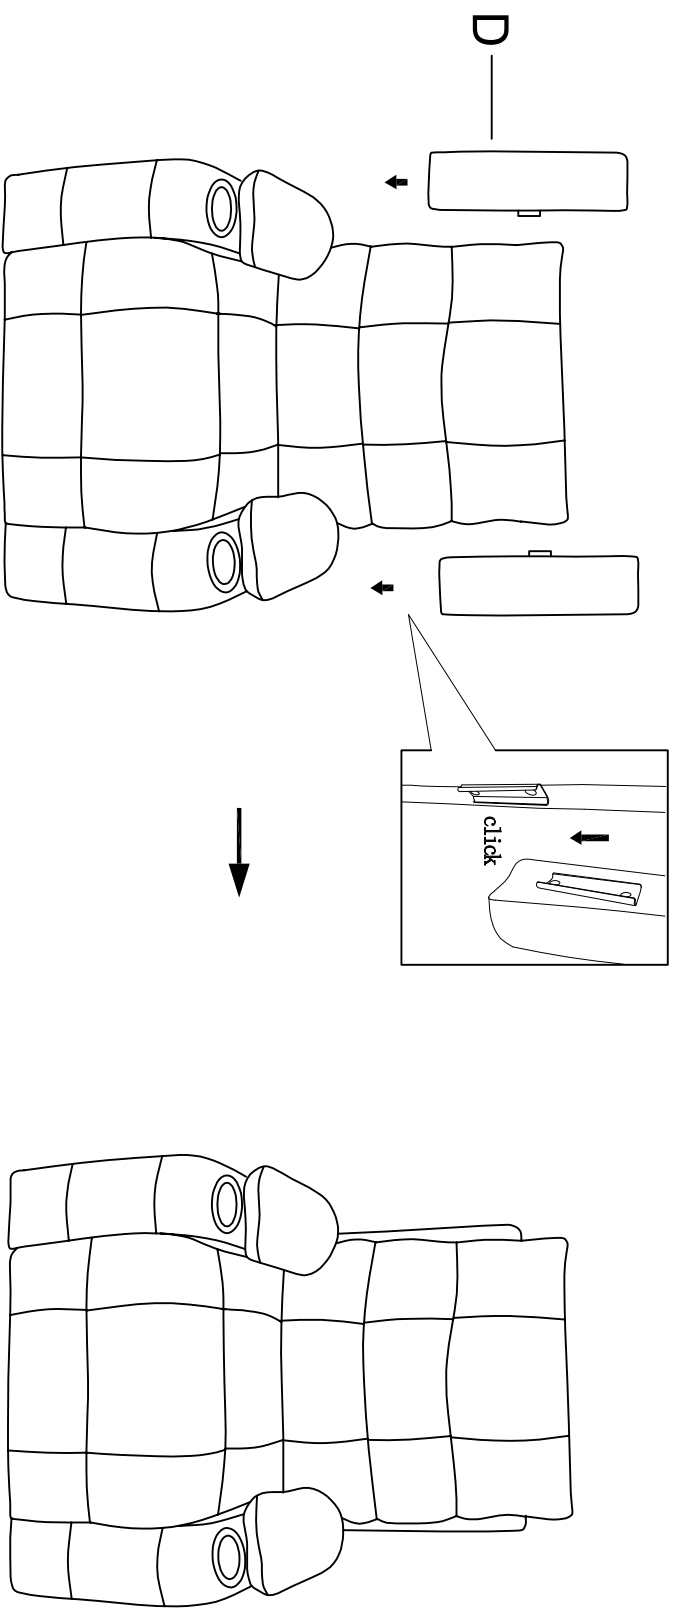 




10

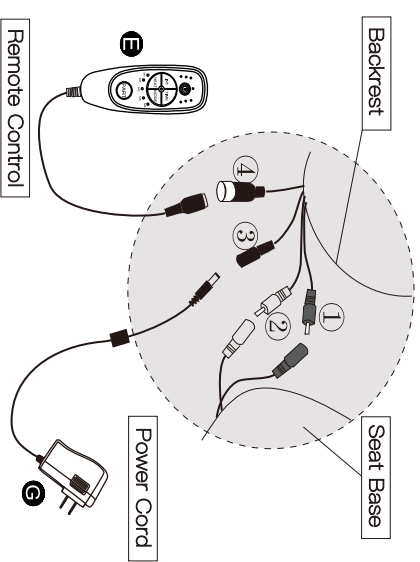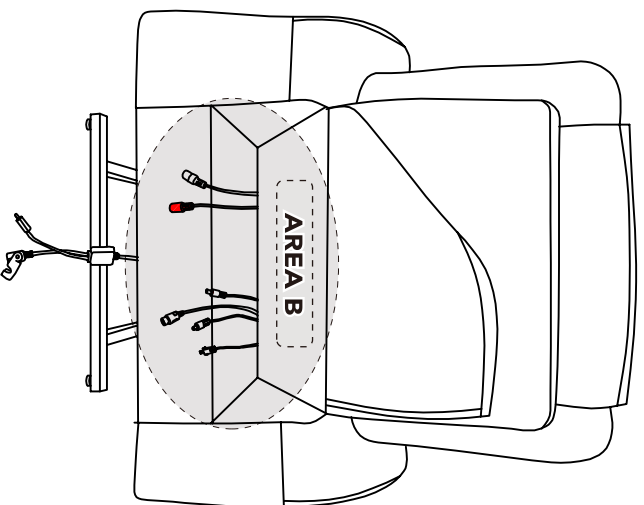  




Connect ① ② with wires of same color from the seat base.

Connect ③ with Power cord ⑦ and ④ with Remote control ⑧.

   11

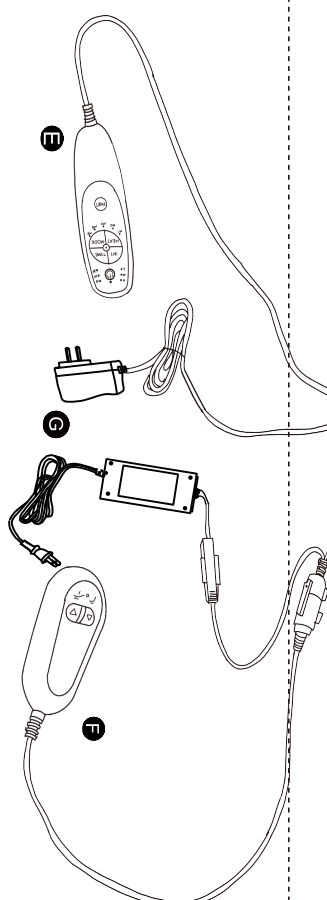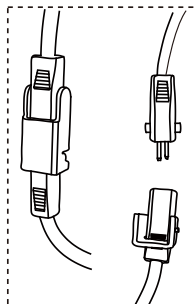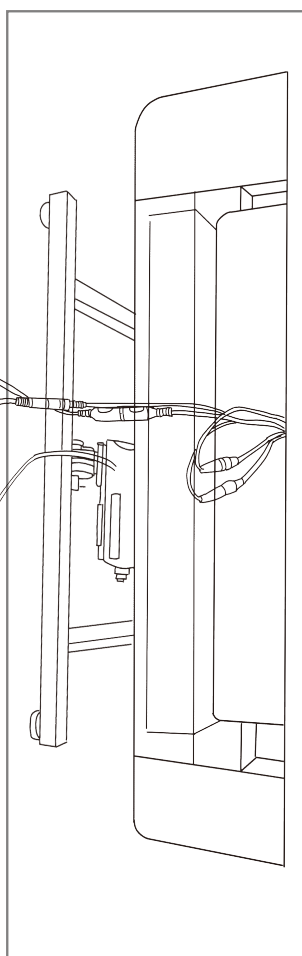


12

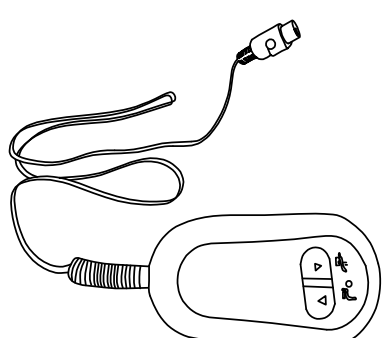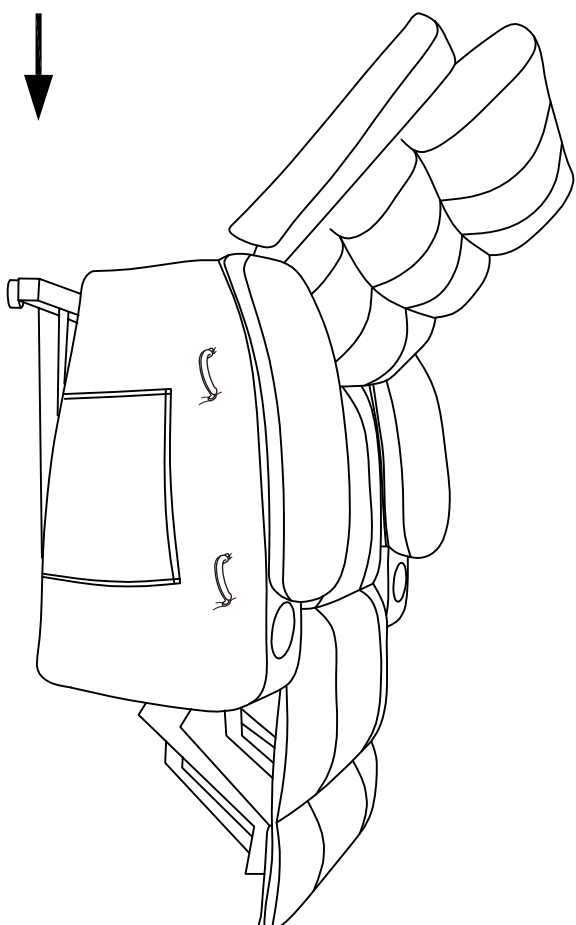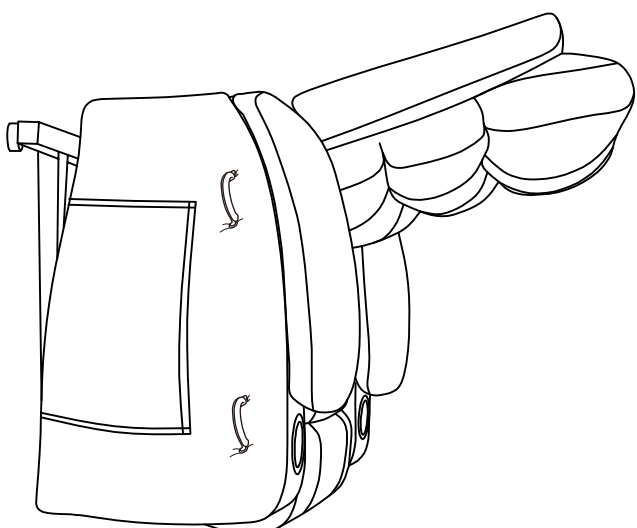   



## Manual controller function manual

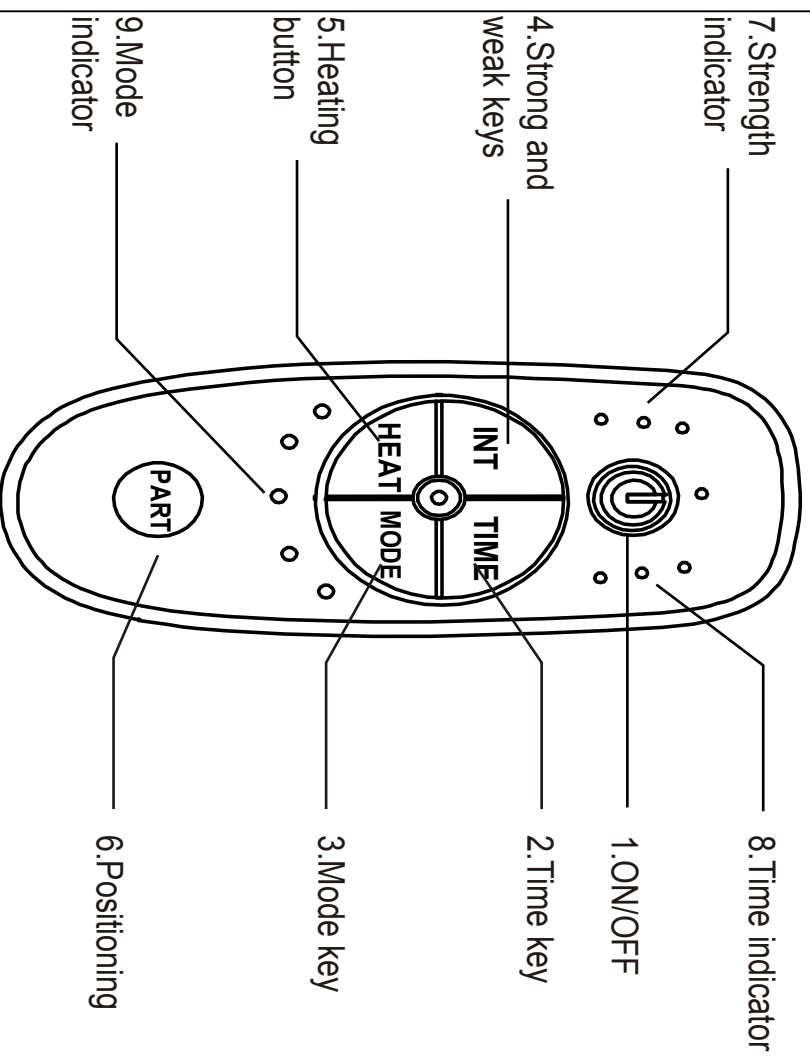 

### I 、Specifications of power adapter

Power on in standby state. The user can realize the function through the hand controller control

Input :AC 100-240V, 50Hz/60HZ; Output: DC12V1A.

### II 、Product features

1. Motor vibration at position 8
2. 1-way heating plate
3. Three-segment timing, the default timing shutdown time is 10Min
4. 3rd gear vibration intensity
5. 5 vibration modes

### III 、Function details

1. ON/OFF: Switch on and of
2. TIME: Positioning cycle by massage time (10/20/30 min) , Boot default 10min
3. MODE: Tap the five vibration modes to switch ( M1/M2/M3/M4/M5 ) ,The default startup mode is M4
4. INT: Switch point by vibration intensity (H/M/L) ,Boot the default M file (medium files)
5. HEAT: Click heating switch circulation
6. PART: Vibration positioning key , Boot the default vibration is full on, tap to switch to a single part vibration
7. Strength indicator
8. Time indicator
9. Mode indicator