


ASSEMBLY INSTRUCTIONS


72" RECTANGULAR DINING TABLE

A Table Top

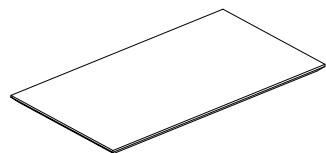


1 pc

B Leg

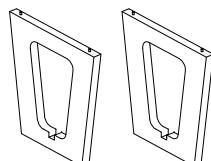

2 pcs


C Stretcher

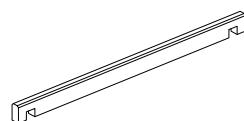

1 pc

D Bolt

 
$\text{\O}5/16" \times 1-1/2"$



4 pcs

E Bolt

 $\text{\O}5/16" \times 3-3/8"$



2 pcs

F Lock Washer

$\text{\O}5/16" \times \text{\O}1/2"$



6 pcs

G Flat Washer

$\text{\O}5/16" \times \text{\O}3/4"$




6 pcs

H Allen Key

$2-1/4" \times 1/8"$




1 pc

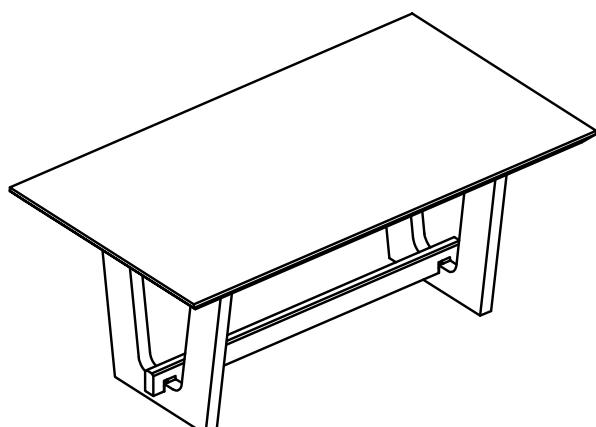


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

-
- 1** Attach the Leg (B) to the Table Top (A) using Bolt (D), Lock Washer (F) and Flat Washer (G) with the Allen Key (H).

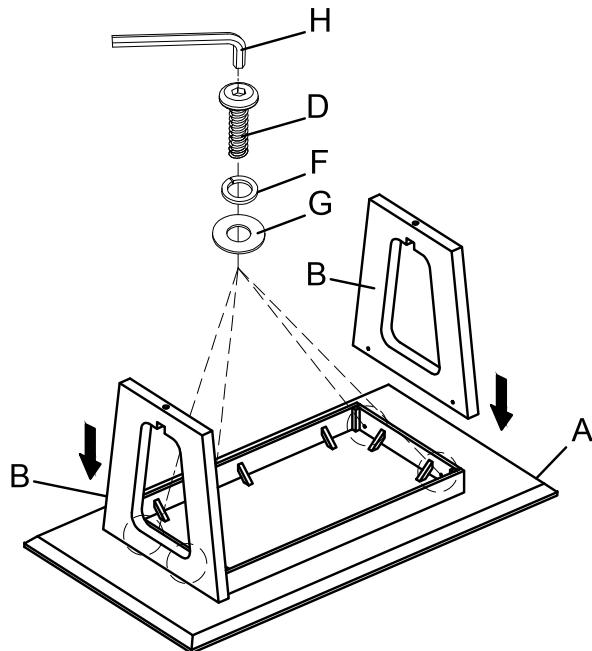

-
- 2** Attach the Stretcher (C) to the Leg (B) using Bolt (E), Lock Washer (F) and Flat Washer (G) with the Allen Key (H).

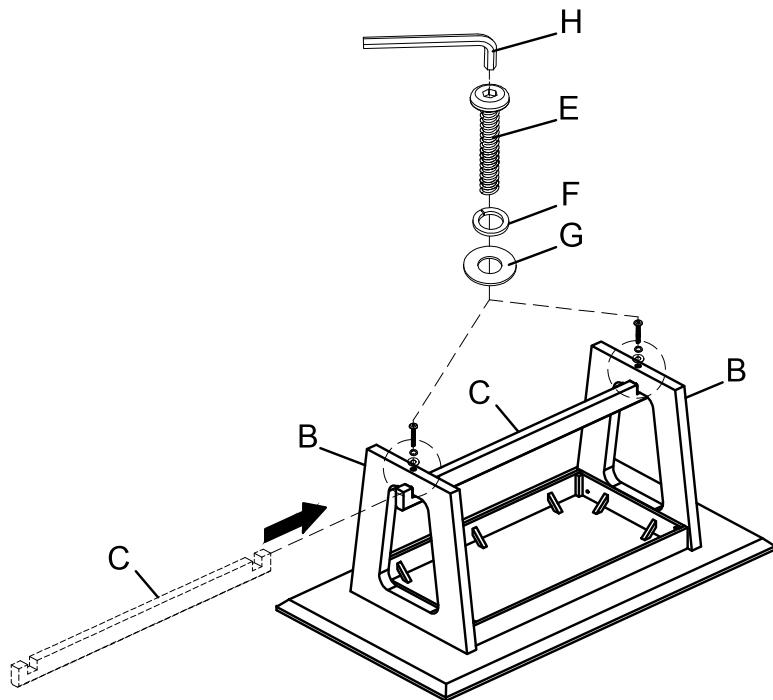


Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS


DINING CHAIR

A Back Frame

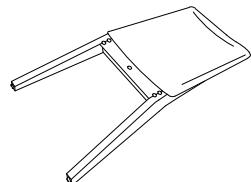


1 pc

B Seat Cushion

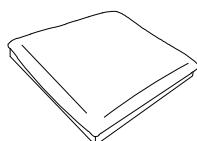

1 pc


C Leg

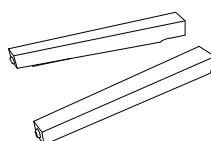

2 pcs

D Bolt

 
$\varnothing 5/16" \times 1-1/2"$



1 pc

E Bolt

 
$\varnothing 5/16" \times 2-1/2"$



4 pcs

F Bolt

 $\varnothing 5/16" \times 3-3/8"$



4 pcs

G Lock Washer

$\varnothing 5/16" \times \varnothing 1/2"$



9 pcs

H Flat Washer

$\varnothing 5/16" \times \varnothing 3/4"$




9 pcs

I Allen Key

$2-1/4" \times 1/8"$




1 pc

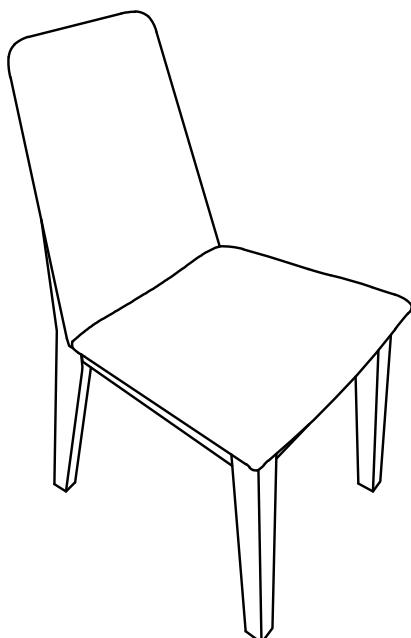


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

-
- 1** Attach the Seat Cushion (B) to the Back Frame (A) using Bolt (F), Lock Washer (G) and Flat Washer (H) into the corner holes, and using Bolt (D), Lock Washer (G) and Flat Washer (H) into the middle holes, tightening with the Allen Key (I).

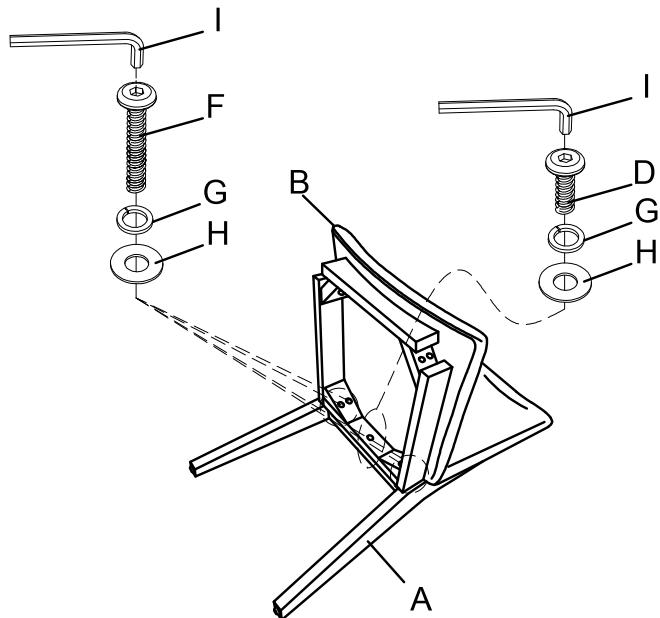

Take the Allen Key and turn the bolts until the legs are secured.
DO NOT TIGHTEN THE BOLTS COMPLETELY. Stop when you feel you are adding force to tighten the bolts.

-
- 2** Attach the Leg (C) to the Seat Cushion (B) using Bolt (E), Lock Washer (G) and Flat Washer (H) with the Allen Key (I).

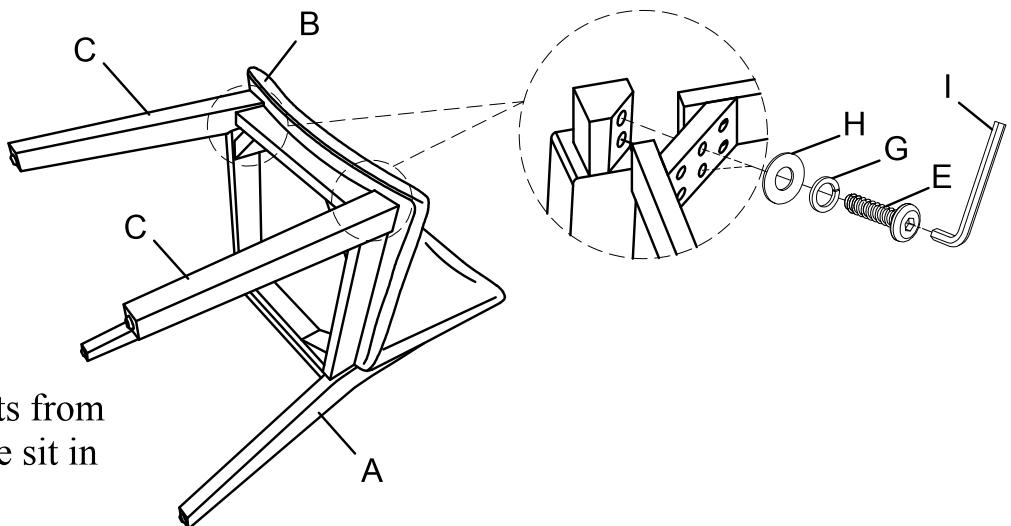

Helpful Tips

*While tightening the bolts from underneath, have someone sit in the chair.

Stand the chair on an even surface and check for balance. If the chair wobbles slightly, apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the chair is balanced, apply downward pressure evenly in the center of the chair and tighten all bolts, being careful not to over-tighten beyond the hole depth.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.