

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance



- Not for commercial use. For residential use only.



- Prolonged exposure to rain may cause rusting which can stain floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.



- Children should not climb or jump on the furniture.



- Do not write on furniture without a padded barrier to protect the surface.



- To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings.



- Stains may be removed with mild soap solution and damp cloth.




- Keep away from sources of ignition.




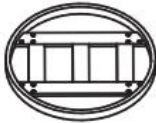


- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

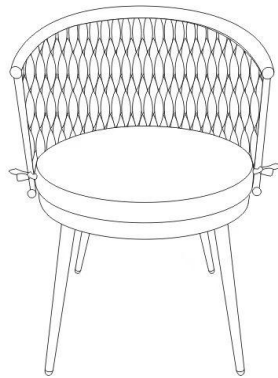



DINING CHAIR



Parts List

Label	Picture	Description	QTY
A		Back	1
B		Connection	1
C		Seat Cushion	1
D		Leg	4

Hardware

Label	Picture	Description	QTY
①		Bolt (M6x16mm)	17
②		Washer(M6x16x1.5mm)	17
③		Allen Wrench (5mm)	1
④		Adjustable Foot	1 (Pre-assembled on product and one more was given just in case)

Assembly Preparation

Before
Beginning
Assembly:



A



B



C



D×4



① x17



② x17



③ x1



④ x1



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


Assembly Steps

Overview

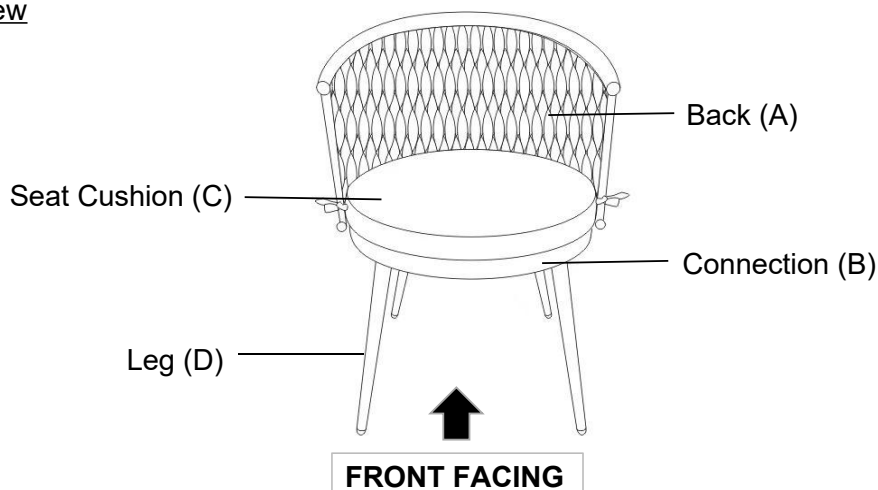

This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1

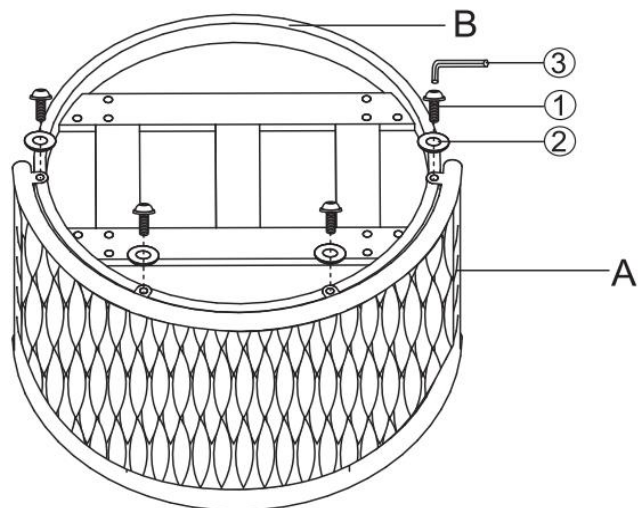

Attach the Connection (B) to Back (A) using the Washer (②) and Bolt (①) with Allen Wrench (③) as shown above.



Do not fully tighten the Bolts.

Step 2

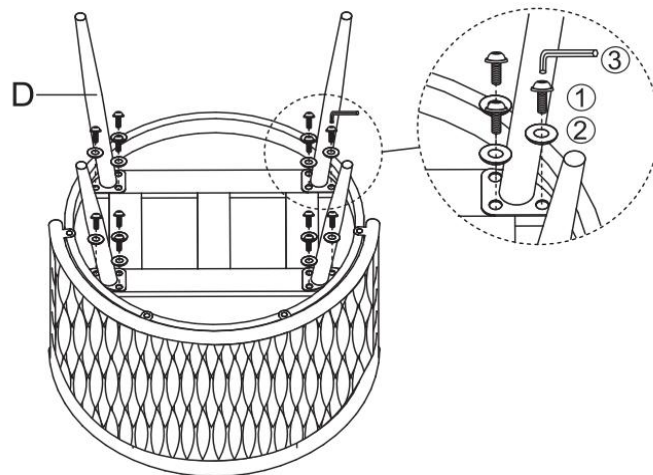


Attach the Leg (D) to assembled frame using the Washer (②) and Bolt (①) with Allen Wrench (③) as shown above.

Do not fully tighten the Bolts.
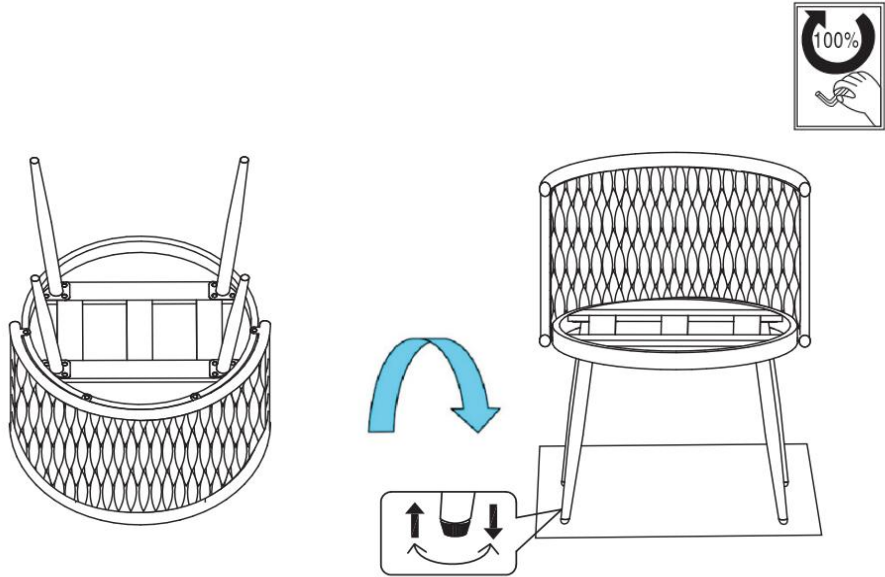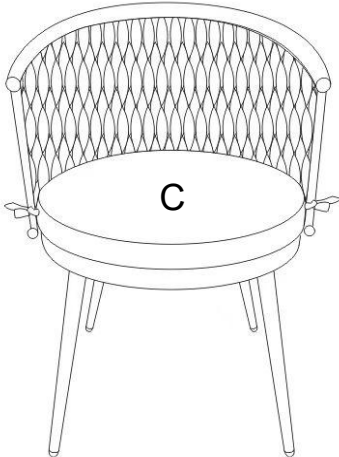
<p><u>Step 3</u></p>	
<p>Stand the chair right side up. After checking the chair, if no problem, pls fully and securely, tighten all bolts, at all joints.</p>	
<p><u>Step 4</u></p>	
<p>Put the Seat Cushion (C) to the Chair and tighten up the rope .</p>	

Step 5

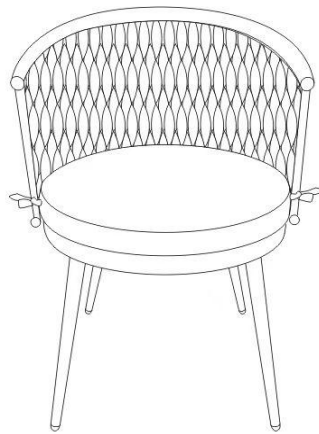

Your Dining Chair is ready for use.
The Dining Chair can only be used on a flat, level surface.