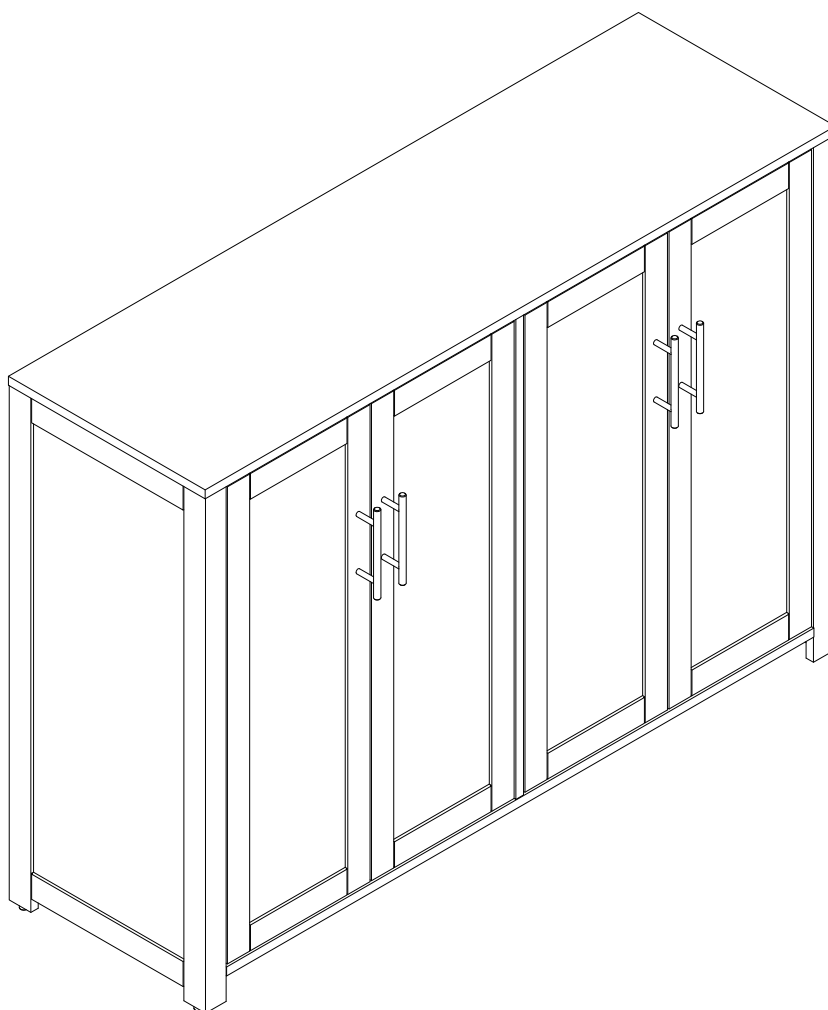 













CROSLEY

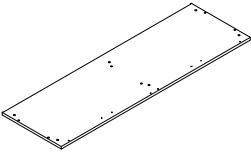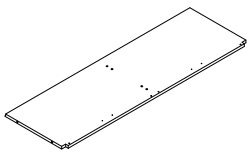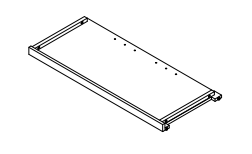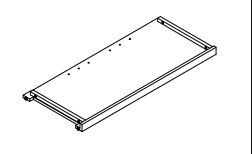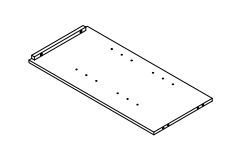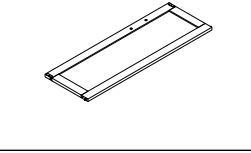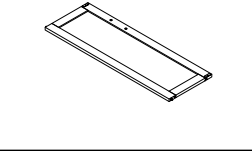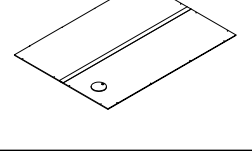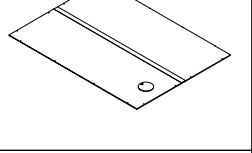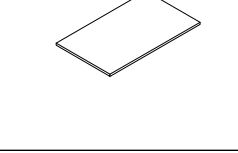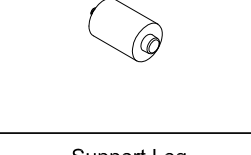           F U R N I T U R E

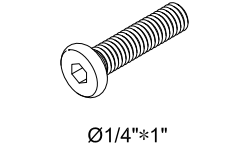 

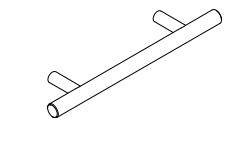 
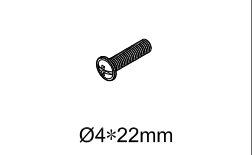 
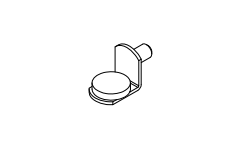 
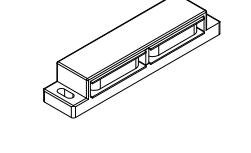 
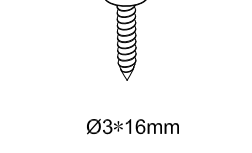 

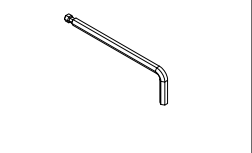 
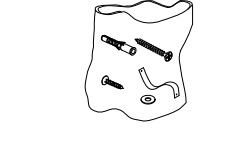 
Sideboard CF4227



PART LIST


A	B	C	D	E
				
Top Panel 1 PC	Bottom Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC
F	G	H	I	J
				
Left Door 2 PCS	Right Door 2 PCS	Left Back Panel 1 PC	Right Back Panel 1 PC	Adjustable Shelf 4 PCS
K				
				
Support Leg 1 PC				

HARDWARE LIST

#1	#2	#3	#4	#5
				
Ø1/4"*1"	Ø8*30mm		Ø4*22mm	
Bolt 12 PCS (Extra 1)	Wood Dowel 12 PCS (Extra 1)	Handle 4 PCS	Round Head Bolt 8 PCS (Extra 1)	Shelf Holder 16 PCS (Extra 1)
#6	#7	#8	#9	#10
				
	Ø3*16mm	Ø3*12mm		
Magnet 4 PCS	Screw 8 PCS (Extra 1)	Round Head Screw 28 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

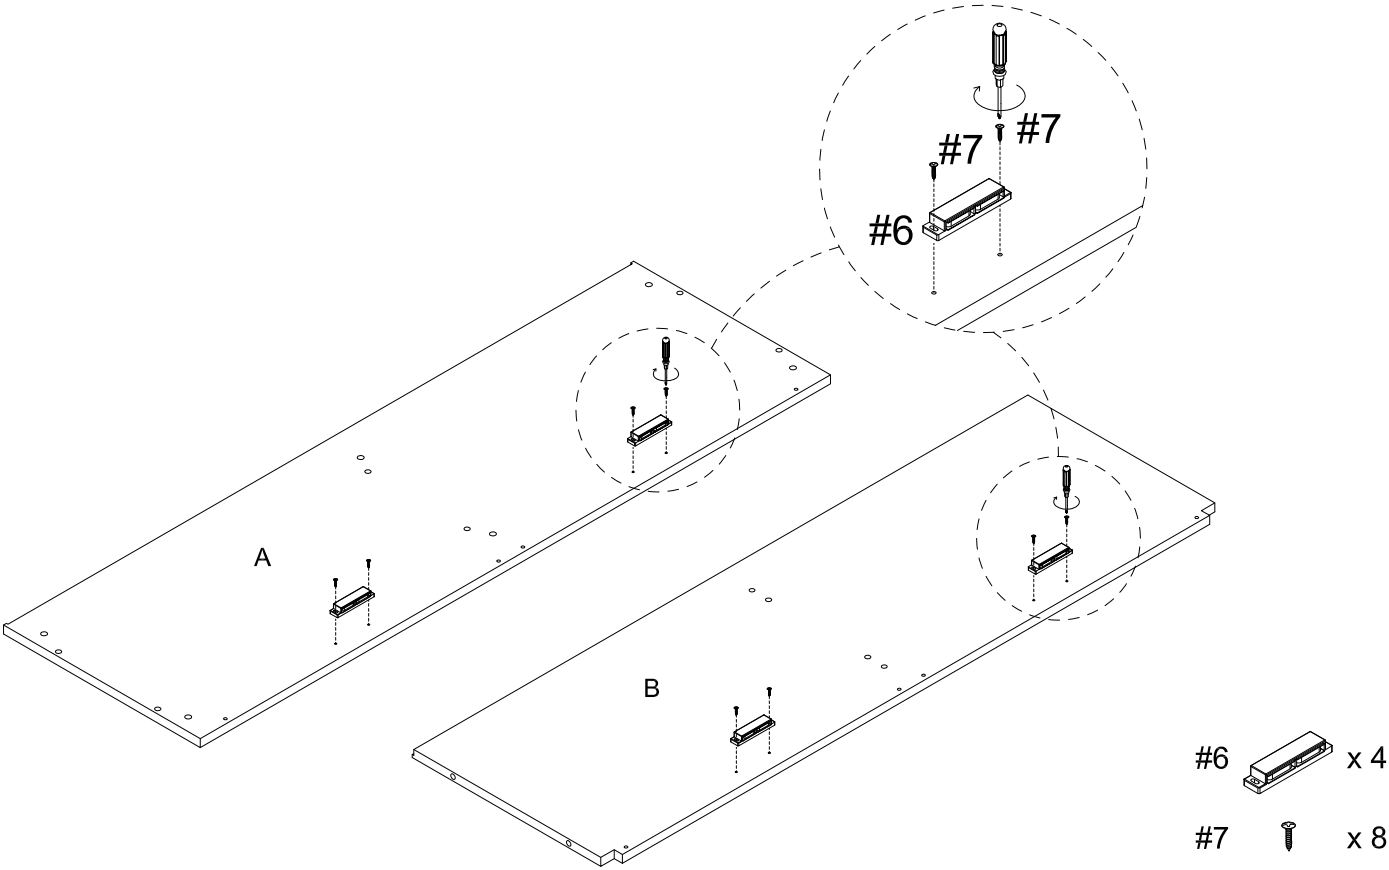 
Step 1. Attach magnets (part #6) to panels (parts A & B) using screws (part #7) and phillips head screwdriver.



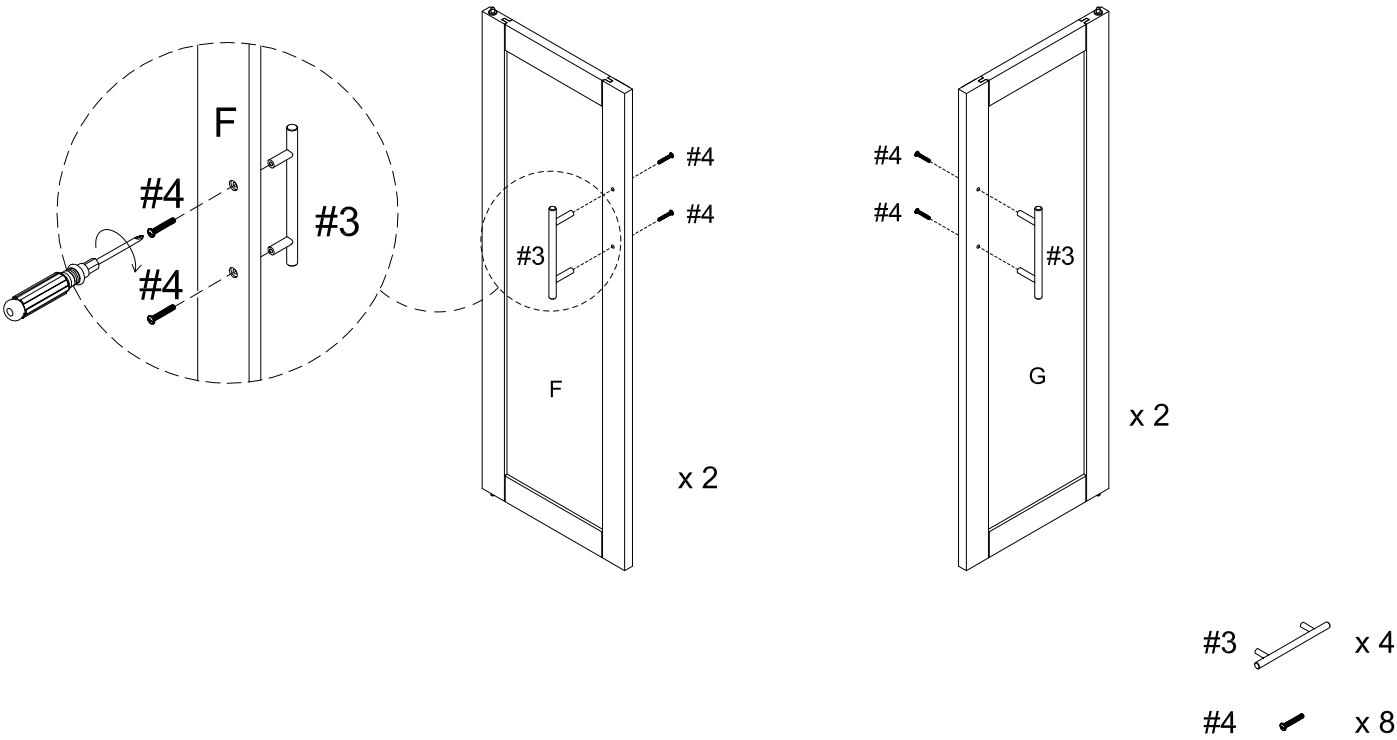 
Step 2. Attach handles (part #3) to doors (parts F & G) using round head bolts (part #4) and phillips head screwdriver.



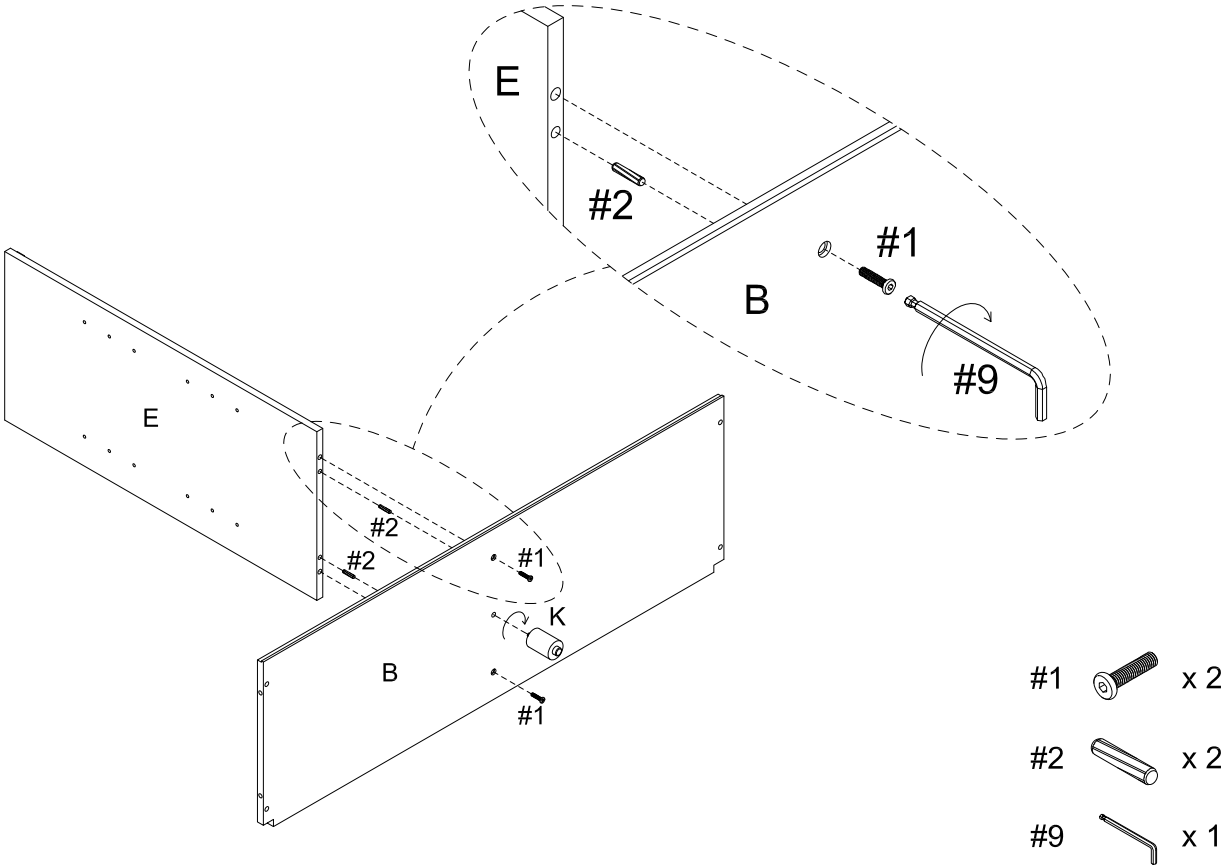 
Step 3. Attach bottom panel (part B) to partition panel (part E) using bolts (part #1), wood dowels (part #2) and allen wrench (part #9). Attach support leg (part K) to bottom panel (part B).



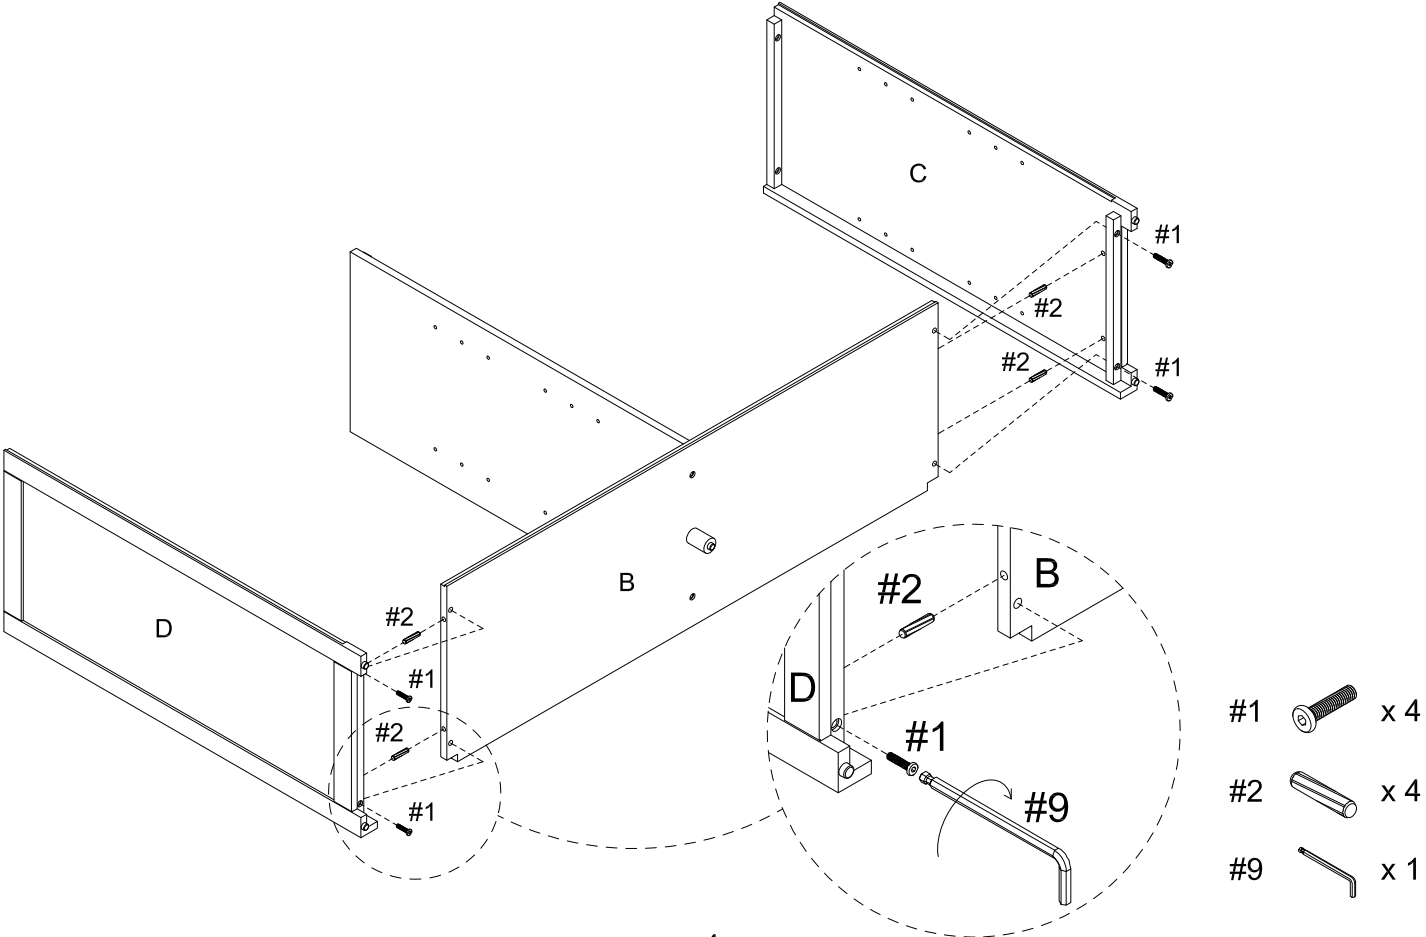 
Step 4. Attach panels (parts C & D) to bottom panel (part B) using bolts (part #1), wood dowels (part #2) and allen wrench (part #9).



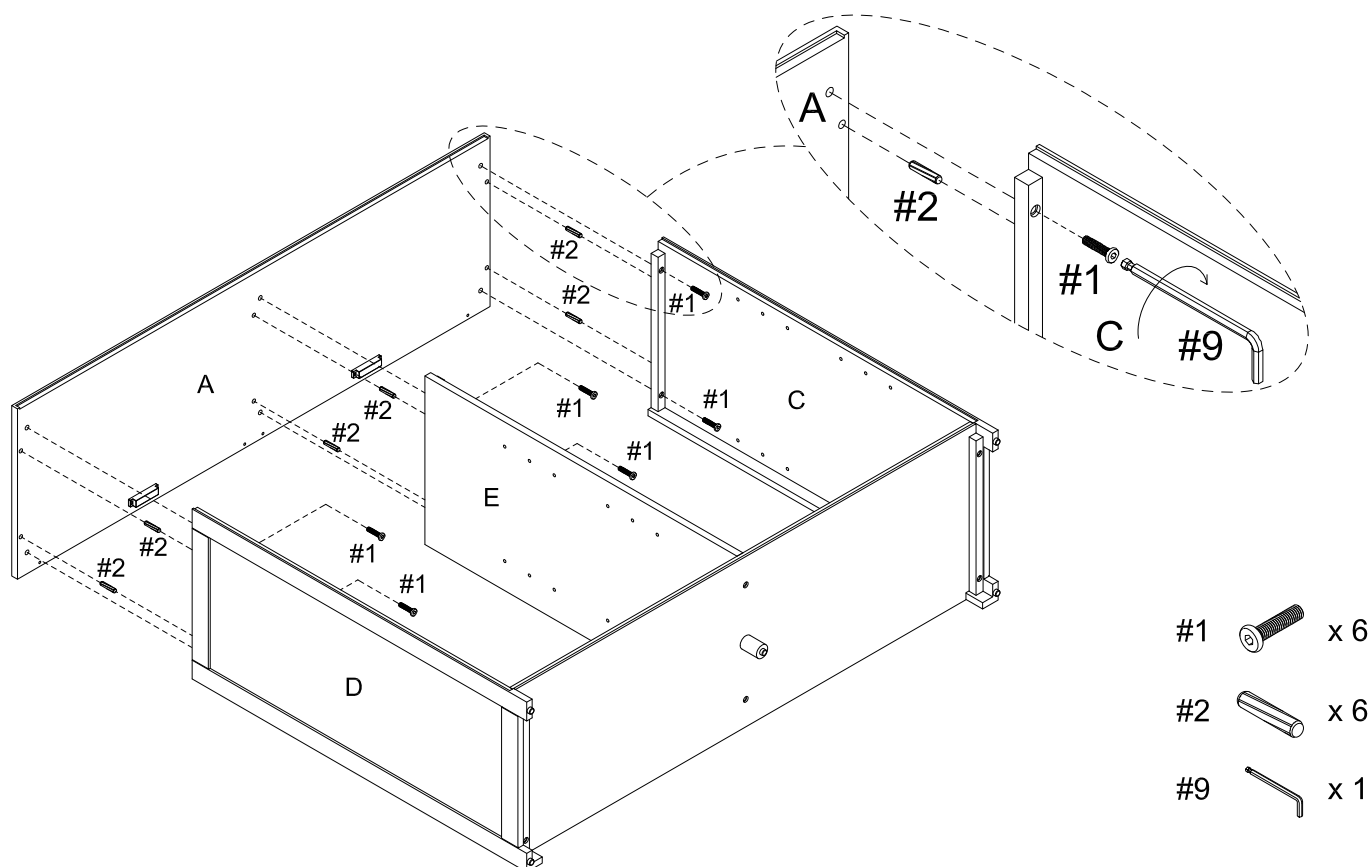 
Step 5. Attach top panel (part A) to panels (parts C, D & E) using bolts (part #1), wood dowels (part #2) and allen wrench (part #9).



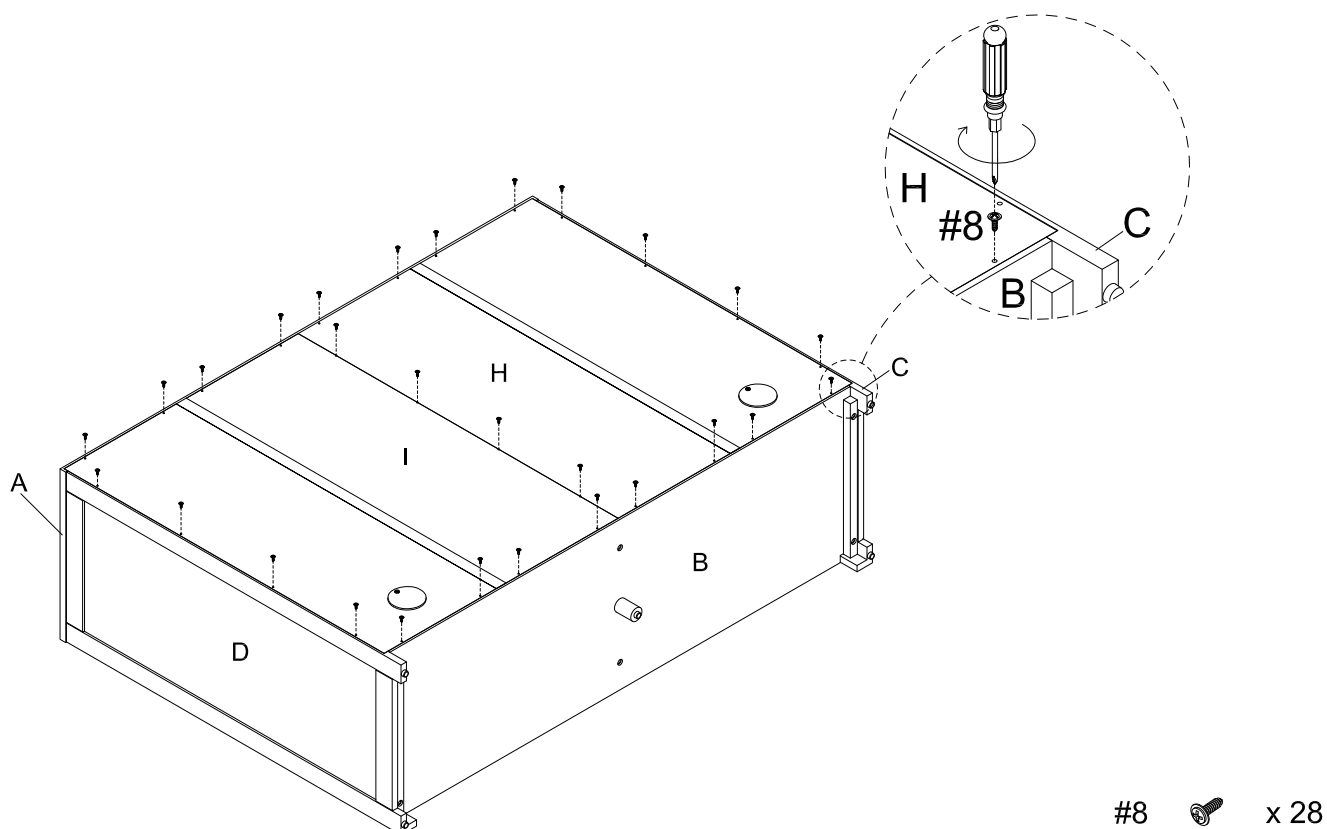 Step 6. Attach back panels (parts H & I) to assembled unit (parts A, B, C, D & E) using round head screws (part #8) and phillips head screwdriver.



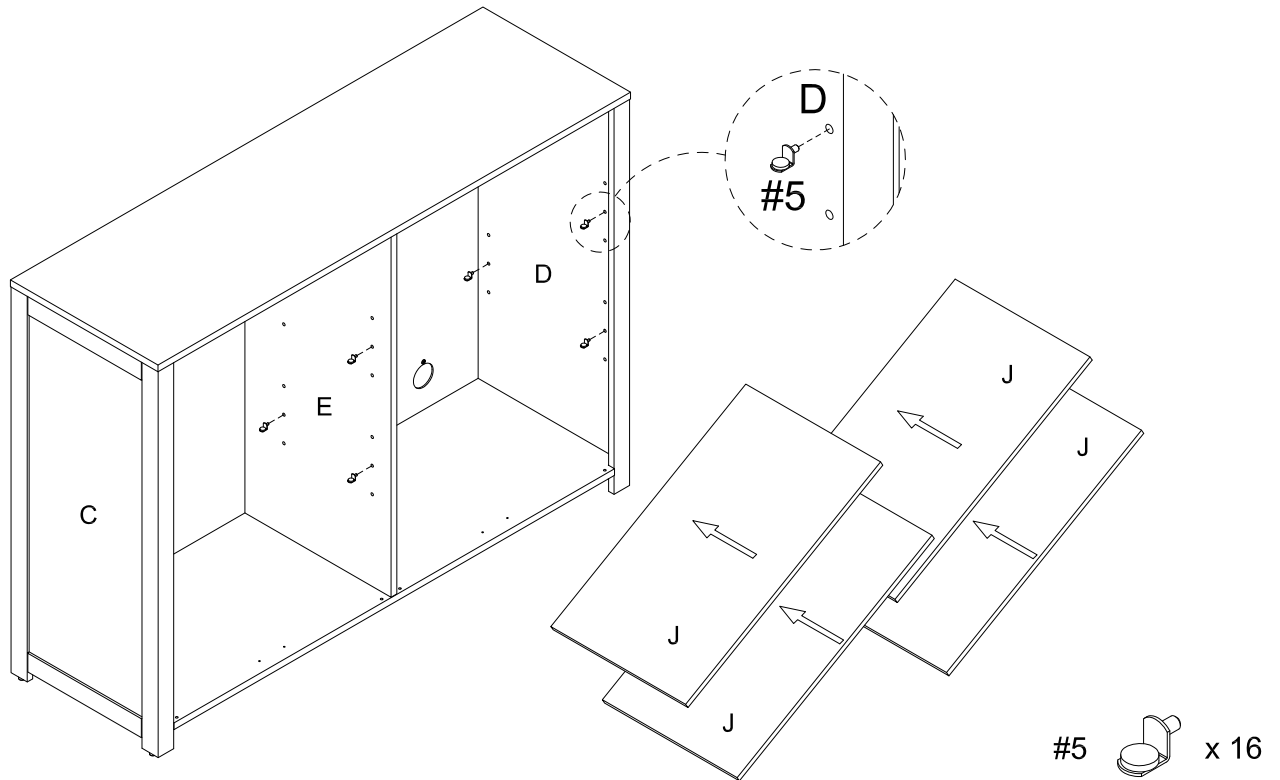 Step 7. Carefully turn unit upright. Place shelf holders (part #5) into desired position and slide adjustable shelves (part J) into place.










Step 8. Attach door panels (parts F & G) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part B), then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).

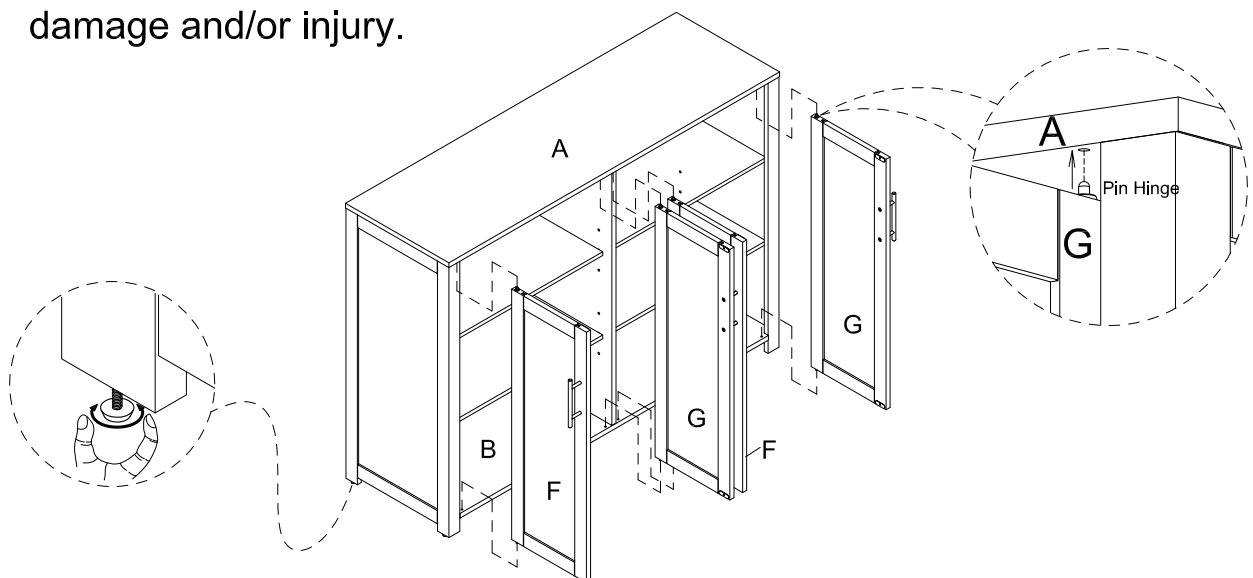 Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

 Important: Safety strap kit (part #10) must be installed to prevent tipping, damage and/or injury.




#10	A	B	C	D	E
	 1-1/2"xØ4xD8		 5/8"xØ3xD8		
Safety Strap Kit 1 SET	Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through safety wall strap (D) into wall anchor (B) using phillips head screwdriver.

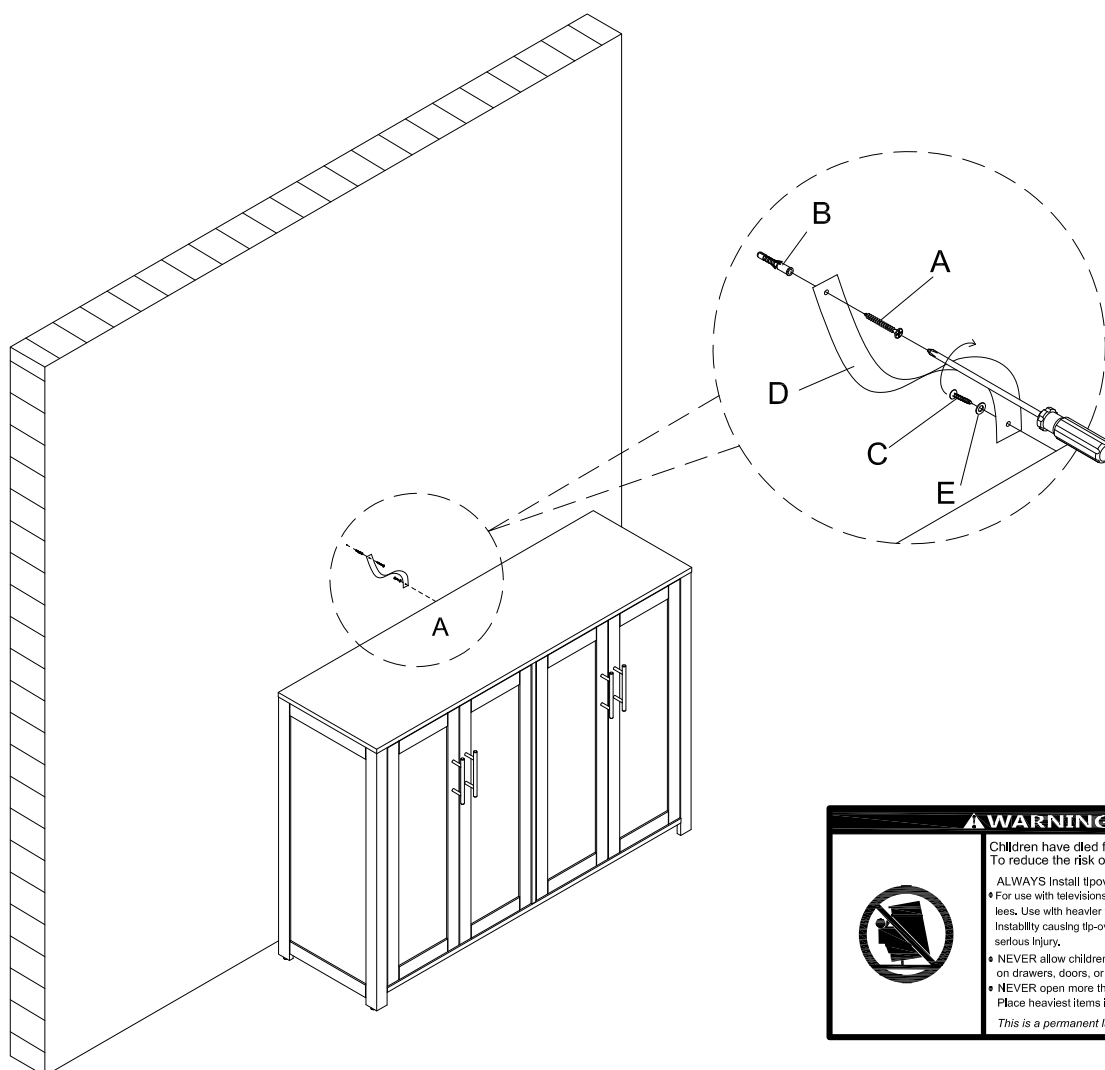 Note: This item is not intended for clothing storage use.



⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

ALWAYS install tipover restraint provided.

*For use with televisions weighing 50lbs (23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.

- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time. Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!