 


TV Stand

N724P286415B

N724P286415K

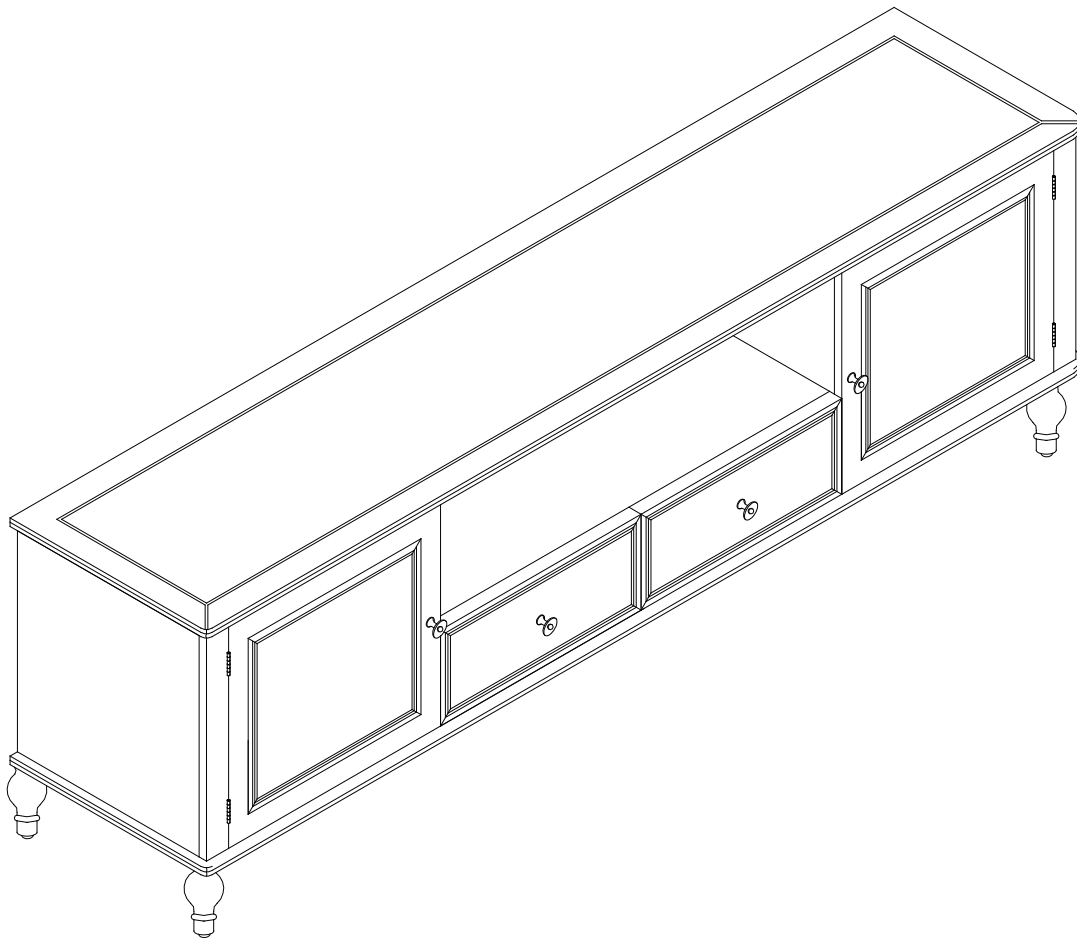

Thank you for choosing our products.

1. Return Policy








DO NOT RETURN TO THE STORE! Skip the process of returning your product and contact us directly for a replacement

If you find that parts of your order are missing or damaged, we will gladly ship any needed replacement parts free of charge.

If you have found any sort of defect, please contact our customer service department and let us know the details of your order and any issues encountered, we will try our best to provide you with a solution.











Recommendations Before Beginning Assembly

-  • Read instructions, cover to cover
-  • Have 2-4 adults on hand for assembly depending on product size
-  • Do not assemble directly on flooring or carpet
-  • Assemble on a clean non-marring surface (example: packing foam)
-  • Save all packaging until finished

3. Assembly Notice:

 
- If you encounter any problems during assembly and find that you cannot continue, rest assured we will help you solve the situation as soon as possible. Simply keep all of the parts of the product stored in a safe place and contact us immediately so we may assist you further.
- Once you have opened your package, remove all inner hardware packages and take the parts out. One by one, Place the parts out neatly in front of you, then refer to the instructions to ensure no parts are missing. If any pieces are found missing, please carefully look in the box first, as the hardware packaging might have torn making the hardware spill in the box.
- Some key parts of your product may be stored and hidden inside of other parts. Please open any zippered or hook & loop storage compartments to remove all parts. (example: cushions and legs being stored in the underside of a sofa)
- **IMPORTANT:** When setting up your product, **DO NOT INSTALL THE SCREWS ALL THE WAY IN THE BEGINNING.** Place each screw into their proper hole and use your hand to twist the screw halfway. Twist all the screws in halfway to ensure the holes will match up properly and the product is level on the ground. When everything seems fitted, then tighten the screws.
- When you have completed assembly, we suggest you have more than one person to assist you with lifting and placing the product.

 
 
Care & Maintenance

 




 


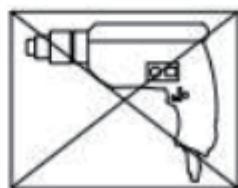

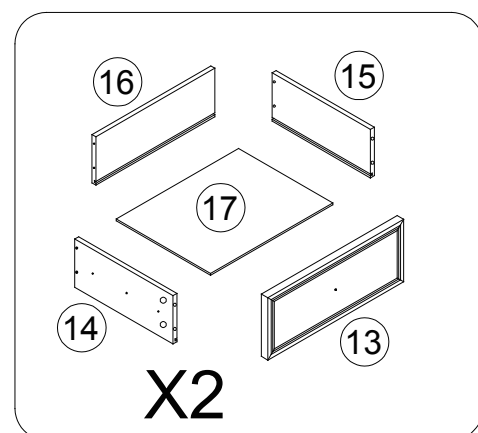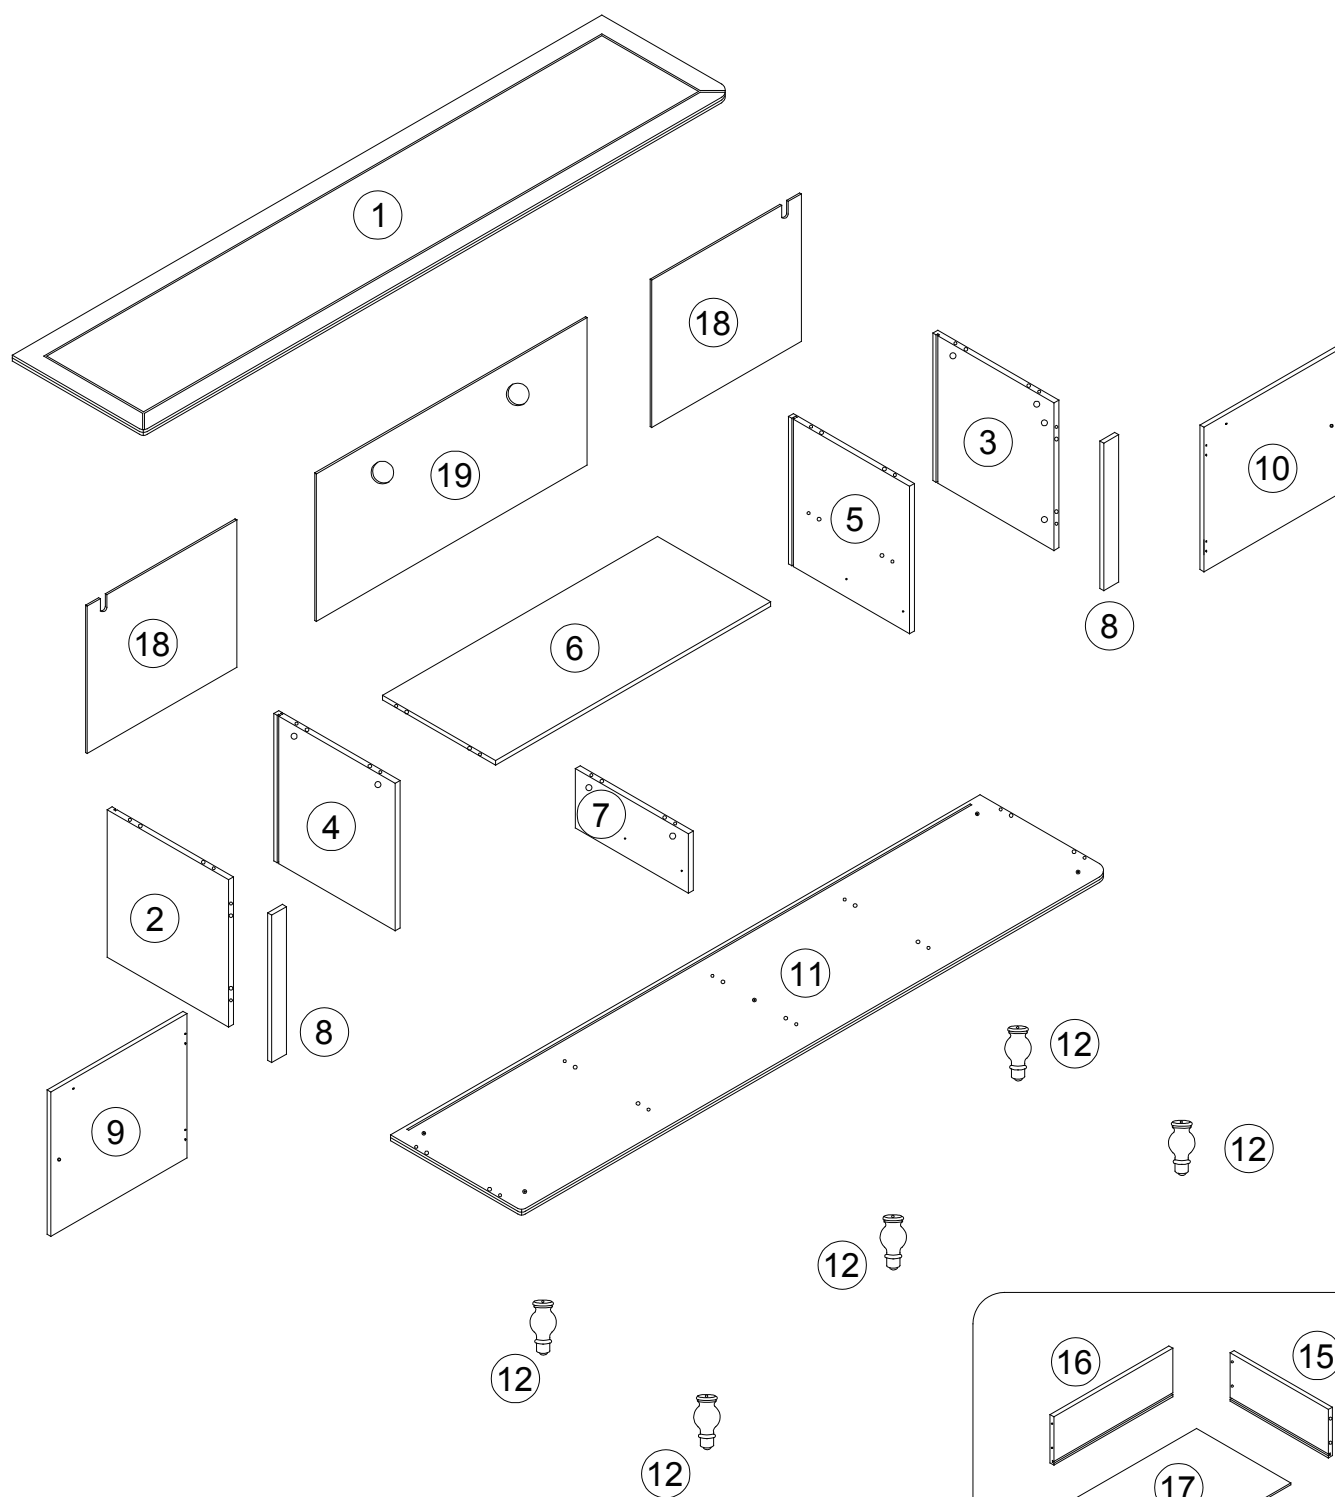 


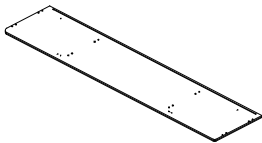


 
 
 
 
 

 
 
 
 
 
 

 
 
 
 
 
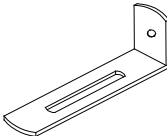 
 
 
 
 
 
 
-  Do not put hot items directly on furniture surface
-  Do not clean furniture with harsh cleansers or polish
-  Do not place furniture under direct sunlight
-  Do not place furniture near heating or cooling vents
-  Do not write on furniture without a padded barrier to protect the surface
-  Do not place furniture outside. For indoor use only
-  Not for commercial use. For residential use only
-  Stains may be removed with mild soap solution and damp cloth
-  Children should not climb or jump on the furniture
-  Dust and pick-up spills using a clean, non-colored, lint-free cloth

Caution


- This product contains small components. Please ensure that they are kept away from small children.
- Do not use power tools to assemble your furniture. Power tools may strip or damage the parts.

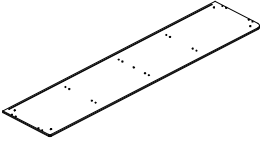




				
① x1PC	② x1PC	③ x1PC	④ x1PC	⑤ x1PC
				
⑥ x1PC	⑦ x1PC	⑧ x2PCS	⑨ x1PC	⑩ x1PC
				
⑪ x1PC	⑫ x5PCS	⑬ x2PCS	⑭ x2PCS	⑮ x2PCS
				
⑯ x2PCS	⑰ x2PCS	⑱ x2PCS	⑲ x1PC	
				
6*35mm	15*10mm	8*30mm	3*10mm	
Ax26PCS	Bx26PCS	Cx28PCS	Dx38PCS	Ex4PCS
				
7*40mm	8*35mm	4*30mm	4*16mm	
Fx10PCS	Gx5PCS	Hx8PCS	Ix4PCS	Jx4PCS
				
Kx2PCS	Lx2PCS	3*14mm		4*12mm
		Mx16PCS	Nx12PCS	Ox2PCS
				
Px2PCS	Qx2PCS	3.5*40mm	6mm	8mm
		Rx2PCS	Sx1PC	Tx1PC
				
Ux5PCS	Vx4PCS			

 STEP 1

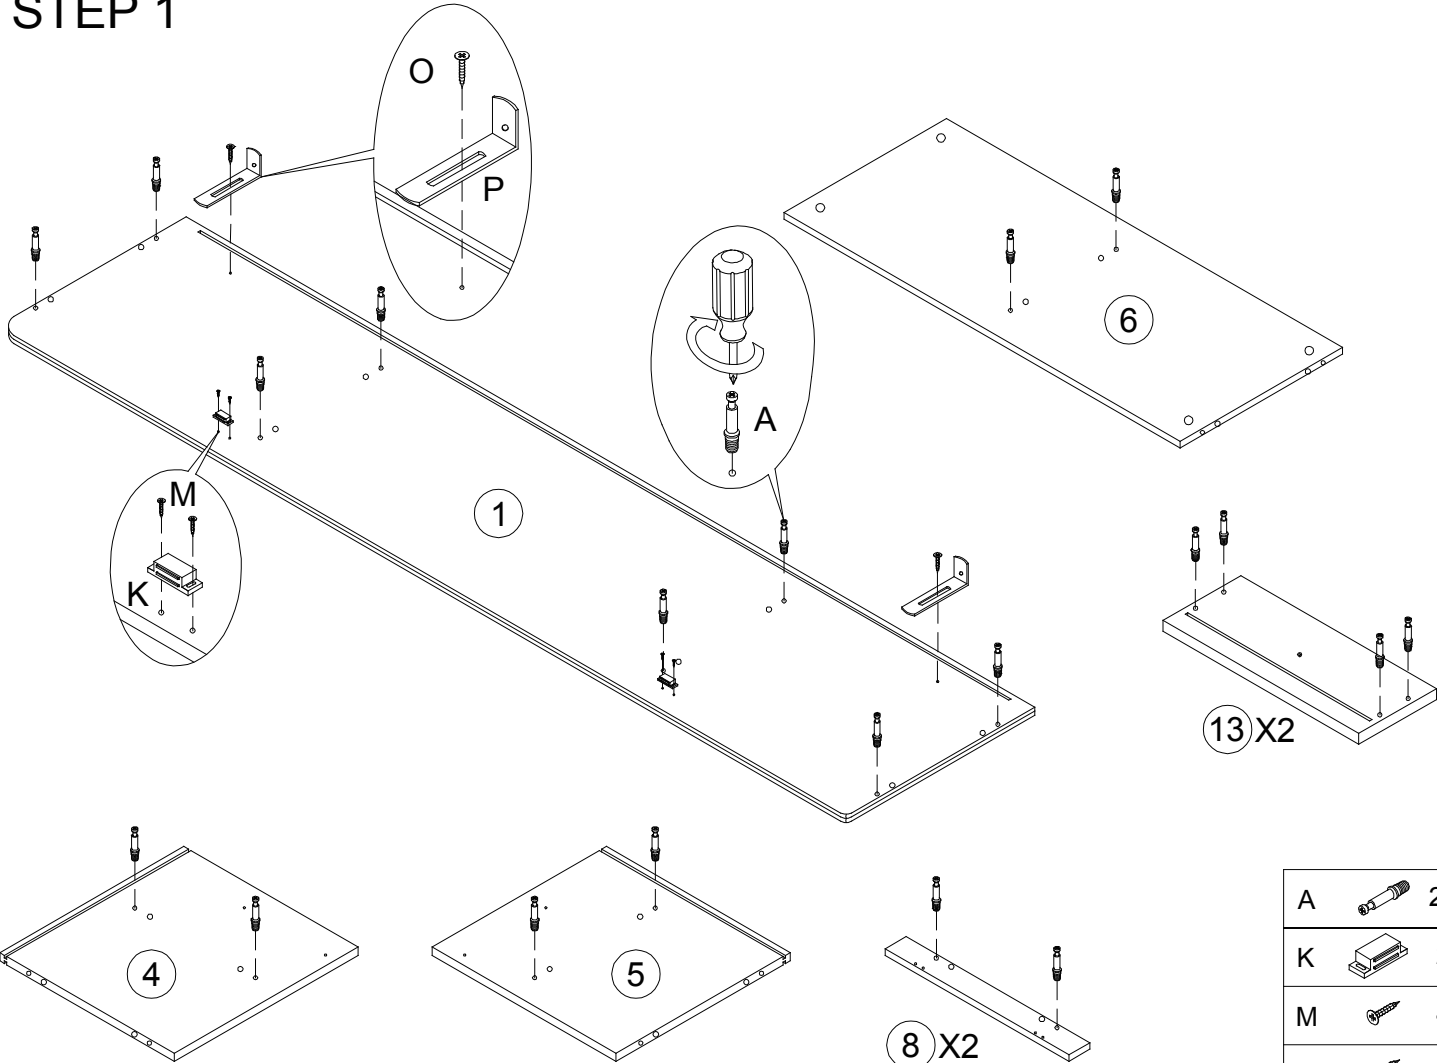

 
STEP 2

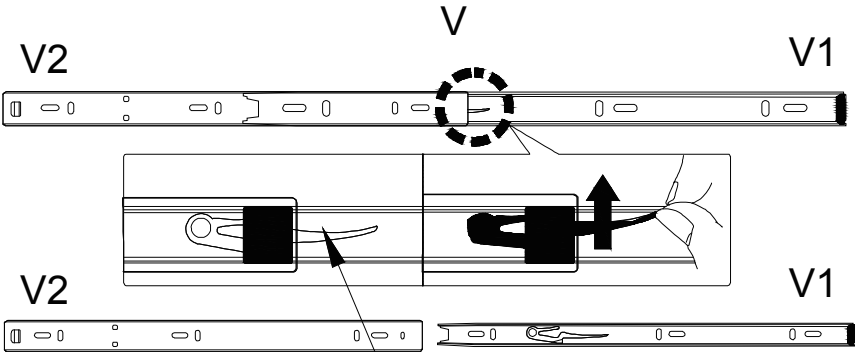



Trigger Disconnect Lever


V		4 pcs
---	--	-------

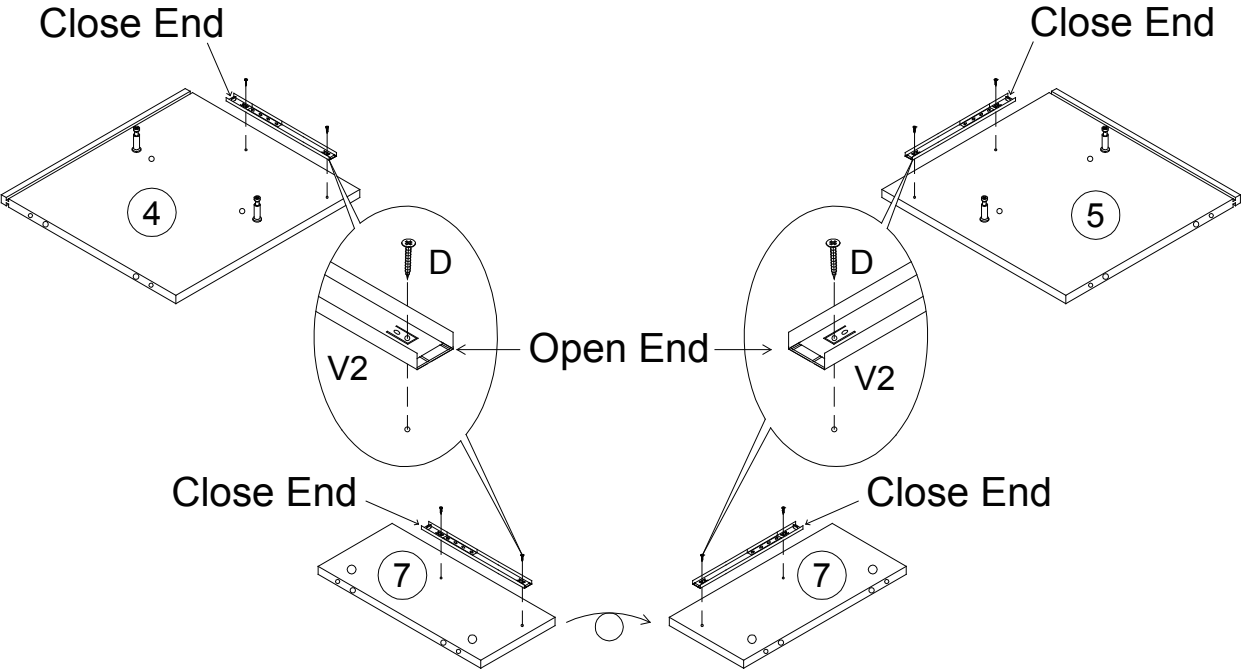 

STEP 3




D		8 pcs
V2		4 pcs

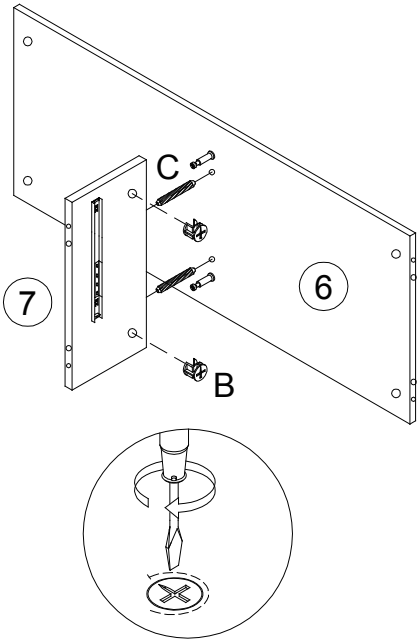 

STEP 4




B		2 pcs
C		2 pcs

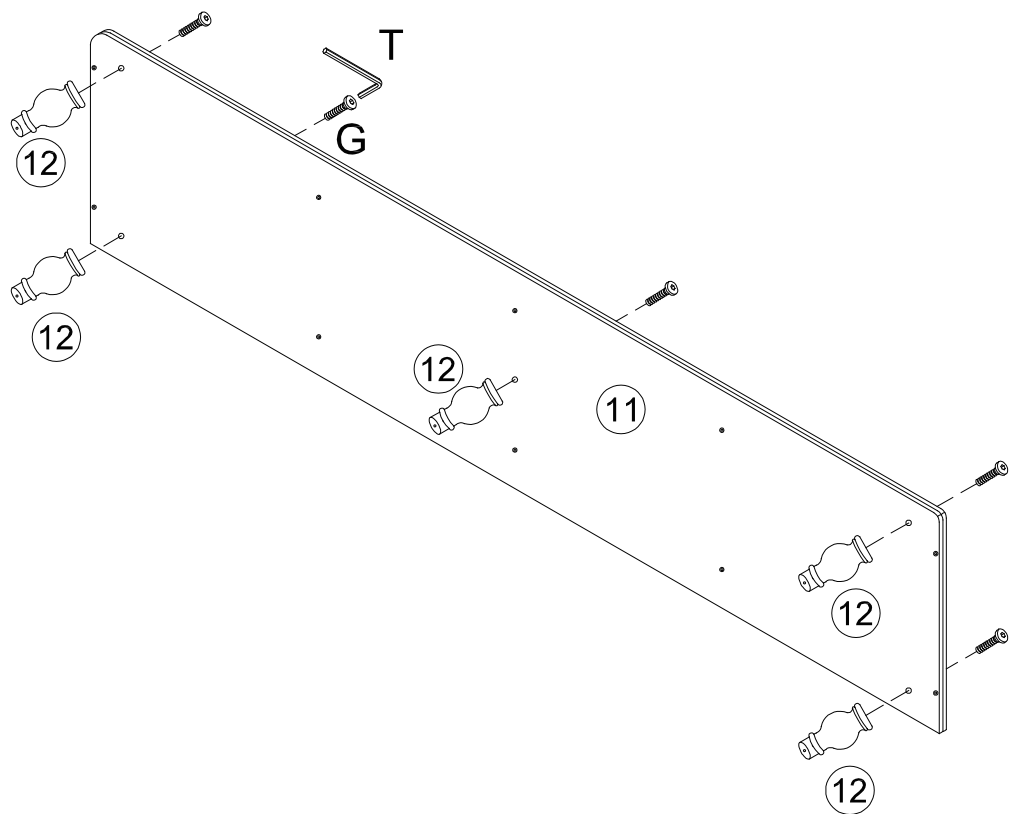 STEP 5




G		5 pcs
T		1 pc

 STEP 6

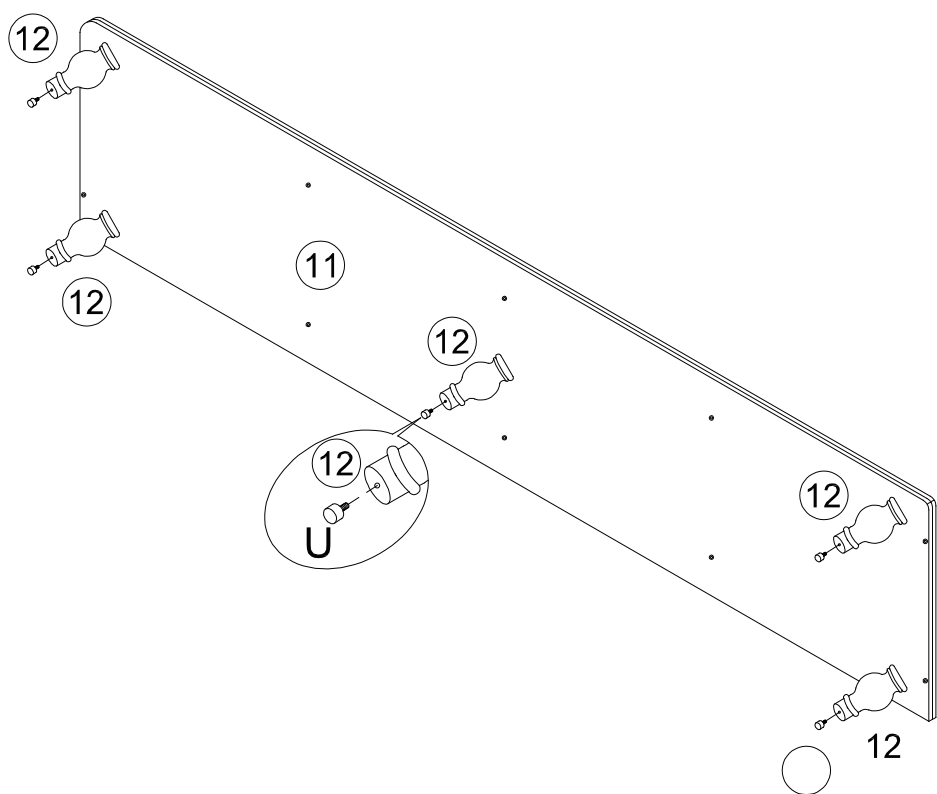


U		5 pcs
---	---------------------------------------------------------------------------------------	-------

 
STEP 7

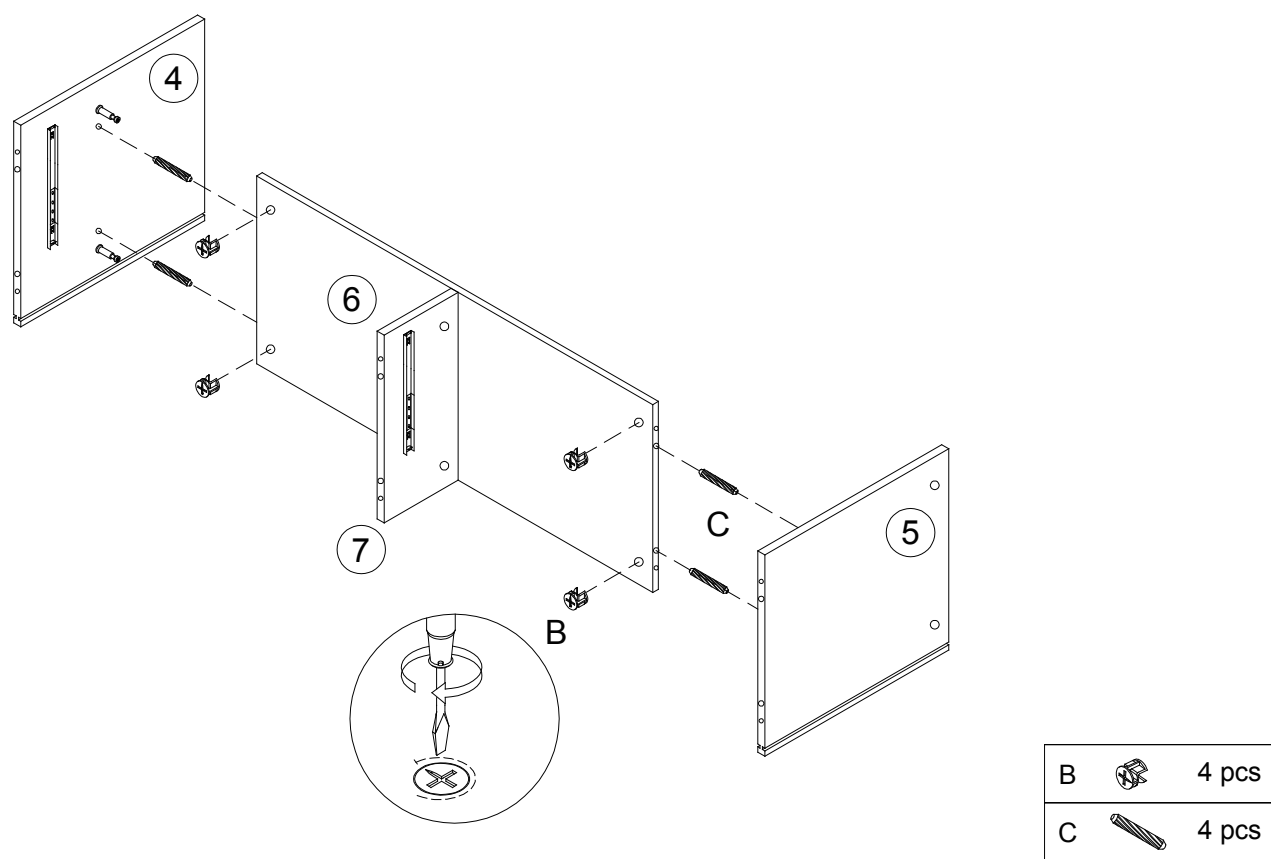

 
 
STEP 8

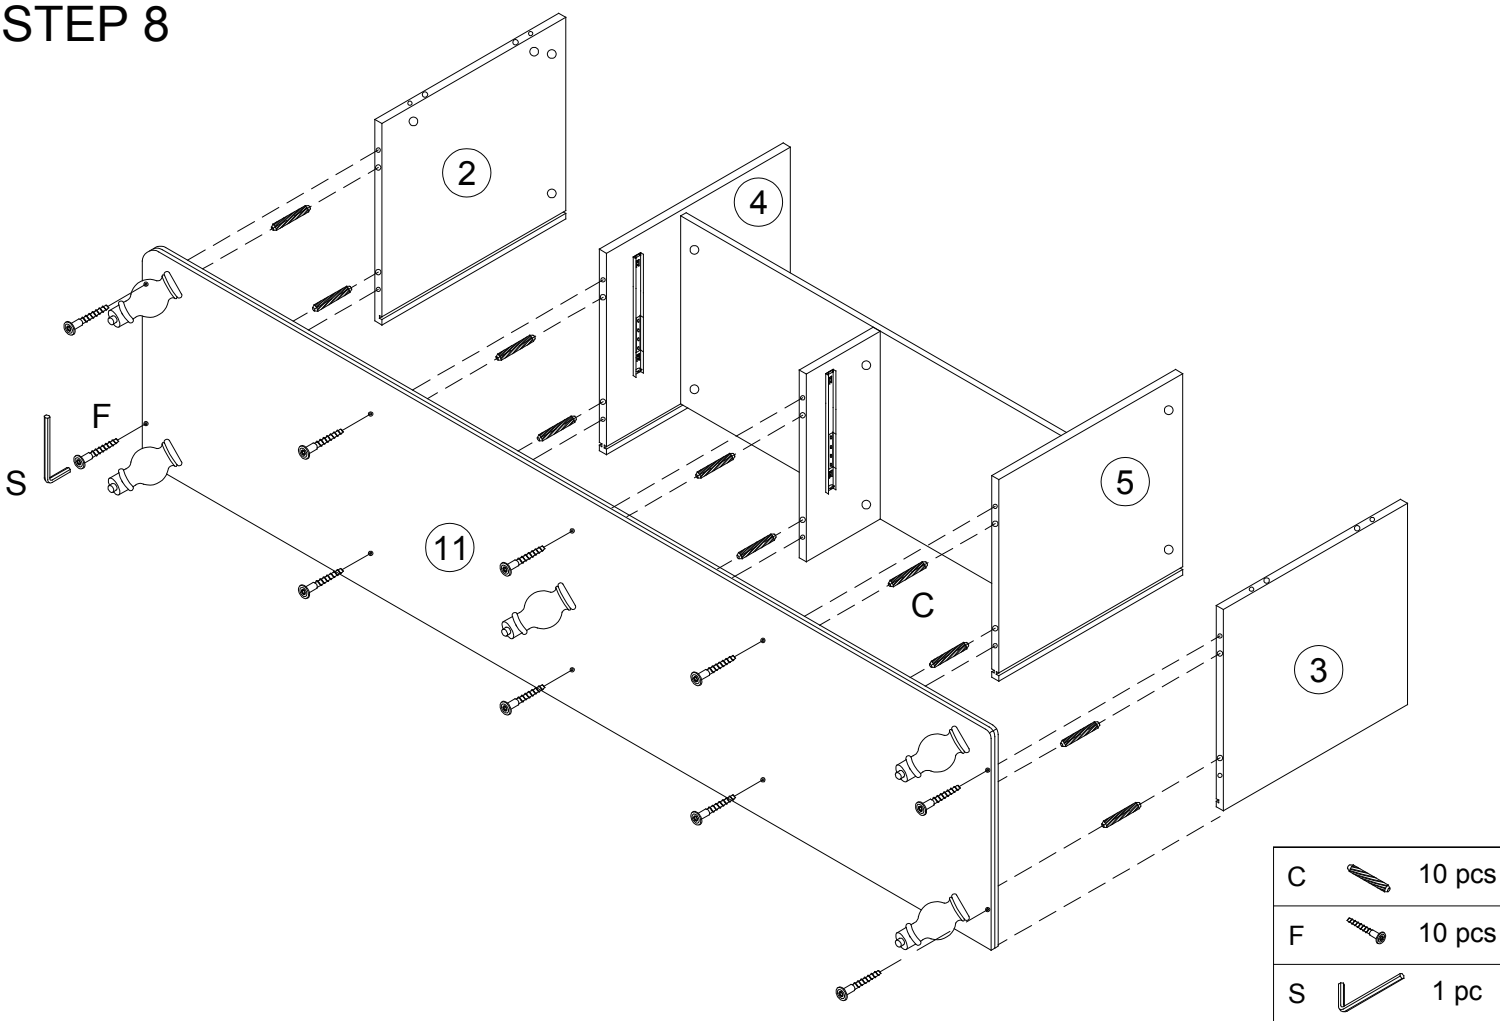

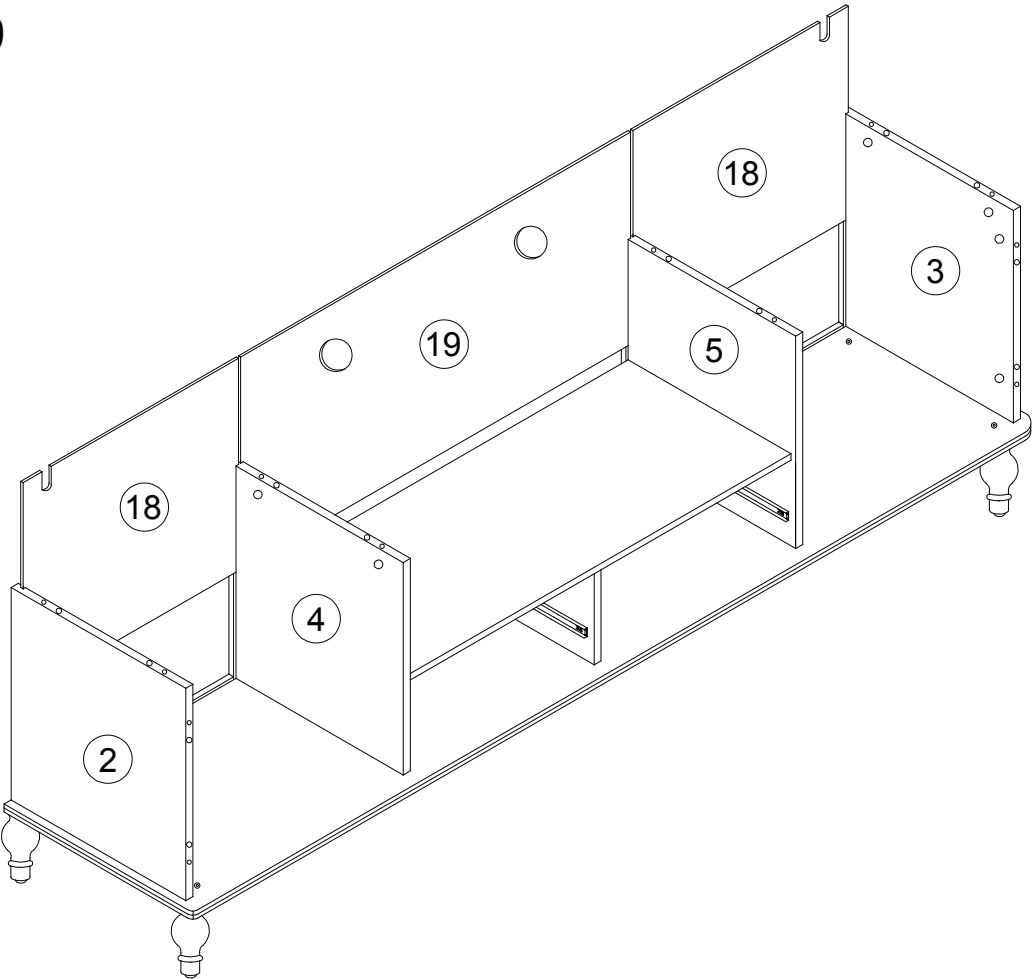

  STEP 9




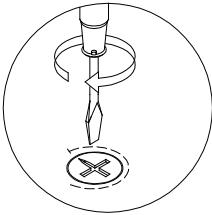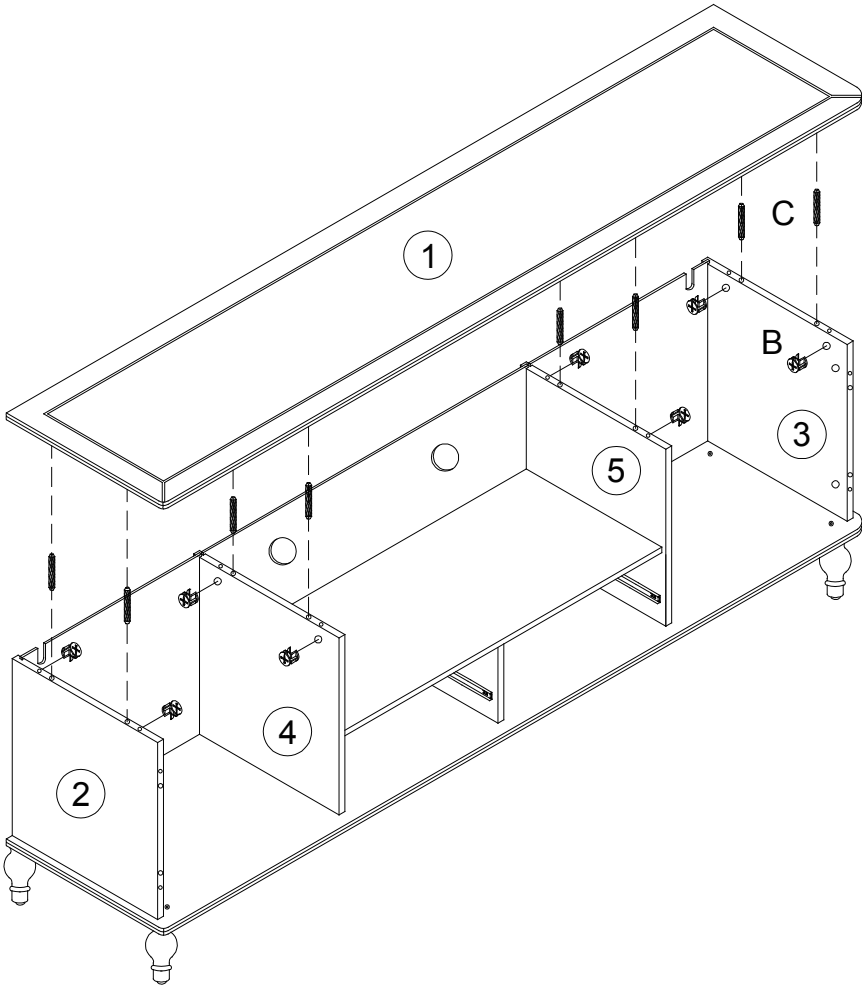

STEP 10




B		8 pcs
C		8 pcs

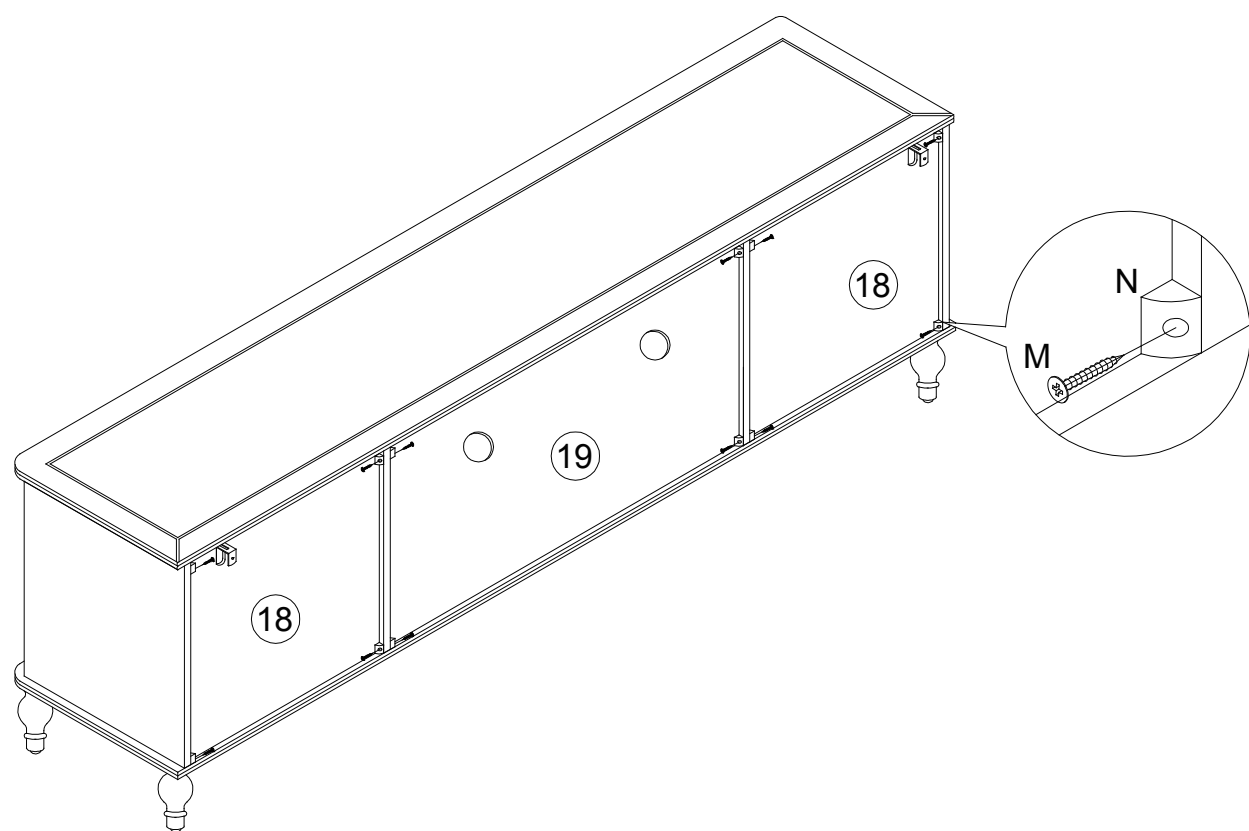 


STEP 11




M		12 pcs
N		12 pcs

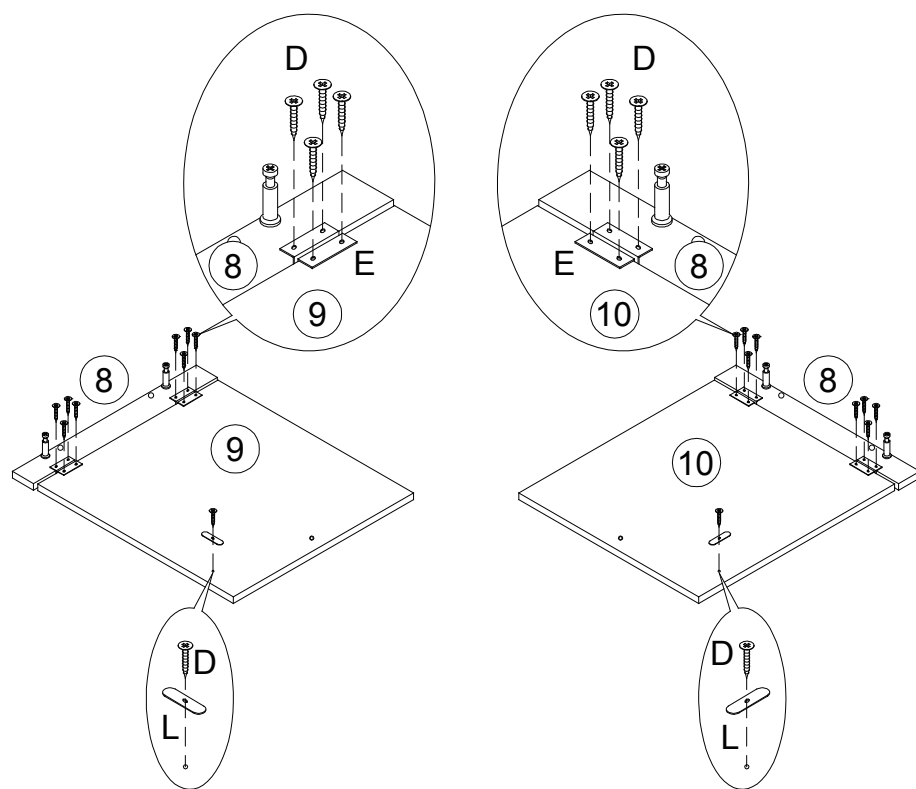 



 STEP 12

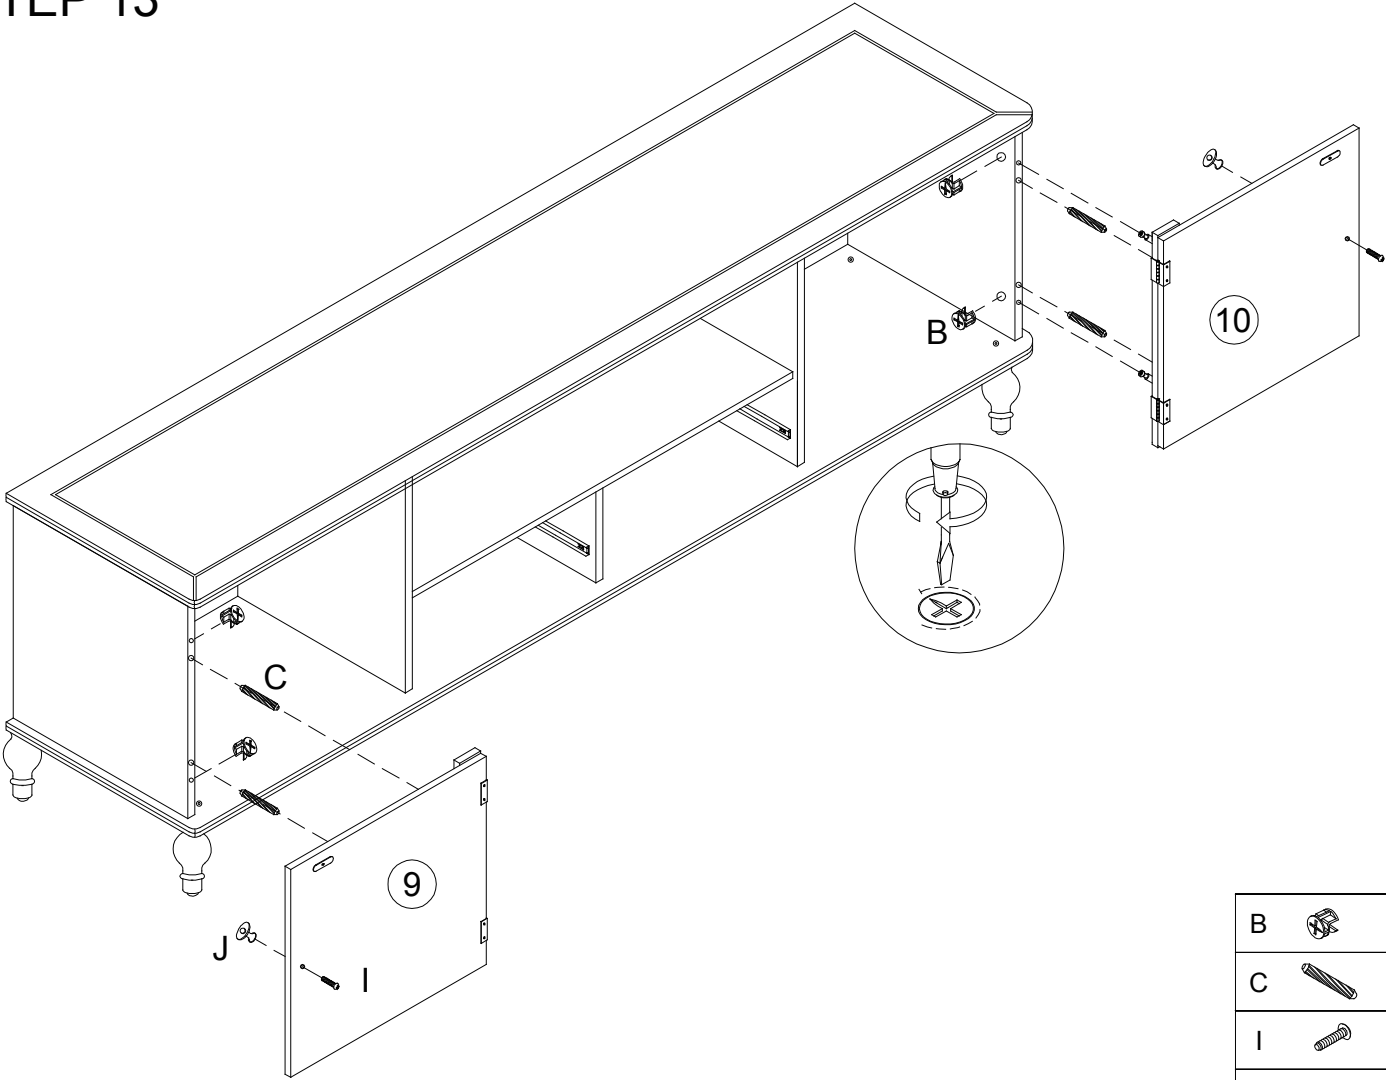


D		18 pcs
E		4 pcs
L		2 pcs

STEP 13




B		4 pcs
C		4 pcs
I		2 pcs
J		2 pcs

 STEP 14

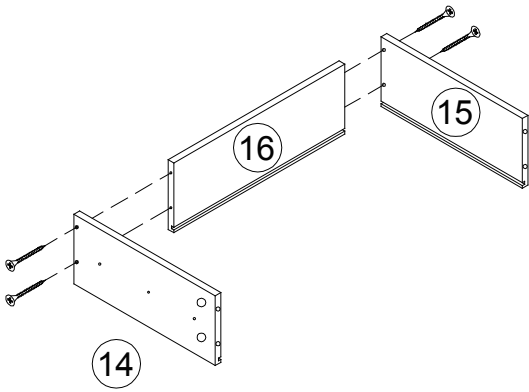


X2

 
STEP 15

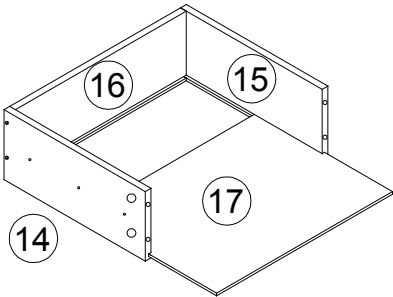




X2

H		8 pcs
---	---------------------------------------------------------------------------------------	-------

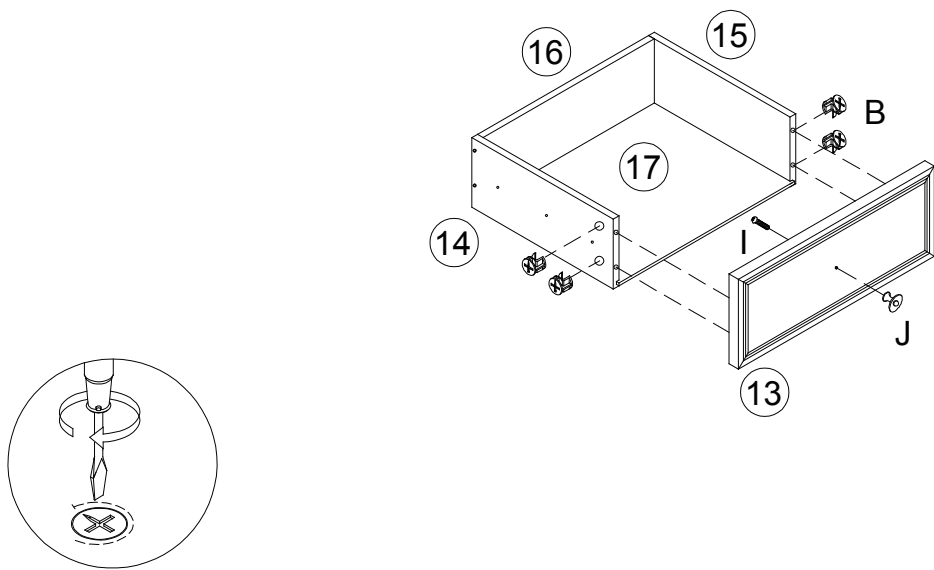 
STEP 16





X2

B		8 pcs
I		2 pcs
J		2 pcs

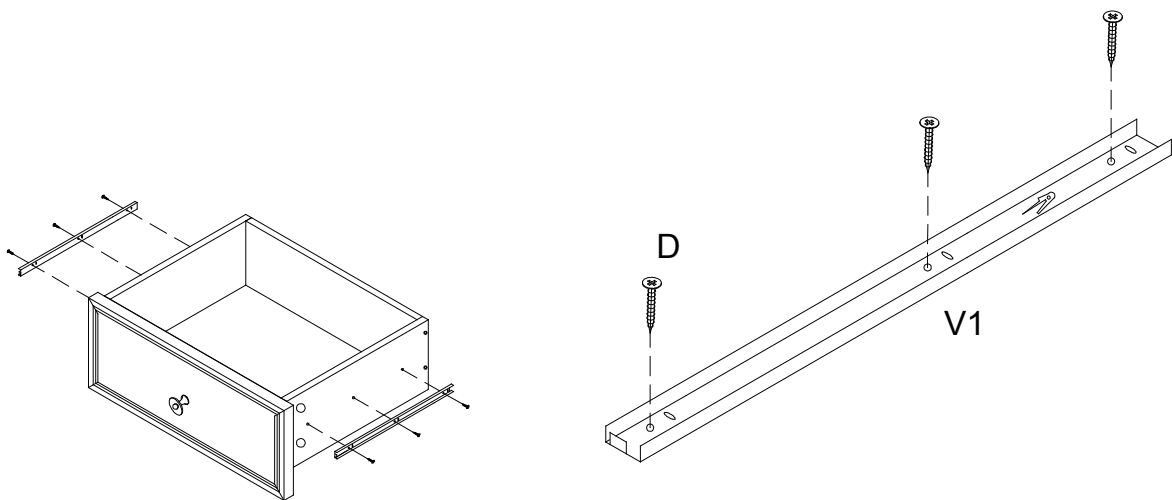 
STEP 17



X2


D		12 pcs
V1		4 pcs

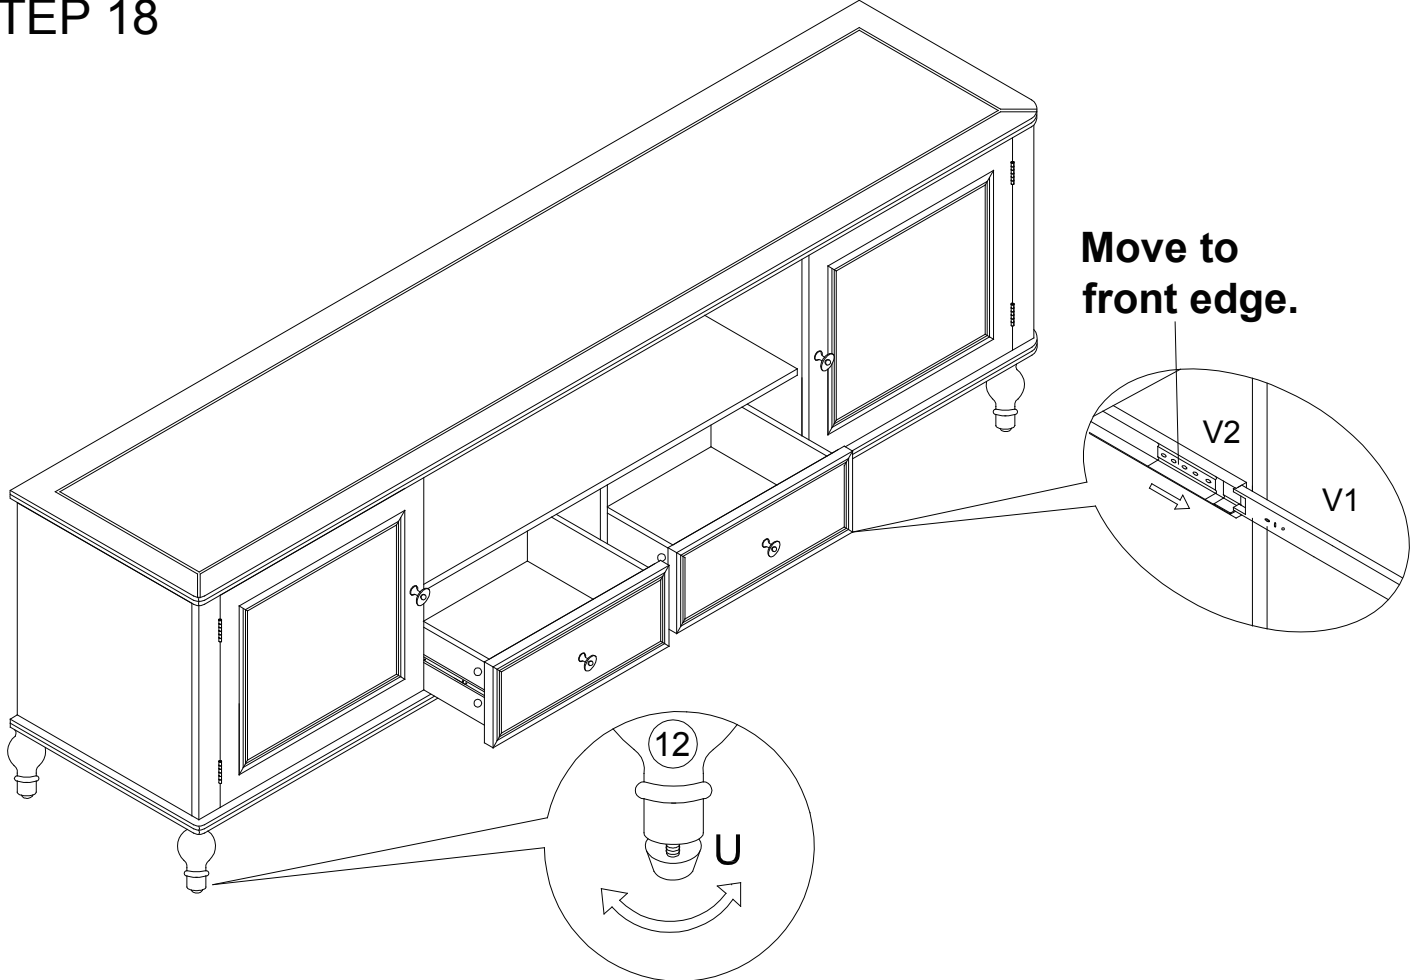 

STEP 18



 Adjust the height with part U to stabilize the TV stand.

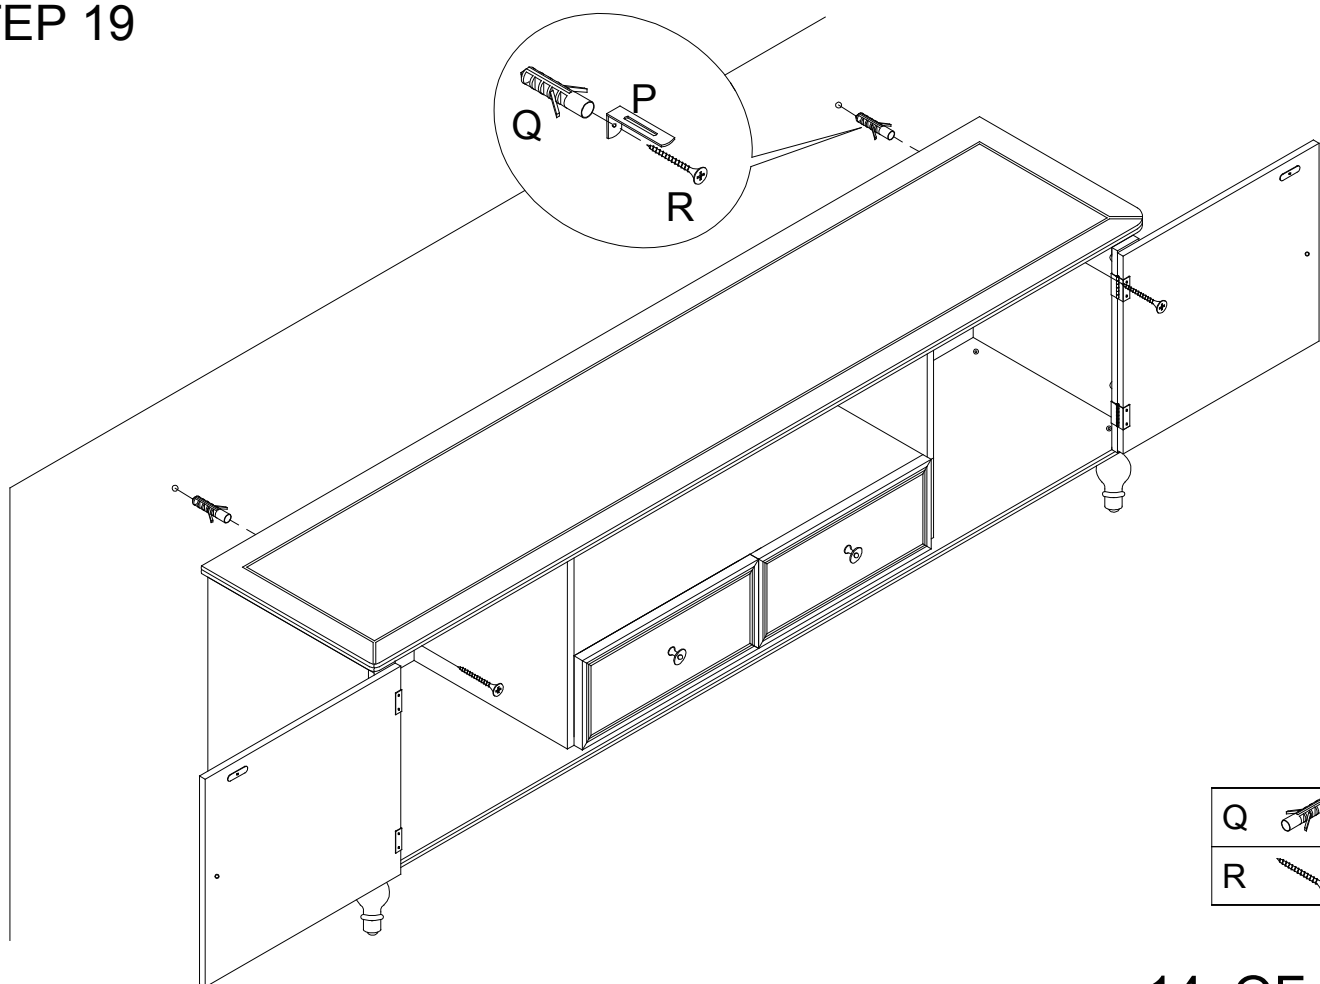STEP 19



Q		2 pcs
R		2 pcs