 


WALKER EDISON
TM

Zoey Kids Open Bookcase

SKU# WEZOE08721

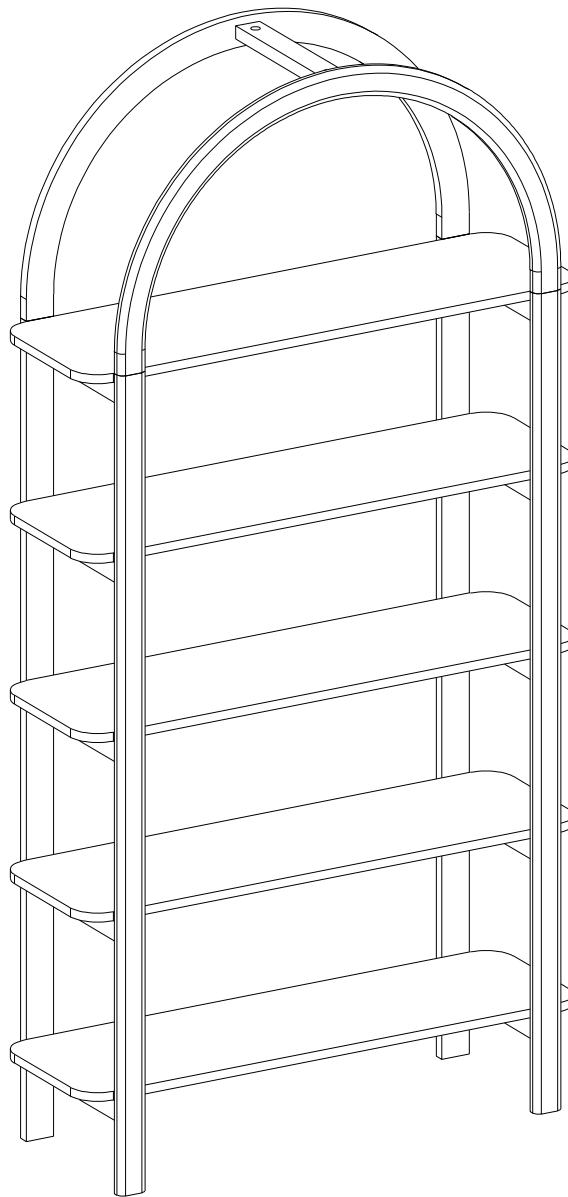

For Residential Use Only


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walkeredison.com



Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

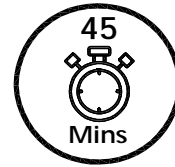

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

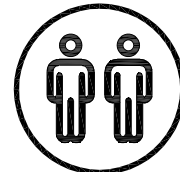

2 People Build


Tools Needed

Grab a Phillips head screwdriver to conquer this assembly

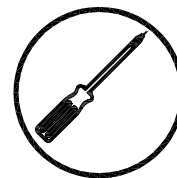


Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

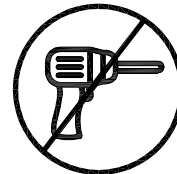

Glue is provided to secure wood dowels in place


When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.

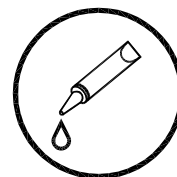

Scan to get assembly tips and help!


 






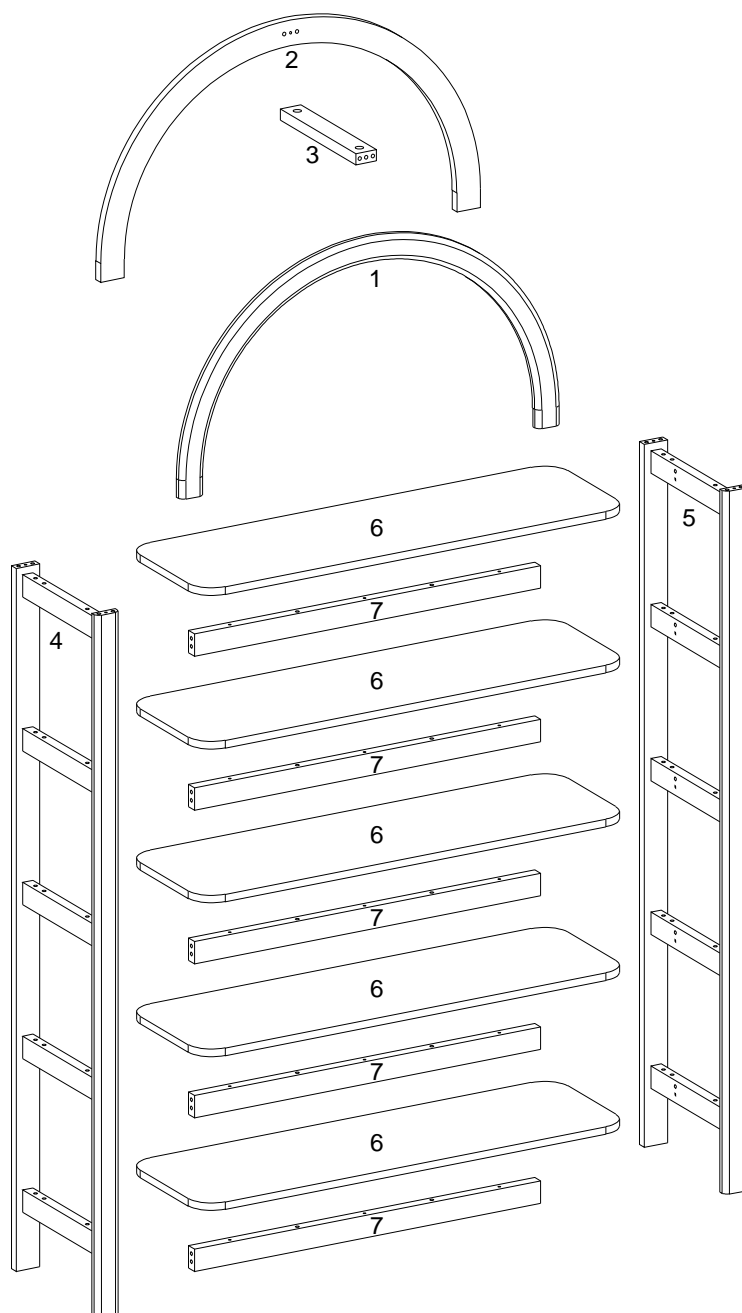



WE Parts List

Part Number	Description	Quantity
1	Top Arched Front rail	1
2	Top Arched Back rail	1
3	Top Arched Cross Bar	1
4	Left Side Frame	1
5	Right Side Frame	1
6	Fixed Divider	5
7	Support Bar	5

  








Hardware List

Part	Size	Name	Quantity
A	 8x30mm	Wooden dowel	52
B	 6x35mm	Cam bolt	16
C	 15x11mm	Cam lock	16
D	 30mm	Sticker	16
E	 6x50mm	Bolt	20
F	 4x45mm	Screw	15
G	 M4mm	Hex Key	1
H	 4x12mm	Screw	2
J	 4x25mm	Screw	2
K		Plastic strap	2
L		Wall Anchor	2
M		Glue tube	2

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*

Step 1

Let's get started! Insert wooden dowels (A) into the Top Arched Cross Bar (3).

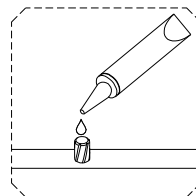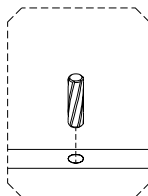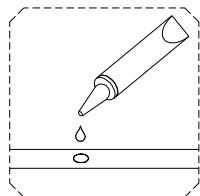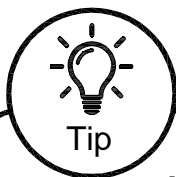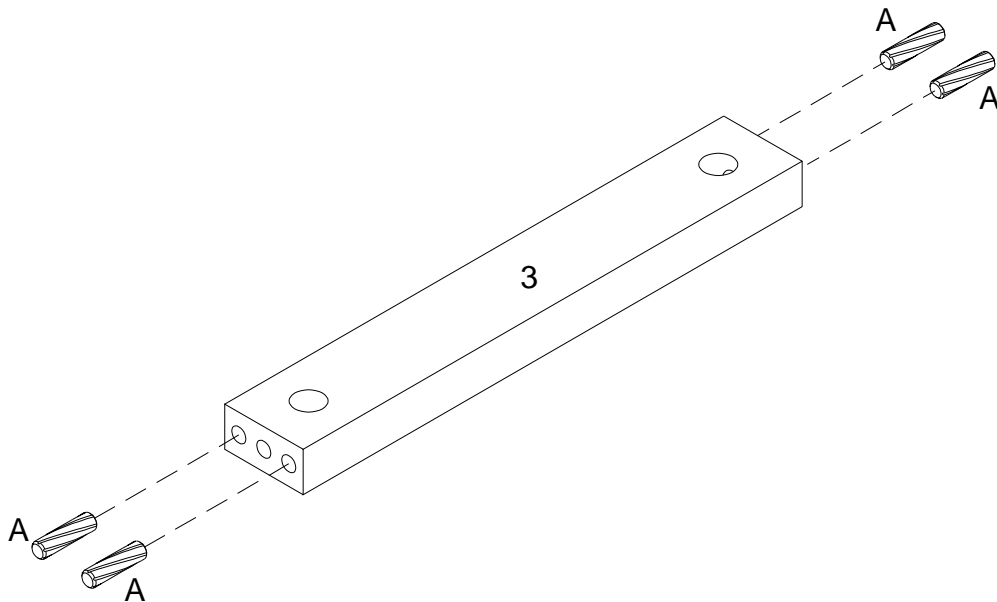


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


Step 2

Next, insert wooden dowels (A) into each of the Support Bars (7).

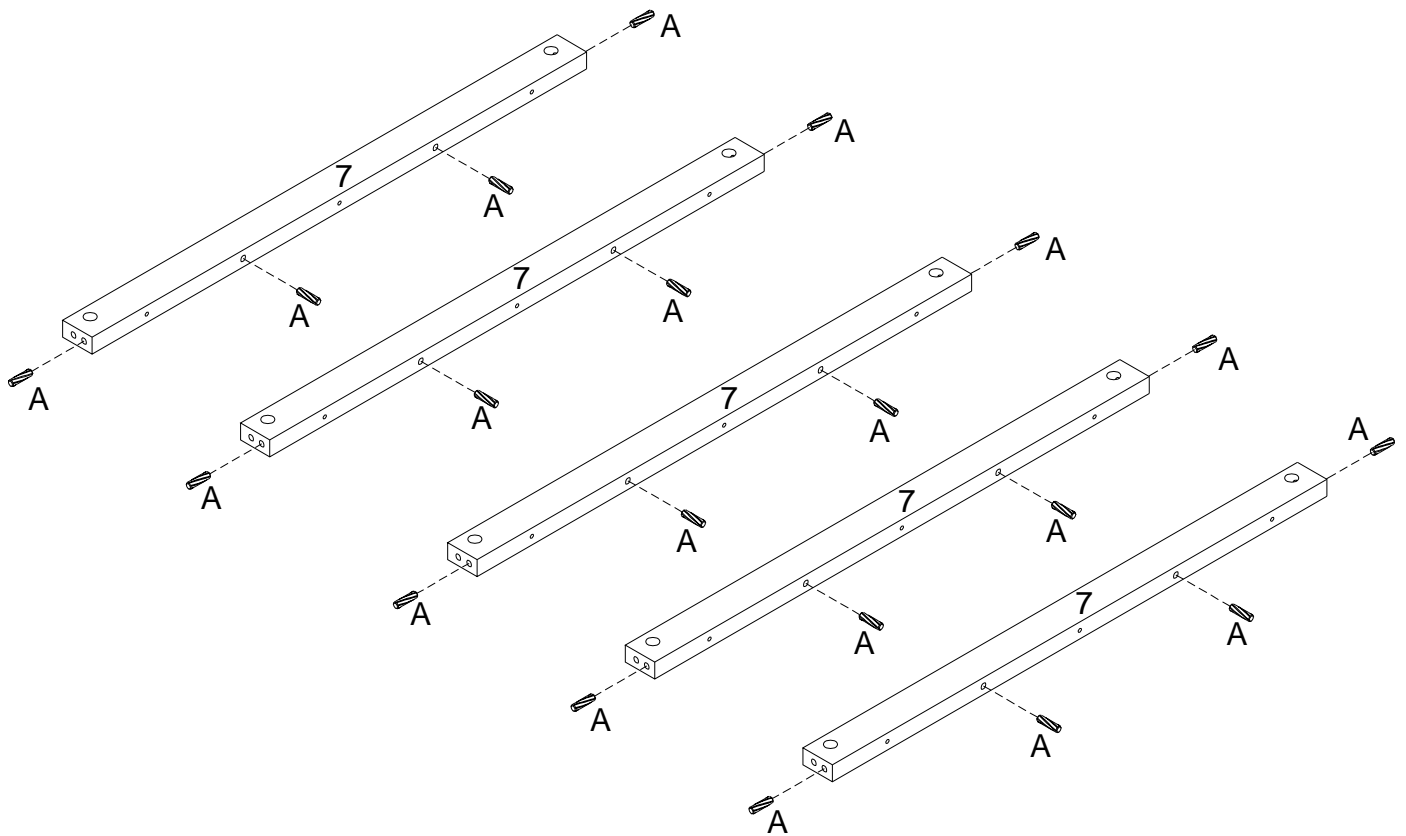


Step 3

Using a screwdriver, screw a cam bolt (B) into the Top Arched Back Rail (2) and the Top Arched Front Rail (1).

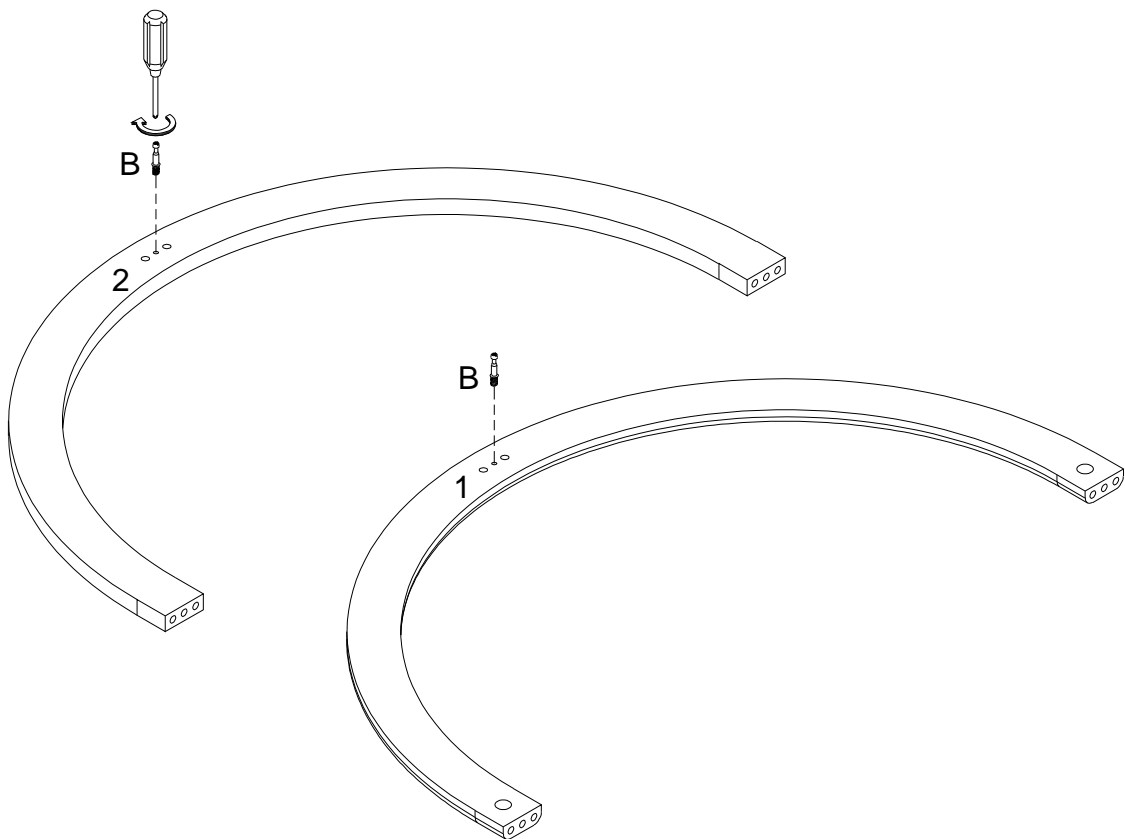



Step 4

Screw cam bolts (B) into the Right Side Frame (5) and the Left Side Frame (4). Make sure to also insert wooden dowels (A) into their designated spots on both the Right Side Frame (5) and the Left Side Frame (4).

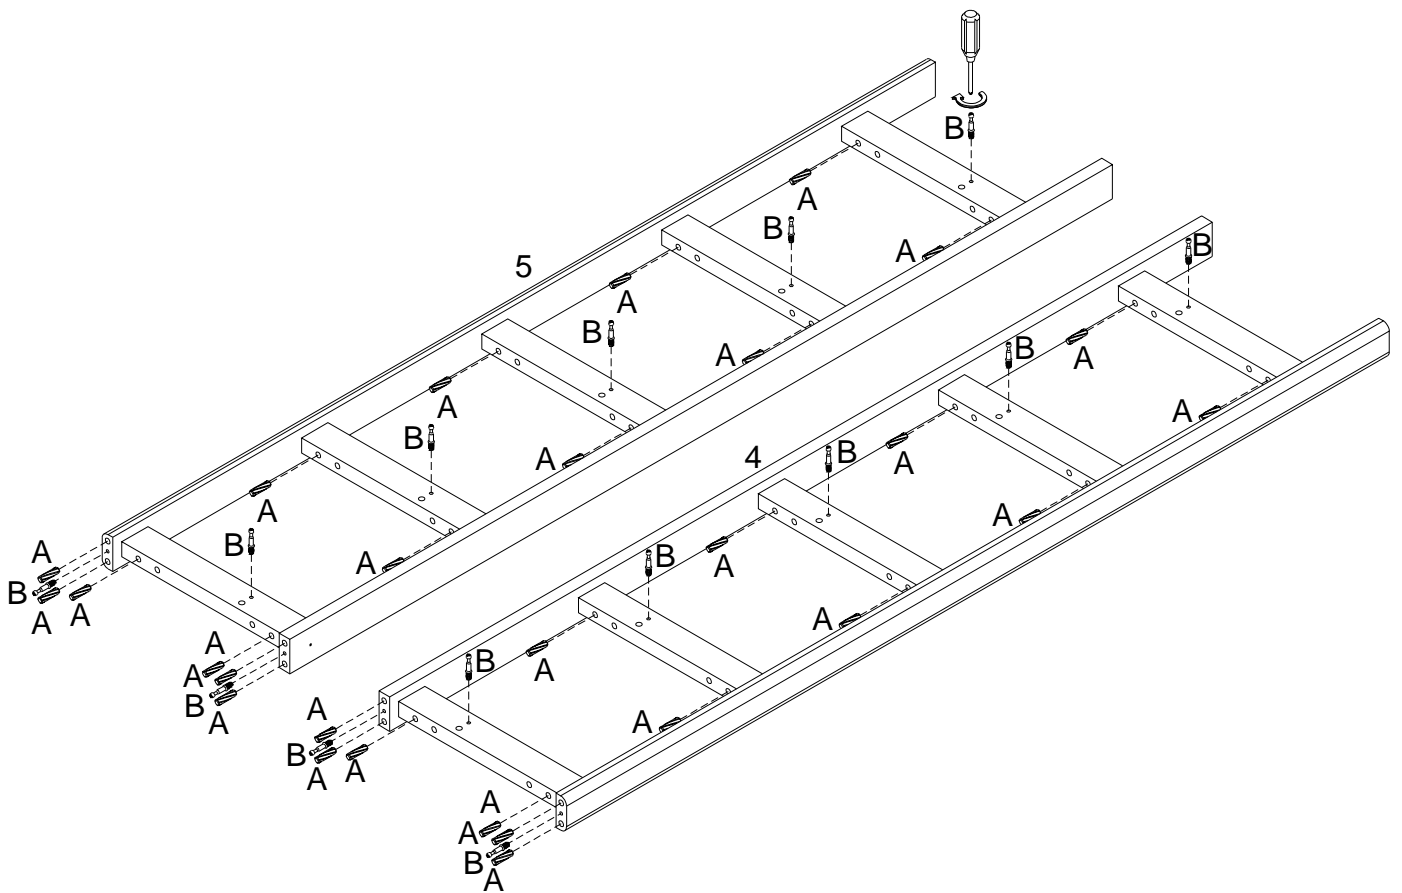

Step 5


Using the cam bolts (B), attach the Support Bars (7) to the Right Side Frame (5). Insert cam locks (C) and tighten with a screwdriver.

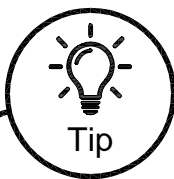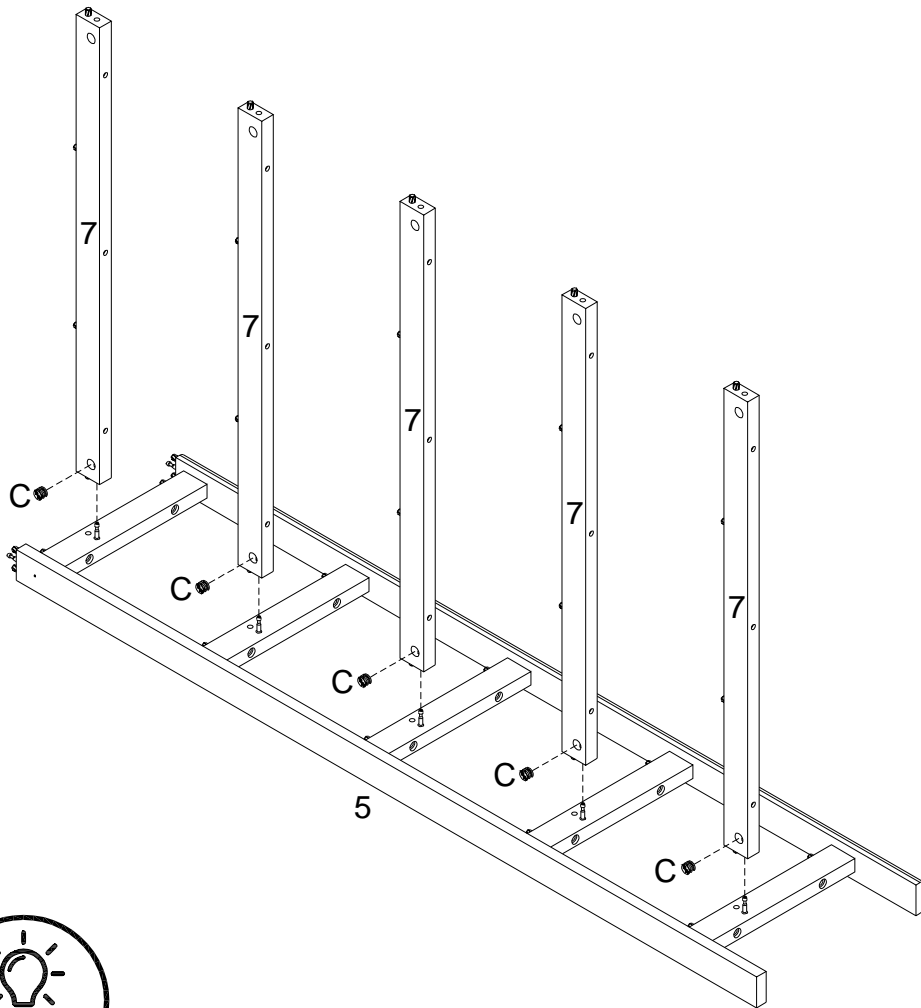


Tip

Cam Locks


Cam Locks help securely join two pieces together.
Follow these easy steps.

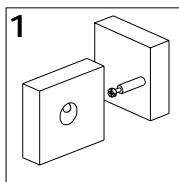

1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

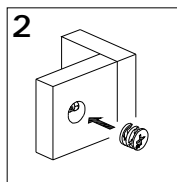


2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

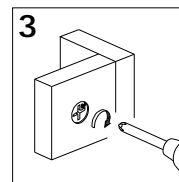

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.




Step 6

Attach the Left Side Frame (4) to the other side of the Support Bars (7) and secure with cam locks (C). Tighten with a screwdriver.

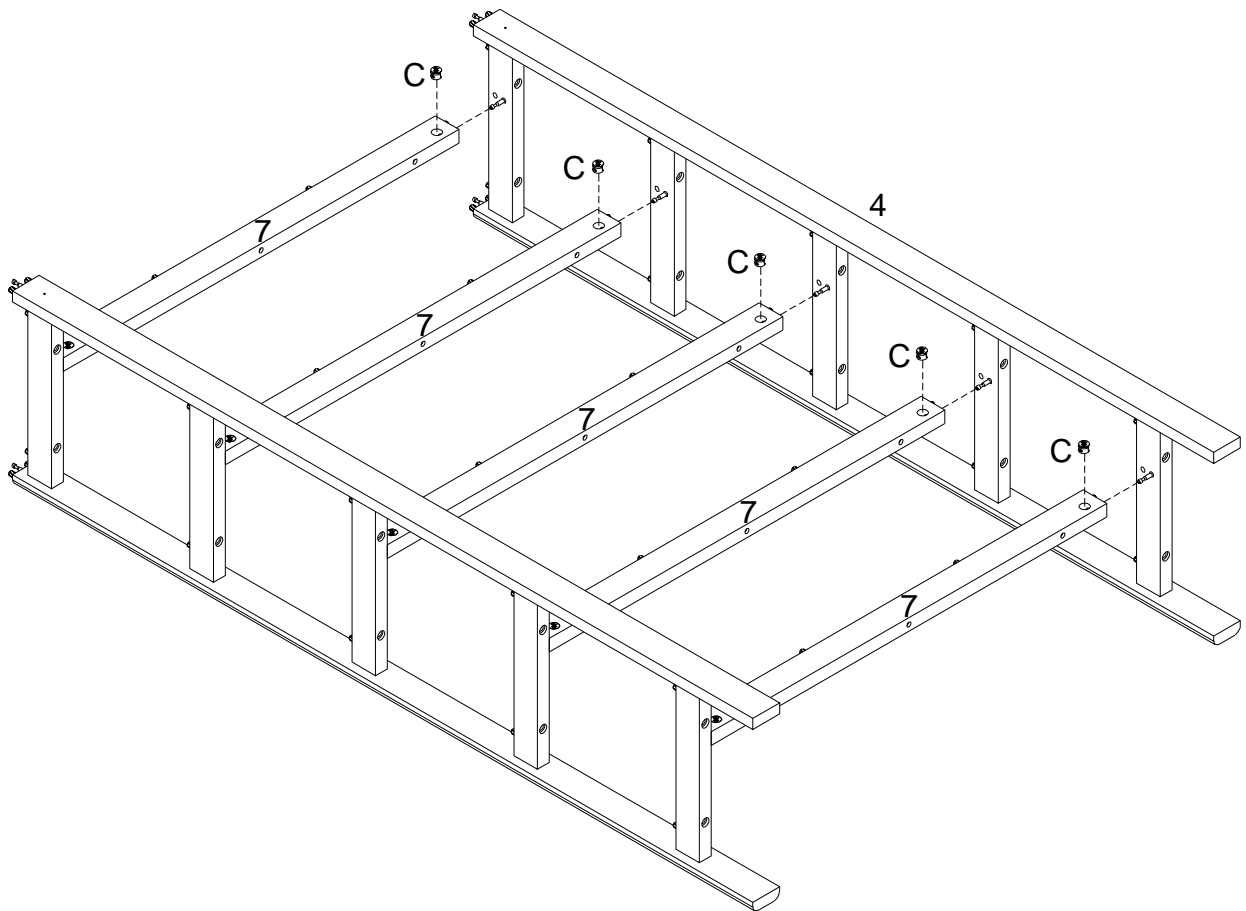


Step 7

Secure a Fixed Divider (6) to each Support Bar (7) using the (F) screw. Then, secure the sides of each Fixed Divider (6) to the side frames (5 and 4) using the (E) bolts. Tighten with the provided hex key (G).

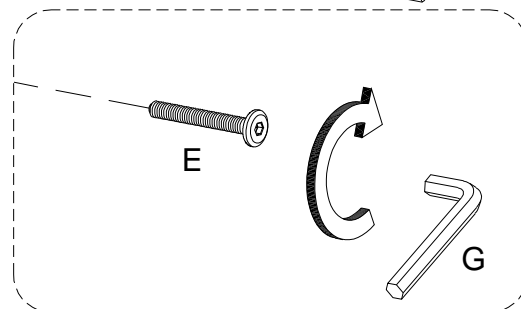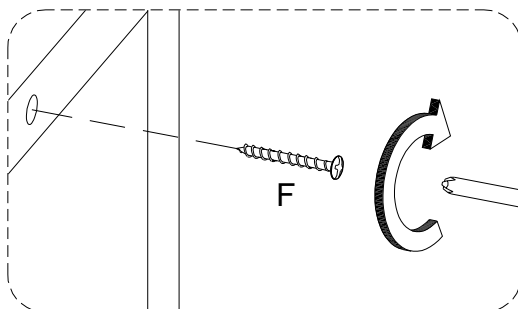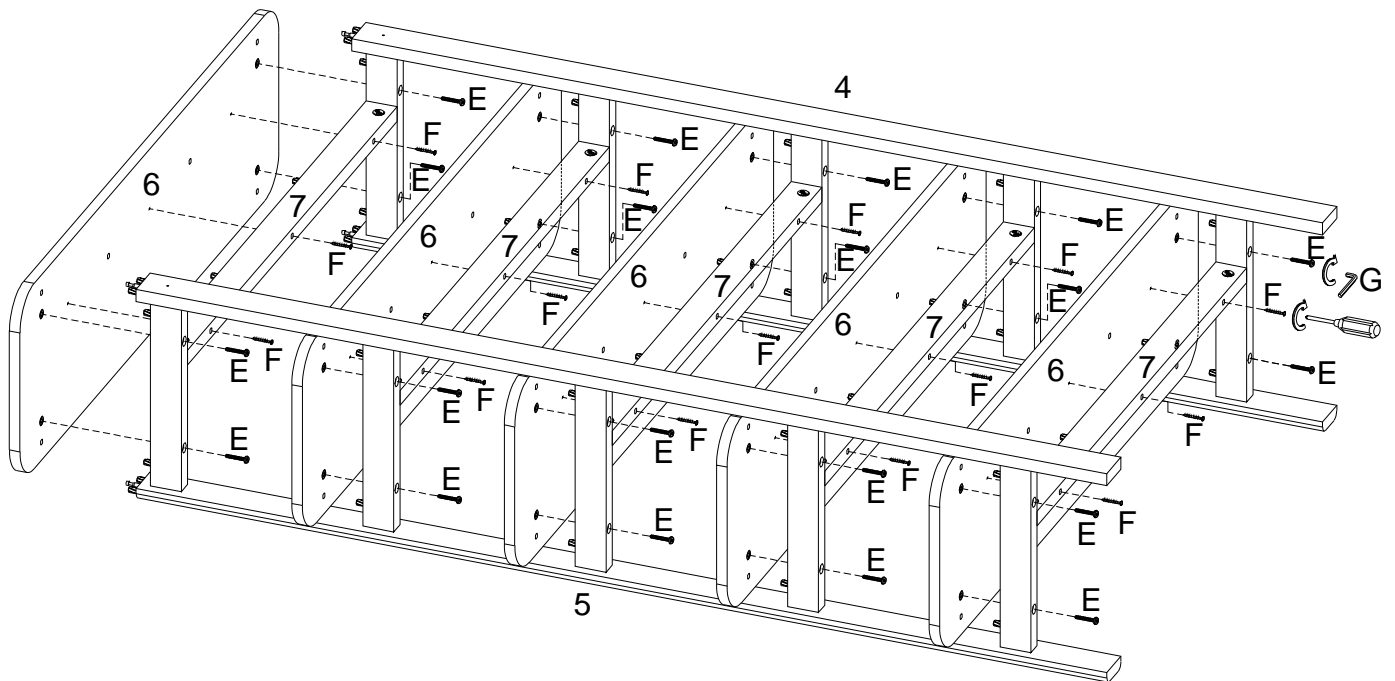


Step 8

Attach the Top Arched Cross Bar (3) to the Top Arched Back Rail (2) and the Top Arched Front Rail (1) via the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver.

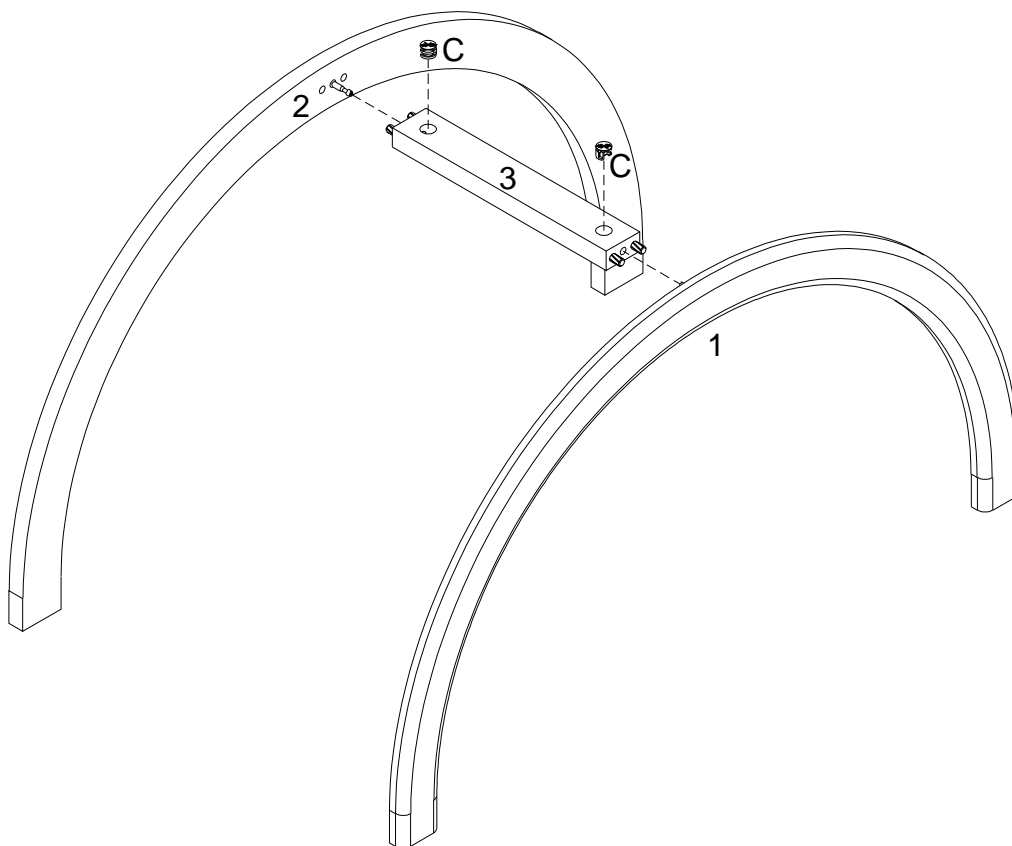


Step 9

Now, attach the Top Arched Front Rails (1 and 2) to the top of each Side Frame (4 and 5). Insert cam locks (C) and tighten with a screwdriver.

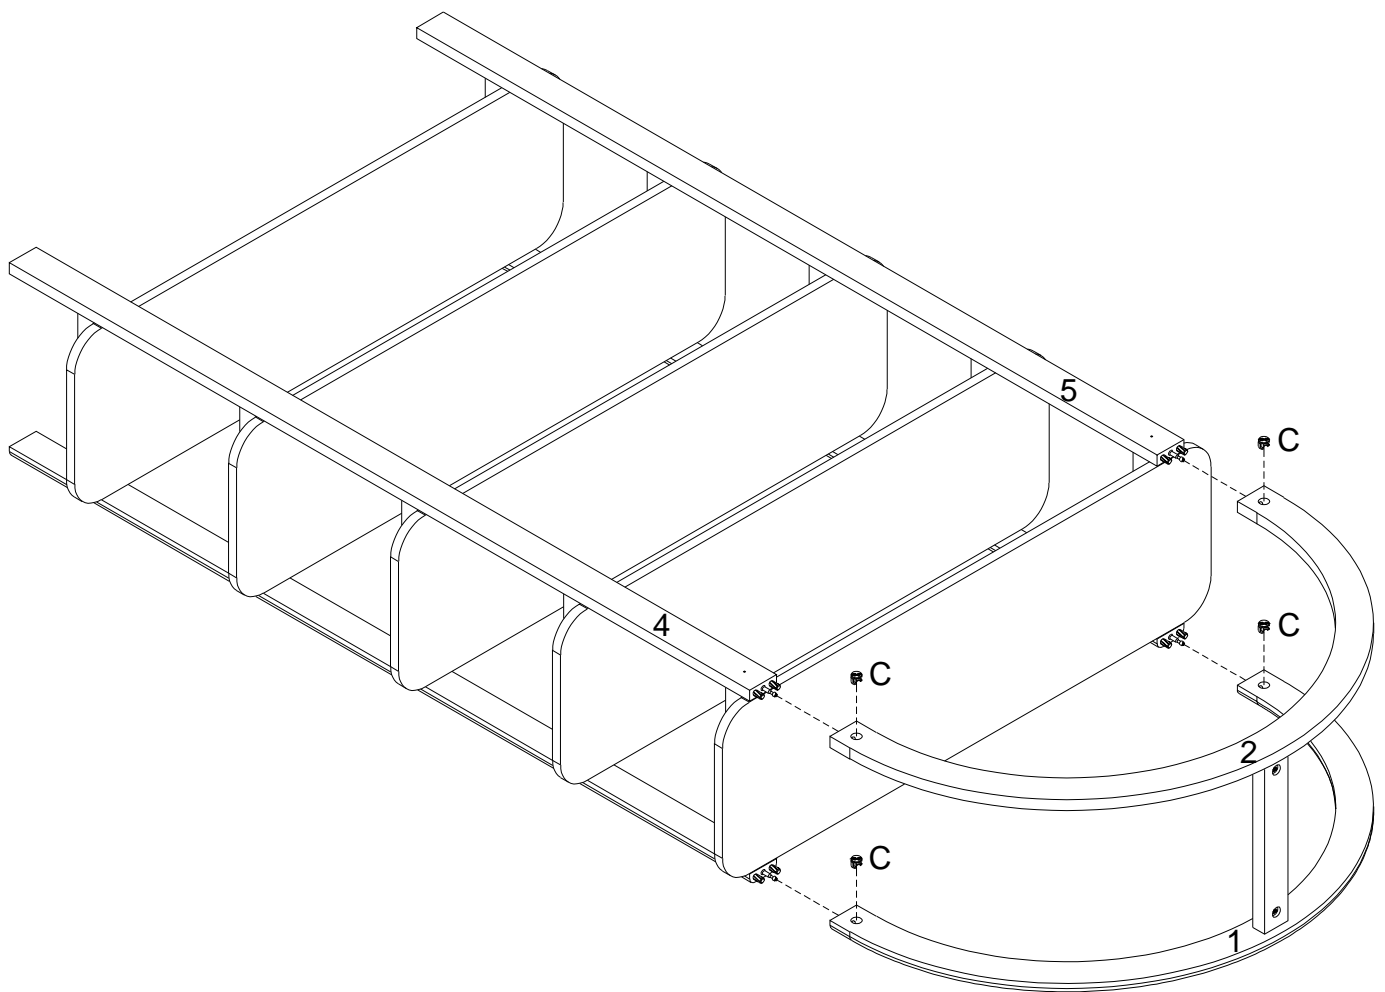


Step 10

Use the provided stickers (D) to cover each cam lock (C) and ensure a clean finish.

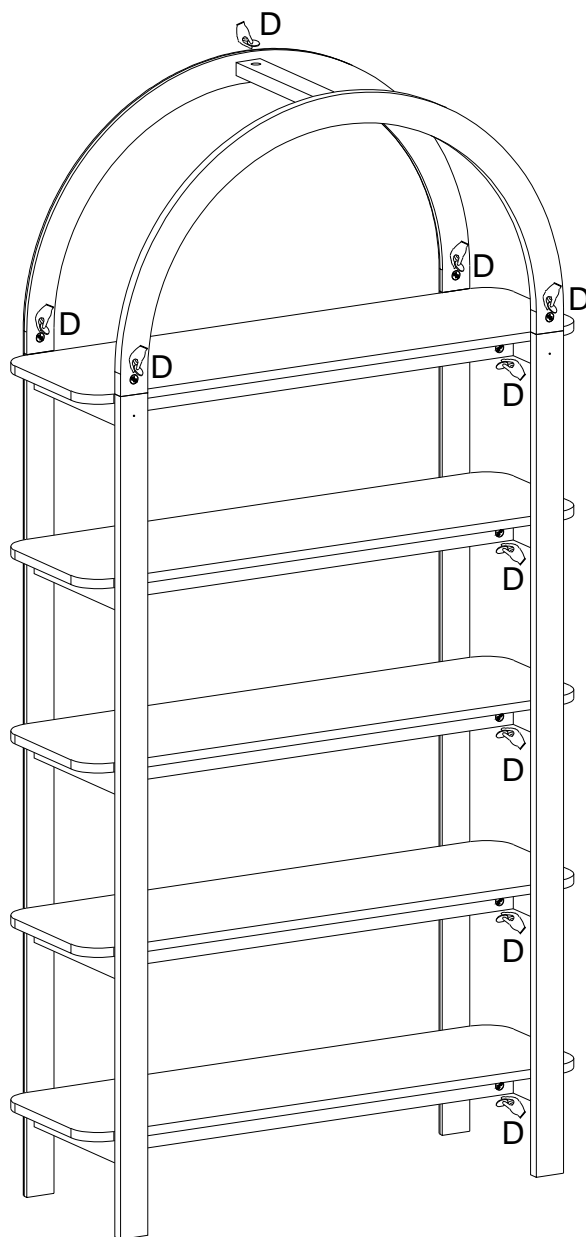


Step 11

Attach the plastic strap (K) to the back of the unit using the (H) screws.

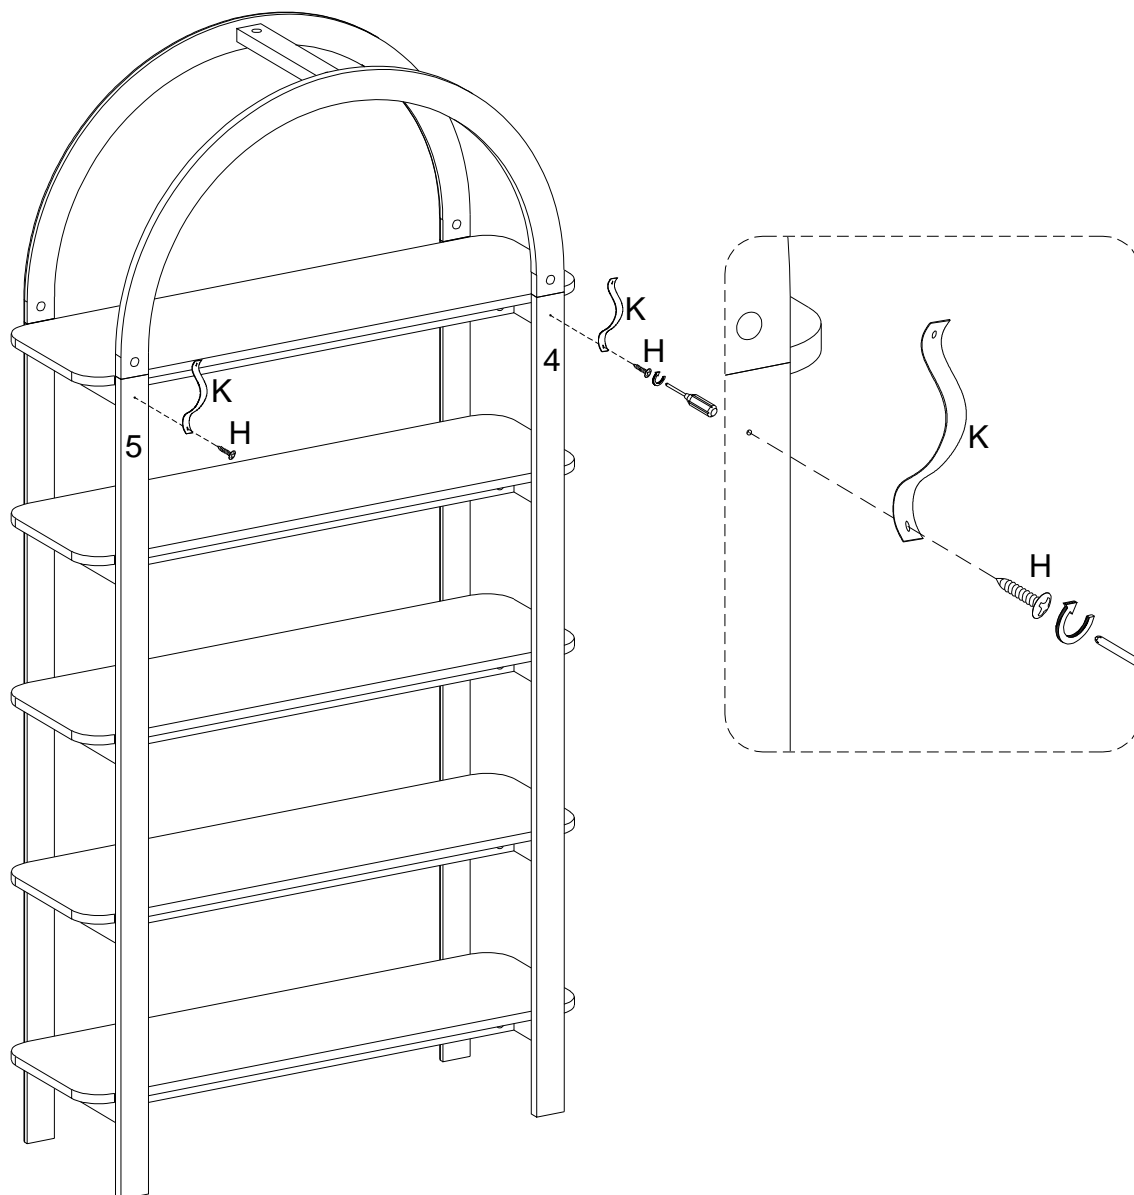

Step 12


Secure your unit to the wall using the (J) screw, the other side of the plastic strap (K), and the anchor (L).

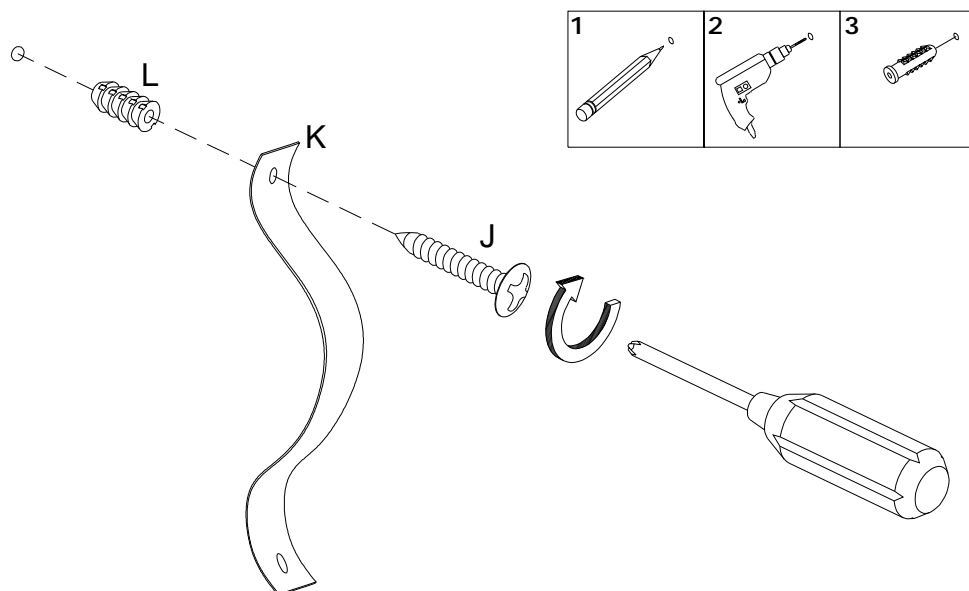

Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Final Assembly

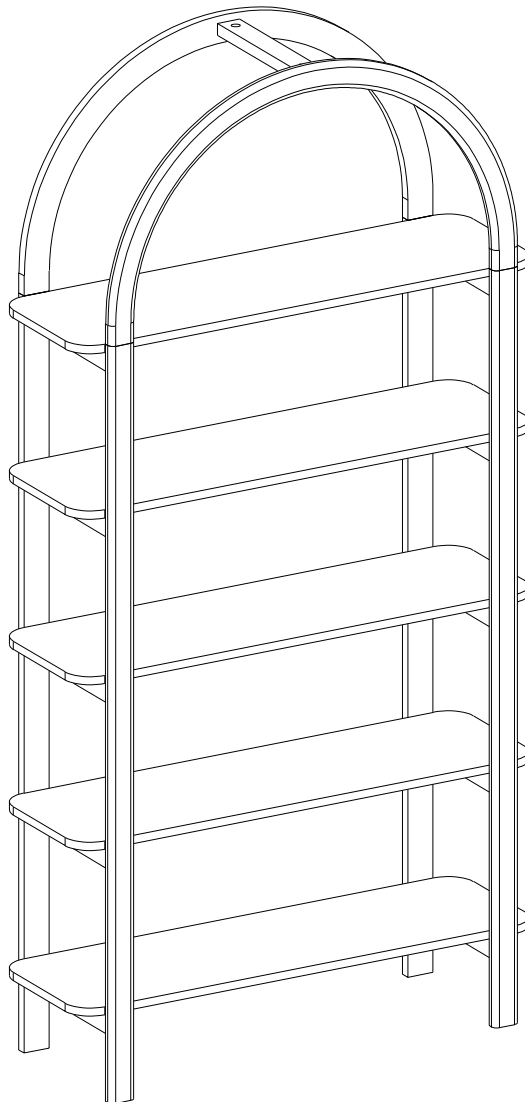

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
[#mywalkerredisonhome](#)

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at service@walkeredison.com

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday
8am-3pm MST

For details on Assembly Videos, Assembly Instructions,
Replacement Parts, and Customer service,
SCAN HERE

