 


**WALKER EDISON**  
TM

## Zoey Cabinet Bookcase

SKU# WEZOE08722

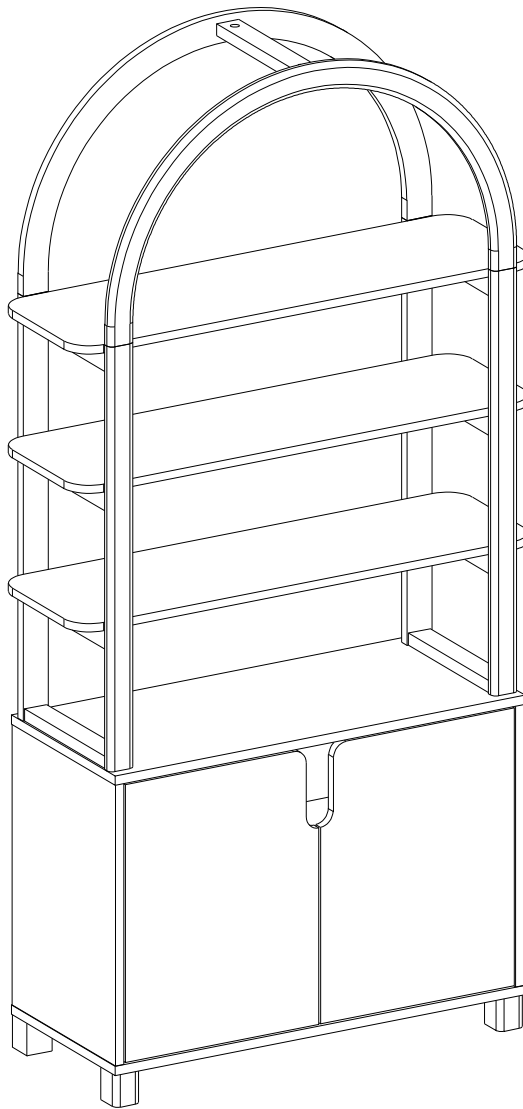

### For Residential Use Only

Please visit our website for the most current instructions, assembly tips, report damage, or request parts. [www.walkeredison.com](http://www.walkeredison.com)

 


# Time to get started

Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check that you've got all the pieces and parts before diving in to assembly.

---


## Estimated time for assembly

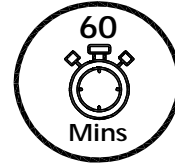

---

## People recommended for assembly

 Make it a team effort! Grab a friend for quicker, easier assembly.

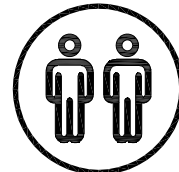


2 People Build

---

## Tools Needed

 
Grab a Phillips head screwdriver to conquer this assembly

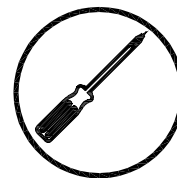

---

## Use power tools with caution

 
You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison's warranty.

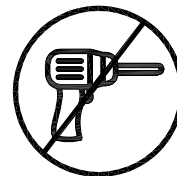

---

## Glue is provided to secure wood dowels in place

 
When inserting dowels, locate the appropriate hole, place a small amount of glue in the hole, and then insert the dowel. Wipe away excess glue immediately.

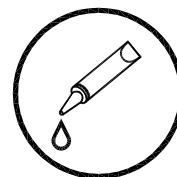

**Scan to get assembly tips and help!**

 
 



 

 

 
 
 

# WE Parts List

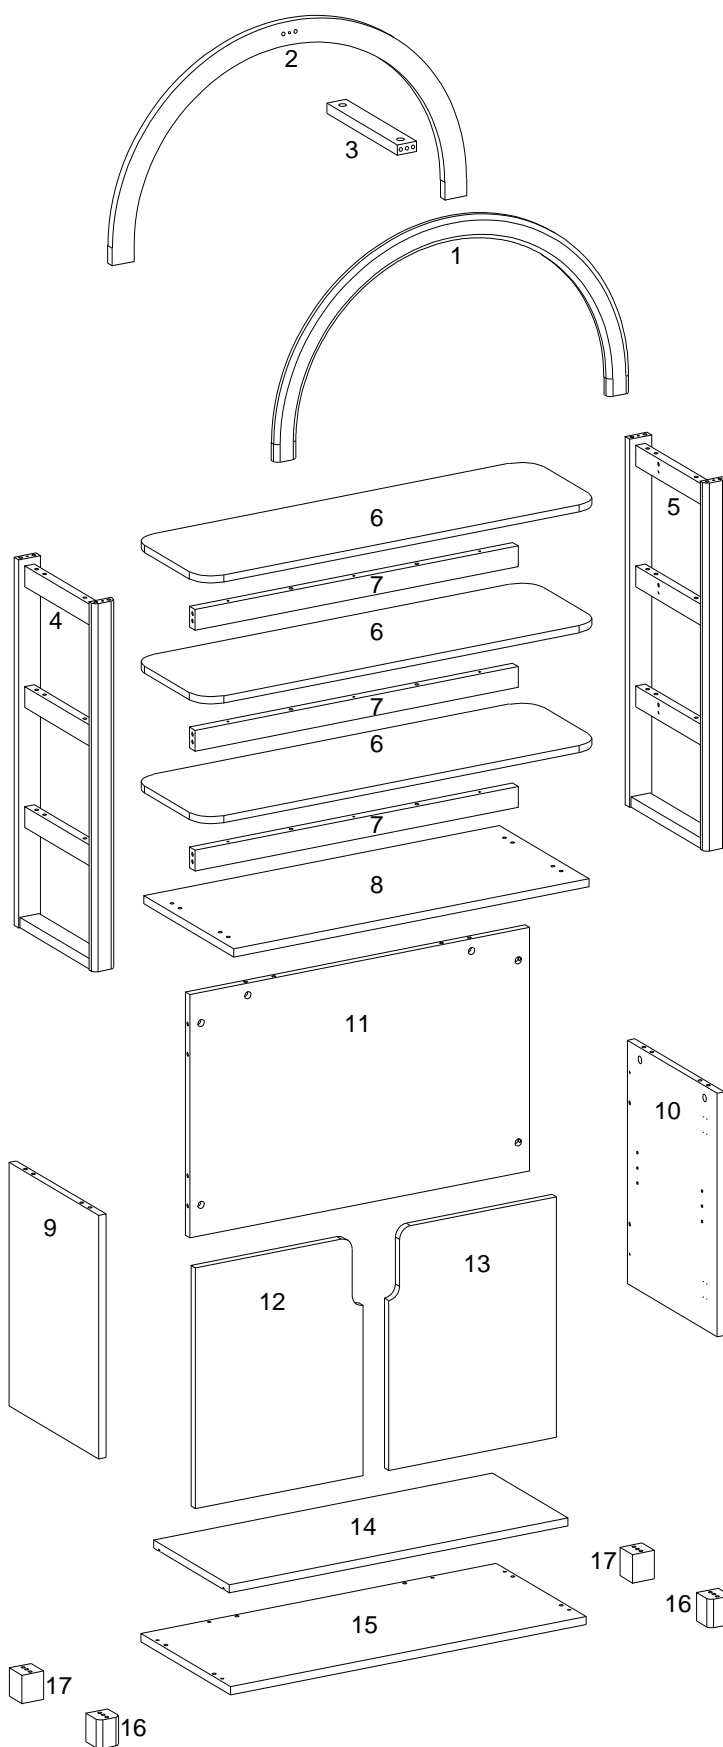Part Number	Description	Quantity
1	Top Arched Front rail	1
2	Top Arched Back rail	1
3	Top Arched Cross Bar	1
4	Upper Left Side Frame	1
5	Upper Right Side Frame	1
6	Upper Fixed Divider	3
7	Support Bar	3
8	Middle Fixed Divider	1
9	Lower Left Side Panel	1
10	Lower Right Side Panel	1
11	Lower Back Panel	1
12	Left Door Panel	1
13	Right Door Panel	1
14	Adjustable Shelf	1
15	Bottom Panel	1
16	Front Legs	2
17	Back Legs	2



 

 





# Hardware List

Part	Size	Name	Quantity
A	 8x30mm	Wooden dowel	64
B	 6x35mm	Cam bolt	22
C	 15x11mm	Cam lock	22
D	 30mm	Sticker	22
E	 42x15x8mm	Door stopper	2
F	 4x14mm	Screw	4
G	 M4	Hex Key	1
H	 6x50mm	Bolt	6
J	 6x50mm	Bolt	16
K	 4x45mm	Screw	9
L	 35mm	Hinge	4
M	 3.5x14mm	Screw	24
N	 8x5x16mm	Shelf support pin	4





 
## Hardware List

Part		Size	Name	Quantity
P		6x30mm	Bolt	4
Q		4x12mm	Screw	2
R		4x25mm	Screw	2
S			Plastic strap	2
T			Wall Anchor	2
U			Glue tube	2

*The hardware quantities listed above are required for proper assembly.  
Extra hardware pieces may be included.*

# Step 1

   Let's get started! Insert wooden dowels (A) into the Back Legs (17) and the Front Legs (16).

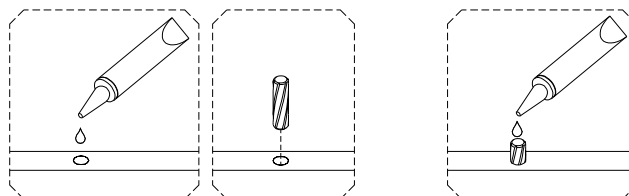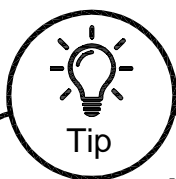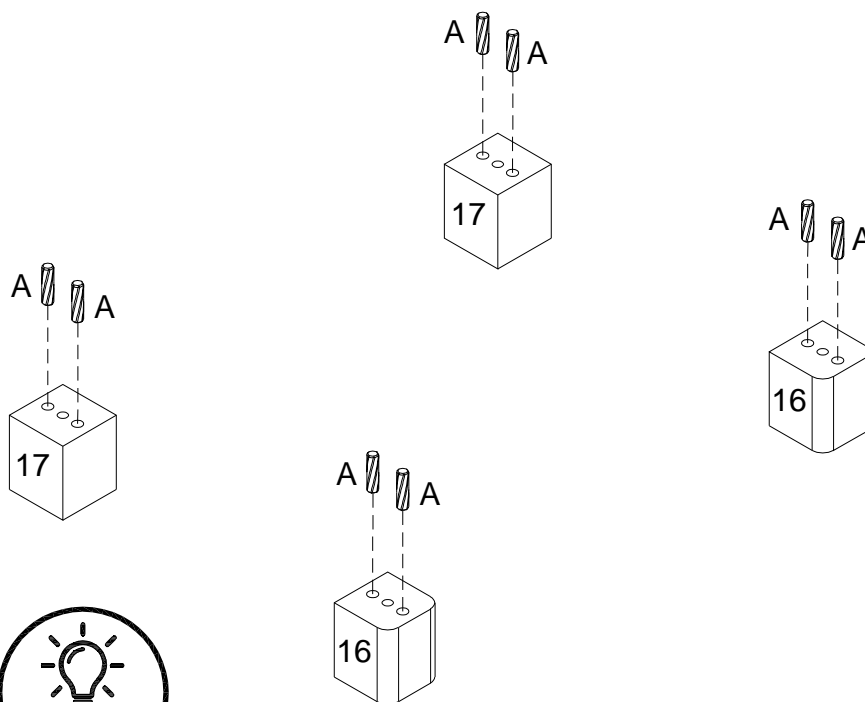


1: The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

2: In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.


## Step 2

 Insert wooden dowels (A) into the Lower Back Panel (11).

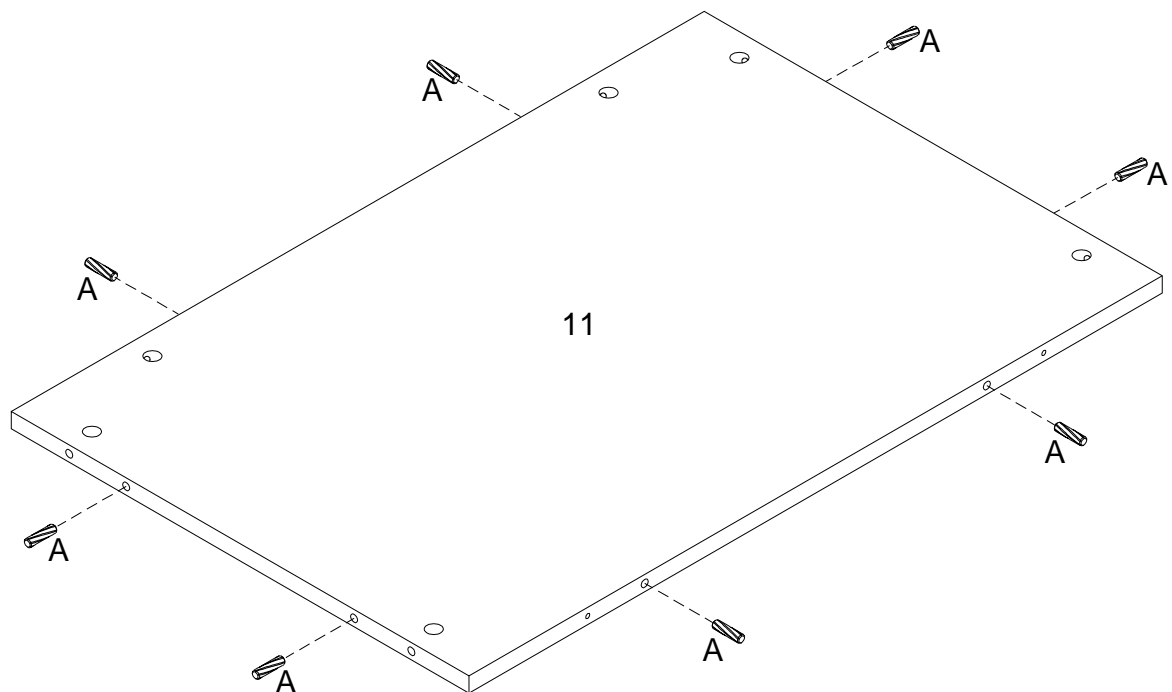

## Step 3

 
Next, Insert wooden dowels (A) into the Lower Left Side Panel (9) and the Lower Right Side Panel (10). Then, screw cam bolts (B) into both pieces.

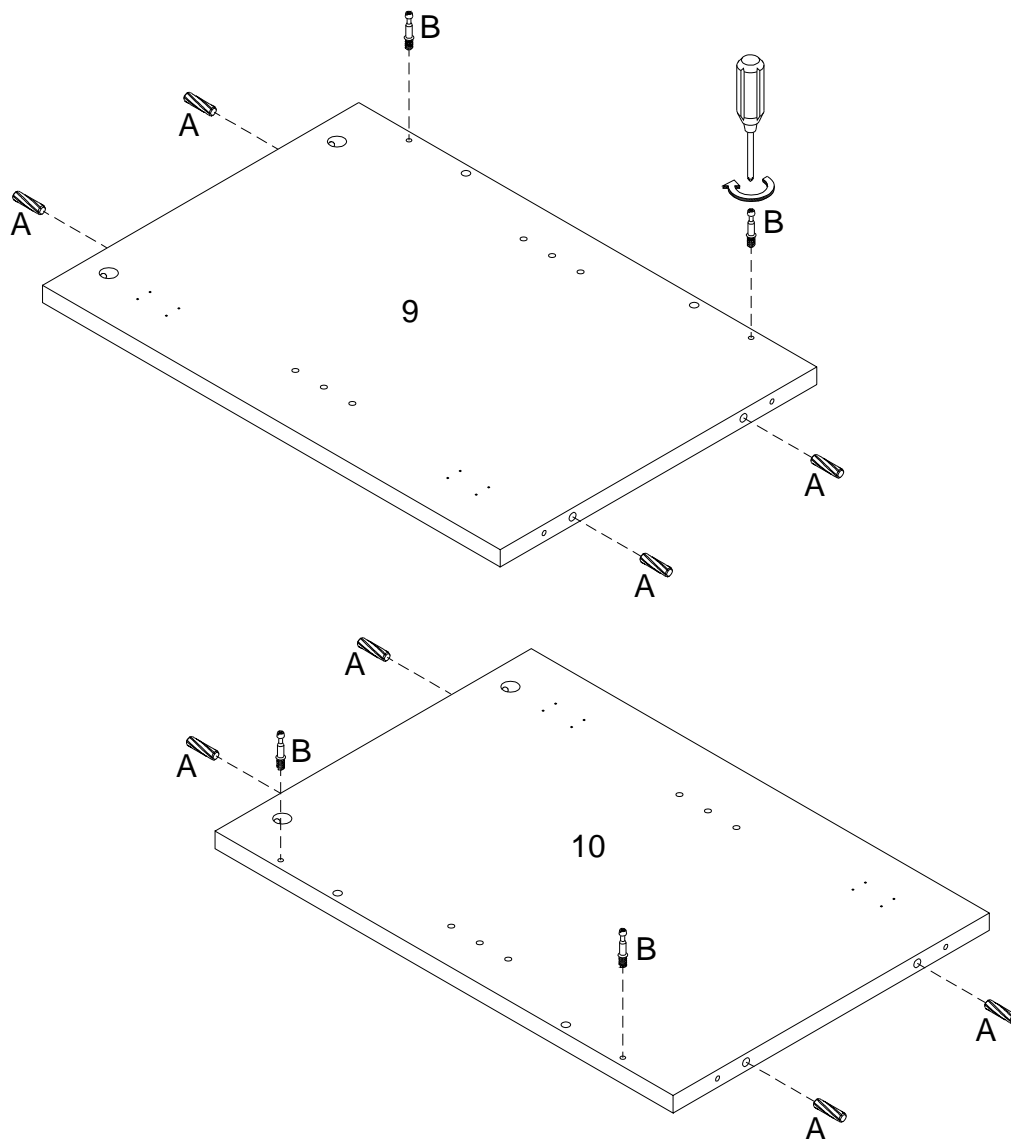




## Step 4

 Screw a cam bolt (B) into the Top Arched Front Rail (1) and the Top Arched Back Rail (2).

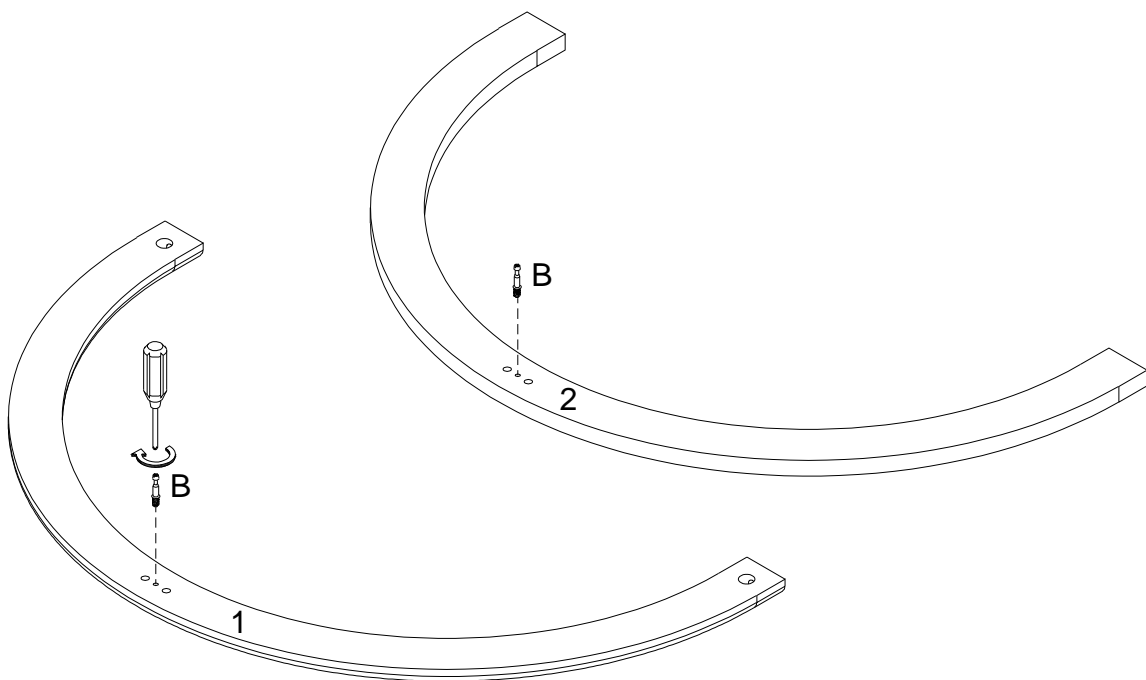


# Step 5

 Insert wooden dowels (A) into each Support Bar (7) and the Top Arched Cross Bar (3).

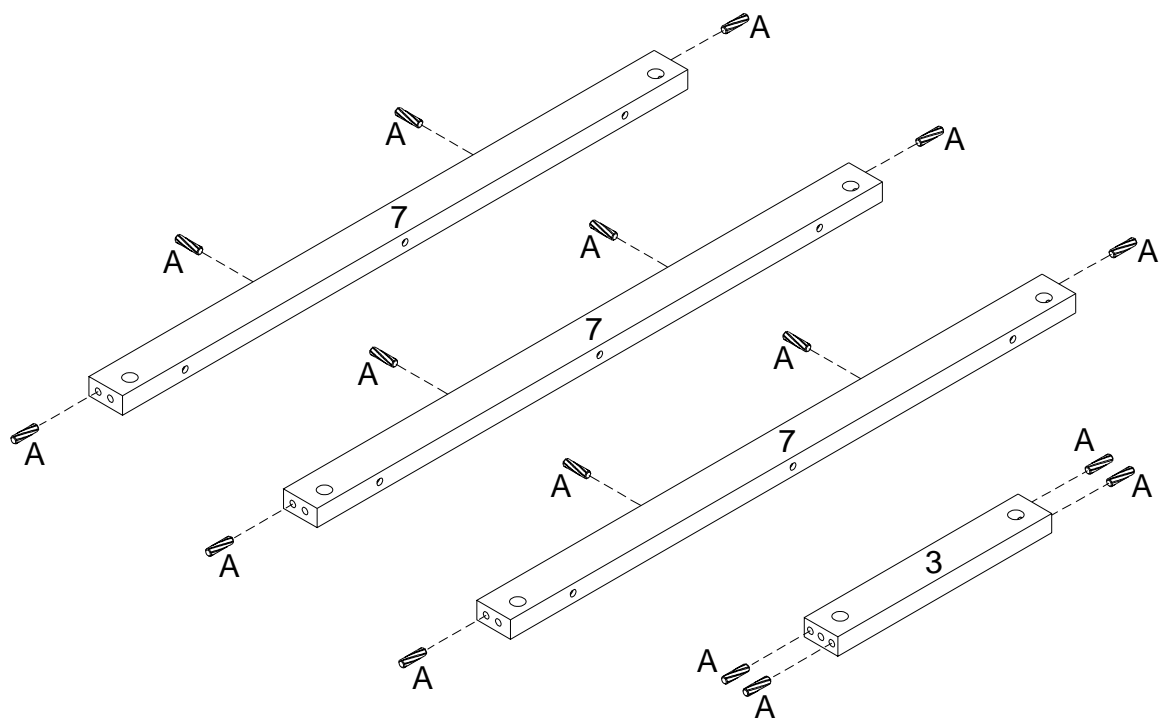



# Step 6

 Insert wooden dowels (A) and screw cam bolts (B) into the Upper Right Side Frame (5) and the Upper Left Side Frame (4).

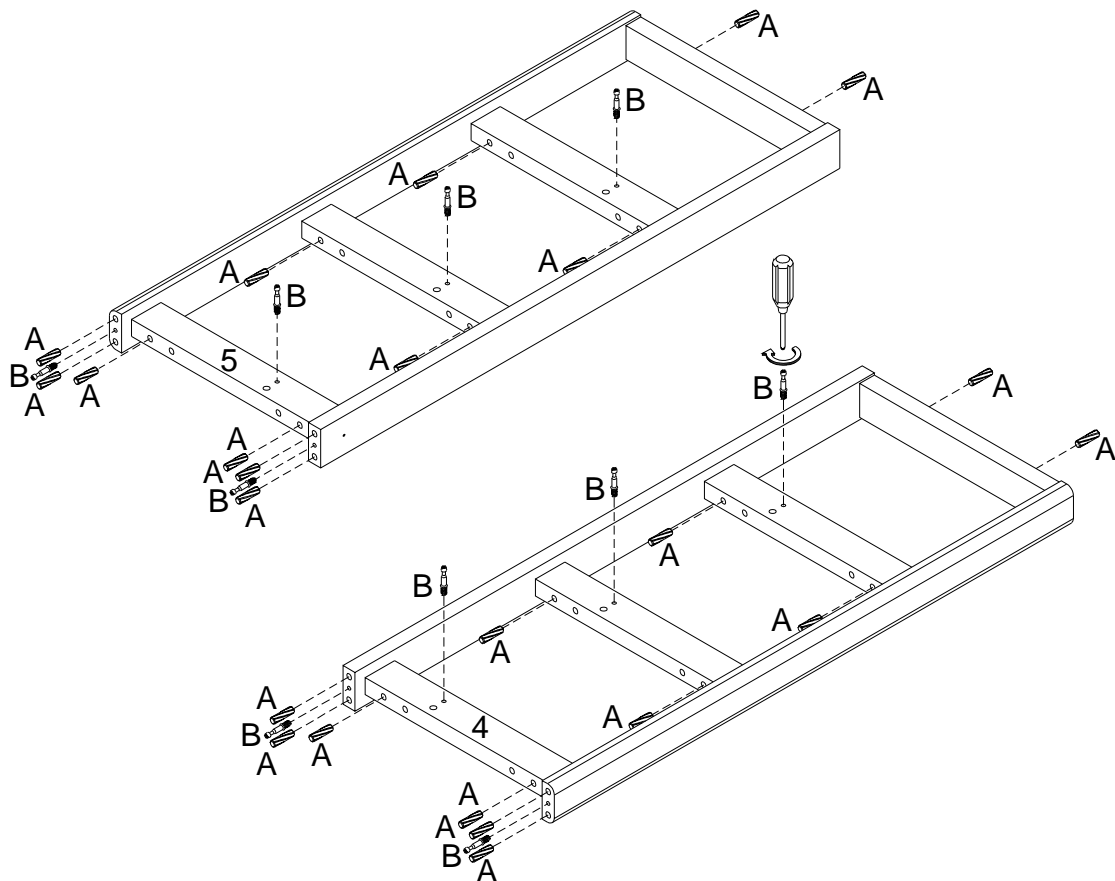

# Step 7

  
Using the cam bolts (B), attach the Support Bars (7) to the Upper Right Side Frame (5). Insert cam locks (C) and tighten with a screwdriver to secure.

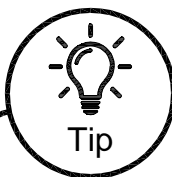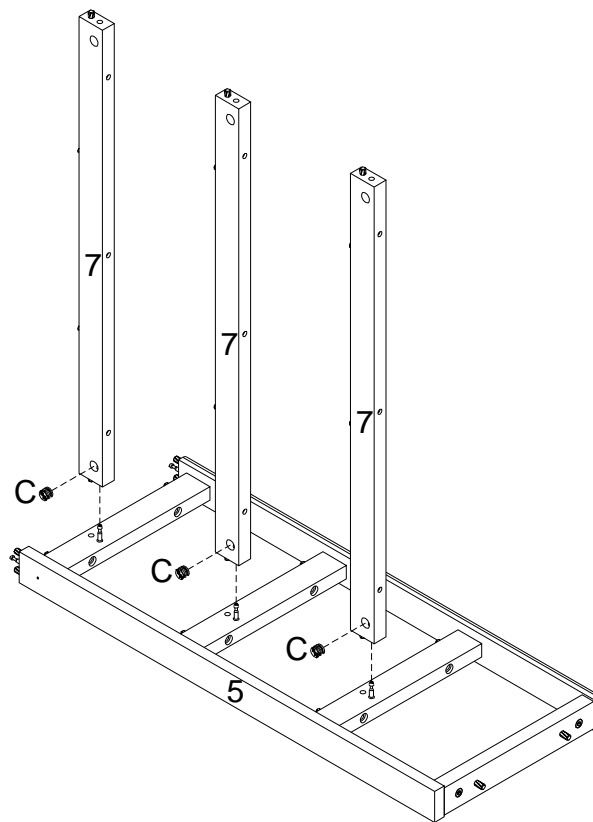


Tip

## Cam Locks

 
Cam Locks help securely join two pieces together.  
Follow these easy steps.

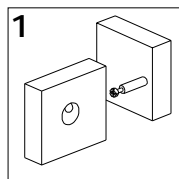

 1: Insert Cam Bolt into bolt holes on the flat side. Don't over tighten!

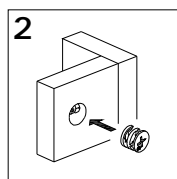

 
2: Fit the proper holes on the edge of the other part over the Cam Bolts. You should be able to see the cam bolts through the larger hole on the side.

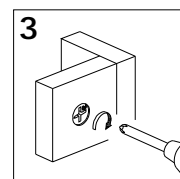

3: On the back of the Cam Lock will be a "C" shape. Insert the Cam Lock so the opening of the "C" fits over the Cam Bolt. Tighten with the screwdriver.




## Step 8

 Connect the other side of the Support Bars (7) to the Upper Left Side Frame (4). Insert cam locks (C) and tighten with a screwdriver to secure.

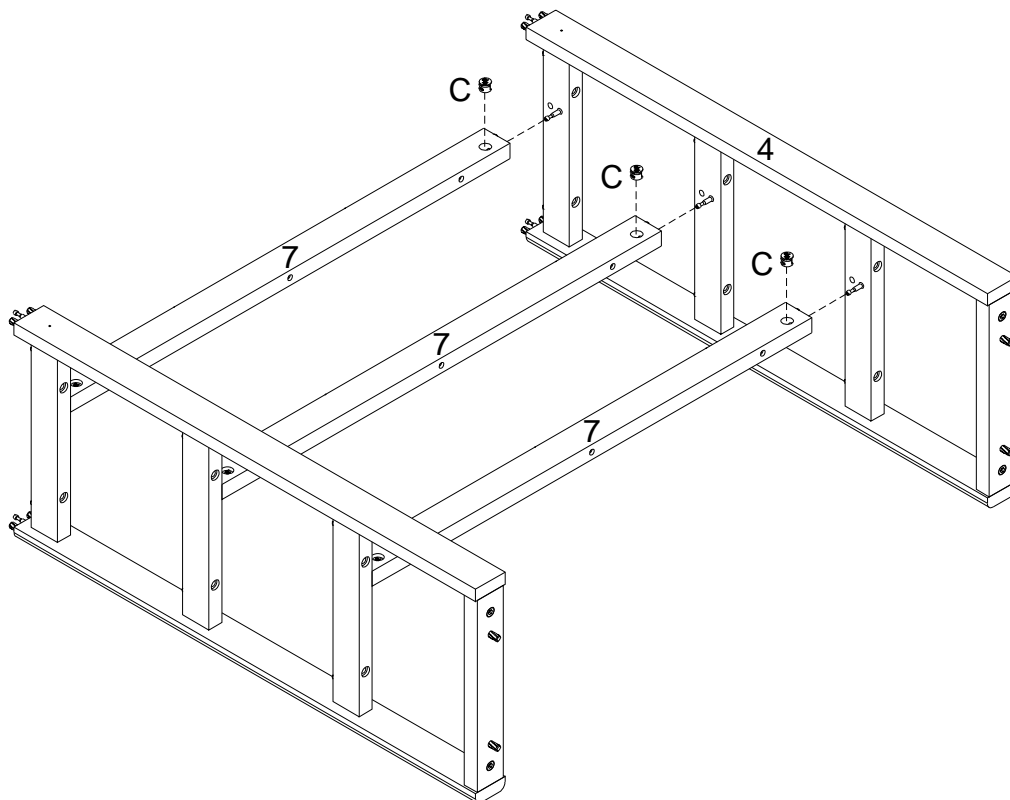


# Step 9

   Secure an Upper Fixed Divider (6) to each Support Bar (7) using the (K) screw. Then, secure the sides of each Upper Fixed Divider (6) to the side frames (5 and 4) using the (J) bolts. Tighten with the provided hex key (G).

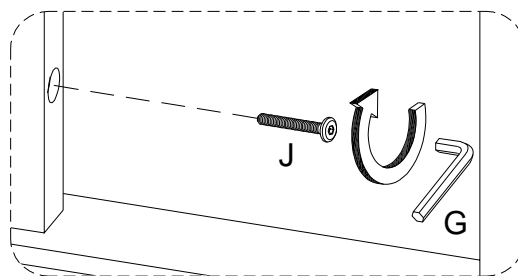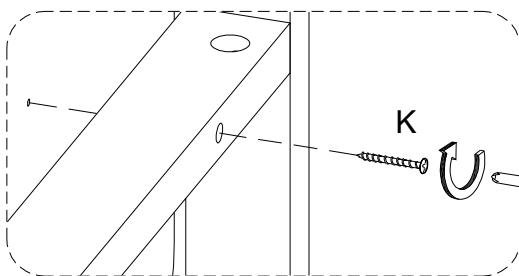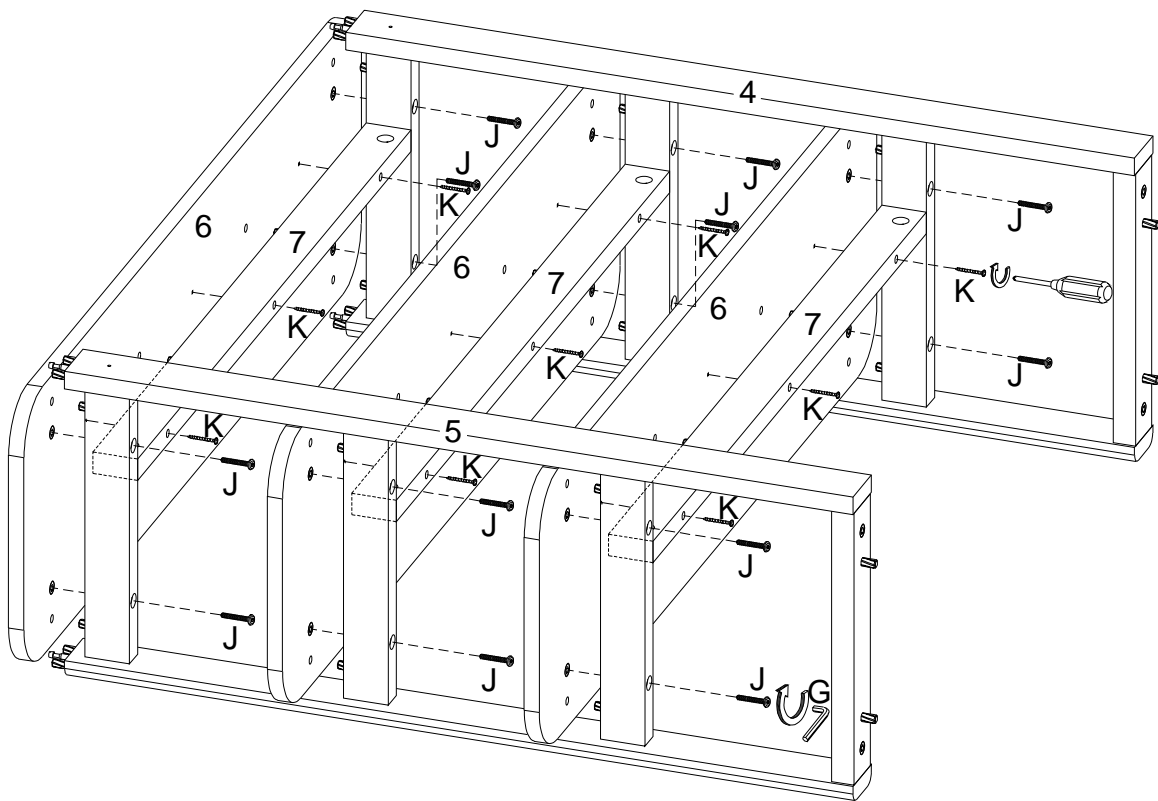


# Step 10

 Attach the Top Arched Cross Bar (3) to the Top Arched Back Rail (2) and the Top Arched Front Rail (1) via the cam bolts (B). Insert cam locks (C) and tighten with a screwdriver.

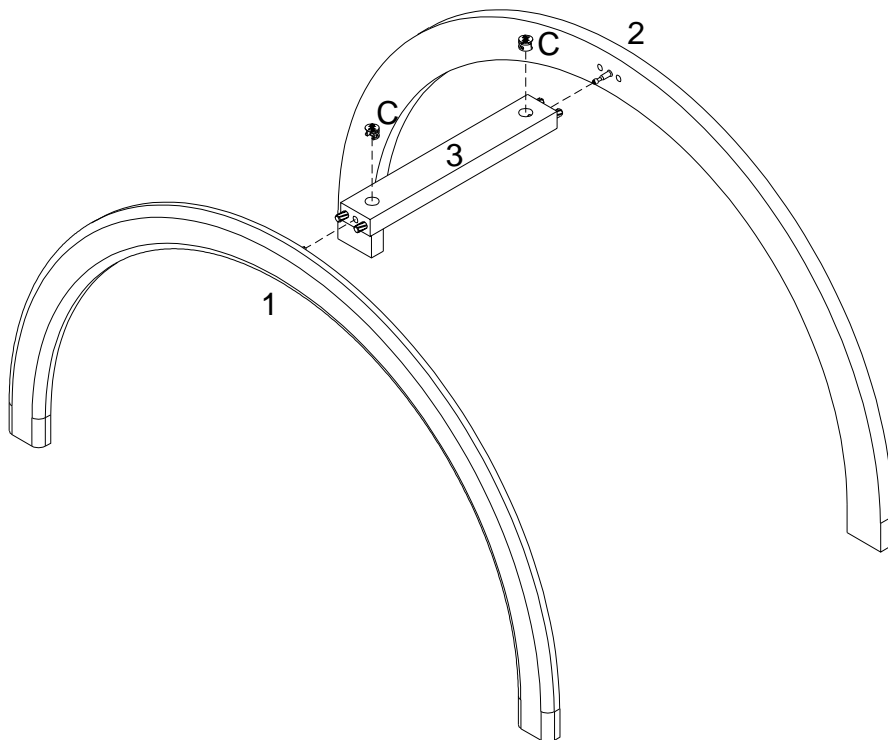

# Step 11

 
Now, attach the Top Arched Front Rails (1 and 2) to the top of each Side Frame (4 and 5). Insert cam locks (C) and tighten with a screwdriver.

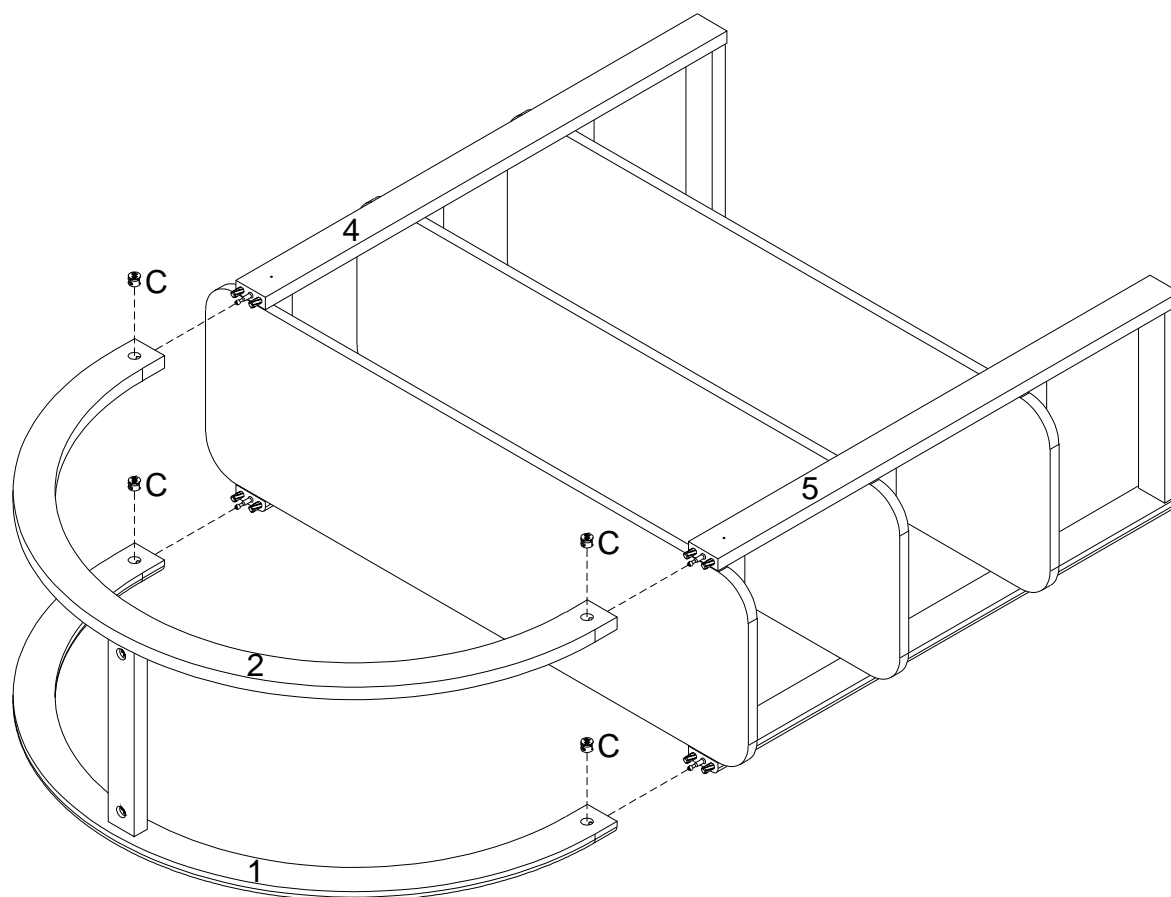




# Step 12

 Secure the Middle Fixed Divider (8) to the Side Frames (4 & 5) using the (P) bolts. Tighten with the hex key (G).

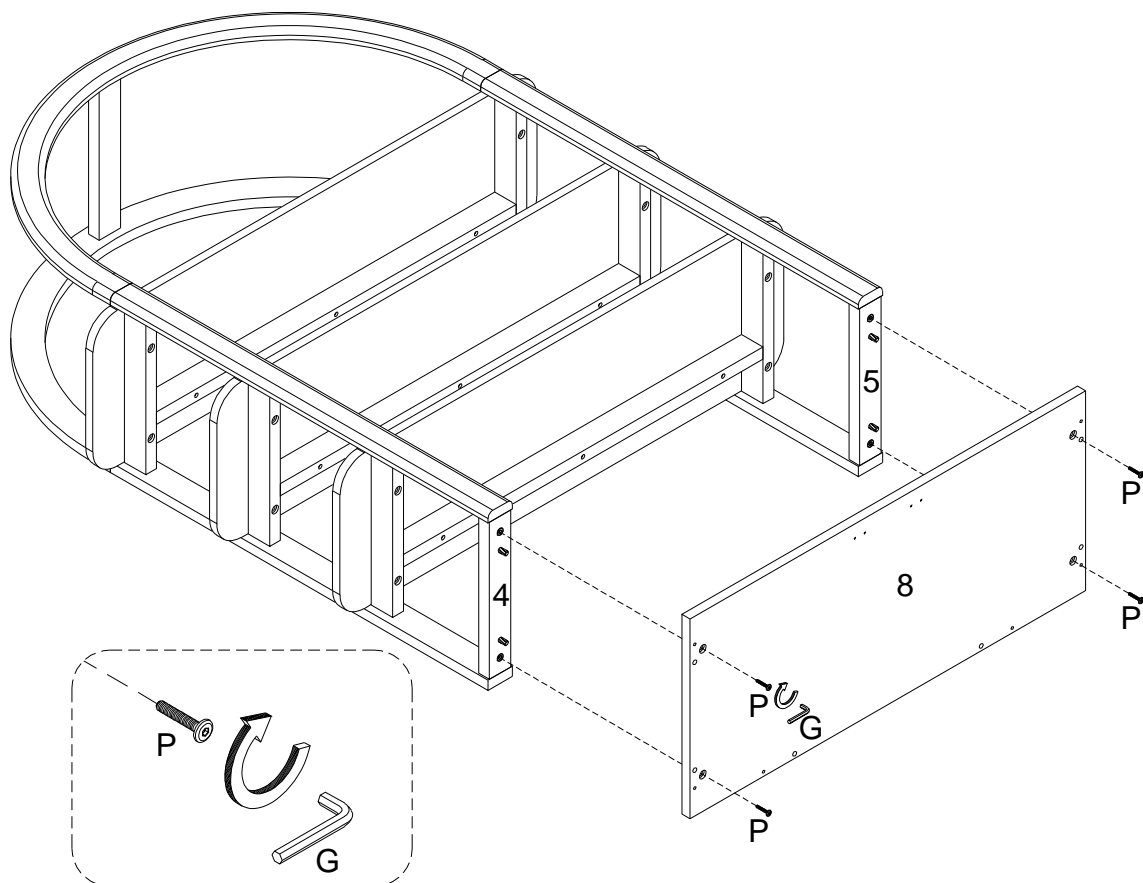


## Step 13

 Using a Phillips head screwdriver, screw the cam bolts (B) into the Middle Fixed Divider (8). Then, attach the door stoppers (E) and secure with (F) screws.

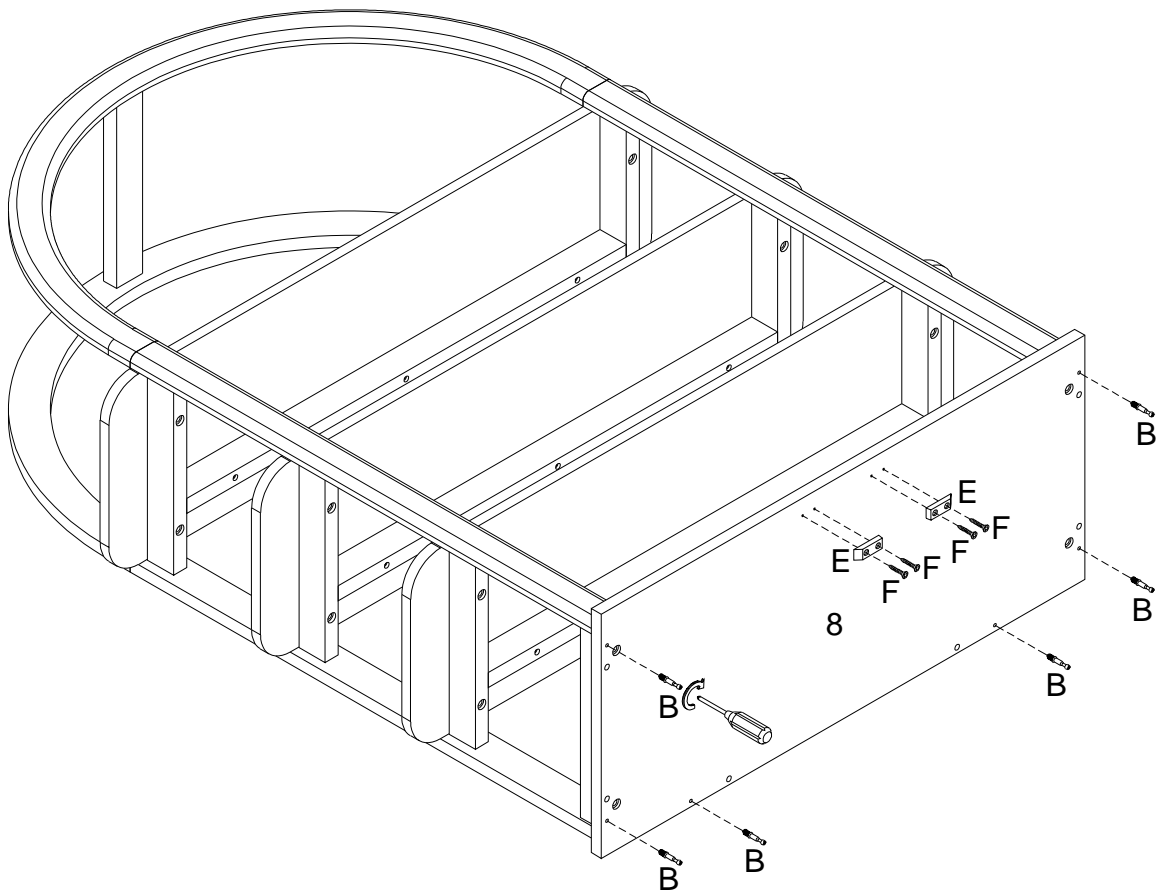


# Step 14

 Attach the Lower Left Side Panel (9) and the Lower Right Side Panel (10) to the Lower Back Panel (11). Insert cam bolts (C) and tighten with a screwdriver to secure.

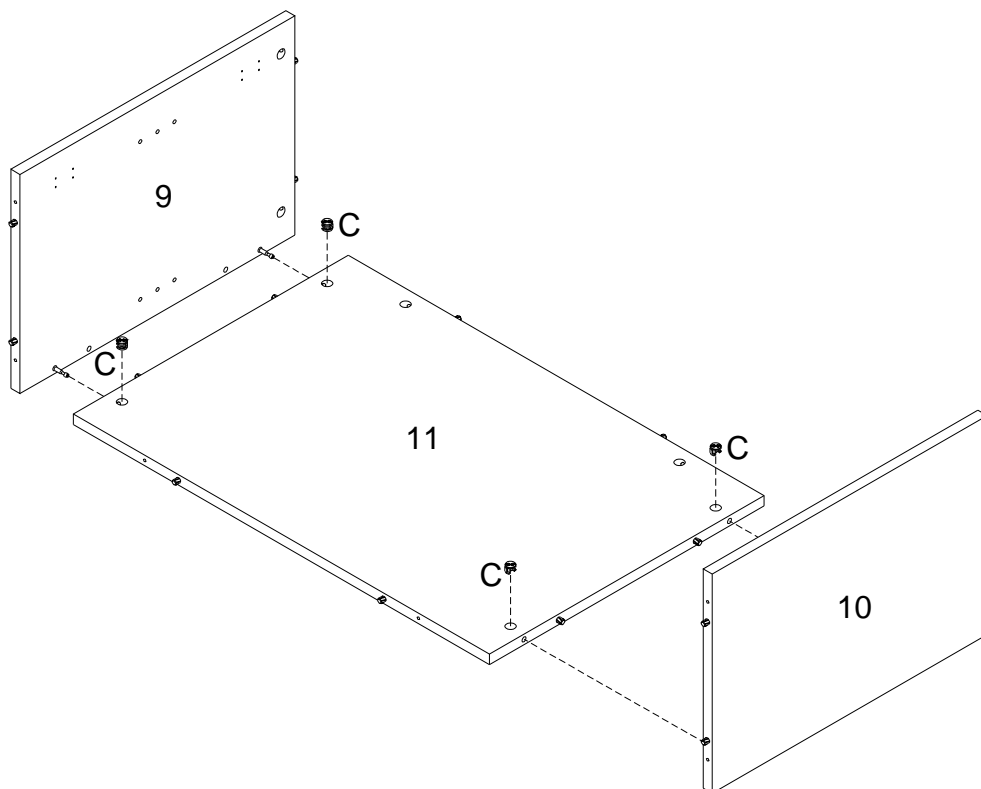


## Step 15

 Using the cam bolts (B) as a guide, attach the Middle Fixed Divider (8) to the Lower Left Side Panel (9), Lower Back Panel (11), and the Lower Right Side Panel (10). Insert cam locks (C) and tighten with a screwdriver.

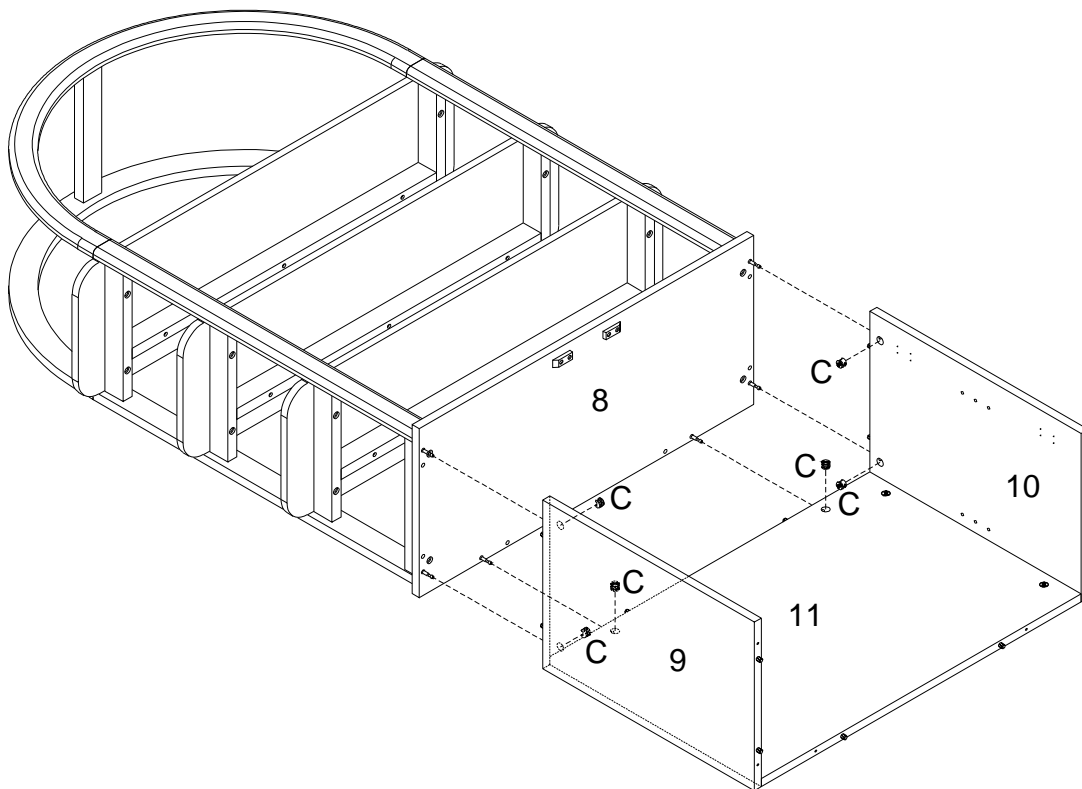


# Step 16

 Next, connect the Bottom Panel (15) to the bottom of the unit using the (H) bolts. Tighten with the hex key (G).

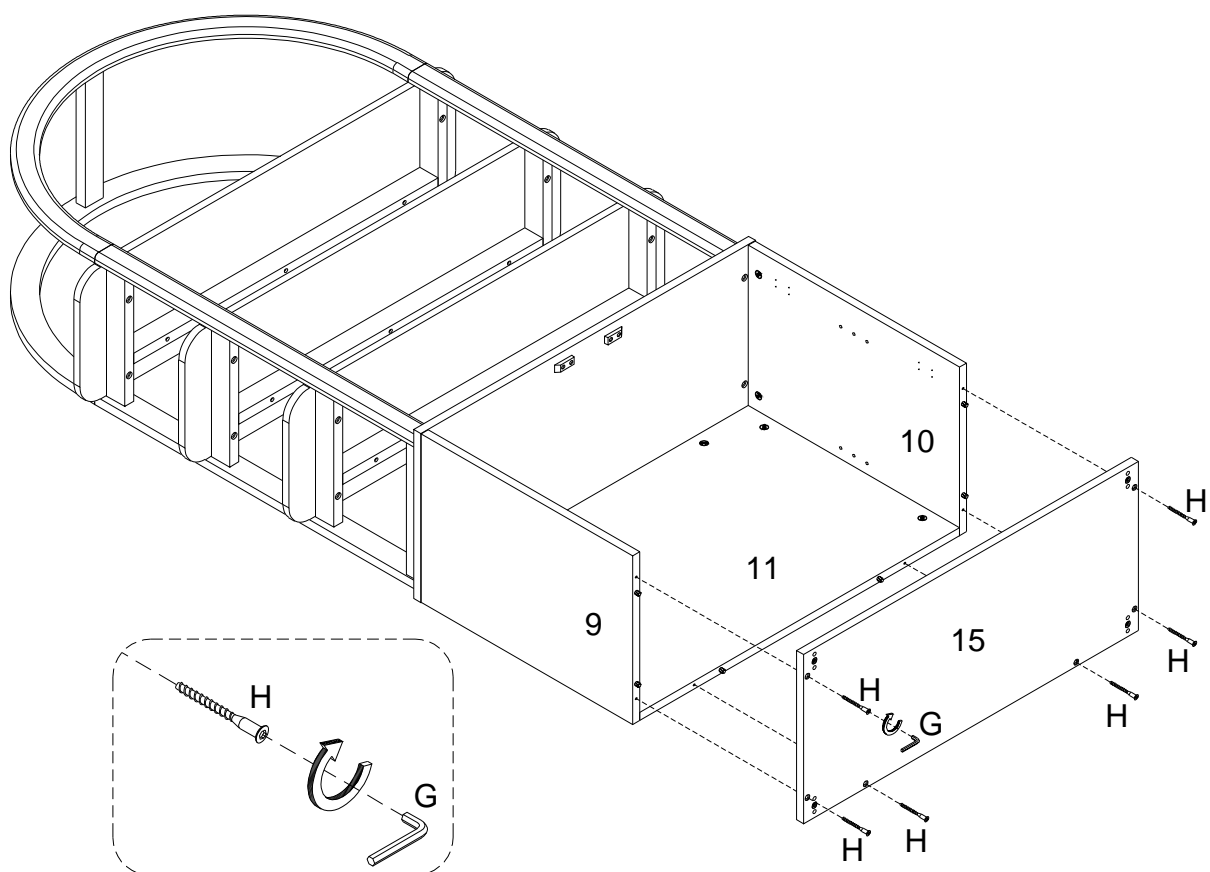


# Step 17

 Attach the Front Legs (16) and the Back Legs (17) to the Bottom Panel (15) using the (J) bolts. Tighten with the hex key (G).

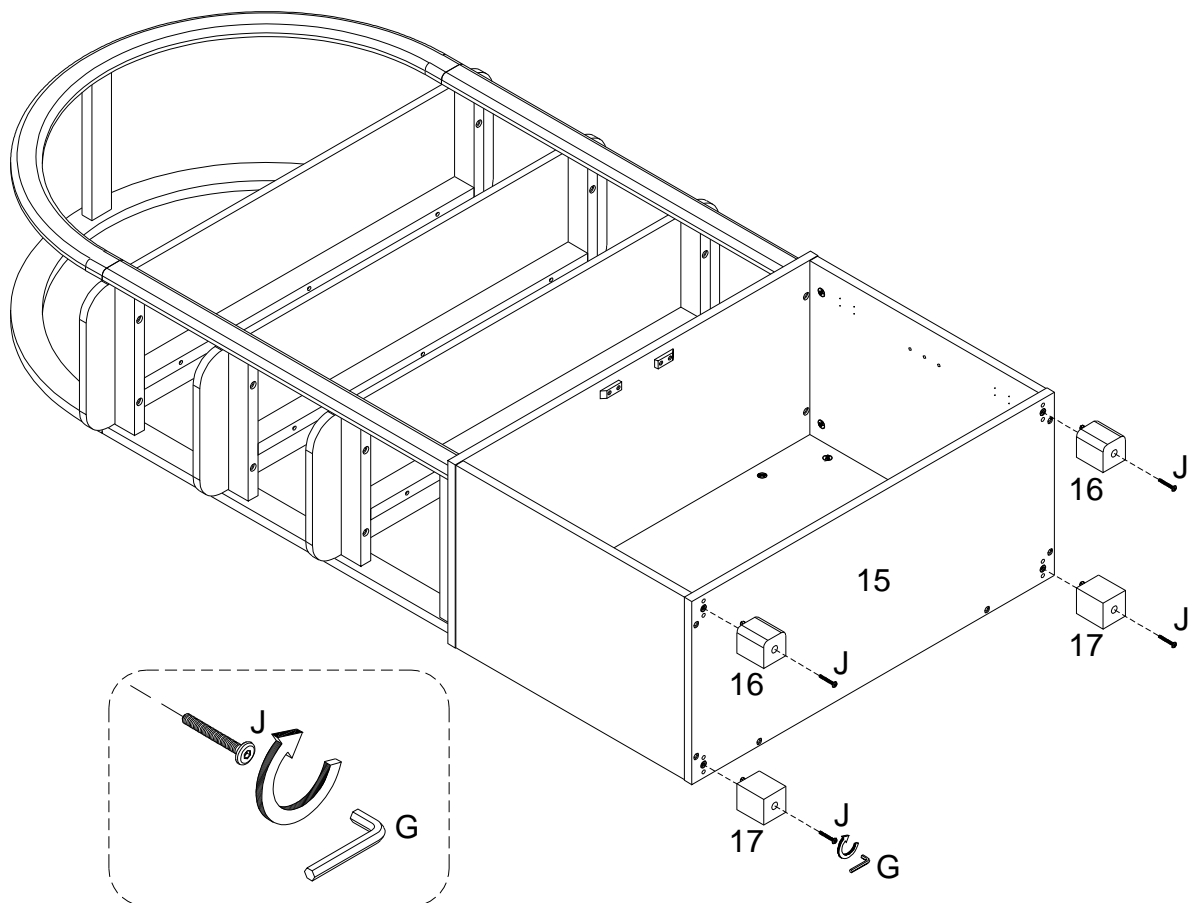


# Step 18

 Use the provided stickers (D) to cover each cam lock (C), ensuring a clean finish.

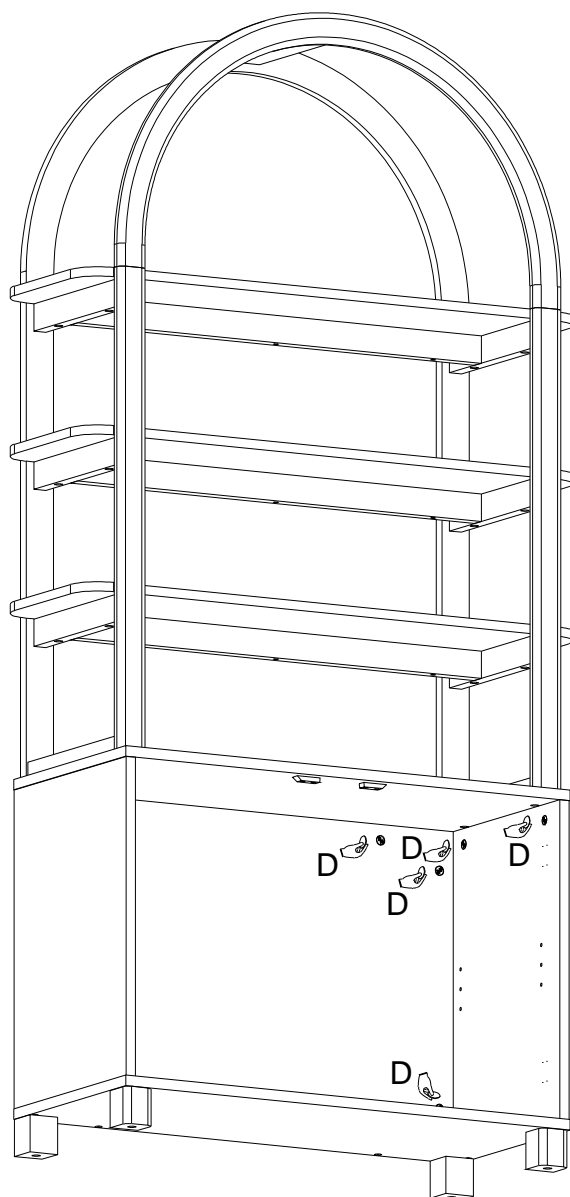

# Step 19

 
Insert shelf support pins (N) and then insert the Adjustable Shelf (14), making sure the notch in the shelf match up with your shelf support pins (N).

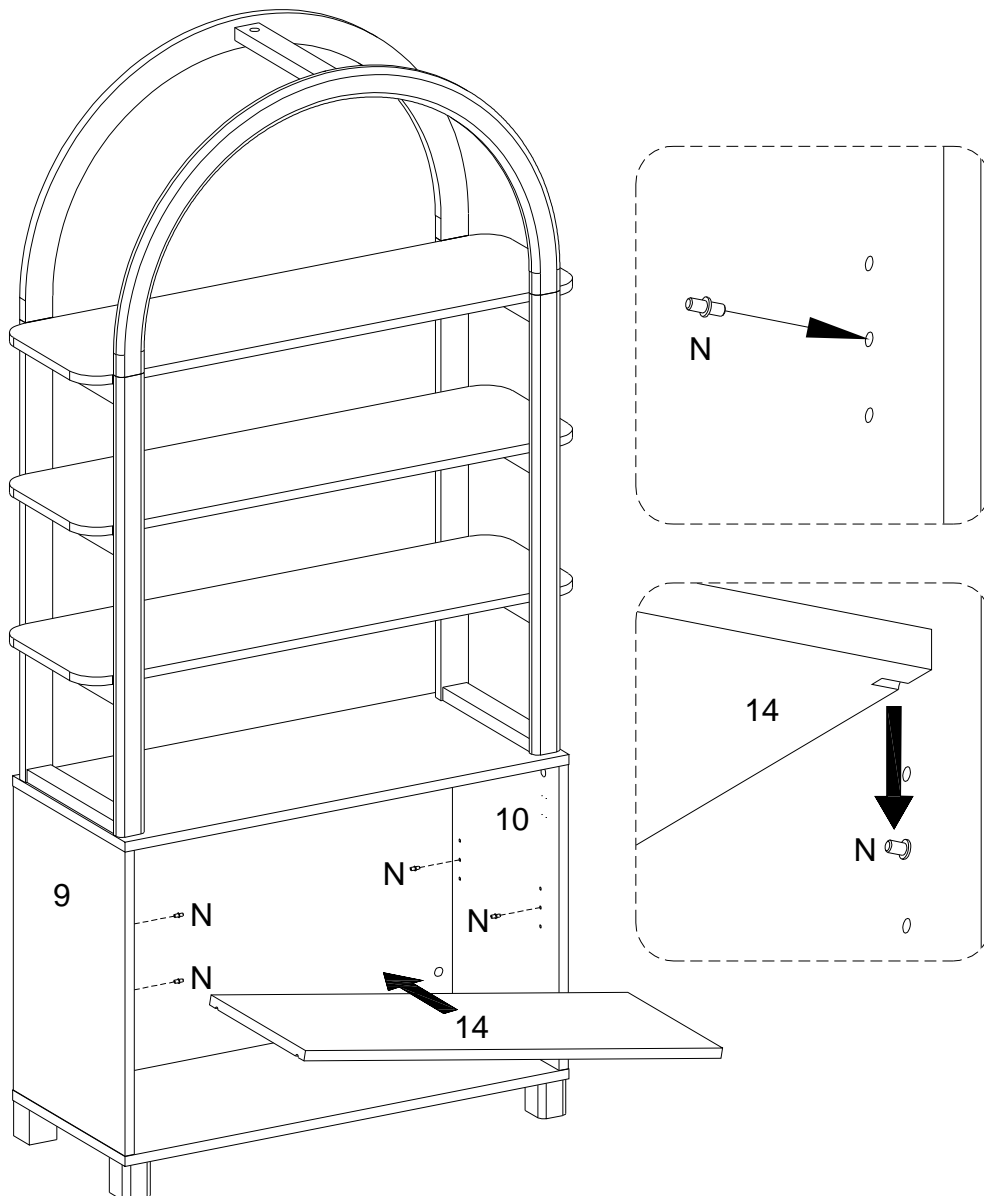





# Step 20

 Using the (M) screws, attach the hinges (L) to the Left Door Panel (12) and the Right Door Panel (13).

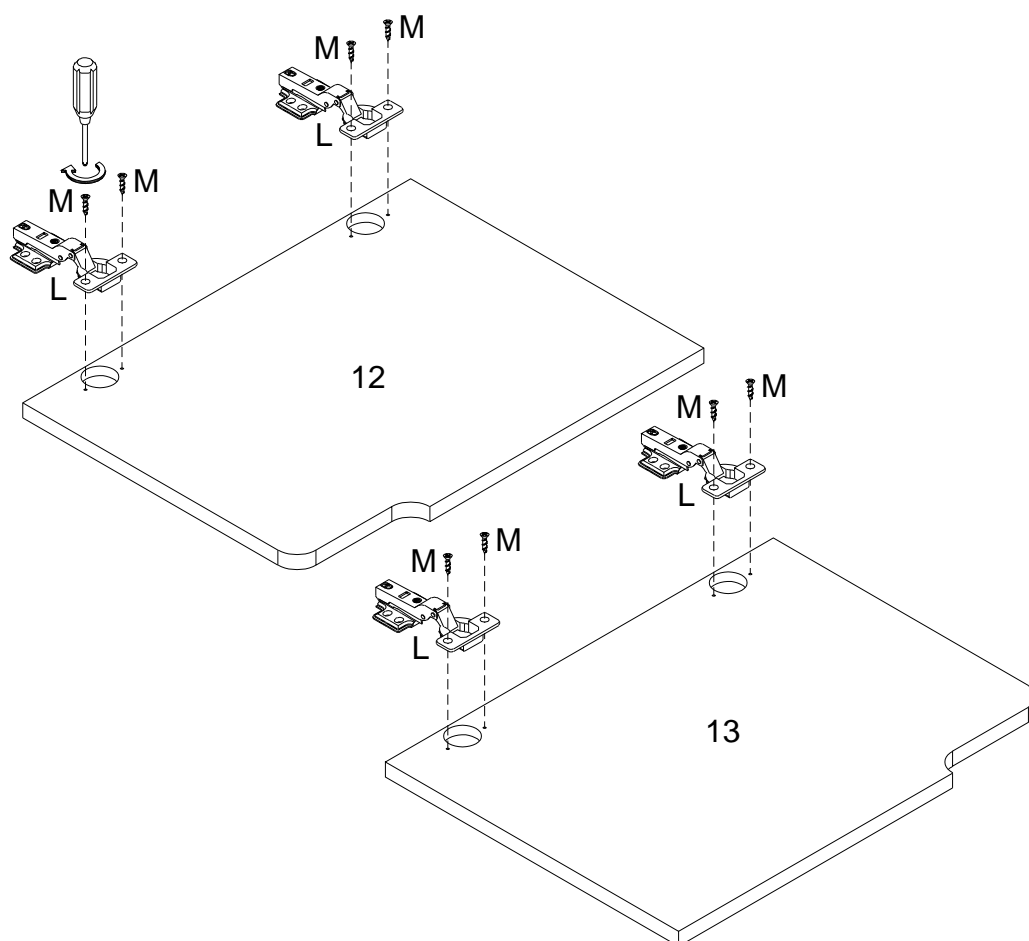


# Step 21

  Secure the hinges (L) to the Lower Left Side Panel (9) using the (M) screws.

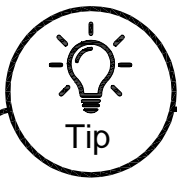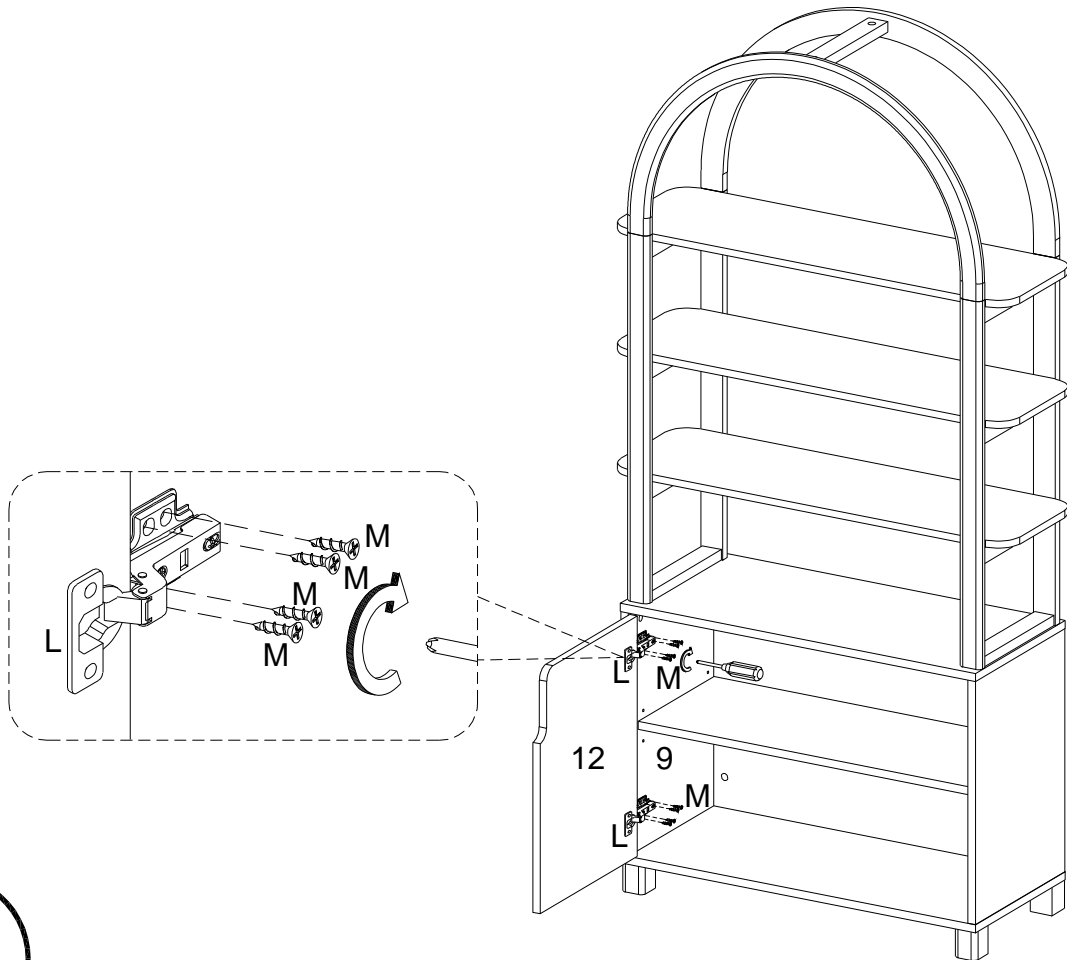


Tip


## Adjusting The Cabinet Doors

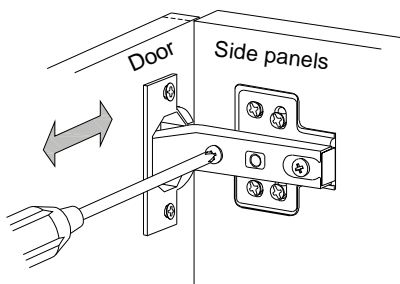 

 Adjust horizontal width  
with this screw.

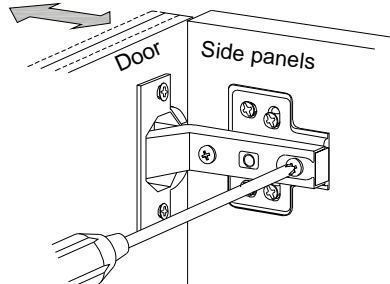

 
Adjust depth position  
by loosening the hinge arm  
mounting screw.

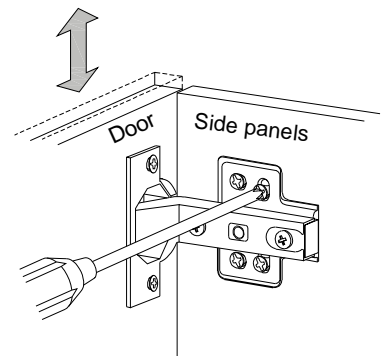

Adjust vertical height  
via the screws in the  
mounting plate.


## Step 22

 Secure the hinges (L) to the Lower Right Side Panel (10) using the (M) screws.

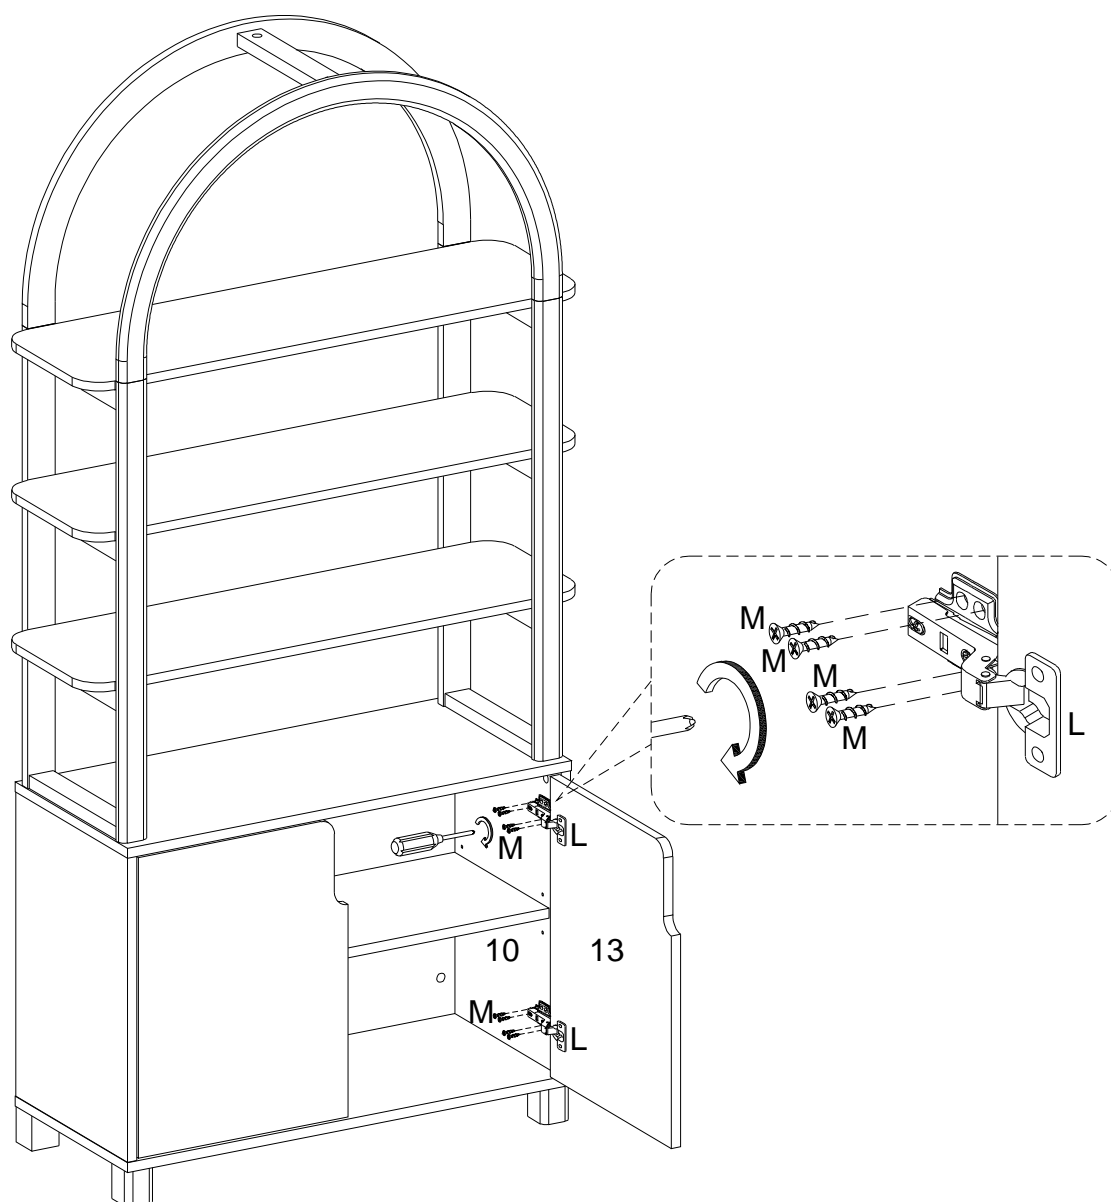


## Step 23

 Attach the plastic strap (S) to the back of the unit using the (Q) screws.

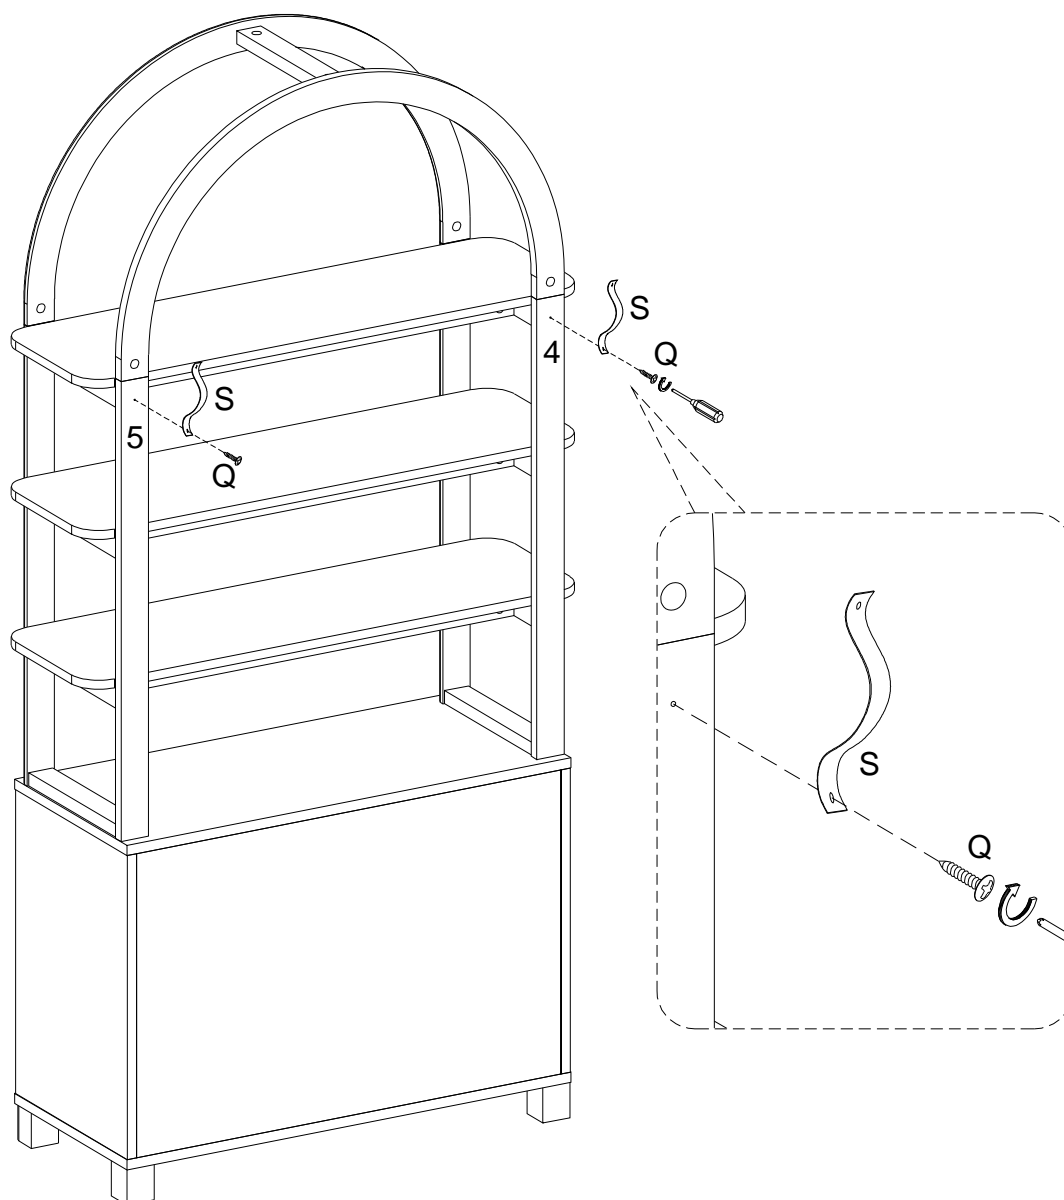

# Step 24

 Secure your unit to the wall using the (R) screw, plastic strap (S), and the wall anchor (T).

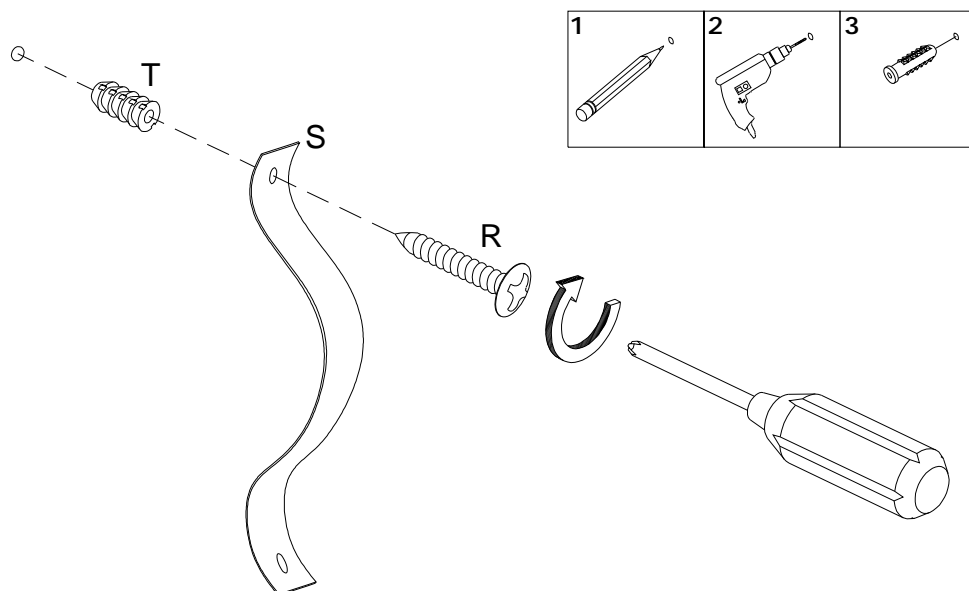

## Warning

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

# Final Assembly



Congratulations on your new piece of furniture!

We would love to hear about it and see it.  
Please leave us a review or post a picture with  
[#mywalkerredisonhome](#)

# Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at [service@walkeredison.com](mailto:service@walkeredison.com)

Visit our Customer Service website at  
[walkeredison.com/pages/customer-service](http://walkeredison.com/pages/customer-service)

We are available to help Monday -Thursday 8am-5pm, Friday  
8am-3pm MST

For details on Assembly Videos, Assembly Instructions,  
Replacement Parts, and Customer service,

**SCAN HERE**

