

# TOOLS REQUIRED

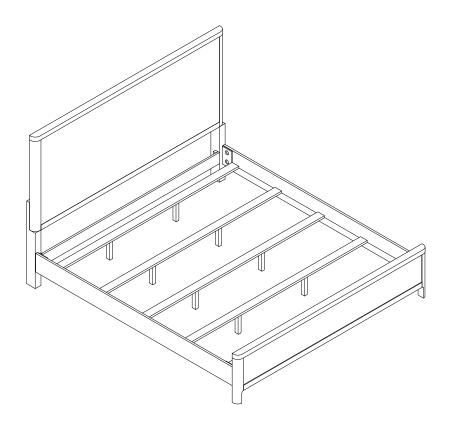

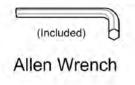






2 - People

## **ASSEMBLY RATING**



EASY — DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

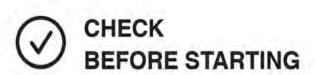

14	Are you missing anything?	Ch	eck out our Quick Tips!		
	Double-check all parts, hardware and accessories listed are all acccounted for.		recommend reviewing the pre-assembly douts. Even experts need a refresher now and n!		
	Should we send any replacements?	Pre	Prep Time!		
	Are there any irregularities or flaws in the parts? We can send replacements!		ase review the assembly instructions and all grams prior to assembling.		

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





#### Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### Suitable Location

Assembling near the area of the intended location is highly recommended.





#### Sufficient Space

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





#### Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

## KING BED



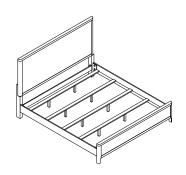

## **PARTS**

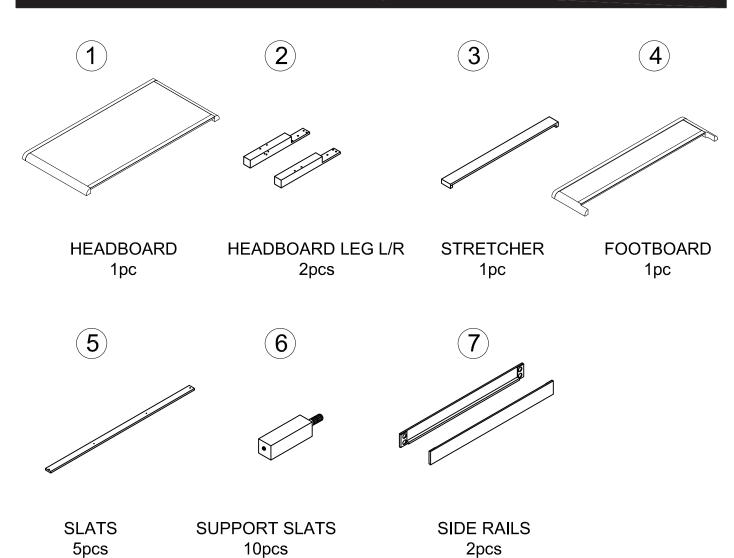

### **HARDWARE**

#### 1.ASSEMBLY HEABOARD

















ALLEN WRENCH 1pc BOLT Ø5/16"x 2" 8pcs LOCK WASHER Ø 5/16 8pcs LOCK WASHER Ø 5/16 x 19mm 8pcs

#### 2.ASSEMBLY SIDE RAILS

















OPEN WRENCH 1pc NUTS Ø5/16" 8pcs CURVED WASHER 8pcs


BOLT Ø5/16"x 3" 8pcs



**()**000000000>>


WOOD SCREWS 10pc


# **EXPLODED VIEW**

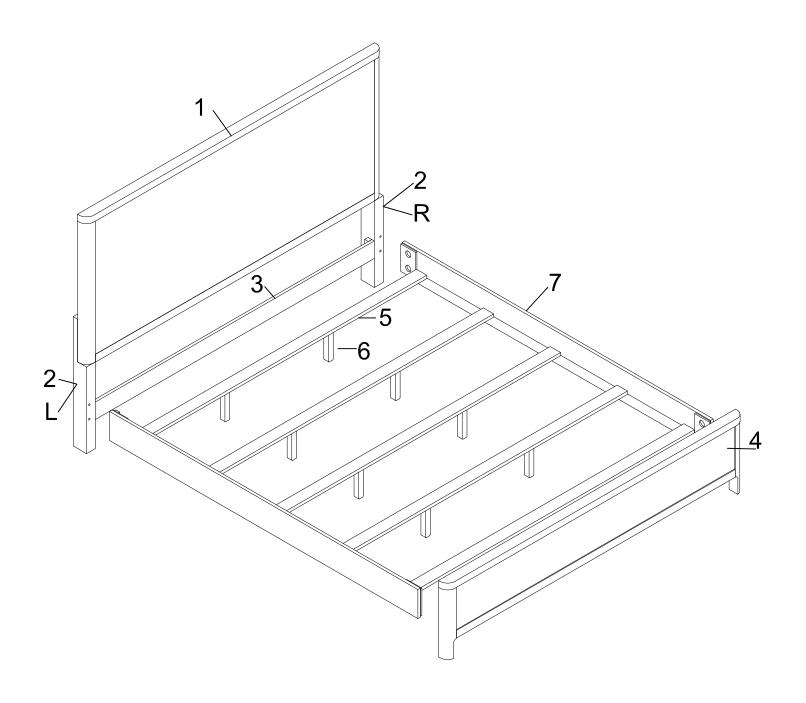



# packed 3 case

Carton	Disignation		Part	Hardware
	Headboard	#1		# A x 1pc
	Headboard legs L/R	#2		# C x 8pcs # D x 8pcs
	Stretcher	#3		
	Footboard	# 4		
	Slats	# 5		
	Support Slats	# 6		
	Side rails	# 7		#E x 1pc #F x 8pcs
				#G x 8pcs #H x 8pcs
				<b>()</b> >>>>>>> #I x 10pcs

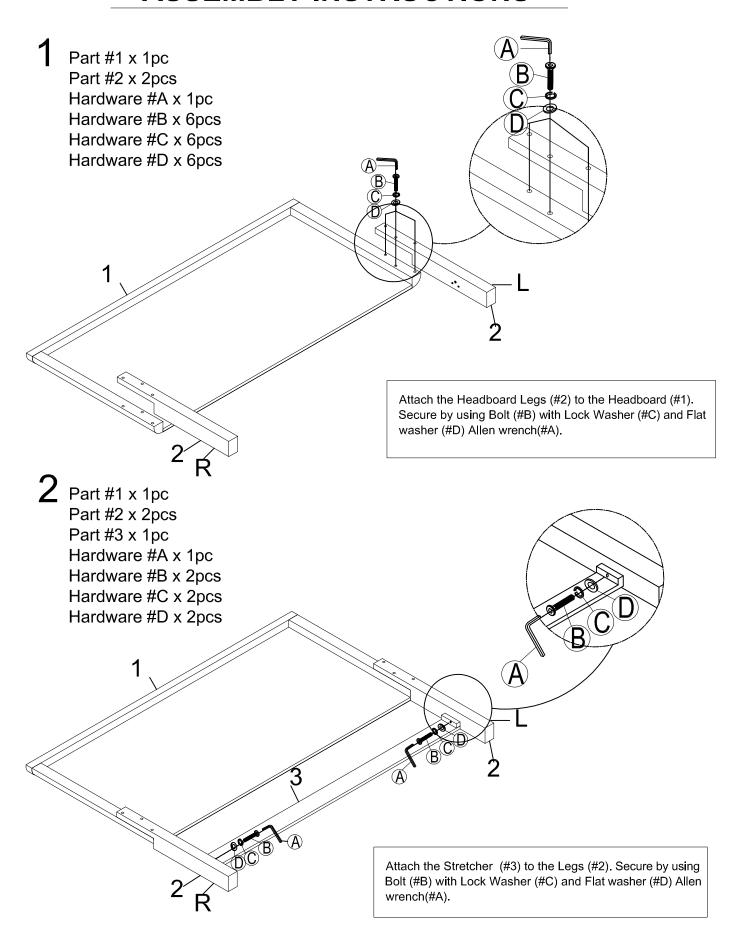

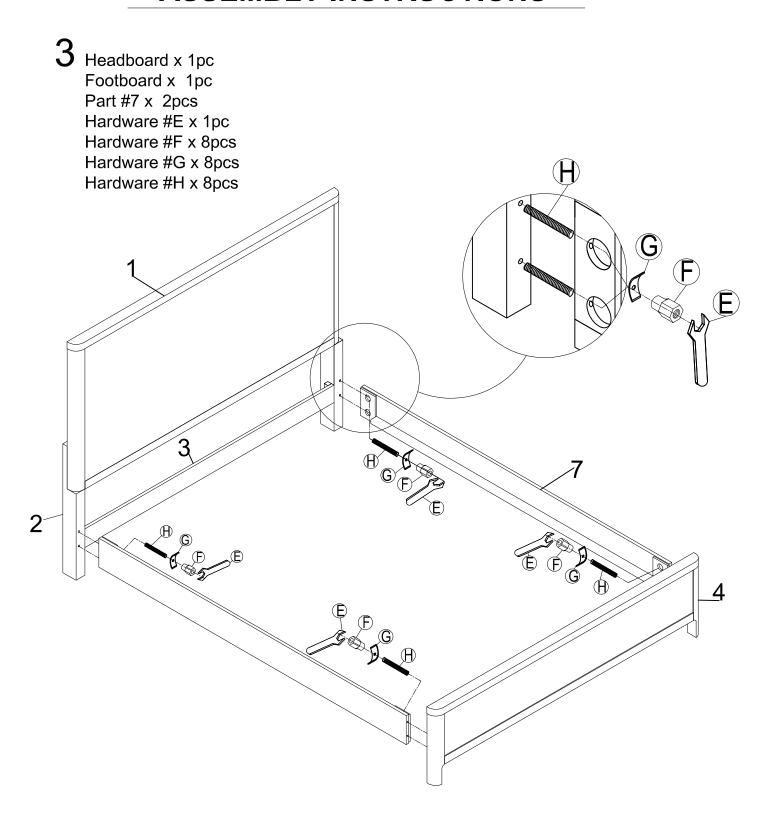


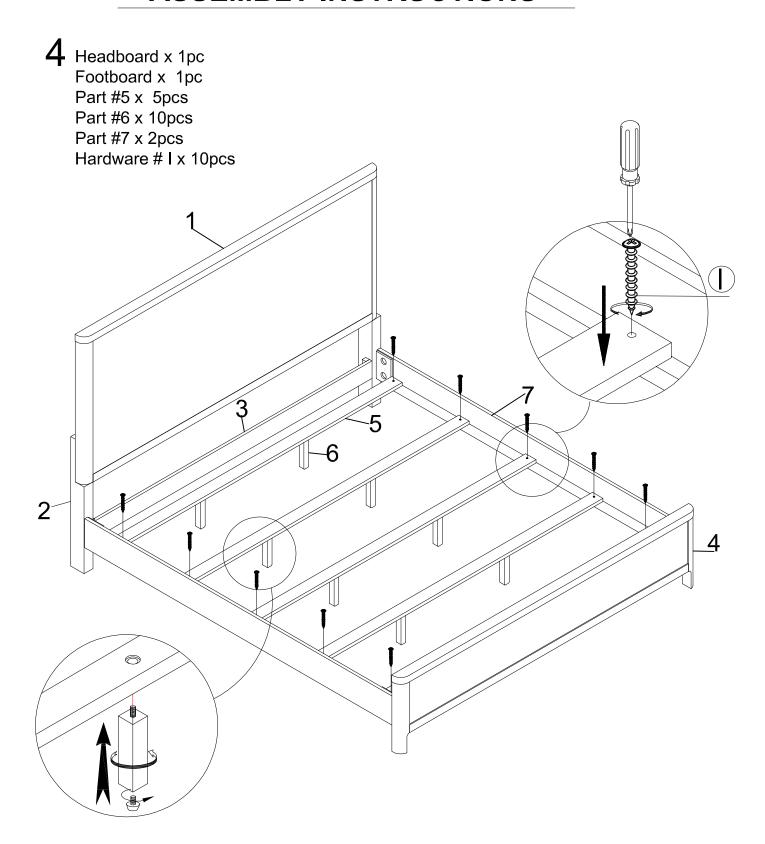

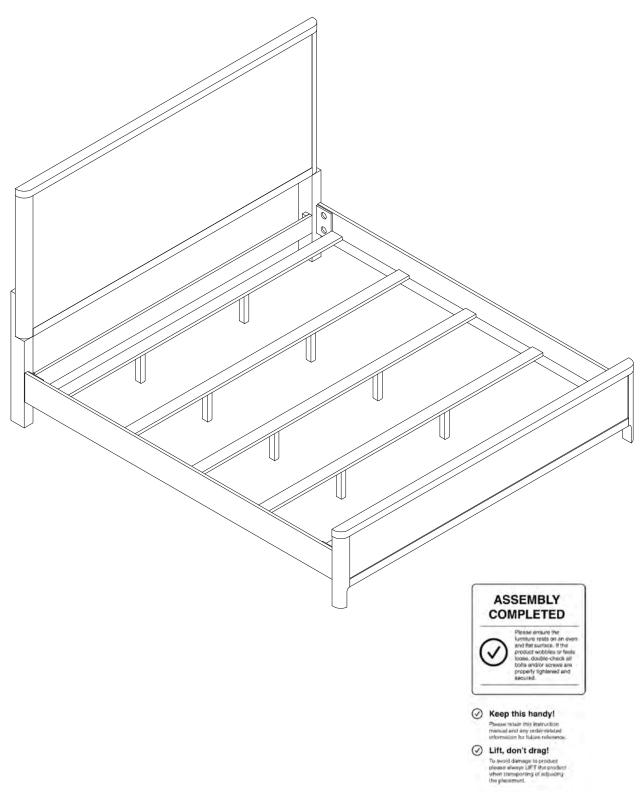

### **TOOLS REQUIRED**



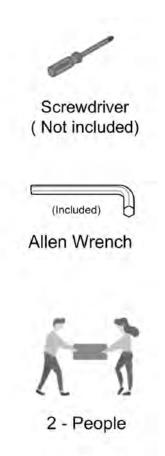


## **ASSEMBLY RATING**



EASY — DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

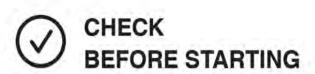

ja j	Are you missing anything?	Check out our Quick Tips!	
	Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-ass handouts. Even experts need a refrest then!	
	Should we send any replacements?	Prep Time!	
7	Are there any irregularities or flaws in the parts? We can send replacements!	Please review the assembly instruction diagrams prior to assembling.	ns and all

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





#### Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





#### Suitable Location

Assembling near the area of the intended location is highly recommended.





#### Sufficient Space

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





#### Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

# **NIGHTSTAND w/ USB A-C**





## **PARTS**



## HARDWARE





ANTI TIP KIT 1pc

### Hardware #A x 1pc

Use anti-tip kit to secure Nightstand to the wall.







Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all boils and/or screws are properly tightened and secured.

#### 

Please retain this instruction manual and any order-related information for future reference

#### ✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

#### Wall Mounting and Fixing



#### **EXPANSION WALL ANCHOR**

Our provided expansion wall anchors are only suitable for mesonry walls, such as drywall, pluster or concrete, and are best for holding lightweight items or for anti-tip prevention. If you are unsure of the correct wall anchor to use with the product, please request professional guidance, liability for product damage or failure due to using the incorrect anchors will fall on the installer.



#### CHECK BEFORE PROCEEDING

Prior to drilling ar nammering, please check for wires or pipes. We recommend using a stud finder to locate a stud, which will offer more apprepriate resistance and hold more weight.

#### QUICK TIPS

If unsure of the proper size, always choose a targer screw and wall unchor.






 Match the drill bit to the wall anchor and hole size.

 Only drill horizontally, Do not force the drill or enlarge the hole for the wall anchor.



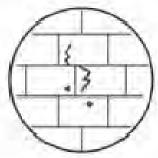


 Talke extra care when drilling into high walls or ceramic tiles. Wall anchors should be a light fit for the hole. Never use wall anchors in collings.






We recommend a yearly check to see if the wall anchor or screw has loosened. If so, please remove the existing wall anchor and screw, and use a new anchor.

## TOOLS REQUIRED

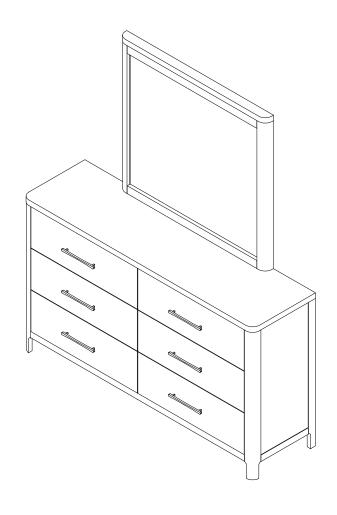

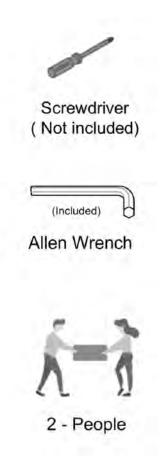


## **ASSEMBLY RATING**



EASY — DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

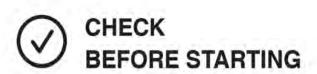

Are you missing anything?	Check out our Quick Tips!
Double-check all parts, hardware and accessories listed are all acccounted for.	We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements?  Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time!  Please review the assembly instructions and all diagrams prior to assembling.

# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.






#### Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



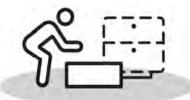

#### Suitable Location

Assembling near the area of the intended location is highly recommended.





#### **Sufficient Space**

Make sure you have enough space to move around during the assembly.





#### **Avoid Scratches**

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.





#### Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

# ASSEMBLY AND CARE ADVICE



FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.



Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.




After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

## **DRESSER & MIRROR**



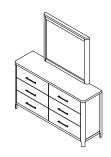

## **PARTS**




**DRESSER** 1pc





**MIRROR** 1pc

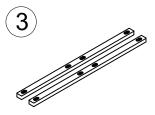

MIRROR SUPPORT RAILS 2pcs

### **HARDWARE**





1pc





LOCK WASHER Ø 1/4 x 19mm 8pcs





BOLT Ø1/4"x 1 1/2" 8pcs








ANTI TIP KIT 1pc





LOCK WASHER Ø 1/4 8pcs

# **EXPLODED VIEW**

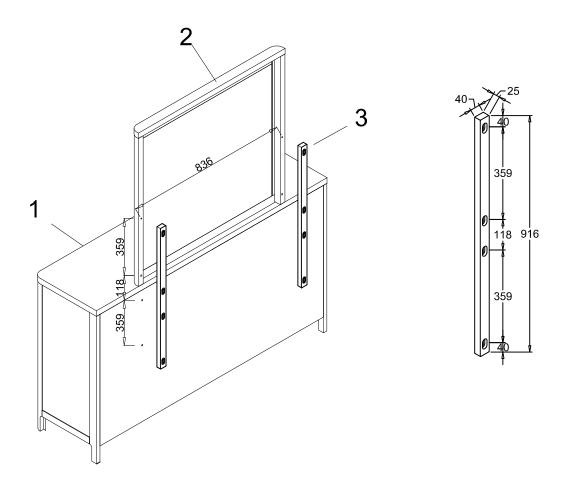

# packed 2 case


Carton	Disignation	Part		Hardware	
	Dresser	# 1			# E x 1pc
	Mirror	#2			<sup>⇒</sup> #A x 1pc #B x 8pcs
	Mirror Support rails	#3			# C x 8pcs # D x 8pcs

1 Dresser x1pc Part #2 x 1pc Part #3 x 2pcs Hardware #A x 1pc Hardware #B x 8pcs Hardware #C x 8pcs Hardware #D x 8pcs 1 O B

Attach the Mirror(#2 )and Mirror Supports Rail (#3) to top Dresser (#1). Secure by using Bolt (#B) with Lock Washer (#C) and Flat washer (#D) Allen wrench(#A).

# 2 Hardware #E x 1pc

Use anti-tip kit to secure Dresser to the wall.

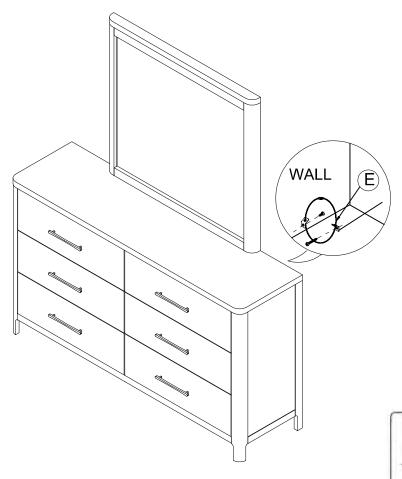

# ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all boils and/or screws are properly tightened and secured.

#### ≪ Keep this handy!

Please retain this instruction manual and any order-related information for future reference

#### Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

#### Wall Mounting and Fixing



#### **EXPANSION WALL ANCHOR**

Our provided expansion wall anchors are only suitable for mesonry walls, such as drywall, pluster or concrete, and are best for holding lightweight items or for anti-tip prevention. If you are unsure of the correct wall anchor to use with the product, please request professional guidance, liability for product damage or failure due to using the incorrect anchors will fall on the installer.




#### CHECK BEFORE PROCEEDING

Prior to drilling ar nammering, please check for wires or pipes. We recommend using a stud finder to locate a stud, which will offer more appropriate resistance and hold more weight.

#### QUICK TIPS

 It unsure of the proper size, always choose a larger screw and wall unchor.




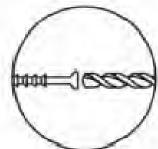

 Match the drill bit to the wall anchor and hole size.

 Only drill horizontally.
 Do not force the drill or enlarge the hole for the wall anchor.



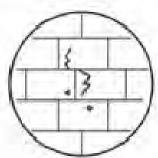

 Talke extra care when drilling into high walls or ceramic tiles. Wall anchors should be a light fit for the hole. Never use wall anchors in collings.





We recommend a yearly check to see if the wall anchor or screw has loosened. If so, please remove the existing wall anchor and screw, and use a new anchor.